


INSTRUCTION MANUAL

- ❶ Bin body
- ❷ Cover
- ❸ Lid
- ❹ Sensor panel
- ❺ Battery compartment
- ❻ DC in jack
- ❼ Low power alarm
- ❽ Manual operation button
- ❾ Sensor eye
- ❿ LED

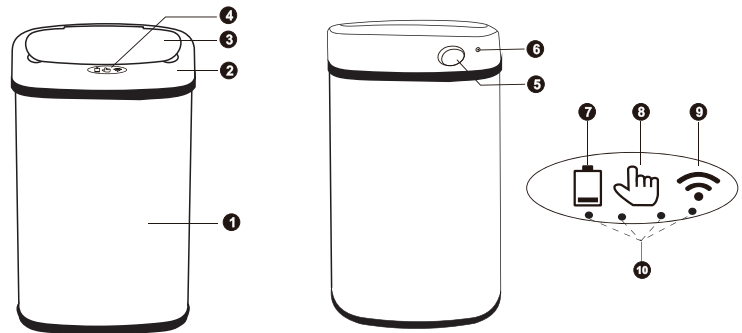

1. **Battery Equipment**

4xAA /LR6 Alkaline battery (not include)

❶

❷

❸
2. **Auto Sensor**

❶

❷

❸
3. **Manual Operation**

❶

❷

❸
4. **Other Info**

When the led under flashes, it means to change battery in time.

Don't press the lid when it is opening

Avoid sunlight on sensor panel.

The sensor system can be reset by power-off / on battery