


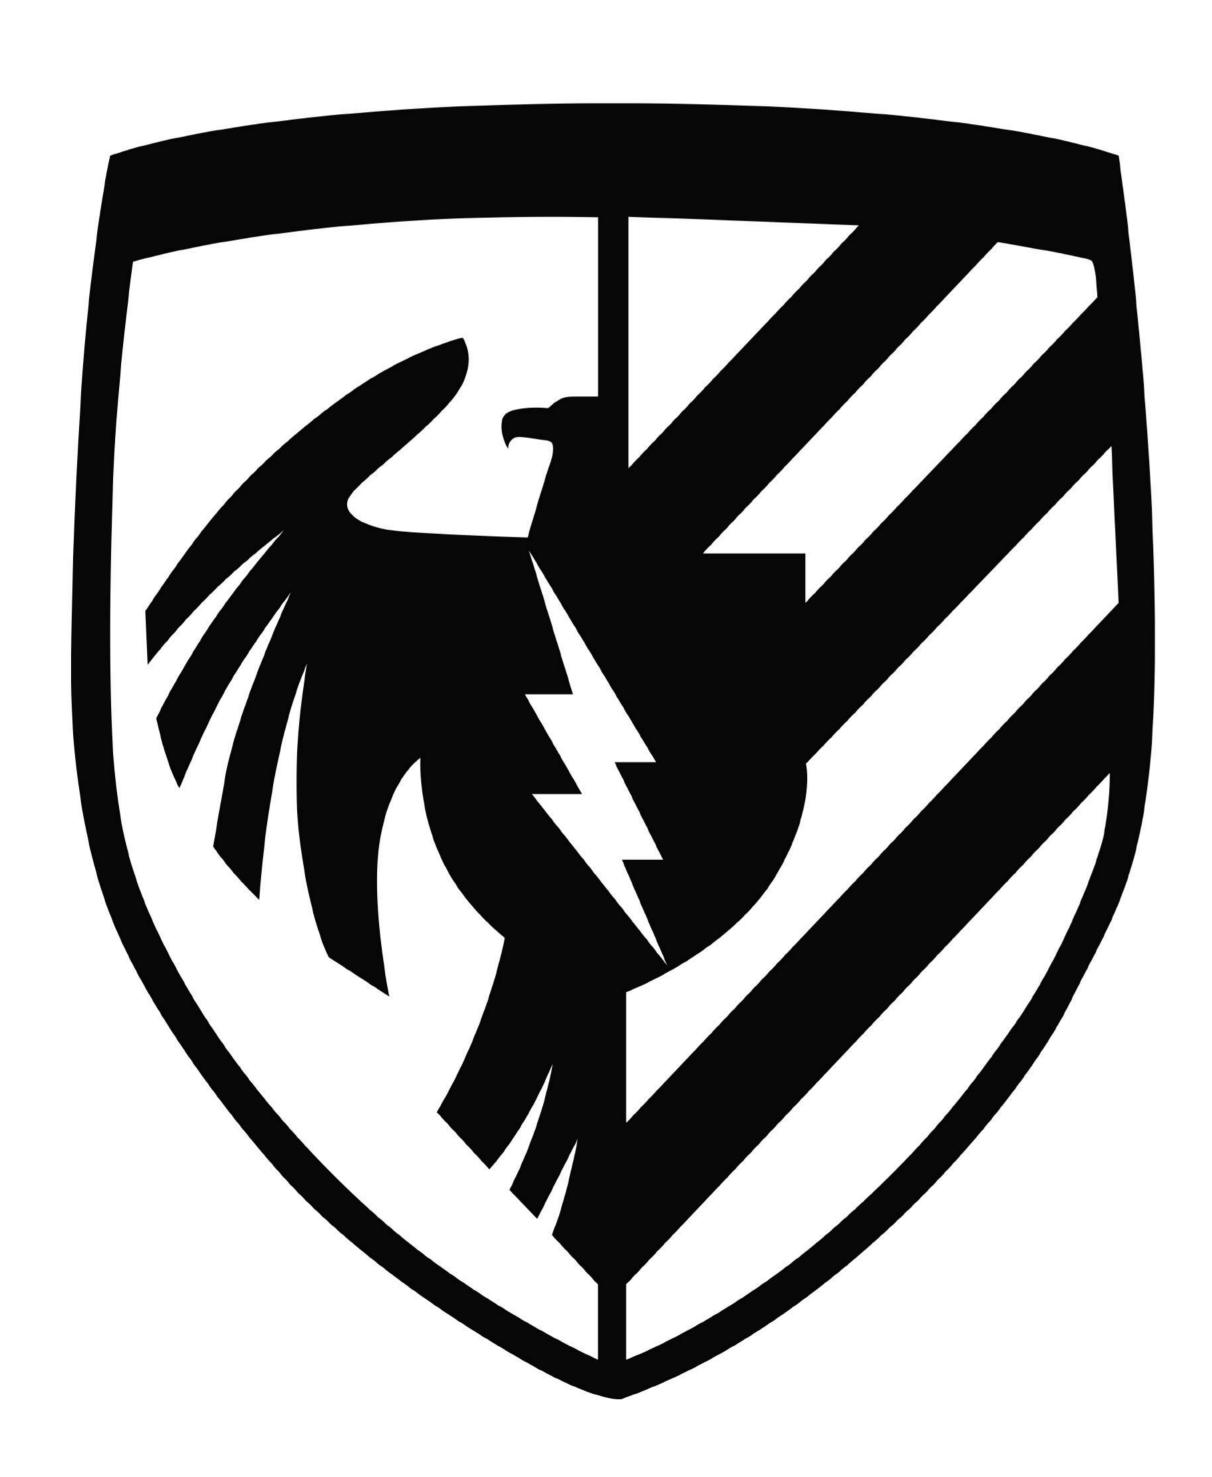


Instruction

Before Assembly


- This manual explains matters that you should be aware of before using the product to prevent harm to you and others and damage to property. Please be sure to observe it for safe use.
- Please read this manual carefully before use and use it correctly and safely.
- The contents of this manual and precautions for use describe precautions for preventing misuse and accidents. Please keep it carefully and read it when necessary.
- When renting or transferring the product to a third party, be sure to attach this manual and fully explain how to handle it.




1. Parts Checking *Actual products may vary from image

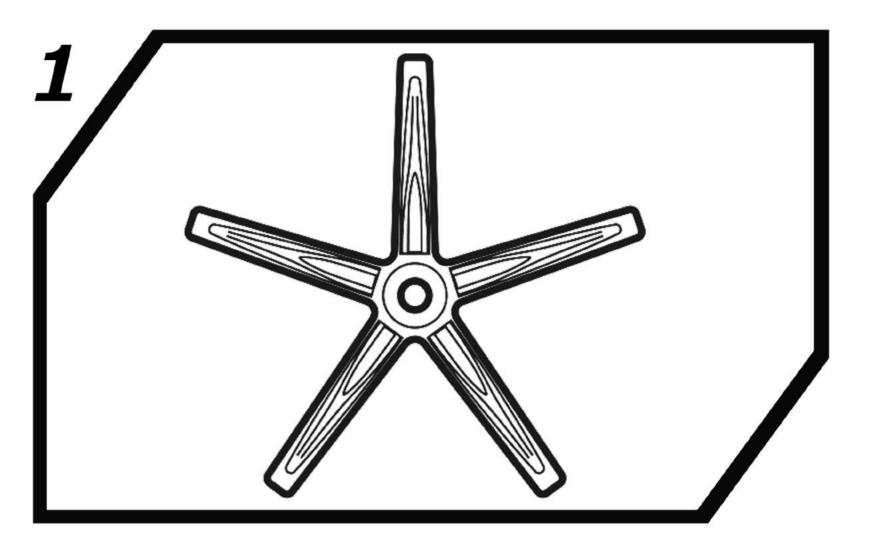


Base 1pcs

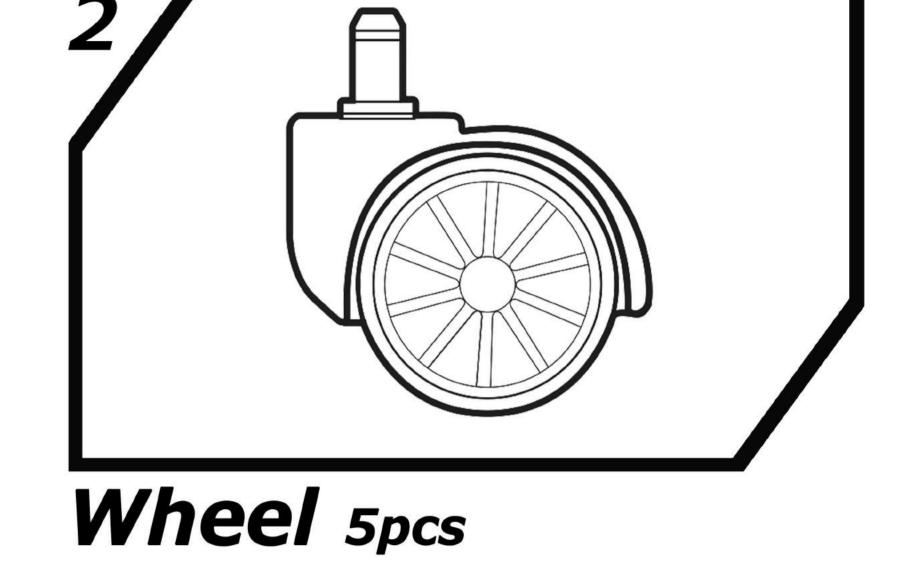


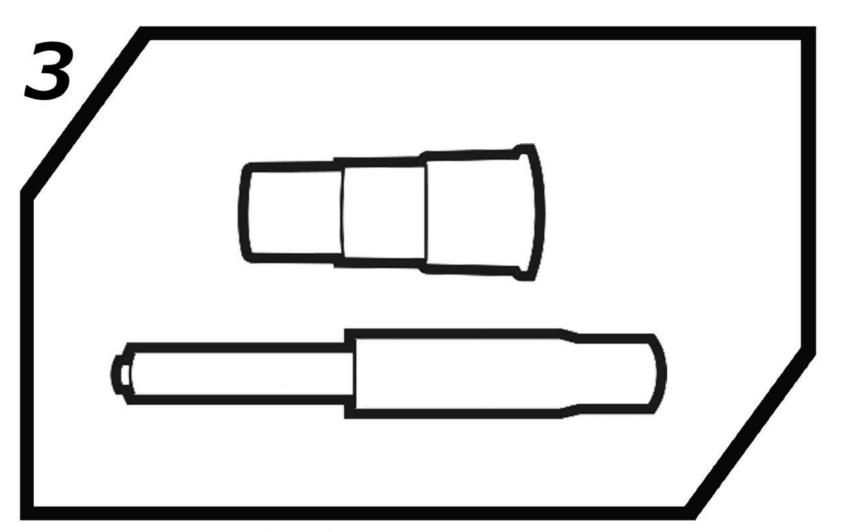


Gas lift/cover 1pcs

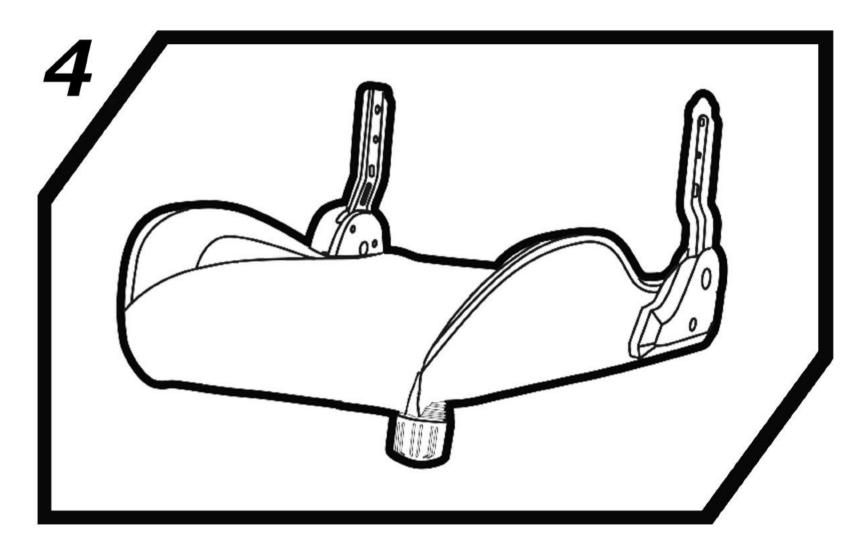


Seat cushion 1pcs

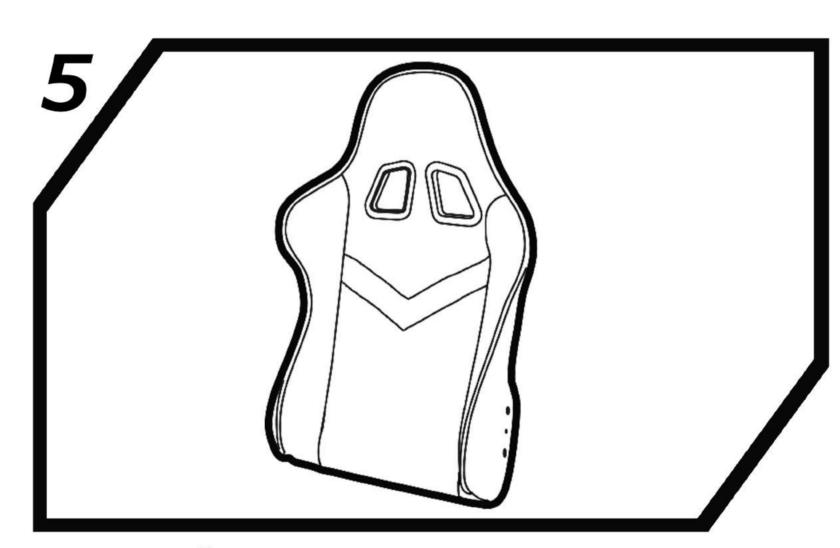


Backrest 1pcs

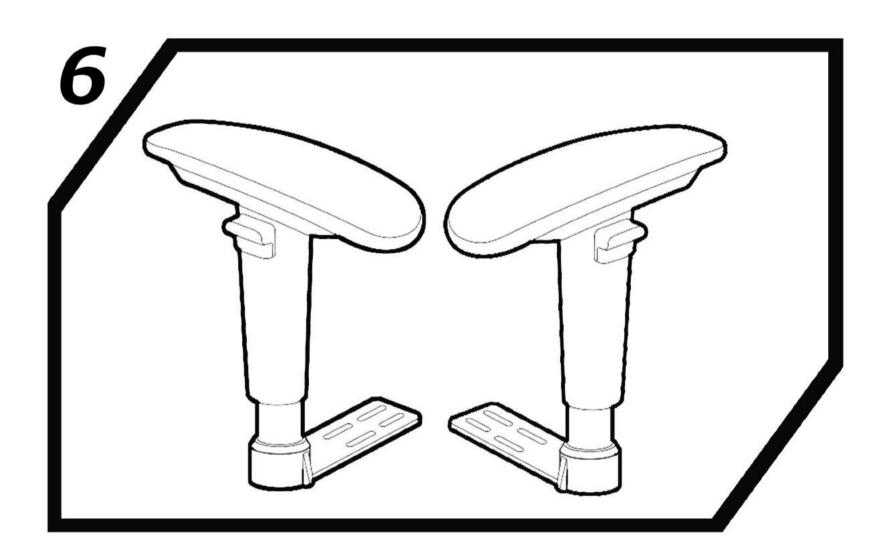


Armrest 2pcs

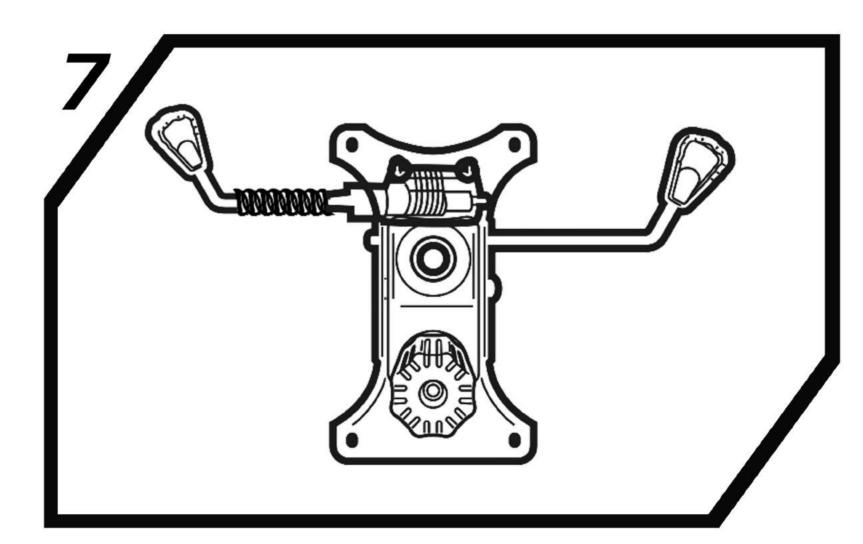

Tilt mechanism 1pcs

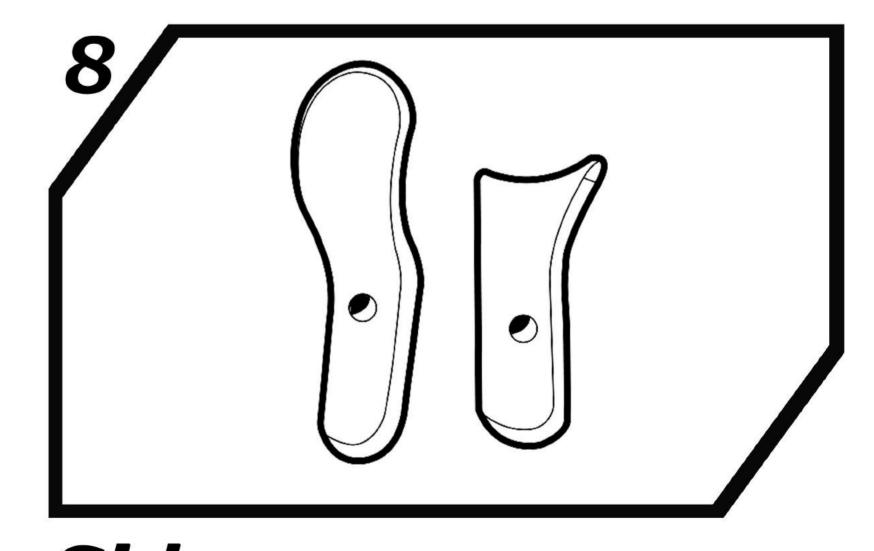

Side cover 2pairs

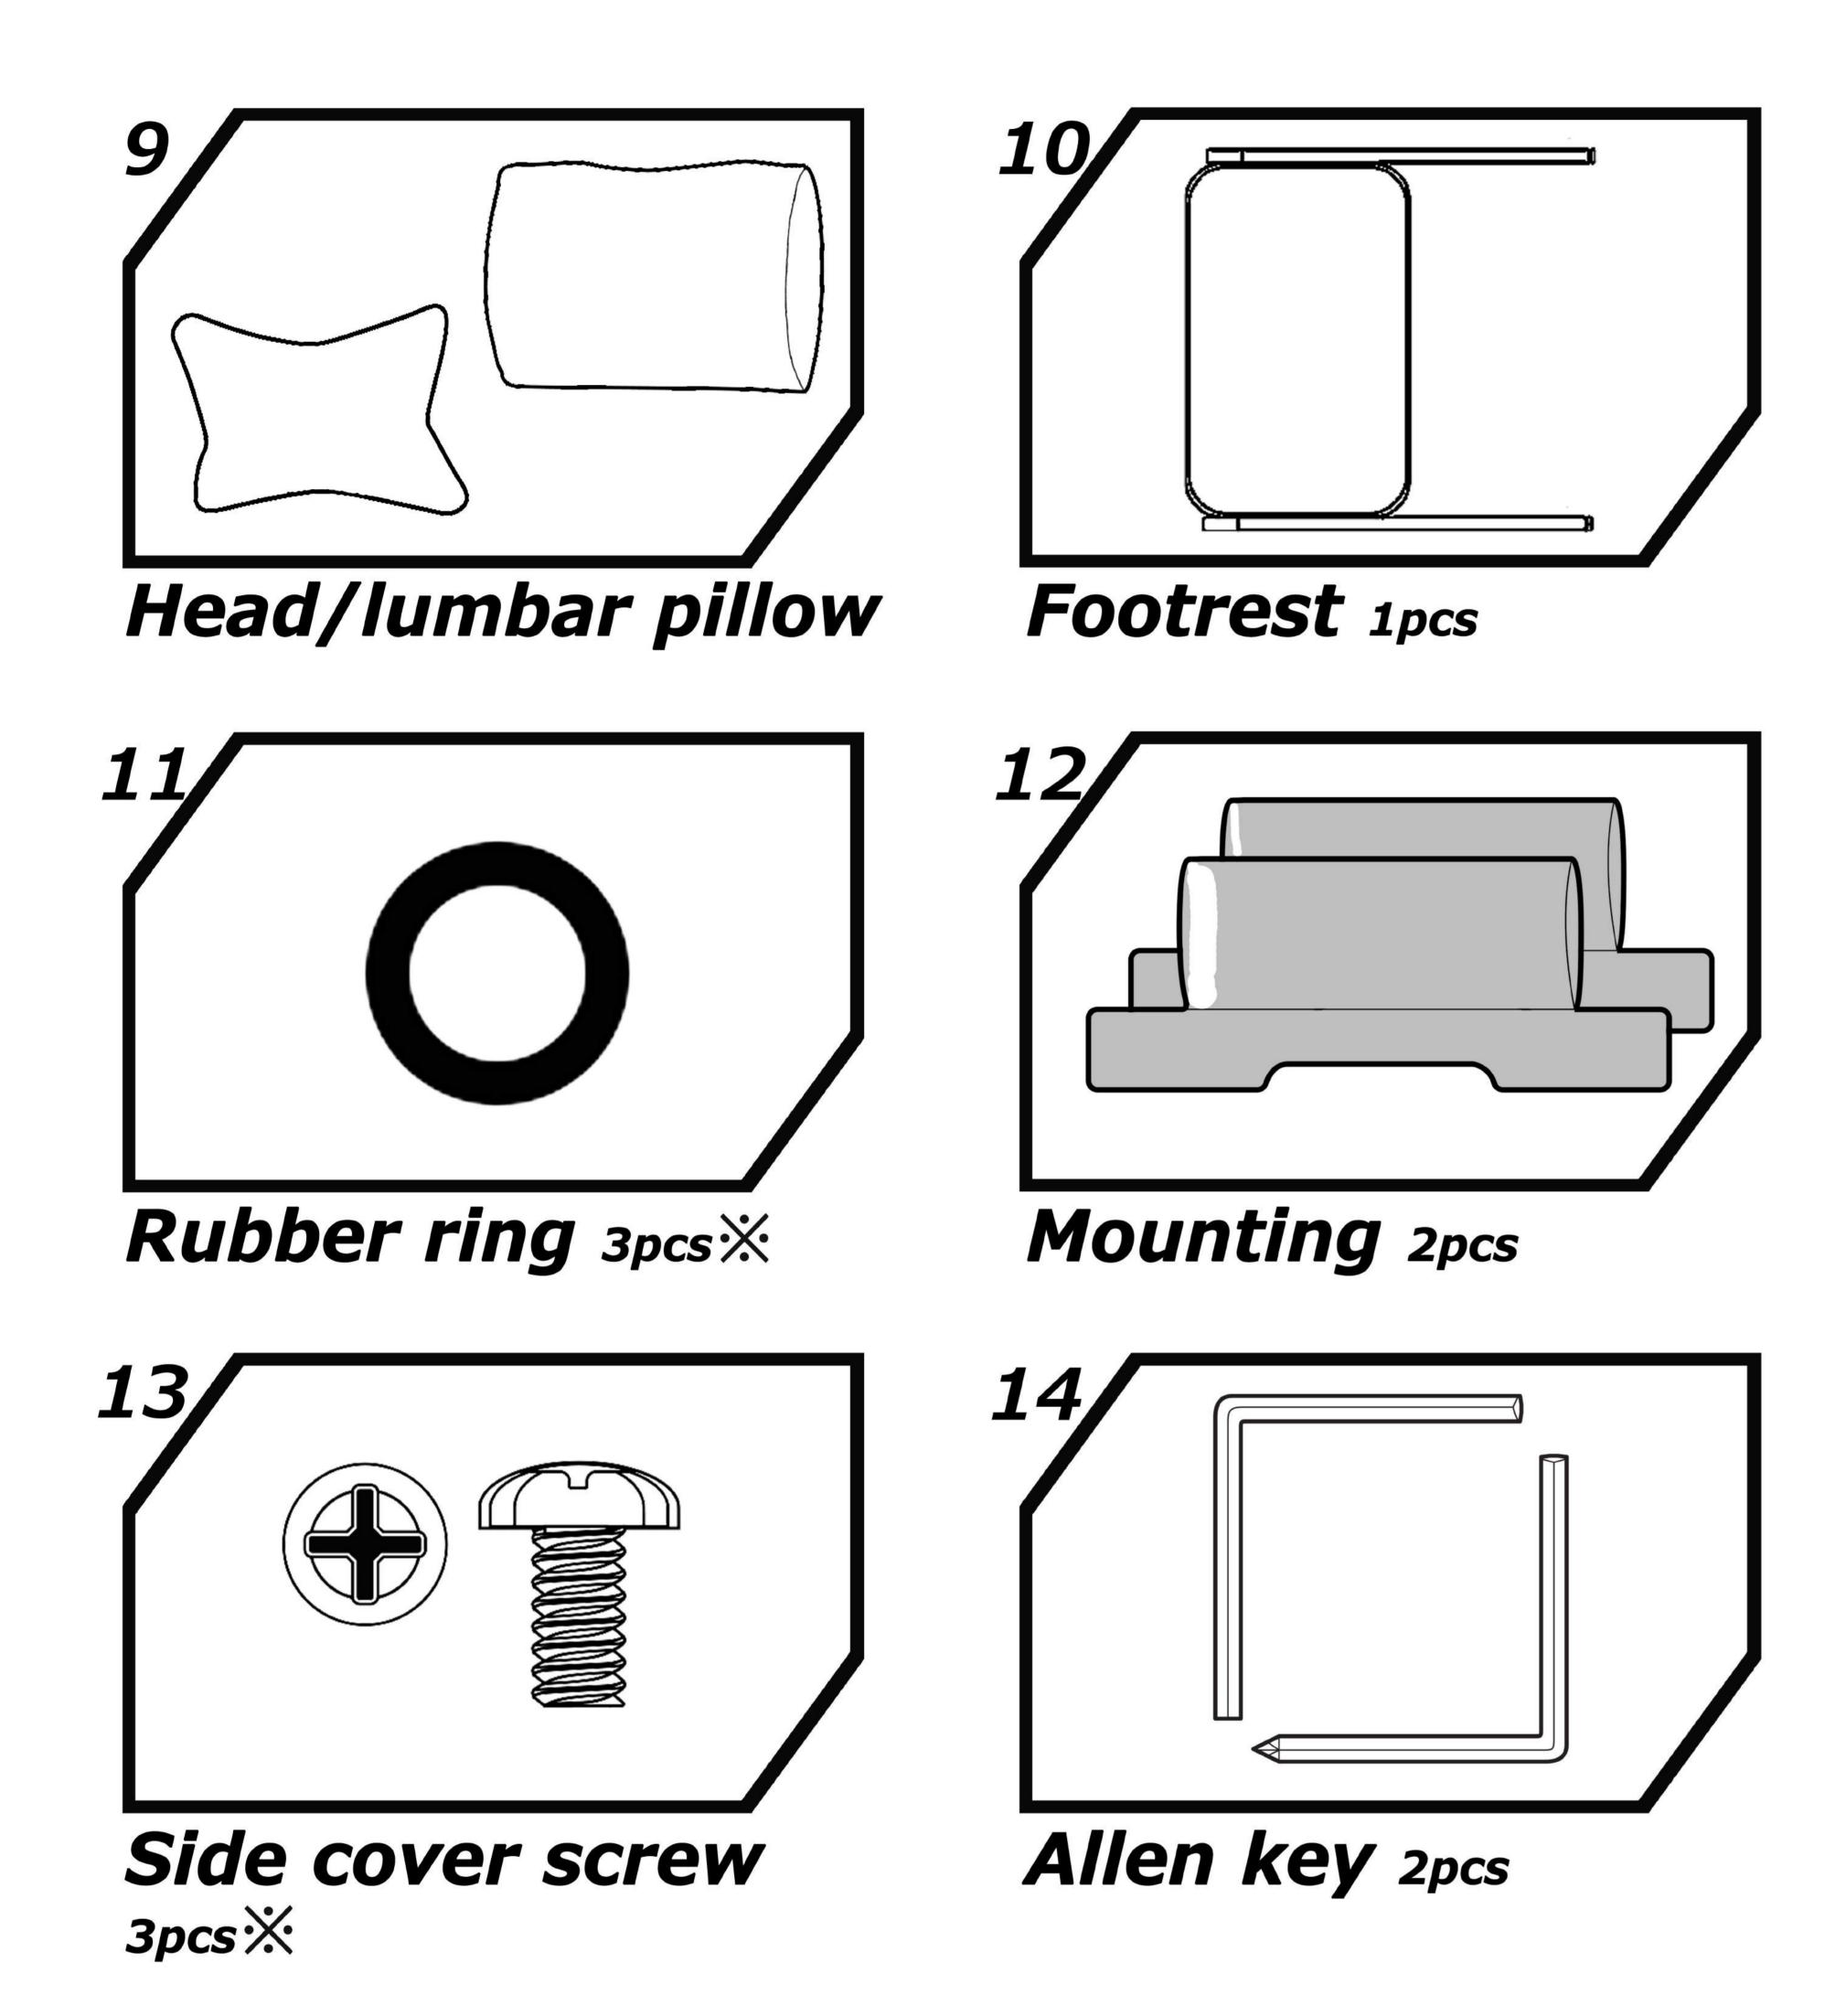


XTo prevent loss during transportation a spare one is prepared.

	Screw shape	SIZE	
15		M8X20 [With washer]	4
16		M8X25	12
17		M6X30	4
※To prevent loss during transportation, screws are already installed in advance.			

2.Assembly


1.Wheels

- Turn the base over and insert the caster firmly.
- XThe wheels are a little hard to insert to prevent it from coming off.

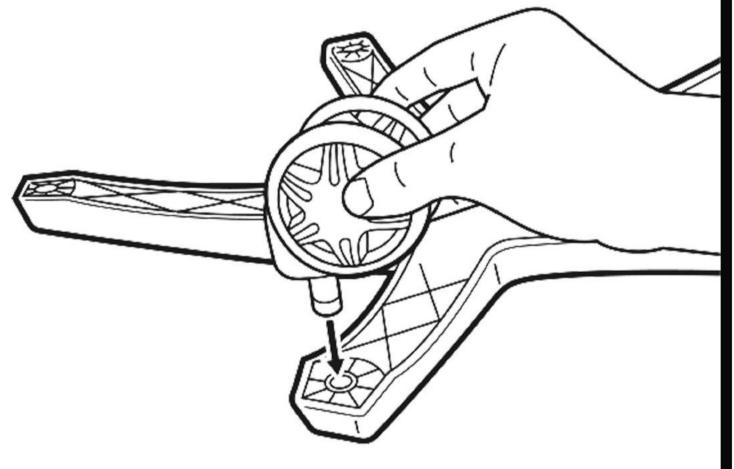

2.Base and gas lift

·Insert the gas cylinder and cover into the base as shown.

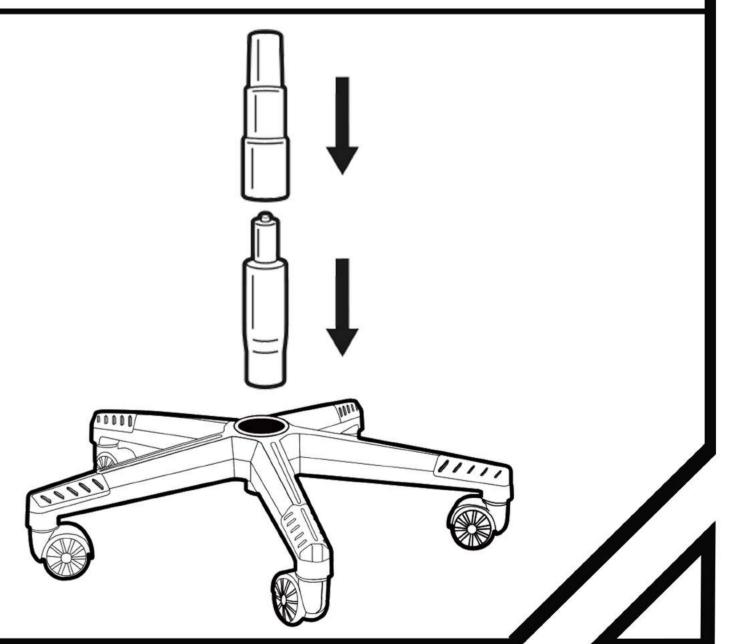



3. Tilt mechanism and armrests

Place the seat upside down on a stable surface, remove the pre-in-stalled screws, attach the mechanism and armrests, and then tighten the screws to their original positions.


**Pay attention to the front and back of the tilt mechanism base.

 ※Please note that there is left / right discrimination in the armrest

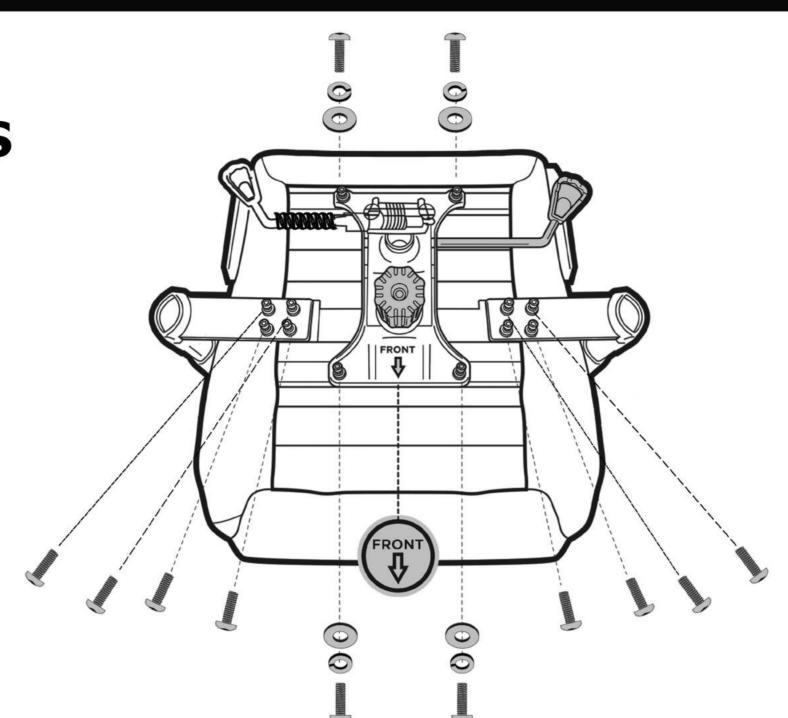

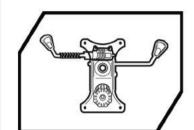








4.Footrest


Remove the pre-installed screws, install the rails, and tighten the screws in place.


After attaching both sides of the track, insert the footrest and then attach the rubber ring.

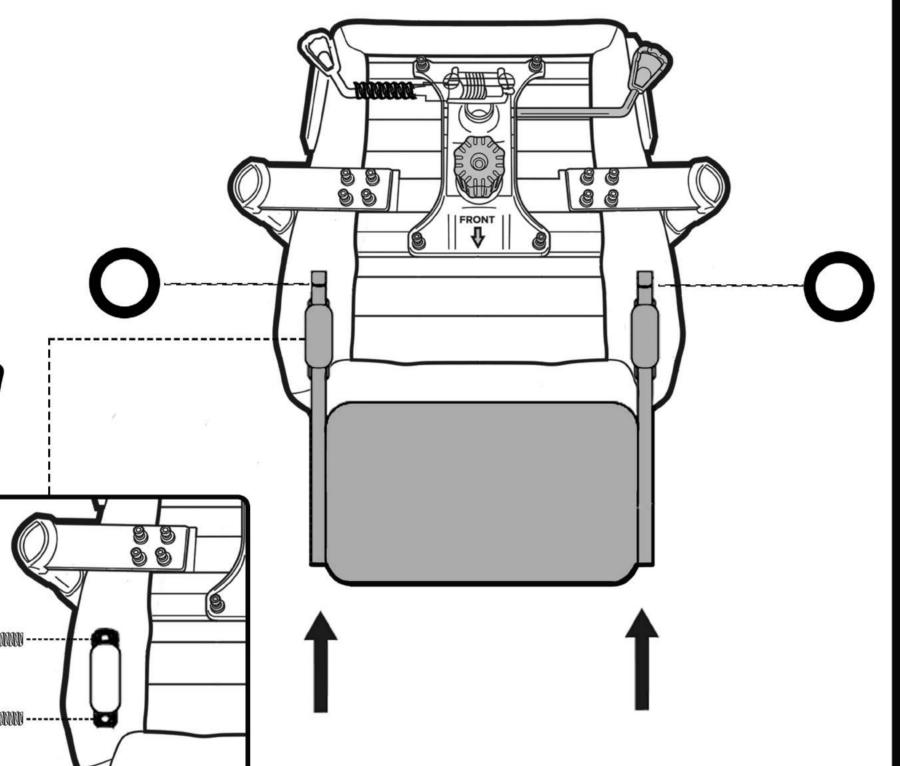

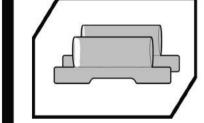

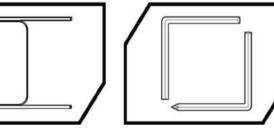

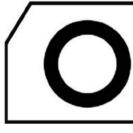


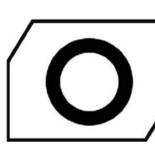



5.Backrest

Remove the screws that are pre-installed on the backrest, insert the backrest into the seat cushion, and tighten the screws to their original positions according to the hole positions.

 XAdjust the angle of the backrest and make sure it is correct before tightening the screw to the end.

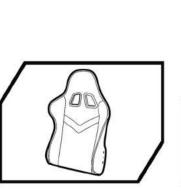





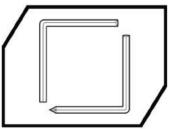



After ensuring that the backrest is in the correct position, use the No.13 screws to screw the cover onto both sides of the chair.

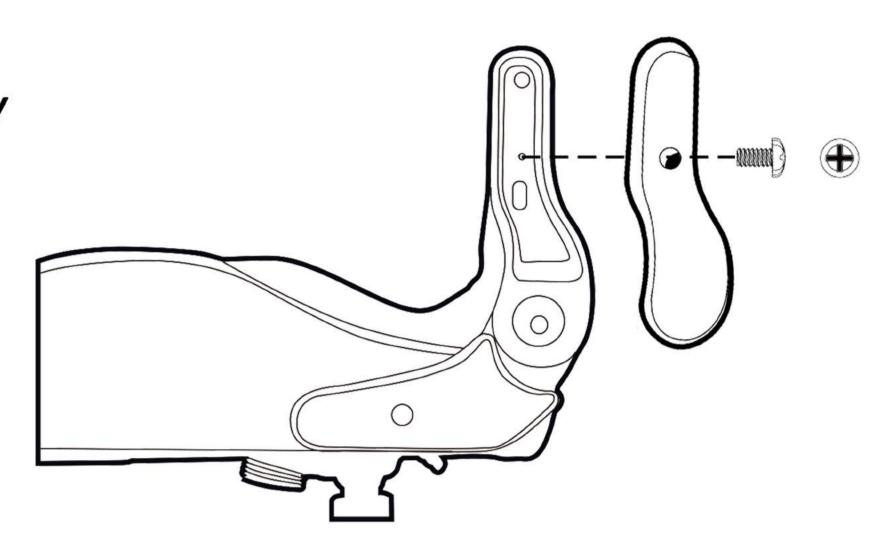

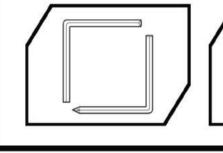

7.Head and lumbar pillow

Fasten the headrest and waist pillow as shown.


XThe headrest strap is secured through the hole in the backrest.


※The waist pillow belt is secured by passing through the gap between the backrest and

The waist pillow belt is secured by passing through the gap between the backrest and

The waist pillow belt is secured by passing through the gap between the backrest and

The waist pillow belt is secured by passing through the gap between the backrest and the backrest a seat cushion

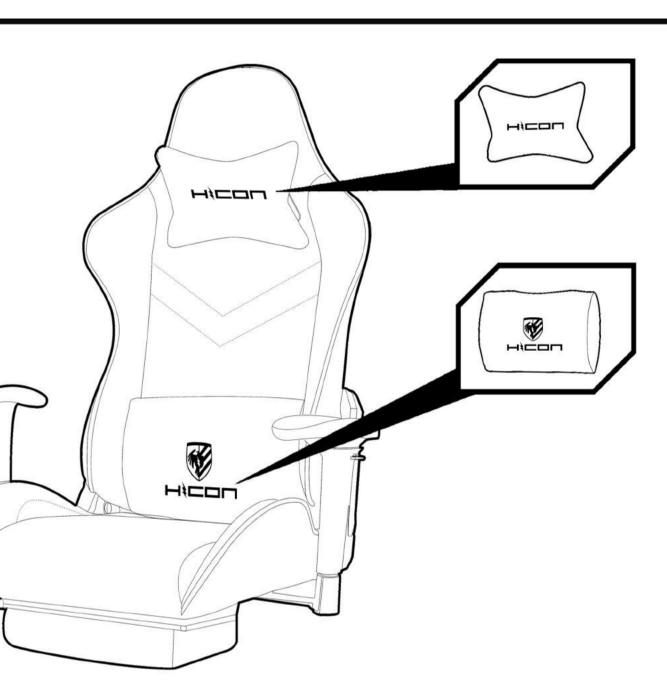

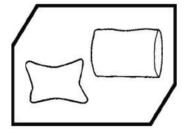

8.Finish

Assemble the chair body and base as shown.

9.Functions

Know how to use the following QR code.

Please note that incorrect use may damage the product.

