

正面

Instructions


The power switch

The handle

Dust bin

Air inlet

Hypa strainer

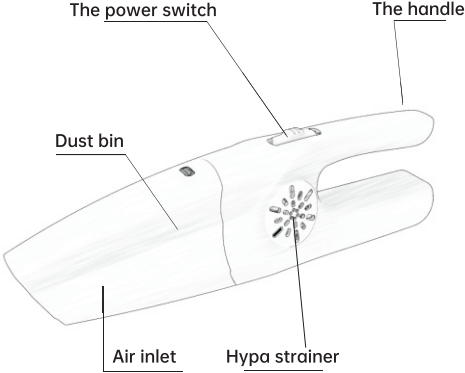

Product parameters

	The wireless device
Product color:	black
Power mode:	USB charging
Input power:	5V

Product features

- This product is a car vacuum cleaner, suitable for cleaning the instrument, seat, ground and other places in the car dust
- The use of lithium-ion batteries ensures that the battery will last over time, compared with other types of batteries that suffer from the "memory effect"
- USB chargers can be charged in multiple scenes
- Convenient dust collection bucket system, can quickly and easily remove garbage
- The vacuum cleaner body is light and easy to store
- With the crevice nozzle and brush, you can really clean anywhere, the soft brush attachment will remove the garbage in the analysis, and the crevice nozzle allows you to clean tricky, hard-to-reach areas

How to use wireless vacuum cleaner

1. Use USB to charge the vacuum cleaner for about 2.5~3 hours
2. Turn on the vacuum cleaner:
3. Replace different suction heads for use occasions
4. Please turn off the power after use

Thank you for buying our products!Please read this manual carefully before using it for the first time. It will guide you to use it correctly and remind you of the relevant matters needing attention

反面

Matters needing attention

Note: All contents of this project are related to security, please be sure to comply with.
The precautions in this project are only for the proper use of this product.
The precautions explain the hazards, the extent of the hazards and the possible accidents

1. Do not use other parts that are not approved by the manufacturer. If this causes machine failure, the warranty will be automatically terminated;
2. Please check whether the product is damaged and whether the accessories are complete after removing the package.
3. Children and persons with no behavioral capacity should use this product under the supervision of their guardians.
4. In case of failure, turn off the power switch immediately, and do not leave the defective product in working state.
5. The product can only be repaired in the authorized maintenance center, and other unsafe factors may be caused when the product is repaired in the non-authorized maintenance center

Pr ohibited mark:



any content with the mark must be prohibited, otherwise it may cause damage to the product or endanger the personal safety of the user.

Warning mark:



all the contents with the mark must be operated in strict accordance with the requirements, otherwise it may cause damage to the product or endanger the personal safety of the user.

Attention mark:



all the content with the mark is the part that the user must pay attention to, otherwise it will cause damage to the product or other losses due to improper operation.