



FUNCTION AND CONTROLS

1. DISPLAY
2. DISPLAY AUTO OFF
3. VOLUME UP / ALARM 2 ON / OFF SET
4. << / TUNE -
5. VOLUME DOWN / ALARM 1 ON / OFF SET
6. SNOOZE / SLEEP
7. SET.MEM / MEMORY+
8. >> / TUNE +
9. ON / OFF
10. HOUR SET FOR PROJECTION
11. PROJECTION ON/OFF SWITCH
12. FOCUS ADJUSTMENT FOR PROJECTION
13. MIN SET FOR PROJECTION
14. TIME SET FOR PROJECTION
15. FM ANTENNA
16. AC POWER CORD
17. RATING LABEL (BOTTOM OF UNIT)
18. BATTERY COMPARTMENT (BOTTOM OF UNIT)

POWER CONNECTION

Plug the AC power cord to a household outlet AC source. This unit is equipped with a battery back up system, it requires a 3V CR2032 flat lithium battery (not included). Insert the battery in the battery compartment, making certain that the positive and negative (+ and -) battery terminals are attached to the corresponding terminals on the plate in the battery compartment. If an AC power failure occurs, the clock automatically switches to the battery power supply, the clock and timer memory continue running. When the AC power resumes, the clock switches back to AC again.

GETTING STARTED TIME MANUAL SETTING

With the radio off mode, press and hold the SET.MEM / M+ button (7); "24 Hr" will blink. Press the Tune + (8) or Tune - (4) button to set the unit to the 12 hour (12 Hr) mode or 24 Hour (24 Hr) mode. Press the SET.MEM / M + button (7) and the hours will blink. Press the Tune+ (8) or Tune - (4) to set the current hour, then press the SET.MEM / M + (7) button again; the minute digits will blink. Press the Tune + (8) or Tune - (4) to set the current minutes. When done and you press SET.MEM / M + (7) button once again to indicate the current time is set.

THE LED DIGITAL CLOCK AND THE PROJECTION CLOCK MUST BE SET SEPARATELY.

TIME SETTING FOR PROJECTION

To preset the HOURS, press simultaneously the HOUR button (10) and the TIME button (14). Keep them depressed until the hour digits to be preset are displayed. To preset the MINUTES, press simultaneously the MINUTE button (13) and the TIME button (14). Keep them depressed until the minutes digits to be preset are displayed. Focus setting: To adjust the brightness of the projection clock, turn the focus (12) until the projected time is clearly shown on the ceiling or wall.

NOTE: The projected time is intended for display on the ceiling or wall of a darkened room. The projection range is 3 – 9 feet.

Setting Alarm Time

To preview the alarm time. Press the ALARM button (3/5) once. While the display is showing the alarm time and you hold the ALARM button for 3 seconds and the hours will blink. Press the Tune + (8) or Tune - (4) to set the alarm hour. Press the ALARM button again; the minute digits will blink. Press the Tune + (8) or Tune - (4) to set the alarm minutes.

Press the ALARM button and you can change the sound mode (Buzzer, Radio) for the alarm.

Press Tune + (8) or Tune - (4) to choose different volume. The alarm volume will gradually increase. Then press the ALARM button when done.

To delay the alarm, press SNOOZE. It will come on again in approx. 9 minutes. You may repeat this cycle several times during the alarm cycle. To stop the alarm, press ALARM button .

To stop the alarm from coming on the following day, hold the ALARM button to turn it off. The alarm icon will disappear to indicate the alarm is disarmed.

Listening to Radio

Press the ON/OFF button (9) to turn the unit on.

Use the Tune + (8) or Tune - (4) button to select the desired FM station. If you press and hold the Tune + (8) or Tune - (4) button for one second, the release, the unit will automatically scan to the next broadcasting station.

Press the ON/OFF button (9) to turn the radio OFF.

To set / recall the radio presets

Press the ON/OFF button (9) to turn the unit ON.

Use the Tune + (8) or Tune - (4) button to select the desired FM station.

Press the SET.MEM/ M + button (7); "P02" will blink in the display.

Press the SET.MEM / M + button (7) again to set the preset.

Repeat steps 2 through 4 to set more presets.

The unit can preset 10 stations totally for FM.

When "P01-P10" is blinking, press the Tune+ (8) or Tune- (4) button to select the preset number.

When recalling preset stations, press SET.MEM / M + button (7) to select the preset number.

Sleep operation

When listening to radio, press Snooze / Sleep button (6) to enter sleep mode. You can just adjust the sleep timer from 90 mins to 10 mins by pressing the Snooze / Sleep button (6). The unit will automatically turn off after the selected time.

Display auto off function:

In radio off mode, press the display auto off button (2). To enter time display auto off mode. The LED display will turn off after 15 seconds automatically. Only show in the middle two light. Press any button to maintain the LED display for 15 seconds.

In radio off mode, Press the display auto off button (2) to cancel this function.

SPECIFICATIONS

Frequency range : FM 87.5 – 108 MHz

Battery backup : 3V (CR2032 Flat Lithium battery x 1) not included

Power supply : AC230V 50Hz

Note :

- Ensure that the FM antenna is completely unrolled and extended for best FM reception.

RESETTING

If the system does not respond or exhibits erratic or intermittent operation, you may have experienced an electrostatic discharge (ESD) or a power surge that triggered the internal microcontroller to shut down automatically. If this occurs, simply disconnect the ac power cord and remove the system backup battery, wait for at least 3 minutes and then setup the unit again as if it is a brand new unit.

WARNING

- 1 No naked flame sources, such as lighted candles, should be placed on the apparatus.
- 2 Do not place the product in closed bookcases or racks without proper ventilation.
- 3 Where the mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- 4 The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.
- 5 It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 6 Do not connect FM antenna to outside antenna.
- 7 The unit should not be exposed to direct sunlight, very high or low temperature, moisture, vibrations or placed in dusty environment.
- 8 Do not use abrasive, benzene, thinner or other solvents to clean the surface of the unit. To clean, wipe it with mild non-abrasive detergent solution and clean soft cloth.
- 9 Never attempt to insert wires, pins or other such objects into the vents or opening of the unit.
10. Disconnect device warning : Mains plug is used as the connection, so it should always remain ready operate.
11. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
12. Class 1 LED product.

CAUTION

Danger of explosion if battery is incorrectly replaced Replace only with the same or equivalent type

ALL RIGHTS RESERVED, COPYRIGHT DENVER ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Electric and electronic equipment contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment) is not handled correctly.

Electric and electronic equipment is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment should not be disposed of with other household waste, but should be disposed of separately.

All cities have established collection points, where electric and electronic equipment can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Importer :
DENVER ELECTRONICS A/S
Stavneagervej 22
DK-8250 Egaa
Denmark
www.facebook.com/denverelectronics

WSZYSTKIE PRAWA ZASTRZEŻONE, PRAWA AUTORSKIE DENVER
ELECTRONICS A/S

DENVER®

www.denver-electronics.com



Sprzęt elektryczny i elektroniczny zawiera materiały, elementy oraz substancje, które mogą być niebezpieczne dla zdrowia i środowiska, jeśli materiał odpadowy (wyrzucony sprzęt elektryczny, elektroniczny) nie są właściwie potraktowane.

Sprzęt elektryczny i elektroniczny i baterie oznaczone są przekreślonym symbolem śmietnika, patrz wyżej. Ten symbol oznacza, że sprzęt elektryczny i elektroniczny nie powinien być wyrzucany z innymi odpadami domowymi, ale powinien być usuwany oddzielnie.

Wszystkie miasta mają ustalone miejsca zbiórki sprzętu elektrycznego i elektronicznego, gdzie można go bezpłatnie oddać w stacjach recyklingu i innych miejscach zbiórki lub zlecić jego odbiór z gospodarstw domowych. Dodatkowa informacja jest dostępna w wydziale technicznym miasta.

Importer:
DENVER ELECTRONICS A/S
Stavneagervej 22
DK-8250 Egaa
Dania
www.facebook.com/denverelectronics