

Usage method

Zipper warm



Cover legs



Instructions

1. Open the portable power bank storage bag under the warm blanket, connect the USB plug to the portable power bank, place the portable power bank in the bag, and zip it up.
2. Press and hold the "O" button to turn on the power indicator light, then press to switch the temperature control gear. Press the high gear (55 °C) once to turn on the red light, then press the medium gear (45 °C) to turn on the white light, and then press the low gear (35 °C) to turn on the blue light. Repeat this process, press and hold to turn off the power indicator light.

Washing attention

1. When washing, it is necessary to ensure that the portable power bank has been removed and then put the power cord into the storage bag. After washing, the product (warm blanket and cable plug) must be thoroughly dried before use.
2. When the switch or power cord is dirty, neutral detergent can be used to wipe the surface of the power indicator light.

1. The maximum washing temperature is 40



3. Do not dry clean.



5. Do not iron.



2. Do not bleach.



4. Hang and drip dry in a cool place.



MADE IN CHINA