
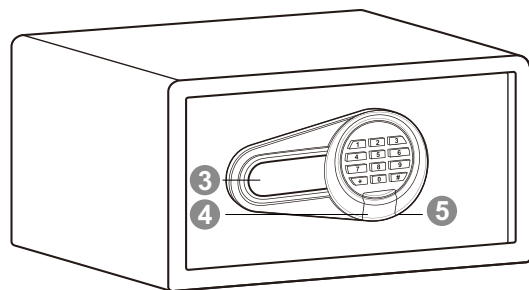


MOTORIZED SAFE

! **Please do not keep emergency keys in your safe!**

Schematic drawing of case

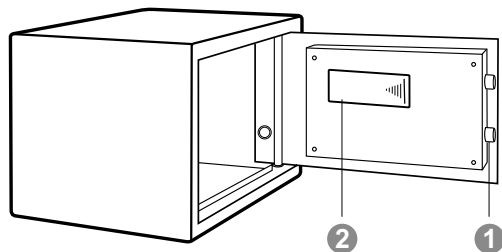

1.Bolts

2.Battery Compartment

3.Display

4.Key lock cover

SETTING THE PERSONAL CODE

You can change the personal code (4-6 numbers) when the door is open. With the door open and the closing pistons retracted, you can dial your new personal code, from 4 to 6 numbers, then press #. The safe will close and your new personal code is registered.

SETTING THE MASTER CODE

The original factory master code is 011223. Keep the door open. Press “*” twice, and “PROG” appears. After “PROG” disappears, input the original master code (factory master code is 011223) and “NEW” appears, when “New” disappears, input the new master code (6 numbers) within 5 seconds and “AGAIN” appears. When “AGAIN” disappears, input the new master code again within 5 seconds and “DONE” appears. The master code has been changed successfully. If “ERROR” Appears, the new master code setting has failed.

The new Master code cannot be set as your personal code (such as: 751019 and 123456) to avoid confusion. Enter your master code, -OPEN- appears and the safe opens automatically.

OPENING THE SAFE IN EMERGENCY (KEY)

You can always open the safe using the key provided.

If the displays reads “BA—L”. it means the voltage is low and the batteries must be replaced.

SECURITY FUNCTION

HIDING THE CODE

Press “*” the code hiding function will be activated, all the number input within 5 seconds will be not showed, the display will only show “—”, if no numbers are dialed within 5 seconds, the Hiding function will end automatically.

If you want to re-start this function, press“*” again.

Press“ # ”. the hiding function ends. If you press“*”when you input the code, then after the door closes, the code will be not show back.

AUTOMATICAL LOCK

If you dial an incorrect code for 5 times, the system will lock out automatically. During this time, the display will show “HOLD15” for every number you press. 15 minutes later, the system will start again, allowing you to dial the code again.