

2. This product is on low speed when you turn it on and pressing the on/off switch in turn to tune the speed from medium speed to high speed.

3. Being suitable for hot/cold liquid and choosing the different speed (low speed, medium speed, high speed) to achieve ideal frother effect for the different liquid (milk, coffee, chocolate, juice, egg and so on).

4. Changing whisk head to balloon whisk head to achieve better frother effect when you use the large container.

### **Charging**

1. This product battery charger is only available for Android cable.

2. Supporting output voltage DC5V, electric current less than 0.5A.

3. Red light on when charging and green light on when fully charged. It needs about 3 hours for fully charged.

### **Washing and Protection Instruction**

1. Wash the whisk head under warm running water or dip it in washing agent. Wash it again, then dry in the air.

2. Don't make the host touch water.

3. Keep it in an environment below 60°C and dry place, otherwise it will shorten its working life.

### **Technical parameters**

Battery Type : 1200mAh

Charging voltage : 5V

Charging current : 0.5A

Working time : 1H on high speed, 1.5H on medium/low speed  
(Stirring time is generally most suitable within 5 minutes and excessive time will damage the performance of the motor and the lifetime of battery)

Charging time : 3H


Accessories : Whisk head, Balloon whisk head, Host, cable

Color : Black White Pink Silver

Thank you for using our products. Please contact us if you have any questions. This is not a toy, please keep it away from children to avoid any hurt.

# Adjustable Milk Frother

## Product Schematic

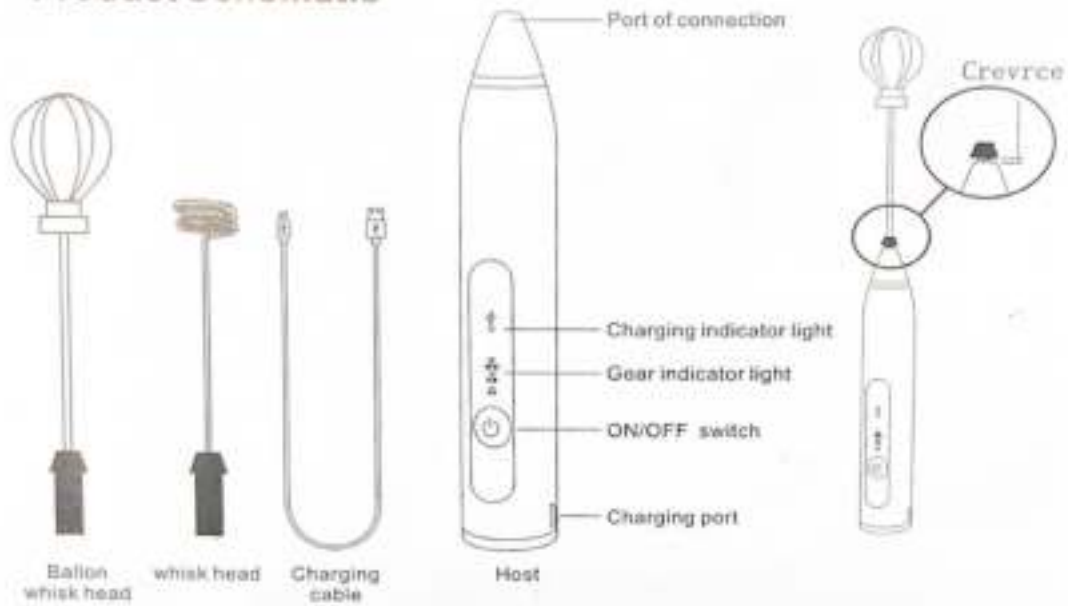

## Install instruction



## Instructions for use

1. Pressing the ON/OFF switch to make product work with blue light.