








### **REGULAR BRICKS**

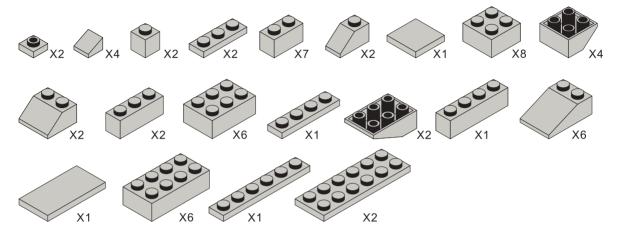

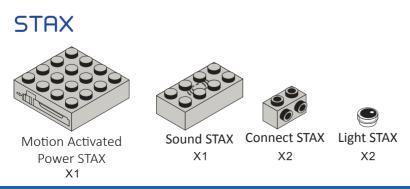



H11103 TRUMPETING ELEPHANT

 1\_1

 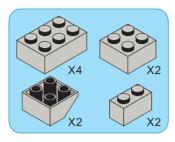





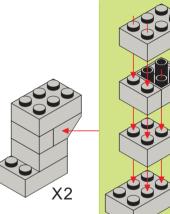









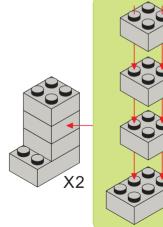


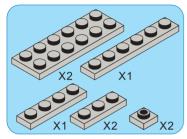




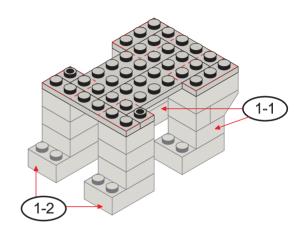



# 1-4 Notion Activated Power STAX

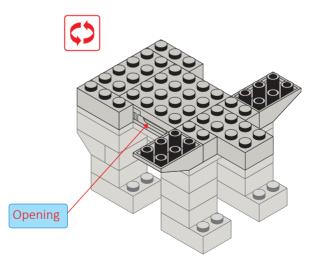


 




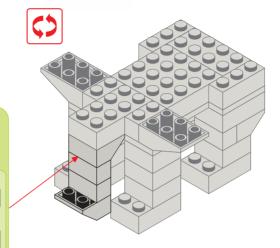


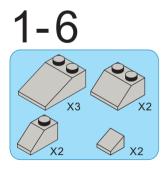

 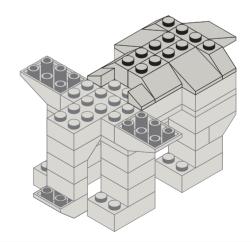


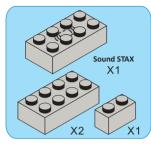





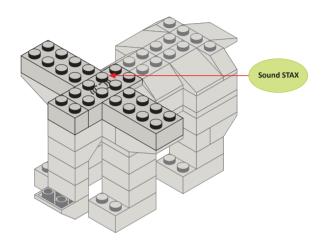


 





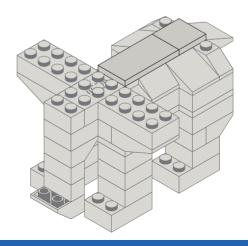

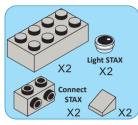


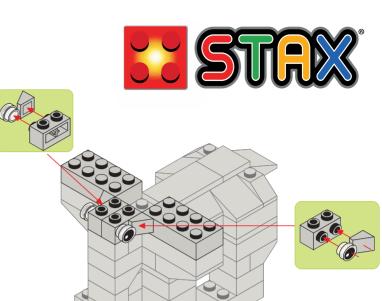



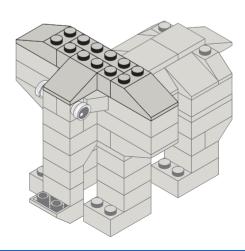



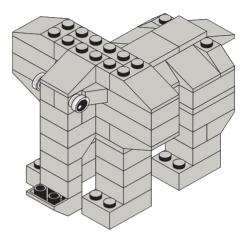



## 

- 2. To replace the CR2032 button cell battery, please see the 4x4 Motion Activated Power STAX Instruction manual.
- 3. As an upgrade, to avoid using batteries, we recommend replacing the button cell Power STAX with the rechargeable 4x4 Mobile Power STAX (Item# S-11503). You can purchase this from your STAX retailer or directly through our webshop at www.lightstax.eu!

#### H11103 TRUMPETING ELEPHANT