

## ENGLISH INSTRUCTIONS

Thank you for purchasing the Our SA02 Sound Machine Bluetooth Speaker. Please take the time to fully read this manual, beginning with the following precautions which must always be taken into consideration before using the "Our SA02 Sound Machine Bluetooth Speaker", which hereinafter will be referred to as the 'device'.

### GENERAL INFORMATION

- Read these instructions completely and keep them for future use. If you give this device to other people, please also pass on this manual.
- Only use this device in accordance with the instructions in this user manual.
- The device is not a toy. Keep it out of the reach of children and pets.
- This device is intended for domestic or similar use, not for professional use.
- The guarantee will expire immediately if damage has been caused by failing to comply with this user manual. The manufacturer accepts no liability for damage caused by non-compliance with the user manual, negligent use, or use that does not comply with conditions in this user manual
- **WARNING!** Do not leave packaging material lying around carelessly. This may become dangerous playing material for children. **Risk of suffocation!**

### BATTERIES, ELECTRICITY & HEAT

- The rechargeable battery of this device should be charged for approximately 2.5 hours before using it for the first time.
- Make sure your hands are dry before touching the device, power cord, or plug.
- When plugging in the power cable, make sure people cannot accidentally pull it out or trip over it.
- Never leave the device unattended while charging.
- Regularly check the charging cable for damage.
- Do not charge the device if the charging cable shows signs of damage.
- Do not allow the charging cable to hang over sharp edges, keep it away from hot objects and open flames.
- Remove the power cable during lightning storms or if unused for long periods of time.
- Do not use the device if it has become faulty, or if it has fallen or become damaged in any way.
- Ensure that the device and cable do not come into contact with heat sources, such as hotplates or open flames.
- Always remove the charger cable from the device once charging has been completed.
- Do not attempt to charge the device when the battery is damaged.
- To reduce or prevent the risk of personal injury, electrical shock, fire, or damage to the device, never insert metal objects in any opening of the USB charging port or any other openings or ports.
- The rechargeable batteries are built into the device and cannot be replaced.
- **WARNING!** Do not open the casing as this may result in electric shock!
- Do not expose the device to direct sunlight, heat sources, excessive humidity, or corrosive environments.
- Do not use or store the device in the immediate vicinity of heat sources such as open flames.
- Do not crush, puncture or dismantle the device; this might damage the battery.
- **WARNING!** Damaging the casing and/or piercing the device, can lead to an explosion or fire!
- **WARNING!** To reduce the risk of fire or electric shock, protect the device from dripping or splashing water and keep away from objects filled with liquids, such as vases. Such objects should not be placed on or near the device.
- Leaks from battery cells can occur under extreme conditions. If the liquid gets on the skin, wash it off immediately with soap and water. If the liquid gets into the eyes, flush them immediately with clean water for a minimum of 10 minutes and seek medical attention.
- **WARNING!** Do not throw the device into a fire, as it may explode!
- Do not dispose of the device in your household waste. Take it to your local recycling station. Contact your local government offices for details

### BASIC OPERATION:

Open the packaging carefully before taking out the device. Make sure the device is complete and undamaged. If any components are missing or damaged, contact the vendor and do not use the product. Retain the packaging or recycle it in accordance with local regulations.



### CHARGING THE DEVICE:

- Carefully plug the micro USB connector into the USB charging port of the device.
- Plug the USB connector of the charging cable into a USB port on your computer, USB charger, or AC wall adapter.
- The LED indicator turns red when the device is charging.
- Once charging is completed, the LED indicator goes out and the device will automatically stop charging.
- Unplug the charging cable from the device, which is now ready for use.
- If the battery level is low, you will hear two beeps every 10 seconds, indicating that the battery needs to be recharged.


### POWER ON/OFF THE DEVICE:

- To power ON the device, turn the switch to "ON". Once powered ON, you will hear a 'tone'.
- Power OFF the device: turn the switch "OFF"

### WHITE NOISE MODE:

- Turn the device on, and it will go into white noise mode directly.
- Single press below icons to choose different white noise.
- Short press : Volume Up. Short press : Volume down


### PAIRING YOUR DEVICES:

- Turn the device on.
- Long press , the device now is in pairing mode.
- Keep the device and your BT enabled device within 1 M (3 ft) of each other during the BT pairing process.
- Make your mobile phone, tablet, or another BT-enabled device search for compatible BT devices. (Make sure the BT function is turned ON).
- On your device's Bluetooth menu, find and select "SA02 Sound Speaker". (you may be required to enter a password "0000")
- A 'beep' will sound to indicate successful pairing.
- If a paired BT enabled device is in range, the device will connect automatically when the device is in BT mode.




### LISTEN TO MUSIC:

Long press : volume up; Long press : volume down;  
Short press : next track; Short press : previous track;


### NOTE!

Press and hold  to switch between the White Noise Mode and BT Mode.

### LED LIGHTS:


Turn on the device.  
Press  to turn the light function on. There are 3 warm white light brightness levels. Press the  to change brightness.  
Continue to press  to enter the RGB fixed color modes.  
After RGB fix mode, single press to enter RGB Breathing color transition mode.

 THUNDER STORM

 CAMPFIRE

 SUMMER NIGHT


 TELEVISION NOISE

 RADIO NOISE

 OCEAN WAVES

 BABBLING BROOK

### SLEEPING MODE:

This device has a SLEEP timer function. Just Press  button to choose 30 minutes, 60 minutes, or 90 minutes to start the sleep timer. When the desired time has passed, the device will turn itself off.

### CLEANING:

- Before cleaning the device, always disconnect the device from the power cord.
- Do not use abrasive cleaning solvents to clean the device.
- Clean the exterior of the device with a damp cloth.

### PRODUCT SPECIFICATIONS:

- Driver diameter: Ø 52 mm
- Speaker: 4 Ω 5W
- Available frequency: 20 Hz ~ 20 kHz
- Speaker sensitivity: 100 dB ± 3 dB
- Bluetooth: V5.0
- Transmission power: Class II
- Operation distance: up to 33ft/10m
- Frequency: 2.4 GHz - 2.48 GHz
- BT profiles: AZDP, HSP, HFP, AVRCP
- Power input: 5V, 1A Max.
- Built in rechargeable battery: 1200 mAh Li-Ion
- LED: 3 White, 6 RGB colors and 1 RGB Breathing Transition Colors
- Weight: 210g

All contents and specifications mentioned in this manual are subject to change without prior notice.

### INSTRUCTIONS FOR PROTECTING THE ENVIRONMENT

(WEEE, the waste electrical and electronic equipment directive)



Your product has been manufactured using high quality materials and components which can be recycled and used again. At the end of its service life, this product cannot be disposed of in normal domestic waste, but must be taken to a special collection point for recycling electrical and electronic equipment. This is indicated in the user manual and in the packaging by the waste container marked with a cross symbol. Used raw materials are suitable for recycling.

By recycling used appliances or raw materials, you are playing an important role in protecting our environment. You can ask your local council about the location of your nearest collection point.

Do not dispose of batteries in your household waste. Dispose of batteries by taking them to your local recycling station. Contact your local government offices for details.