

2)Non-rechargeable batteries are not to be recharged.

3)Rechargeable batteries are to be removed from the toy before being charged{if

4)Rechargeable batteries are only to be charged under adult supervision (if removable).
5)Different types of batteries or new and used batteries are not to be mixed.

6)Only batteries of the same or equivalent type as recommended are to be used.
7)Batteries are to be inserted with the correct polarity.

8)Exhausted batteries are to be removed from the toy.

9)The supply terminals are not to be short-circuited. Toy appliances in use successfully in the process, you should periodically check the wires, plugs. Shell and other parts for damage, found damage should discontinue use until the repair is intact.



CHILDREN UNDER 3 YEARS
DUE TO SMALL PARTS

0-3

هددار ا برای کود کان زیر ۲ سال مناسب نیست ، دارای اطمات کوچک است الحذين إغير ملاتم الاطفال تحت اللالة (ع) ستوات يسيب didali teragi COUNTRY OF ORIGIN: CHINA

بلدالمتثناة: الصين



PRECAUCION

PELIGRO DE ASFIXIA

-CONTIENE PARTES PEQUENAS NORECOMENDADO PARA NINOS MENORES DE 3 ANOS



WARNING:

CHOKING HAZARD - small parts, Not for children under 3 years.



صنعت وفقا للمواصفات والمعايير العالمية Tested according to international standards

USE 3.7V BATTERY PACK (INCLUDED) OPEN THE BATTERY COVER, REMOVE THE B

ATTERY PACK CONNECT CHARGELINE CHARGE.

DIRT BIKE BATTERY DESCRIPTION



Open the battery cover on the remote control, use 2X1.5V "'AA" batteries (not included), mount the remote control button battery cover. Follow the polarity of the battery compartment tip correctly into the battery, and avoid dangert









MADE IN CHINA

NO.699-139

SPECIFICATIONS COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS