Picnu

BG-01

深圳市品存数码科技有限公司

picun LED Indicator Description

Pairing Flash in red and blue Power ON Steady blue for 3 seconds Stand By Steady Blue Low-Battery Flash in red Steady red. off after fully charged Charging

Basic Key Operation

Power On Press and hold of for 3 seconds to power on. Indicator will flash in red and blue.

Power Off Press and hold for 3 seconds to power off.

Volume Control

Rolling the button + to volume up. - to volume down.

picun

Songs Track

Click (a) twice for next track. Click @ 3 times for previous track.

Multifunction Button

Click for music pause.

Click for music play. Click @ to accept a call.

Click @ to hang up a call. Click twice to reject a call.

- Mute/Activate Microphone 1. Click "M" to mute the microphone, the indicator will go off with
- voice broadcast 2. Click "M" Again to activate the microphone with a voice broadcast

while charging, the headset default to power off, indicator steady red and go off after fully charged.

Headphone Charging

Battery Status When connected with an IOS device, the battery status will show on the upper right corner of the screen.

Line-in Mode After plugging the aux cable into the headset, it will default to power off. Microphone still available. Nove: Headset could not be turned on with aux cable in.

picun

Please charge the headset for about 2 hours at low-battery status,

Wireless Mode

Powering on the headset, the indicator will flash in red and blue. Open the wireless feature and search the device named "BG-01", click the name to complete connection.

Delete Pairing Information Hold and press the "power" button and "M" to delete the pairing information on the headset.

Headphone Appearance Wireframe Volume Control

Mute

Button

Wireless

Indicator

Multifunction

Button

USB Charging Port

picun



Microphone Indicator

Automatic shutdown and over-distance reconnection

picun

Bluetooth V5.3

98±3dB at 1K HZ

20 HZ---20K HZ

10 meters

32Ω±15%

DC5V

3.7V

180mA

12-25mA

A2DP/AVRCP/SMP/HFP

Headphones will reconnect to the phones when it comes back to effective distance within 5 minutes, or turn off after 5 minutes

Notes:

charged.

Attentions:

environment

 Wireless Headphone User Manual

the Protect battery usage.

including direct sunlight.

is necessary to charge the headset before using it.

3. Audio cable 4. Charging Cable

1. Use a 5V1A/5V2A charger to charge the headset. Charging the *If the earphones produce abnormal smell, higher than normal headset with a charging device with a high voltage may damage it.

2. When the headset has not been used for more than 3 months, it 3. When not in use for a long time, it is recommended to charge

the headset every 3 months, which can more effectively protect 4. It is recommended to use the earphones after they are fully

damage to your hearing.

Warnings:

*Using headphones at high volume for a long time may cause

warranty card.

picun

*Do not disassemble the earphones, and any attempt to repair or modify the earphones is prohibited.

*Please pay attention to excessive drops, impacts, scratches or other behaviors that affect the function of the headset, if there is any damage, such as dents, punctures, tear deformation or

corrosion, etc., please stop using the headset equipment immediately, and contact the purchaser or Contact us via the contact details on the warranty card

temperature, abnormal changes in color or shape, please stop using the earphones immediately, and contact the merchant you purchased or contact us through the contact information on the

date of the product warranty will be based on the product manufacture date.

Product Model:

Purchase Date:

User Name:

User Address:

Purchase Account:

Warranty Description Please keep the warranty card and valid purchase proof properly, show it together when sending the product to repair. If you can't provide the warranty card or relevant purchase certificate, the calculation

WARRANTY CARD

Product Color:

Purchase Store:

Phone Number:

Reason for Warranty:

Warranty Regulations

1. If you have any questions during using, please don't hesitate to call 4008894883 for help. 2. Within one year from the purchase date, if the product with quality issue and the technical staff of our company has confirmed that the issue occurs under normal use, we will provide free replacement

3. In the following cases, our company refuses to provide free warranty service, only provides maintenance services, free of labor costs, only charges for parts:

A. The product main part has been damaged due to incorrect operation, negligent use or irresistible

QC 08

PASS

B. The product has been dismantled or repaired without our company authorization C. The headphone driver unit has been used at high volume, and the diaphragm is deformed due to

debris or impact. The headphone cable is broken, crushed, immersed in water, the case is damaged. deformed, and some other man-made damage reason.

D. The original warranty card and valid purchase proof can't be provided, and the purchase date is 4. The free service provided by this warranty card does not include product accessories, and other

decorations, gift, etc.

Product Qualification Certificate After inspection, the product meets the technical standards and is allowed to leave the factory.

Product parameter

Wireless Version

Wireless Protocol

Effective Distance

Speaker Impedance

Sensitivity

Frequency Range Charging Voltage

Recharging Current Operating Voltage

Operating Current

*Do not place the earphones in damp or submerged in liquid, keep

the earphones dry.

picun

What's in the box

*Do not attempt to charge the headset by any method other than

*Do not place the headset in a high temperature environment.

*Do not place the headset near a fire or other overheating

the supplied charging cable.