 



# Tire Inflator

## USER MANUAL

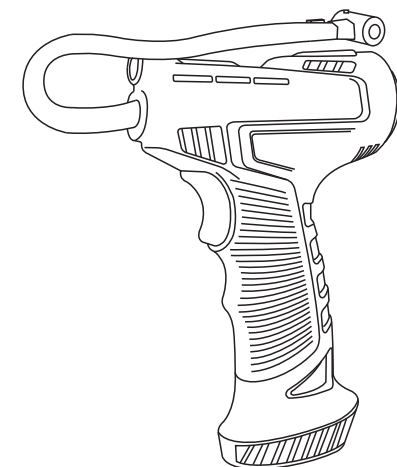


Please read this manual prior to using this product
 
### Product Description

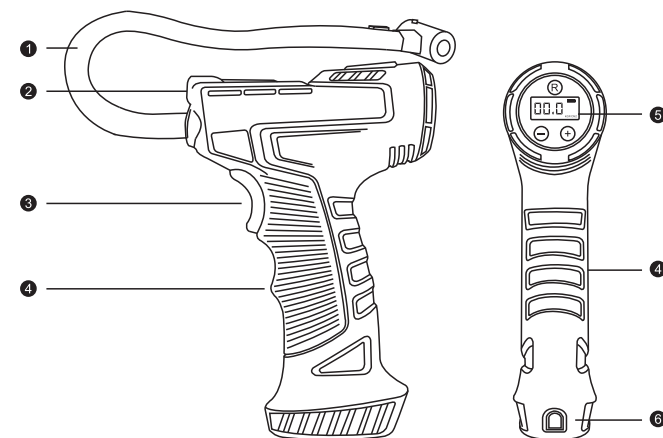

- 1 Air hose
- 2 LED lamp
- 3 On/Off Switch
- 4 Handle
- 5 Pressure Gauge
- 6 Charging interface

### ACCESSORIES

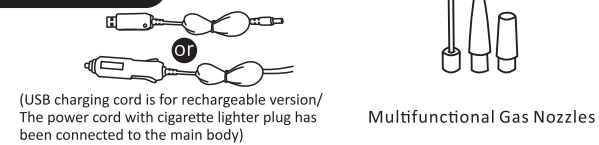

(USB charging cord is for rechargeable version/  
The power cord with cigarette lighter plug has  
been connected to the main body)

Multifunctional Gas Nozzles

### Product Parameter

Model No.	CZK-3665
Material	ABS
Size	170X235X80mm
Power	120W
Rated voltage	7.4V/DC 12

### Tire pressure recommended for private cars



**CAR**  
2.3-2.5KG/CM<sup>2</sup>



**SUV**  
2.5KG/CM<sup>2</sup>



**MPV**  
2.3-2.5KG/CM<sup>2</sup>

### How to inflate

- 1 Start the car
- 2 Insert the cigarette lighter plug into the cigarette lighter socket
- 3 Pre-set the pressure (For rechargeable version, start from this step)
- 4 Connect the gas tube to the valve of tire
- 5 Press the On/Off switch
- 6 The machine will stop inflating as soon as the tire pressure reach the pre-set pressure. Then turn off the switch




### Warning

- 1.For rechargeable version, please start from third step after fully charged .
- 2.Do not use it in direct sunlight or under high temperature or pressure.
- 3.Please make sure the switch is off before charging. It is forbidden to charge while using.


### Preset pressure

Press "R" to change the unit ,press "+"or "-" to choose the figures .After the figures stops flickering, turn on the switch to start work. The machine will stop automatically once the tire pressure reaches the pre-set pressure. Turn off the switch after complete inflating.

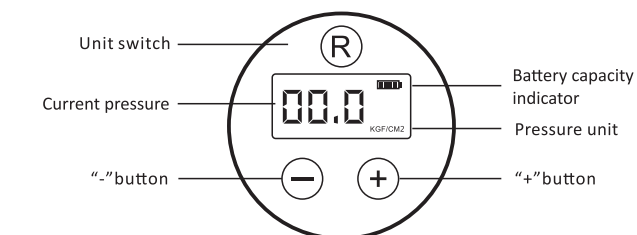

### Multifunctional Gas Nozzles

This product has three multifunctional gas nozzles as below.

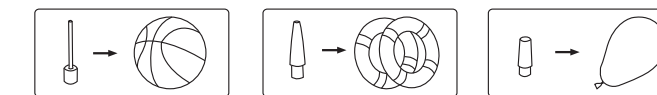

### Features

- 1.Hand-held air pump,more convenient operation .
- 2.Three operation buttons ,accurate pressure display .
- 3.Metal cylinder ,fast heat dissipation,long service life.
- 4.Shorter inflation time,lower noise.
- 5.LED lamp bring convenient use at night.
- 6.Preset pressure, stop automatically.

### Attention

1. Make sure the battery is fully charged before using.
- 2.Please lock the safety buckle when the product is not in use to avoid startup.
- 3.Do not disassemble, repair or modify this product without authorization.
- 4.Do Not put it beside heat sources,such as car heat rejection outlet.
5. The normal operation of the product will make the product slightly heating, which is a normal phenomenon.
6. In order to ensure the good work of the air pump, the continuous inflating time should not be too long. It needs to interval rest if long time inflation is required.
7. Please charge the product in time after using up the power. If it is not charged for a long time, the product maybe can't be charged.
- 8.It will turn off automatically if no operation for 40 seconds.

### Warranty Card

User Name		Tel.	
User Address			
Email		QQ Number	
Purchase Address		Dealer	