

5. To distinguish and dispose the malfunction and abnormal

Phenomenon	Caution	Caution	Caution	Caution	Caution	Disposal
Control knob do not turn to "OFF"	●					Turning the control knob to the "OFF" and settle the gas cartridge over again.
Open the pressure safety device		●			●	Please refer to the instruction of pressure safety device
Malfunction of the control knob		●	●	●	●	Send for repair
The inner pipe blocked		●	●	●	●	Send for repair
The settlement of gas cartridge in correct	●	●	●	●	●	Match the hole of gas cartridge with the protuberance
The burner blocked				●	●	To clean it with metal brush
Electronic lighter inflected or rust				●	●	To clean the dirt
No gas		●	●	●	●	Renew the gas cartridge with gas
Do not pull out the assistant ignited Ring					●	Pulling out the assistant ignited Ring

Daily check and maintenance:

- Please keep the heater and gas cartridge separate when not in use.
- Please don't unscrew and re-assemble the heater.

Have not use it for a long time:

- Please make sure the heater do not contain any mildew or rust. Keep it dry and clean.
- Put the heater into case after it cool down, keep it in the dry place.
- Keep the heater and gas cartridge separately.

Specifications			
Fuel consumption	Fuel	Rated	Injector size
90gh	Butane gas	1.3KW	0.44φ
Ignition Electronic Piezo SIZE:292x265x190mm Weight 2KG			

For outdoor use only

- Do not use in direct sunlight.
- Keep bottom away from dirt and sand.
- Use only on a secure steady surface, do not use the appliance on plastic case.
- Do not use indoors.
- Do not modify the appliance.



! IMPORTANT



This appliance category is **Direct Pressure-Butane** and should only be used with a **Butane Gas Cartridge (MaxSun Model:BD-220)** or compatible alternative that complies to **EN417**. It may be hazardous to attempt to fit other types of gas containers. Dispose of used cartridges safely. Never puncture or dispose off in fire.

When replacing or removing a cartridge check the seals (between cartridge and appliance) are in place and in good condition.

CAUTION

- Check the seals (between the appliance and the gas canister) are in place and in good condition. Do not use the appliance if it has been damaged or worn seals, do not use an appliance which is leaking, damaged or which does not operate properly.
- If there is a leak on your appliance (smell of gas), take it outside, immediately into a well ventilated location where the leak may be detected and stopped. If you want to check the leak, do it outside. Do not try to detect leaks using a flame, use soapy water.

CARTRIDGE SAFETY

• Caution on the Cartridge

- The cartridge should be placed away from flammable products or the direct rays of the sun. Be sure to close the tap securely after using. Never keep cartridges in places over 40°C.
- Do not store unit or cartridge in enclosed areas.
- Do not puncture or incinerate empty cartridge.
- Do not refill gas into empty can.
- Keep out of reach of children.
- When you change the cartridge, check the cartridge is empty before changing it (shake to hear the noise made by the liquid).
- This appliance shall be used away from flammable material (include distances recommend from walls etc).
- The cartridges shall be changed in a well ventilated location, outside, away from any sources of ignition such as naked flames, pilots, electric lines and away from other people.

CAUTION: Accessible parts may become very hot. KEEP UNIT OUT OF THE REACH OF CHILDREN!

- Do not spray aerosols in the vicinity of this unit while it is in operation.
- Do not leave unit unattended while operating.
- Do not use the appliance if it has been damaged or worn seals.
- Avoid touching burner, trivet etc. immediately after use or while in use.
- This appliance must be operated on a horizontal surface.
- This appliance shall be used away from flammable materials and information on minimum distance 30cm from adjacent surfaces (wall, ceiling)



INSTRUCTIONS OF THE OUTDOOR HEATER





FOR OUTDOOR USE ONLY

Please read these instructions carefully so as to familiarize yourself with the appliance. Keep these instructions for future reference.

1. The usage scope of heater.

- For camping use.
- For climbing / mountain use.
- For fishing use.
- For various outdoor activities.

2. Parts of Heater structure.

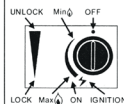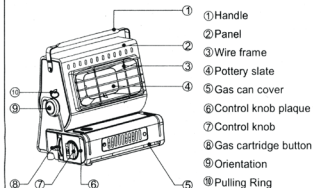

Marking On the Control Panel:

- Press Gas can lock downwards to lock position.
- Turn the adjustment knob right round to the left to the ignition position until the ignition clicks.
- For more detailed usage refer to "USING YOUR HANDY RANGE"



3. Operation process.

<p>①</p> <p>Put your finger into the bottle cover hole and open it.</p>	<p>②</p> <p>LOCK MAX ON IGNITION Make sure the control knob is on the "OFF" position and the pole knob on the "RELEASE" position.</p>
<p>③</p> <p>Please use the appointed gas and settle it as the figure.</p>	<p>④</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION Press the pole knob to the "LOCK" turning the control knob anti-clockwise, when you hear the "CLICK" you can ignite it.</p>
<p>⑤</p> <p>Pull out the assistant ignited Ring.</p>	<p>⑥</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION Turn the control knob anti-clockwise to ignite, and reposition the Ring.</p>
<p>⑦</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION Turn the control knob clockwise to "MIN" and anti-clockwise to "MAX."</p>	<p>⑧</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION Turn the control knob to the "OFF" to cut off the gas.</p>
<p>⑨</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION Turn the control knob clockwise to "OFF" and put the pole knob to the "RELEASE" and take out the can.</p>	<p>⑩</p> <p>UNLOCK MIN OFF LOCK MAX ON IGNITION After you take out the can, there will be some gas in the pipe, please ignite it again, after that, you can turn off the control knob.</p>



4. Pay attention to the following items while in using.

<p>①</p> <p>Don't use the heater to dry clothes or flammable article. In this case, it may cause accident, such as fire.</p>	<p>②</p> <p>When you are using the heater, do not cover the heater. Otherwise, it will cause accident or fire.</p>
<p>③</p> <p>Whist using or after switching off the heater, do not touch the hot parts such as panel, wire frame, pottery slate until the heater cools down.</p>	<p>④</p> <p>Don't use the heater to cook food.</p>
<p>⑤</p> <p>Don't roast food on the heater.</p>	<p>⑥</p> <p>Please don't use the heater in an unventilated room. Using the heater under such situation will cause excessive smoke above the normal level.</p>
<p>⑦</p> <p>After fully using up the gas canister, do not throw this used can into the naked fire. This may cause an explosion. Be sure to make a hole with nail or drill in the used gas can before you throw it away.</p>	<p>⑧</p> <p>Container groove must be fitted as the above figure!</p>

Attention:

- Please finish the ignited process within 2 seconds. Don't take more than 3 seconds as it may cause leakage of gas.
- When the gas cartridge is under the sun radiation or high temperature conditions, it may lead to the inner gas being over pressures. Hence, please cool down the gas cartridge.
- Using non-standard, old or inferior quality cartridges, may cause the heater not to function.
- Whist using or immediately after usage, don't touch the heater and handle with care.
- Keep this heater away from small children.

