


DESCRIPTION OF PARAMETERS

- Chair frame length: 78CM
- Chair frame width: 40CM
- Chair frame height: 70CM
- Seat height: 22-38CM
- Net weight: 6.0KG
- Total height of dining chair: 92CM



INSTALLATION INSTRUCTIONS (RED SWITCH)

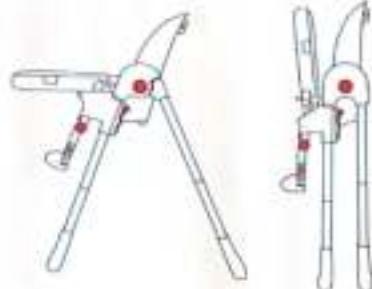

FIVE POINT SEAT BELT SWITCH



UP AND DOWN ADJUSTING SWITCH FOR FEET CHAIR



UPPER AND LOWER ADJUSTING SWITCH OF PEDAL-FOOT



OPEN AND CLOSE SWITCH OF DINING CHAIR



DINNER PLATE THREE-GEAR ADJUSTING SWITCH



FOOT TUBE INSTALLATION



HOLELESS PIPE ARE CONNECTED UP AND DOWN IN FRONT OF EACH OTHER.



HOLELESS PIPE IS CONNECTED UP AND DOWN AFTER PLACING

DINING CHAIR PARTS AND COMPONENTS



MATTERS NEEDING ATTENTION

- Failure to follow this instruction may affect children's safety.
- When children use dining chairs, caregivers are not allowed to leave.
- This product is suitable for children aged 6 months to 6 years.
- The maximum load of this dining chair is less than 50KG. It can not be overloaded.
- If the dining chair is damaged, torn or missing anywhere, please do not use it.
- Before using the dining chair, please carefully check that all parts are installed and adjusted correctly to ensure that all locking devices are not in lock fixed state.
- Children must use seat belts when riding, in order to prevent the baby from falling off or slipping out of the dining chair, causing serious injury.
- Do not use this product when your baby cannot sit up independently.
- Don't let your baby climb, play or hang on the dining chair alone.
- This product can only be used on flat and stable ground. At the same time, do not place overweight items on the plate Anti-overturning chair.
- Avoid putting dining chairs near heat sources, such as electric heaters, gas heaters, etc., or anything that can make a fire where flammable materials come into contact with dangerous goods.
- Before using, it is necessary to remove all plastic bags and packaging materials to prevent the risk of infant suffocation.

MAINTENANCE KNOWLEDGE

- Don't expose your dining chair to the sun for a long time.
- Seat cushion should not be dry-cleaned, washed or ironed.
- When disassembling and assembling, please follow the instructions carefully to avoid unnecessary damage.

BABY DINING CHAIRS INSTRUCTIONS FOR INSTALLATION AND USE OF

