



Specifications are subject to change without notice. © 2022 Koninklijke Philips NV. All rights reserved.

3000 089 4783 | 1 (202)7102221

## English

Congratulations on your purchase, and welcome to Philips! To fully benefit the Philips support that Philips offers, register your product at www.philips.com/welcome.

## 1 Important

Read this user manual carefully before you use the appliance and keep it for future reference. Please read the following information:
**WARNING:** Do not use this appliance near water.

When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

**WARNING:** Do not use this appliance near bathtubs, showers, basins or other wetted surfaces.

Always unplug the appliance after use.
If the main cord is damaged, you must have it replaced by Philips, a service centre authorized by Philips or similarly qualified persons in order to avoid a hazard.

This appliance can be used by children aged from 8 years and older.
However, it does not have any special safety or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning safe use.
This is a normal way and understand the hazards involved. Children should not play with the appliance.
Cleaning and user maintenance shall not be made by children or artificial hair.

For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the appliance. The RCD must have a rated residual current operating current not higher than 30mA. Ask your installer for advice. Do not insert metal objects into the air grilles to avoid electric shock.

Keep the hair of the air grilles.
Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

Do not use the appliance for any other purpose than described in this manual.
Only use for drying and styling scalp hair. Do not use the appliance on anything else.

When the appliance is connected to the power, never leave it unplugged.

Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your warranty becomes invalid.

If the appliance overheats, it switches off automatically.
This is a safety feature.

Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.
Do not dry your hair with the appliance.

Wait until the appliance has cooled down before you store it.

Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Pay full attention when using the appliance since it could be extremely hot. Only hold the handle as other parts are not avoid contact with the skin.

Avoid the main cord from coming into contact with the hot parts of the appliance.

Do not use the appliance with anything (e.g. a towel or clothing) when it is hot.

Do not operate the appliance with wet hands.

Always return the appliance to a service centre authorized by Philips. Do not attempt to repair it yourself. Philips and people could be injured in an extremely hazardous situation for the user.

Keep the barrel clean and free of dust and styling products such as mousse, spray, gel. Never use the appliance in combination with styling products.

The barrel has coating. This coating might slowly wear away over time. However, this does not affect the performance of the appliance.

If the appliance is used on color-treated hair, the barrel may be stained.

## Electromagnetic fields (EMF)

This Philips appliance complies with applicable standards and regulations regarding exposure to electromagnetic fields (EMF).

This symbol means that this product should be disposed of according to local household waste (2012/19/FU).

Follow your country's rules for the appropriate collection of your electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

## 2 Overview

- Hanging loop
- Airflow switch
- Release button
- Handle
- Retractable bristle brush
- Palmbrush
- Volumeizer
- Nozzle
- Pouch

## 3 Style your hair







