


PANEL FUNCTION



- | | | |
|------------------|------------------------|--------------------------|
| 1. BASS Control | 7. MIC Input | 13. PLAY/PAUSE Button |
| 2. Volume | 8. LED ON/OFF Switch | 14. PREVIOUS Button |
| 3. MIC Volume | 9. Tablet/phone holder | 15. USB Input |
| 4. Repeat button | 10. TREBLE Control | 16. AUX Input |
| 5. Equalizer | 11. ECHO Control | 17. Micro SD/TF Input |
| 6. Mode | 12. NEXT Button | 18. System ON/OFF Switch |
| | | 19. LED Display |
| | | 20. DC 5V |

REMOTE CONTROL FUNCTION

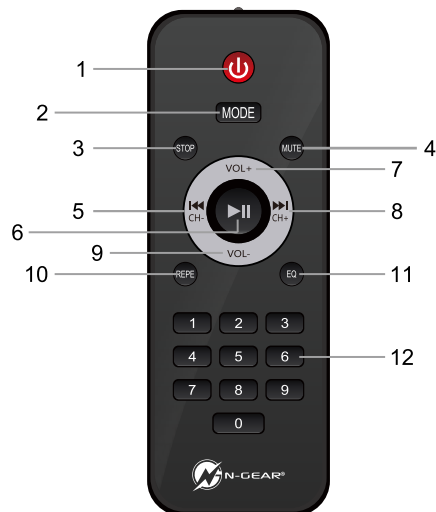

- | |
|---------------------------|
| 1. POWER |
| 2. MODE |
| 3. STOP |
| 4. MUTE |
| 5. Control prev key |
| 6. Play/pause control key |
| 7. VOL+ |
| 8. Control next key |
| 9. VOL- |
| 10. REPE |
| 11. E/Q |
| 12. 0-9 |

USER MANUAL



THE FLASHBANGER 777



Please read the operation manual carefully to operate this unit correctly and keep this manual handy for further reference.

SAFETY INSTRUCTION

1. Please read these instructions carefully before operating this device.
2. Only use the power supply that came with the product, if not included, use the power supply is indicated in this manual, Using an unauthorized power supply will invalidate your guarantee and may irrecoverably damage the product. Disconnect your karaoke speaker from the power supply during thunderstorms. Always check that you have completely switched off your karaoke Speaker before you change or disconnect the power supply.
3. Do not leave it in low temperatures as moisture can form inside the product, which may damage the circuit board. Keep away from heat sources and flames. Do not leave it in high temperatures as electronic devices and plastic parts warp in heat.
4. To avoid possible hearing damage, do not listen to this karaoke speaker at high volume levels for long time. Always keep the volume within reasonable limits.

FUNCTION DESCRIPTION

CHARGING THE SPEAKER

- Plug the included AC into any AC Charging Cable Charger and into the AC charging port.
- The charge LED light will turn to red indicating the battery is being charged.
- When using the speaker, it can be used on battery power or being plugged into the AC charger.

USB FUNCTION

- Insert a USB flash drive. USB mode will start automatically.
- In order for the speaker to recognize the song these should be MP3 or WAV format.
- Press PLAY/PAUSE button to play or pause the music.
- Press NEXT button to go to next song.
- Press PREVIOUS button to restart song or return to previous song.

MICRO SD FUNCTION

- Insert a Micro SD, SD mode will start automatically.
- In order for the speaker to recognize the song these should be MP3 or WAV format.
- Press PLAY/PAUSE button to play or pause the music.
- Press NEXT button to go to next song.
- Press PREVIOUS button to restart song or return to previous song.

FM RADIO FUNCTION

- Press MODE on the speaker to switch to FM mode.
- Press PLAY/PAUSE to enter into automatic FM channel searching.
- Press NEXT button to go to the next frequency.
- Press PREVIOUS to go back to previous frequency.

FUNCTION DESCRIPTION

BLUETOOTH FUNCTION

- Turn on the volume power of the speaker, the speaker is on Bluetooth mode.
- Press MODE on the speaker to switch to Bluetooth mode.
- Turn on your mobile device and search for " THE FLASHBANGER 777 ". Select it to pair.
- You will get a voice prompt when your device is connected.

AUX FUNCTION

- Press MODE on the speaker to switch to AUX mode.
- Press PLAY/PAUSE to play or pause the music.
- Press NEXT button to go to next song.
- Press PREVIOUS button to restart song or return to previous song.

WIRED MICROPHONE

- Connect the supplied wired microphone to the MIC input jack located on the front panel of the speaker.
- Control the volume of the MIC by rotating the Mic knob.
- Control the echo effect by rotating the Echo knob.

WIRELESS MICROPHONE

- switch on the wireless microphone
- Control the volume of the MIC by rotating the Mic knob
- Control the echo effect by rotating the Echo knob

SPECIFICATIONS

Speaker Unit -----8"	Sensitivity Range ----- 87dB±3dB
Output Power -----20W	Voltage Output ----- 100V-240V
Frequency Response --- 90HZ-20KHZ	Battery -----7.4V/4400mAh

PACKAGE INCLUSIONS

Portable Speaker ----- x1	USB Charging Cable ----- x1
User Manual ----- x1	Wired microphone ----- x1
Remote Control ----- x1	Wireless microphone ----- x1