


## 2. Control panel operation guide

SN	Item	Description
1	Outdoor PM2.5	Real-time display of measured outdoor PM2.5 (after connecting to the network)
2	Indoor PM2.5	Real-time display of measured indoor PM2.5
3	Lock screen icon	Indicates that the lock screen is turned on. You need to enter the unlock password when you operate again
4	WiFi icon	Indicates network connection status and signal strength
5	Indoor temperature	Real-time display of measured indoor temperature
6	Outdoor temperature	Real-time display of measured outdoor temperature (open-air)
7	PM2.5 pollution level	Distinguish PM2.5 pollution level by color
8	Power button	Click the button to start machine, then closed when click it again
9	Working mode switching button	Click the button to change working mode: Auto/Manual
10	Wind speed switch	Click the button to change wind speed at the manual mode.
11	Setting	Entry to the setting interface

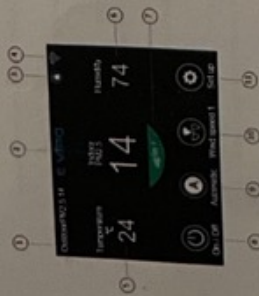

### Network Configuration

Please make sure your phone is connected to Wi-Fi before configuring the network, and the Wi-Fi can be used normally. If the distribution network fails, please confirm the Wi-Fi password is entered correctly.

- Click "Settings" → "Network Configuration" to enter the "Configure Networking" interface
  - Use WeChat's client end to scan the QR code on the interface.
  - Complete the "Follow the Public account" and "Binding Device" operations according to the prompting of the WeChat's client.
  - Click "My Device" in the bottom menu of WeChat's public account to enter the "Device Details Page"
  - WeChat's interface prompts that the device is not connected to the Internet. Click Configure Network button.
  - Press and hold the "Wi-Fi" icon on the control panel for more than 3 seconds. After hearing the "Di" sound, go (the Wi-Fi icon is flashing) as below
  - Click "Next" on the WeChat
  - Enter Wi-Fi password on the "Configure Device Internet" interface on the WeChat. Click "Connect" when password input is complete, and wait for device to connect to the network.
- After the connection is successful, Wi-Fi icon on the Configure Networking screen is always on, and the status of the "Connected Network" is displayed



### Threshold setting

The wind speed will change automatically when the wind speed is set at the auto-mode.

#### Setup steps

- On the main interface, click "Settings" → "Threshold Setting", to enter the wind speed threshold setting interface
- Choose the pre-set adjustment value (Low, medium, high-speed, or other parameter figure), and input the adjustment value on the numeric keypad.
- Click "OK" to close the numeric keypad, click "Save" to complete the setup




### Filter resetting

- Click "Setting" → "Filter replacement" → enter into "Filter replacement" interface
- After necessary filter(s) has been replaced or cleaned, click "Reset" on the interface.


Step 3: Enter the "Warning" interface, click "OK" to complete filter resetting

**Note:** Confirm that filter has been replaced or cleaned before resetting completed. No modification can done after resetting

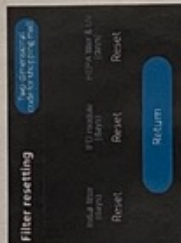

### Backlight setting

- Click "Settings" → "Backlight Settings" on the main interface → enter the "Backlight Settings" interface
- Click "Dark", "Medium", or "Bright" to adjust the backlight brightness

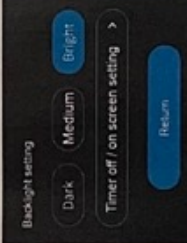

### Timer off / on screen setting

- Click "Settings" → "Backlight Settings" → "Timer Off / On Screen Setting" → enter "Timer Off / On Screen" setting interface
- Press the "Timer Off / On Screen" switch for turn off or on of the timer.
- Click the pre-set time parameter and input the new time, and click "Save" to complete the time setting.

### Child lock settings

- Click "Settings" on the main interface → "Child Lock Settings" → enter the "Child Lock Settings" interface
- Click "Switch" to turn on the child lock, and click "Save" to complete the setting

**Note:** After the child lock is turned on, the child lock icon in the status bar of the main interface is highlighted. When you operate it again after 1 minute, you need to enter the unlock password. Please note that the unlock password is defaulted "6666".

