

## Potato Cutter

Model No.: PS-321B



### Precautions

Please read all instructions before use.  
Please keep the product away from children.  
Please place the product on a even surface, or it would cause damage or injury by improper use.  
Do not use parts that are not recommended or sold by manufacturer, as it may cause damage or injury.  
Do not place any foreign subjects like forks, knives, spoons into the item, otherwise injury or accident may occur.  
Close supervision is absolutely necessary when any appliance is used near children; improper handling or dropping of the item may result in injury or failure of the product.

### Product Introduction



1. Main body
2. Handle
3. Presser
4. Fixing shaft
5. Blade Insert
6. Secure screw

### Before Use

Disassemble the product for washing



1. Raise up the handle.



2. Turn the screw in anti-clockwise.



3. Slice out the blade insert.



4. Push out the fixing shaft.



5. Release the handle.



6. Press the Clip for releasing the presser.

### How To Use



1. Insert the presser to the grip handle, a click voice would happen.



2. Place the blade insert to the main body.  
**Tips: both sides of the blades can cut.**



3. Tight the secure screw to the main body.

**⚠ Attention: DO NOT touch the blade directly with your hands, otherwise it would scratch you hands.**

### Tips To Use



• The blade insert can only be inserted when the handle is in the raised position.



• Prepare potatoes (or vegetables) for the chipper by cutting large potatoes in half. Ensure the potato fits within the chamber. For easy operation, never place the flat surface of a cut potato against the blade. Always insert the curved side first.



• If the potato gets stuck on the blade, please release the handle and press again.

• If you want to cut sweet potatoes, please cook the sweet potatoes until half-cooked or microwave for one minute, DO NOT use the cutter cut the raw sweet potatoes.  
• Please clean the cutter with water under 140 Fahrenheit (ca. 60 °C).

### Technical Data

Item Name	Potato Cutter		
Model No.	PS-321B	Material	ABS/PP/SS420J2
Dimension	261 x 125 x 125 mm	Item Weight	426 g