



MaxxHome AC75 Luchtkoeler 8 Liter


20746



Please read these instructions carefully before using for first time. Keep these instructions safe for your future reference.

Product Structure Diagram

1. Water tank cover
2. Control panel
3. Side cover
4. Air outlet
5. Cross blade
6. Water tank window
7. Caster

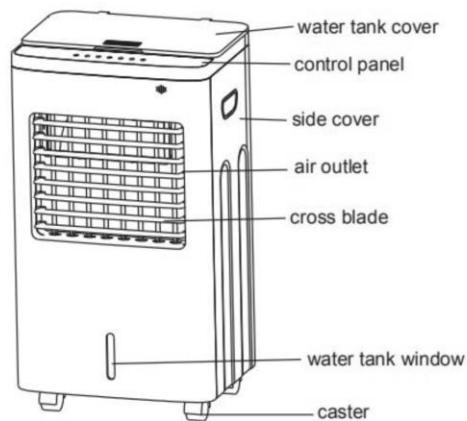

INTRODUCTION

- Thank you for purchasing our air cooler.
- Each unit has been manufactured to ensure safety and reliability.
- Before first use, read the instructions carefully and keep it for further reference.

PERFORMANCE PARAMETERS

Model	Rating Power	Power	Max Water Injection Rate	Specification
20746	220-240V ~ 50/60Hz	75W	8 L	Cooling

FUNCTIONS

- **Principle of Cooling:** Water is taken from the water tank by pump to the top, then the water drops into paper evaporator . When the water in paper evaporator evaporates to water vapor, the air is cooled. People will feel cool wind when the cool air is delivered by fan.
- **Electronics control:** safe and durable, attractive appearance.
- **Adjustable speed and fan mode:** have three speeds and fan types, blow at a wide

angle.


- **Cool:** adopt the technology of ice crystal cooling and air humidifying, fall down the temperature from air vent and raise relative humidity, prevent air drying. You could put the ice box into the top tank and down tank to make the cooling be better.
- **Deliver wind at a wide angle:** swing the blades automatically, deliver wind at horizontal wide angle. Swing the blades transversely manually, select the direction discretionarily.
- **Far-range remote control:** 6 meters far-range remote control, receive at 60 degree wide angle.
- **Buzzer:** vocalise when operating the effective keypad, use conveniently.

ASSEMBLING AND WATERING

1. **Assembling castors:** put the appliance on a flat surface, take out the wrench from foam box, then assemble the castors.
2. **Watering:** pull 1/3 water tank, then add clean water (map 1)

Attention:

- a. Pay attention to the level of water tank when add water.(map 2)
- b. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not below "MIN" scale.
- c. Put ice or frozen ice box to the water tank if you want to strengthen the efficiency of cooling. But the total level of water tank should not over "MAX" scale.

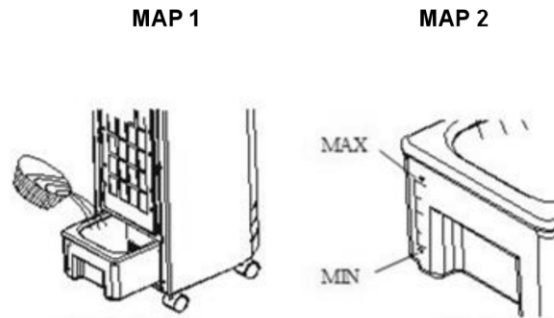

OPERATION

- **ON/OFF at the back side:** Please find this key and turn on the power at the BACK of appliance, the air cooler will be ready. When the appliance need stop to work, please turn off.
- **POWER on control panel :** Press the key, turn on the appliance, second press, shut it down .
- **SPEED:** press this key, start the appliance, the corresponding function changes as follows when you press the key serially: LOW→MEDIUM→HIGH→LOW.
- **COOL:** press the key to start cooling system. It cancels this function when you press again. **IMPORTANT:** Please be sure there is enough water in the water tank before press this key.
- **TIME:** press this key, the timer from 0.5 to 7.5 hours options with step 0.5 hours. It will shutdown if the timer finished.
- **SWING :** press this key to change the wind direction. The swing icon will appear on the screen when the function is activated. Press the button again to stop the oscillation. The vertical direction of air flow can be adjusted manually by directing the outlet louvers up

and down.

- **WIND TYPE:** press this key, you can choose the normal wind, natural wind and sleeping wind circularly. Under the situation of normal wind it has no corresponding indicator light, but others have.

THE USE OF REMOTE CONTROL

Fit on batteries, it can works. There have 6 keys on the remote control, and have the same function as control panel. Should aim at the remote control reception window when you use. When the remote control is not in use, please put away it for using next time.



Attention:

- Do not mix old battery with the new one in use.
- Please take out the batteries for long time no use.
- The remote control has no mode key, so press the key by your hands.

THE USE OF ICE BOX

The ice box has a particular feature of keeping cool, it can absorb heat and cool the environmental temperature.

Using methods:

- Put the ice box into the refrigerator to make sure that it iced absolutely.
- Open the door, put the frozen ice box into the water tank.
- There are four ice boxes for using circularly.
- The ice box no need to add water. Do not open it and prevent children from eating it !!!

CAUTION

- Use as per the rating voltage.
- Do not repair or remake the appliance by yourself, it should be repaired by the repairmen.
- Do not operate the appliance with wet hands, in order to avoid damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When the appliance is not in use, switch off and unplug it.
- Do not cover air outlets and inlets, in order to avoid damage.
- Do not use the appliance near explosive and combustible gas. Avoid long-term direct solar radiation.

8. Use the appliance only on a flat surface.
9. Do not use outdoors.
10. The level of water tank should not over "MAX" scale at any time, when humidifying, the total level of water tank should not under "MIN" scale.
11. After adding water to the water tank, do not tilt or knock over it when you put or move. If you want to move , please push slowly from the side, in order to avoid spilling.
12. Do not turn over the appliance. If it is toppled over and there are some water in the body, should unplug the power supply first. Then send it to the repair department or after-sales service and overhaul the appliance.
13. Do not cover the air vent.
14. Clean the appearance with a lightly damp cloth. Do not use any type of detergents or solutions. Do not rinse the appliance.
15. Do not make air outlets and inlets near the wall or curtain.
16. Do not knock or shake the body when using, otherwise it may cause stop automatically.
17. The water in tank will easily metamorphose and has odor in summer, please renew the water frequently.
18. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
19. Children should be supervised to ensure that they do not play with the appliance.
20. To avoid the risk caused by instability of unit, you must fix the unit firmly according to manual book.
21. Fan for temperate climates only.
22. Be necessary to move the unit after the water has been added, roll gently to the required position and activate the bracket the castors.
23. The power cord is with "Y" type connection and it must be changed by professional technicians if necessary.

CLEANING



WARNING: Ensure that the fan is switched off from the supply mains before removing the air filter screen.

1.Clean the air filter screen (map 1)

Cut off the power supply, pull the handle of air filter screen, remove it from appliance. Clean the air filter screen with neutral detergent and banister brush, then clean it with clear water. Finally, re-install to the appliance.

2.Clean the wetted pad (map2)

Cut off the power supply, take down the air filter screen, then draw the wetted pad from support. Clean the wetted pad with neutral detergent and banister brush, then clean it with

clear water. Finally, re-install to the appliance.

Attention: the wetted pad must be installed horizontally, in order to avoid leaking.

3.Clean the water tank (map 3)


Cut off the power supply, open the door, take out the water tank, clean it with neutral detergent, and wash it with clear water, then re-install to the appliance.

4.Clean the shell

Clean with neutral detergent and soft cloth.

Attention: cut off the power supply when clean the appliance as there have a high pressure in the body. Do not leave any water on the surface of control panel.

ELECTRIC PRINCIPLE DIAGRAM

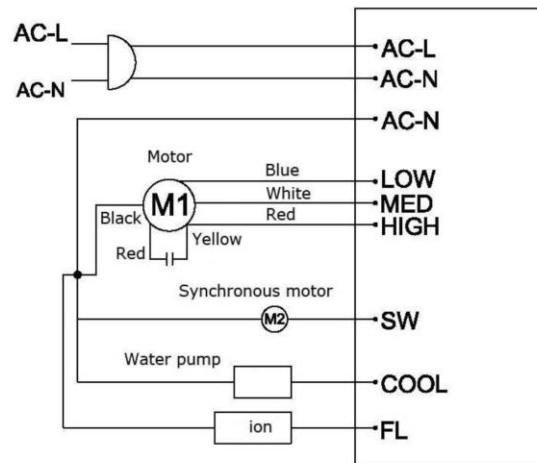

MALFUNCTION AND MAINTENANCE

Malfunction	Causes	Solution
No action	<ol style="list-style-type: none"> 1. Power off or poor connection. 2. Not press the "ON" key on the control panel. 	<ul style="list-style-type: none"> ● Plug the power cord and make sure it connects well. ● Press the "ON" key on the control panel.
Poor effect of dedusting	<ol style="list-style-type: none"> 3. Block the air filter screen with dust. 4. Block the air inlet with foreign things.. 	<ol style="list-style-type: none"> 1. Purify the air filter screen. 2. Remove foreign things from the air inlet.

Repair the appliance under the situation as follows:

1. Abnormal action or no action. it is invalid by the above approach.
2. Abnormal action caused by ingress of water or foreign things.