 



Contents

What's in the Box.....	2
Important Safety Instructions	3
Identifying the Parts	6
Main Unit.....	6
Smart Remote Control	7
Getting Started.....	8
Prepare the Smart Remote Control.....	8
Precautions Concerning Batteries	8
Connections	9
Place TV on top	9
Connect to Power	9
USB DC 5V Charge	9
Connect to TV	9
Connect to a Bluetooth Device	12
Connect to an External Audio Device.....	13
Basic Operation.....	14
Turn On/Off.....	14
Adjust Volume Level.....	14
Mute Sound	14
Bass Boost	14
Select SRS Sound.....	14
Program Smart Remote Control to Control TV	14
Troubleshooting.....	15
Specifications	16

What's in the Box



 
Main Unit

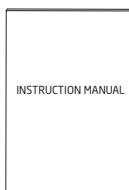


Instruction Manual



 
Smart Remote Control
(Maxell CR2025 lithium button
battery included)

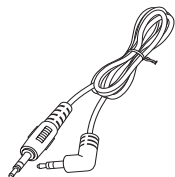

 Line Cable
(3.5mm to 3.5mm)
(For TV Headphone Output)

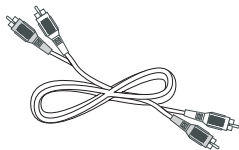

 
Line Cable
(RCA to RCA)
(For TV Line out)

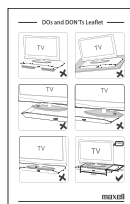

DOs and DON'Ts Leaflet



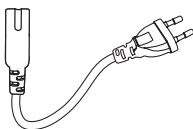 

HDMI Cable



Power Cable

Important Safety Instructions

	WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		





The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the apparatus.




Reading the user's manual

- The contents of this user's manual may be modified without any prior notification.
- The appearance and specifications may be partially modified without any prior notification.
- The Company shall not be responsible for any injury caused by fire, earthquake or a third party, as well as any injury that occur due to intentional or accidental mishandling or improper use by the customer.
- Company shall not be held responsible for any damages that may occur due to employment of a usage method not designated in the user's manual.
- Company shall not be held responsible for any damages that may occur due to malfunctioning of the Product resulting from the use of this Product together with other devices.
- This Product is not intended for use in facilities and equipment which may affect human lives, including medical equipment, nuclear devices, aerospace equipment and transport equipment, as well in facilities and equipment which require a high degree of reliability. Company shall not be held responsible for any accident resulting in personal injury or death or any fire accident that may occur due to failure of this Product when this Product is used in the control systems of those facilities and equipment.

	Warning!	Indicates that 'there is a possibility of causing death or serious physical injury if this Product is erroneously handled'.
	Caution!	Indicates that 'there is a possibility of causing physical injury*1 or occurrence of physical damage*2 if this Product is erroneously handled'.

*1: Serious physical injury implies injuries such as loss of eyesight or injury, burns, electric shock, bone fracture or poisoning that have subsequent complications and which require hospitalization or long term hospital visit for medical treatment.

*2: Physical injury implies injury, burns and electric shock which do not require hospitalization or long-term hospital visit for medical treatment.

	△ This symbol shows that the user needs to exercise caution while handling this Product to prevent fire, explosion and heating. The specific caution to be taken is written inside the symbol.
	⊘ This symbol implies restriction of an action while handling this Product. The specific restriction is written inside or near the symbol.
	● This symbol implies compulsion of an action based on the instructions. The specific compulsion is written inside or near the symbol.

Warning











To reduce the risk of electric shock, do not expose this apparatus to moisture.















Warning

The battery (battery or batteries or battery pack) must not be exposed to excessive heat such as sunshine, fire or the like.

Important Safety Instructions


EN

 Warning!	
<p>Do not repair, modify or disassemble.</p> <p>It may cause fire, electric shock or injury. The Company shall not be responsible for any physical damage caused by repairing, modification or disassembly. Also, any repairing of a fault caused by repairing, modification or disassembly by the user will be charged, even if it happens during the warranty period.</p>	 Don't
<p>Keep the Product (Remote Control) out of reach of children.</p> <p>They may accidentally swallow the battery and cause choking and damage the stomach. The cord may entangle around the child's body and cause suffocation. If any accident occurs by any chance, please consult a doctor immediately.</p>	 Don't
<p>Do not use in a rainy or snowy place, by the waterside or in the bathroom.</p> <p>It may cause fire or electric shock.</p>	 Don't
<p>Do not use if it is thundering.</p> <p>It may cause fire or electric shock.</p>	 Don't
<p>Do not keep a flower vase, flowerpot, cup, or any container containing medicine, cosmetics or water, near the Product.</p> <p>They may break and get into the Product and cause fire or electric shock.</p>	 Don't
<p>Do not insert any kind of metal or easily combustible object through the aperture.</p> <p>It may cause fire or electric shock.</p>	 Don't
<p>Do not block any ventilation openings.</p> <p>It may get heated and cause fire.</p> <p>Install in accordance with the manufacturer's instructions.</p>	 Don't
<p>Do not put more than 50kg on top of this apparatus.</p> <p>It may damage the apparatus.</p>	 Don't
<p>Do not use a wrong power plug out of the 2 power cords provided for this apparatus.</p> <p>It may damage the power plug and/or the power socket. It may cause fire or electric shock.</p>	 Don't

 Caution!	
<p>Do not keep in a shaky place.</p> <p>The Product may fall and get damaged.</p>	 Don't
<p>Do not keep in a place where lampblack or steam falls.</p> <p>It may cause fire or accident.</p>	 Don't
<p>Do not keep in a place which is directly hit by cold air, or a place which is extremely cold.</p> <p>Dew may fall and cause short circuit or burnout.</p>	 Don't
<p>Do not listen in high volume continuously for a long time.</p> <p>Do not listen in high volume, which causes ringing in the ears, continuously for a long time. It may damage hearing.</p>	 Don't
<p>Do not raise the volume excessively from the beginning.</p> <p>Sudden high volume may damage hearing. Minimize the volume before playing.</p>	 Don't
<p>Do not keep in an excessively hot place, such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.</p> <p>The surface of the device or parts may get damaged, and may also cause fire. Do not keep especially in a closed car in summer, and in a place where sunlight directly falls or near a stove. This may cause leakage of battery fluid.</p>	 Don't
<p>Do not use in sandy beaches and sandy soil where sand can easily enter, or in dusty locations.</p> <p>It may cause burnout, fire or accident.</p>	 Don't
<p>Do not cover or wrap with a cloth or futon.</p> <p>Heat may get generated and deform the Product, or Product may catch fire.</p>	 Don't
<p>Do not keep a cathode-ray tube near it.</p> <p>Spots may appear because of it.</p>	 Don't
<p>Ensure to refer the user's manual to connect to an external device.</p> <p>Connect to an external device after carefully reading this user's manual and the user's manual of the external device, as well as after turning off the power.</p>	 Don't
<p>Do not plug or unplug the power plug with wet hands.</p> <p>It may cause electric shock.</p>	 Don't
<p>Insert the power plug completely and firmly into the outlet socket.</p> <p>If the power plug is not inserted properly, fire may occur due to electric shock or dust deposition.</p>	 Don't
<p>Turn off power when repairing or if not going to be used for a long time, and remove the power plug.</p> <p>Hot adhering to this may cause electric shock or physical damage.</p>	 Caution!

 
Important Safety Instructions

Safety

- 1 Read these instructions.
 - 2 Keep these instructions.
 - 3 Heed all warnings.
 - 4 Follow all instructions.
 - 5 Only use this product indoor.
 - 6 Clean only with a dry cloth.
 - 7 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where it exit from the apparatus.
 - 8 Only use attachments/accessories specified by the manufacturer.
 - 9 Use only with a cart, stand, tripod, bracket or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.
- 
- 10 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
 - 11 This is CLASS II apparatus with double insulation and no protective earth provided.
 - 12 The mains plug is used as the disconnect device, the disconnect device must remain readily operable.
 - 13 This apparatus is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the apparatus by a person responsible for their safety. Children should be supervised to ensure that they do not play with the apparatus.
 - Never use the device unsupervised! Switch off the device whenever you are not using it, even if this only for a short while.
 - The apparatus is not intended to be operated by means of an external timer or separate remote-control system.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - Do not immerse this product in liquid.


Identifying the Parts

Main Unit: Top View

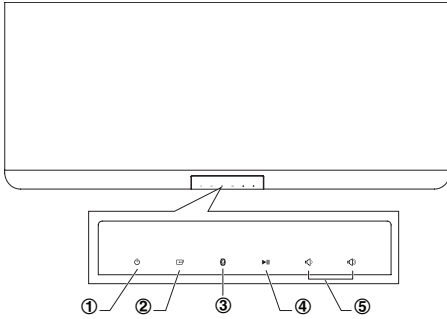


- 1
 - Turn on this unit or switch to Power standby mode.
- 2
 - Select a source.
- 3
 - Press this button to choose Bluetooth source.
 - Hold and press the button to Pair the bluetooth-enabled device.
- 4
 - In Bluetooth mode:
 - Start or pause playback.
- 5
 - Decrease or Increase sound volume level.

 Front View

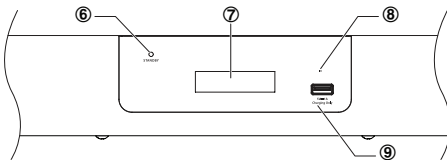

- 6 Light indicators
- 7 Display Panel
 - Show the current status.
- 8 iR
 - Remote control sensor.
- 9 5V=1A Charging Only
 - Use this socket to charge your smartphone and tablet PC.

 
Rear View

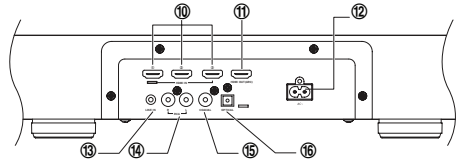

- 10 HDMI IN Socket
 - Total 3 HDMI connectors compatible with HDMI version 1.4 or below.
- 11 HDMI OUT Socket
 - 1 HDMI connector compatible with HDMI version 1.4 or below.
- 12 AC~ Power Plug
 - Connect a power cord.
- 13 LINE IN Terminals
 - Standard 3.5mm audio input jack.
- 14 RCA Terminals
 - Standard RCA audio input jack.
- 15 Coaxial Terminals
 - 1 Coaxial input jack.
- 16 OPTICAL Terminals
 - 1 Optical input jack.

Identifying the Parts

 Smart Remote Control

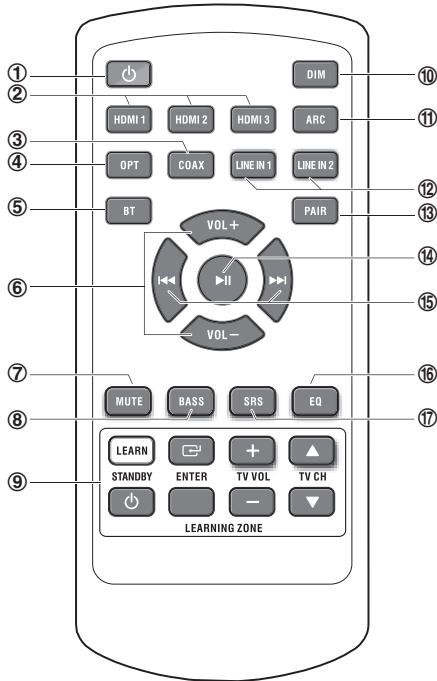

- 1
 - Turn on or turn off the unit.
- 2 HDMI
 - Select an HDMI audio input source from HDMI 1, 2 and 3.
- 3 COAX
 - Select COAXIAL source.
- 4 OPT
 - Select OPTICAL source.
- 5 BT
 - select bluetooth source.
- 6 VOL+/- (Volume)
 - Adjust sound volume level
- 7 MUTE
 - Mute or resume sound from the unit.
- 8 BASS
 - Select Bass boost level 1,2 or no Bass boost effect.

- 9 LEARN
 - Activate learning mode to setup commands from the TV remote control, to control some TV functions.
- 10 DIM
 - Adjust brightness level of display panel.
- 11 ARC
 - Activate Audio Return Channel (ARC) function.
- 12 LINE IN 1,2
 - Select LINE IN 1 source from RCA.
 - Select LINE IN 2 source from LINE IN.
- 13 PAIR
 - Pair with bluetooth-enabled device.
- 14
 - In Bluetooth mode:
 - Start or pause playback.
- 15
 - In Bluetooth mode:
 - Skip to previous/next track.
- 16 EQ
 - Select a preset sound effect:
 - cinema, speech, music, sport, standard.
- 17 SRS
 - Switch on or turn off SRS WOW HD effect.

EN

Getting Started

 
Prepare the Smart Remote Control

The Smart Remote Control provided allows the unit to be operated from a distance.


- Even if the Smart Remote Control is operated within the effective range (6m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Smart Remote Control is operated near other products which generate infrared rays, or if other remote control devices using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

For First-time use:

The unit has a pre-installed lithium CR2025 battery. Remove the protective tab to activate the remote control battery.

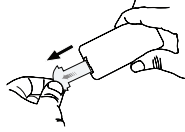

 To Replace the Smart Remote Control Battery:

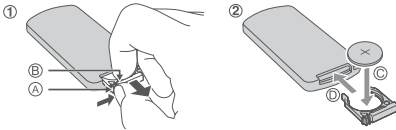

- (A) : Press down the flip on the left.
(B) : Pull out the battery tray and remove the old battery.
(C) : Place a new CR2025 battery into the battery tray with correct polarity (+/-) as indicated.
(D) : Insert the tray back into the slot.

 
Precautions Concerning Batteries

- When the Smart Remote Control is not to be used for a long time (more than a month), remove the battery from the Smart Remote Control to prevent it from leaking.
- If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.
- Do not use any batteries other than those specified.
- Do not heat or disassemble batteries. Never throw them in fire or water.
- Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.
- Never recharge a battery unless it is confirmed to be a rechargeable type.

Connections

Place TV on top

Please read the DOs and DON'Ts Leaflet provided for proper installation position of the unit.

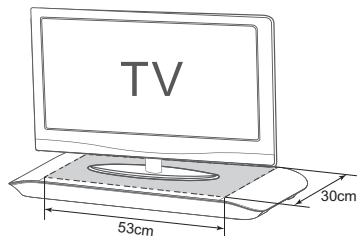

Warning:

Please turn down the volume of the TV, or other sources before connection. Loud sound might be suddenly produced.

Connect to Power

 
Caution:

Risk of product damage!

- Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you unplug the DC power, always pull the plug from the socket. Never pull the cord.
- Ensure the correct power cord is matched the main power socket. Using a wrong power cord might damage the power plug and the socket.


Connect the DC power cord to:

- the DC socket on this unit.
- the wall socket.

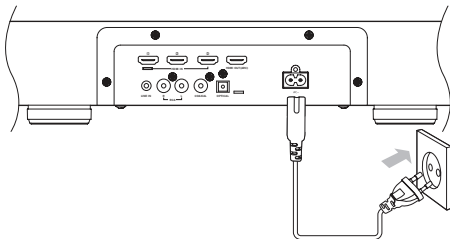

USB DC 5V Charge

 Connect a USB cable(not supplied) to USB Charging 5V=1A socket to charge your smartphone or tablet PC.

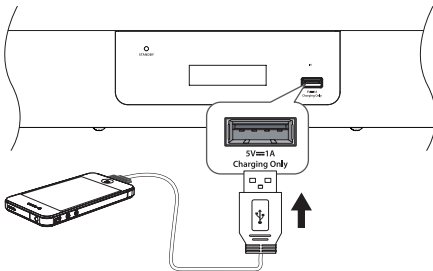


Connect to TV

Using HDMI socket

Connect HDMI(High Definition Multimedia Interface), DVI(Digital Visual Interface), or HDCP(High-bandwidth Digital Contents Protection)-compliant TVs through HDMI for the best picture quality. This connection transmits both video and audio signals.

Note:

 Some TVs do not support HDMI audio transmission.

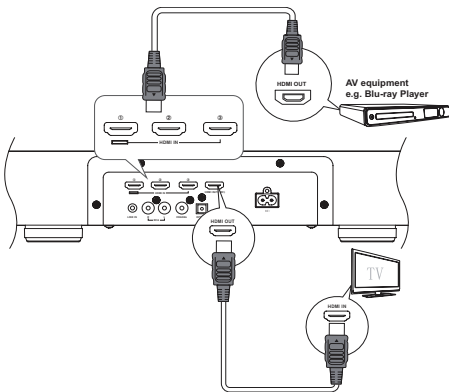

1 Watch movie from blu-ray player

- a) Connect a HDMI cable to the HDMI OUT socket on the AV equipment and HDMI IN 1, HDMI IN 2 or HDMI IN 3 socket on the unit.

Connections

 
b) Connect another HDMI cable from the HDMI OUT socket on the unit to the HDMI IN socket on the TV.

Note:

If your TV has only a DVI connector, connecting through a HDMI-to-DVI adapter is necessary. Extra optical audio connection might be needed to complete this connection.


2 Watching broadcasting TV program using TV supporting ARC

- a) If you want to watch TV program and listen to the sound with this unit, TV that supported HDMI Audio Return Channel (ARC) function do not need any extra connection.
- b) Use HDMI version 1.4 cable for connection.
- c) Connect to the HDMI(ARC) socket on TV.

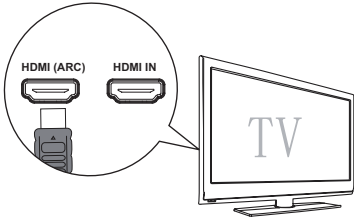

3 Watching broadcasting TV program using TV do not support ARC

 If you want to watch TV programme and listen the sound with this unit, but your TV does not support ARC function, you will need an additional audio cable (HDMI/OPTICAL/COAXIAL/RCA/LINE-IN cable) to connect from the audio output of the TV to the audio input of the unit.

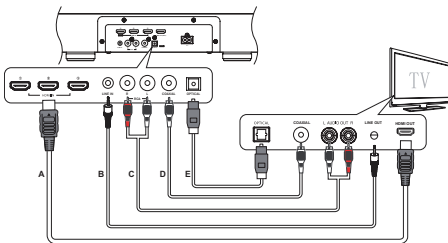

a. Connect either:

- (A) HDMI output (TV) to HDMI input (①/②/③) (unit) via an HDMI cable (not supplied); or
- (B) LINE-OUT/Headphone(TV) to LINE-IN(unit) via LINE-IN cable.
- (C) RCA output (TV) to RCA input(unit) via RCA-to-RCA cable; or
- (D) Coaxial output (TV) to Optical input (unit) via a Coaxial cable (not supplied); or
- (E) Optical output (TV) to Optical input (unit) via an Optical cable (not supplied); or

Customer Electronics Control(CEC) function

Please check the setting of your TV HDMI function to see whether CEC function is available. If your TV has CEC function in HDMI.

 
- Switch off the TV, the unit will also switch off immediately.
- Play your Blu-ray player, the unit and TV will switch on immediately.

Note:

CEC function can be varied by different TV brands and models. Check the compatibility of CEC function on your TV.

Using Optical IN socket

If your TV does not have HDMI sockets, please follow the set up below.

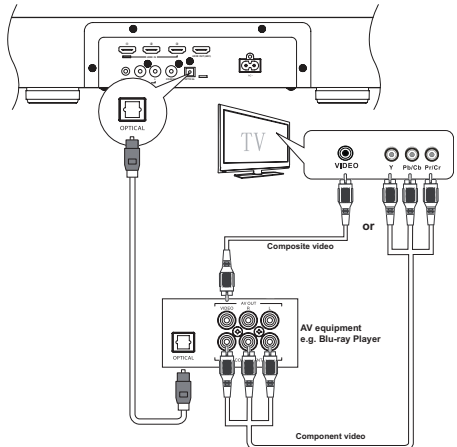

Connections

 
- a) Connect Optical output source into the unit.
- b) Connect Video output of the AV equipment into the Video input of TV via either,
 - 1) Component connection (Green, Blue, Red) (not supplied); or
 - 2) Composite connection (Yellow) (not supplied).

Note:

You can listen to the TV program sound from connecting to the unit via LINE-IN cable.

Using Coaxial socket

If your TV does not have HDMI sockets, please follow the set up below.

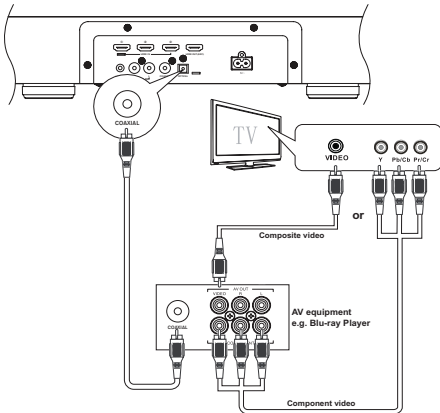


- a) Connect Coaxial output source into the unit.
- b) Connect Video output of the AV equipment into the Video input of TV via either,
 - 1) Component connection (Green, Blue, Red) (not supplied); or
 - 2) Composite connection (Yellow) (not supplied).

Note:

You can listen to the TV program sound from connecting to the unit via LINE-IN cable.

Using RCA IN socket

 For audio devices that do not support HDMI or Optical output, please follow the set up below.

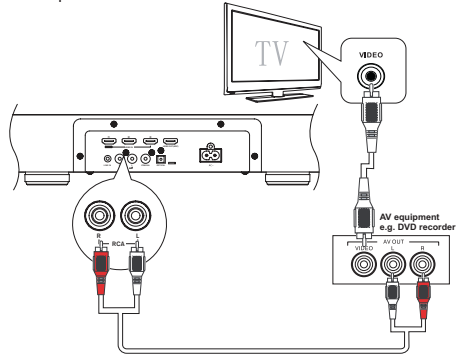


- a) Connect Composite Video output of the AV equipment e.g. DVD recorder to Composite Video input on the TV.
- b) Connect Audio L-R output of the AV equipment to the LINE IN or RCA input onto the unit.

Note:

You can listen to the TV program sound from connecting to the unit via LINE-IN cable.

Using Line-IN socket

 You can listen to the sound of the TV program by connecting to the unit via LINE-IN cable.

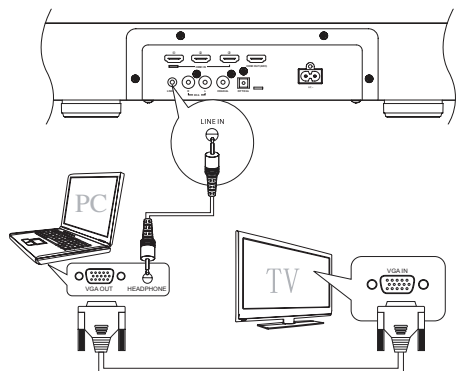

Note:

You can also connect to your PC with LINE-IN cable in the setup shown below.

Connections


Connect to a Bluetooth Device

You can listen to music from a Bluetooth-enabled device via this player.


Pair the Bluetooth-enabled devices

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.



Note:

- The operational range between this player and a Bluetooth device is approximately 8 meters.
 - Before you connect a Bluetooth device to this unit, familiarize yourself with the Bluetooth capabilities of the device.
 - Compatibility with all Bluetooth devices is not guaranteed.
 - Any obstacle between this unit and a Bluetooth device can reduce the operational range.
 - Keep this player away from any other electronic device that may cause interference.
1. Turn on the Bluetooth function on your device.
 2. Switch player's source to Bluetooth, Display panel shows "BT", then show "NO BT" (if there's no Bluetooth device connected).
 3. Press and hold "PAIR" button on remote control or  on top of the unit to activate Bluetooth pairing mode, display panel shows "PAIRING".
 4. Search for Bluetooth device with your device.
 5. Select "MXSP-SB3000" in the pairing list.
 6. Enter "0000" when prompted for a keyword (if necessary), if the pairing succeeds, display panel shows "BT" again.
 7. To disconnect connection, turn off the Bluetooth function on your device or switch the player to other source.

Tip

- If there's a connection exist, hold and press "PAIR" button on remote control or  on top of the unit for seconds will reactivate the pairing mode, the connection will be interrupted.
- If there's no other Bluetooth device pair with this player in two minutes, the player will recovery previous connection.
- The player will also be disconnected when your device is moved beyond the operational range.
- If you want to reconnect your device to this player, place it within the operational range.
- If the device is moved beyond the operational range, when it is brought back, please check if the device is still connected with the player.
- If they are connected, display panel shows "BT".
- If the connection is lost, display panel shows "NO BT", follow the instruction above to pair your device to the player again.

 
Listen to music from Bluetooth device

- If the connected Bluetooth device supports Advanced Audio Distribution Profile (A2DP), you can listen to the music stored on the device through the player.
- If the device also supports Audio Video Remote Control Profile (AVRCP) profile, you can use the player's remote control to play music stored on the device.
 1. Pair your device with the player.
 2. Start play music via your device (if it support A2DP)
 3. Use supplied remote control to control play (if it support AVRCP)
 - To pause/resume play, press the  button.
 - To skip to a track, press the  buttons

Connections

Connect to an External Audio Device

You can connect to your audio devices, e.g. CD player, to enjoy purely music, via the following connections.

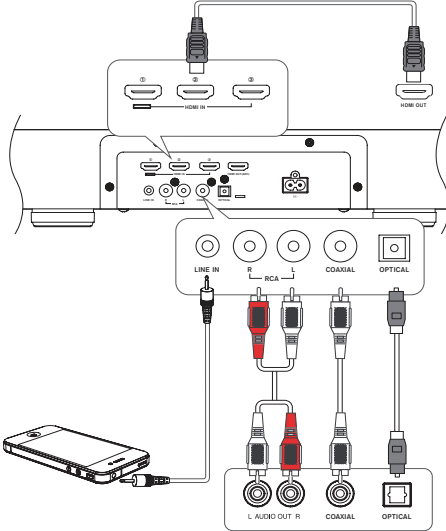

Note:

You might hear the sound over-lapping from both the TV and the unit while following some of the suggestion connections. To avoid this, turn the volume of TV down to 0 or mute it.

Auto-on/off function is applied in this unit. Auto-off is to facilitate people not to control the unit when no sound is playing in few minutes. And when there are sounds input, the unit will switch on automatically after few seconds. For HDMI, Auto-on function will work with CEC only.

Warning:

If the volume of the TV or an external device via RCA or LINE IN is too low, the auto-off function will be triggered. When this situation happened for 2.5 minutes, LED source light will flash slowly on the unit for the next 30 seconds and the unit will switch to standby mode.


Please turn up the volume of the input source (not the unit, but, e.g. TV or MP3 player, etc.) slowly, until it returns to normal mode.

To avoid the auto-off being triggered unintentionally, pre-set the source volume higher and adjust the unit volume to a comfortable level.

Basic Operation

Turn On/Off

Turning the System ON/OFF

Press the  button on the unit or remote control.

Note:

When turning the system on, the system will continue in the mode was set last time.


Note:

Be sure to unplug the power cord from the outlet when the system is not in use for an extended period of time.

The unit will switch to standby mode when the audio cables are disconnected or when you turn off TV/external device after several minutes.

Adjust Volume Level


Either,

- 1) Press the VOL +/- button on the remote control; or
- 2) Press  button on the unit, to increase or decrease the volume level.

If the unit is connected to the TV headphone jack, you can control the Volume Level using the TV remote control.

If the unit is connected to TV HDMI jack with CEC(Customer Electronics Control) function enabled. The sound of the unit can be controlled by the TV remote control.

Mute Sound

Press the MUTE button on the remote control to mute. Press this button again or VOL+/VOL- buttons on the remote control or  on the unit to resume the sound.

Bass Boost



Press BASS button on the remote control to turn on the bass. Press this button again to switch to level 2 or to turn it off.

Select SRS Sound

Press SRS button on the remote control for 3 seconds to select SRS WOW HD effect. Press this button again to cancel the effect.

 
Program Smart Remote Control to Control TV

You can store a total of up to seven of your most frequently used TV functions in the TV learning zone of the Smart Remote Control. This feature enables you to use only one remote control to operate the unit together with your TV.

The remote control codes of a TV are stored in the Smart Remote Control. The available preset buttons are ON/OFF , FUNCTION , ENTER, TV VOL+/VOL-, TV CH+/CH-.

NOTE:

During the learning process, the normal remote control functions are disabled.

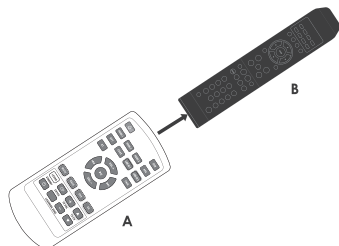

- 1 Place the Smart Remote Control (A) within a 5mm-50mm distance from the TV remote control (B), pointer to pointer as shown above.
- 2 Press and hold the LEARN button for 2 seconds to activate the learning mode. A red indicator on the Smart Remote Control (A) will light up.
- 3 Press one of the TV learning zone buttons on the Smart Remote Control (A), the red indicator flashes.
- 4 Press the button on the TV remote control (B) that is to be stored on the Smart Remote Control (A). When the code is received successfully, the red indicator will quickly flash for 3 times. If the code is not successfully received, the red indicator will keep on flashing.
- 5 Repeat steps 3-4 to program more functions onto the Smart Remote Control (A).
- 6 Press the LEARN button to save the setting and to exit the learning mode. Red indicator will turn off immediately.

Troubleshooting

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this unit, check the following points before requesting for service. Warranty void if case is opened.

Symptom	Likely Cause	What to do
No sound	Speaker not connected to active AC power	<ul style="list-style-type: none"> Verify that speaker is connected and that the circuit is on.
	Power not switched on	<ul style="list-style-type: none"> Switch on power and verify that power LED is on.
Suddenly No sound	Triggered auto-off function	<ul style="list-style-type: none"> Turn the volume up of the source, e.g TV, mp3 player, etc, and readjust the sound of the unit to trigger auto-on function. See No Sound symptom above.
No sound, speaker is connected to working AC power but sound won't come on	Cannot trigger auto-on function	<ul style="list-style-type: none"> Increase the volume of the source input signal.
	Speaker power cable is faulty or improperly connected	<ul style="list-style-type: none"> Re-seat the power cable at both ends. Substitute a known-good power cable.
	Blown fuse	<ul style="list-style-type: none"> Contact with your manufacturer for repairment.
No sound. Speaker comes on	Faulty cables and connections	<ul style="list-style-type: none"> Disconnect and re-seat signal cables. Make sure cables are plugged completely. Replace suspected cable with a known-good cable.
Noise or hiss heard at output	Faulty Cables and connections	<ul style="list-style-type: none"> Disconnect and re-seat signal cables. Make sure cables are plugged completely. Replace suspected cable with a known-good cable.
	Noisy source device	<ul style="list-style-type: none"> Disconnect the devices that are connected to your speaker one at a time. If the noise goes away, the problem is with the source or the connecting cable.
Hum or Buzz that increases or decreases when more than one source are inputting single to the unit at the same time	Interference internally	<ul style="list-style-type: none"> Disconnect or mute the other channels to solve the problem.
	Faulty cable between source equipment and unit	<ul style="list-style-type: none"> Substitute a known-good cable for the suspected faulty cable.
Smart Remote control does not work	No/Low battery power	<ul style="list-style-type: none"> Remove the transparent film at the bottom of Smart Remote control. Insert/Replace remote control battery with a CR2025 battery.
The Unit does not responds to the remote control	No/Low signal from remote control to the unit	<ul style="list-style-type: none"> Reduce the distance between the Smart Remote control and the unit. Aim the Smart Remote control directly at the sensor on the front of the unit.
	The unit responds but no sound	<ul style="list-style-type: none"> Before you press any function button, first select the correct source. See Troubleshooting [No Sound] Symptom.
HDMI ARC/CEC ERROR No Sound or Have sound but with error message shown on TV	TV CEC function is not compatible with unit CEC function.	<ul style="list-style-type: none"> Check the TV CEC function and compatibility on TV user's manual. Disable TV CEC/ARC function Use other suggested connections.
HDMI ARC/CEC ERROR Both TV and the unit has sound coming out	TV CEC function is not partially compatible with unit CEC function.	<ul style="list-style-type: none"> Check the TV CEC function and compatibility on TV user's manual. Select speaker option in TV manual to from the Unit only

Specifications

General

Power Requirements.....	AC 220-240V~50/60Hz
Output Power:	
Front Speakers	30W x 2
Woofer	100W
Total Harmonic Distortion	1%(1kHz, 1W)
Audio Input Sensitivity/Impedance LINE:	600mV/47k Ω
Frequency Response	50Hz - 20kHz
Unit Dimensions (W x H x D)	929 x 390 x 78mm
NET Weight(Unit)	8.4kg

Speaker

Front

Impedance.....	3 Ω
Rated Power.....	30W

Woofer

Impedance.....	6 Ω
Rated Power.....	100W

Remote

Distance	6m
Angle	30 $^{\circ}$

Digital signal input/output information

Digital Sampling frequency	48kHz
HDMI signal format.....	PCM

Warranty: 2 years

- Design and specifications are subject to change without notice.