

LELO

F1S™ V2



USER MANUAL

**The future of sextech, refined and perfected.**

EXPERIMENT WISELY, OFTEN, AND WITH CARE

 
Congratulations on acquiring the F1S V2. Before getting more closely acquainted with it, please take a moment to look through this user manual.

**IMPORTANT:** Your pleasure object has been locked for transportation. To unlock, simply connect the charger or simultaneously press the + and - button for 3 seconds.

**Tip:** For the most pleasurable sensation, apply a liberal amount of LELO Personal Moisturizer to your body and to F1S V2 before and during use.



## GETTING TO KNOW YOUR F1S V2

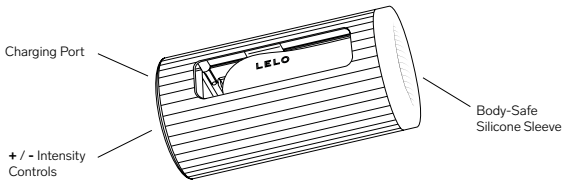


## GETTING TO KNOW YOUR F1S V2

### **SenSonic™** TECHNOLOGY

An exclusive LELO breakthrough, SenSonic technology offers 360 degrees of pleasure. Instead of standard vibrations, F1S V2 emits powerful sonic waves that permeate deep into your penis, making it feel as though it's resonating from all directions all at once. And with the LELO app, you can adjust the intensity to your liking.

### **Cruise Control™** TECHNOLOGY

 Cruise Control is a fully automatic function designed to detect any slowing motion of the dual motors and can boost the power up again via PWM (Pulse Wave Modulation). In doing so, Cruise Control ensures that you enjoy consistent power and intensity, no matter what.

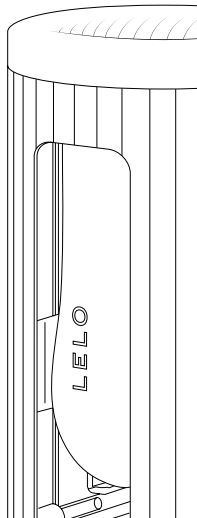

## USING YOUR F1S V2

### HOW TO USE YOUR PRODUCT **WITHOUT THE APP**

- Before the first use, charge your F1S V2 for 2 hours.
- Press the center button for 1 second to turn it on.
- The LED lights will blink, showing the battery level.
- The LED lights will go steady, showing the vibration level.
- Press the + or – button to adjust the vibration intensity.
- Press the center button for 3 seconds to turn it off.
- Press and hold the + and - buttons simultaneously for 5 seconds to lock your F1S V2 and avoid unintended activation.

### HOW TO USE YOUR PRODUCT **WITH THE APP**

- Before the first use, charge your F1S V2 for 2 hours.
- Press the center button for 3 seconds to turn it on while activating the Bluetooth.
- All the LED lights will blink simultaneously showing the Bluetooth pairing.
- Open the F1S APP and once the confirmation message appears, press the center button of the product to confirm.
- All the LED lights will go steady, showing the connection was successful.
- If the connection fails, your product will automatically turn off after 30 seconds.
- The battery and vibration level will be available in the app.

## F1S V2

This revolutionary open-source design enables you to capitalize on industry-leading technology from LELO. To get started, download the SDK, then visit <https://github.com/LELO-Devs/F1S-SDK> to join a community of developers and build the sextech experience of your dreams.



iOS &  
ANDROID SDK



 
AR  
ENABLED



VR  
COMPATIBLE




WIRELESS BLUETOOTH  
CONNECTION

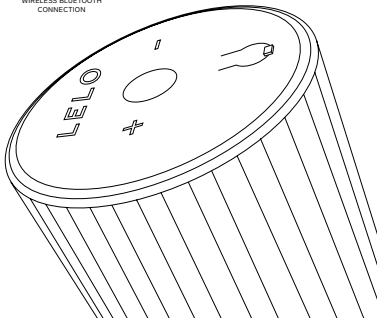

## CHARGING YOUR F1S V2 Smart Male Trainer

 - Insert the DC plug into the DC port at the top of your F1S V2.
- The LED on the interface of your F1S V2 will pulse to indicate it is charging. When it is fully charged (after c. 2 hours), the LED will emit a steady glow.
- When the battery is running low, the LED on your F1S V2 will emit a blinking white light.

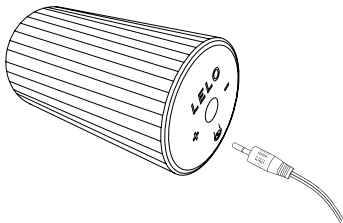

**Only use original chargers provided by LELO with your F1S V2.**



## **CLEANING, STORAGE AND SAFETY**

Proper care and maintenance will help extend the lifetime of your F1S V2 trainer.

Using F1S V2 with hand creams or silicone-based lubricants may make the silicone permanently tacky.

F1S V2 is fully waterproof, making cleaning simple. Rinse and spray with LELO Toy Cleaner, then rinse again and allow to dry. A cotton swab can be used to clean the inside of the 'mouth'.

Always clean your F1S V2 thoroughly before and after each use. You can wash the silicone with warm water and antibacterial soap, rinse with clean hot water, and pat dry with a lint-free cloth or towel. Never use cleansers containing alcohol, petrol, or acetone.

Avoid leaving your F1S V2 trainer in direct sunlight and NEVER expose it to extreme heat. Store your F1S V2 in a dust-free place and keep it away from products of other materials.

**IMPORTANT:** Children shall not play with the appliance. For adult use only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis, thrombosis or any other condition, should consult with a medical professional regarding the risk of blood clots before using any personal massage product.

**The appliances must only be supplied at SELV.**

## TROUBLESHOOTING

### **The LED on your F1S V2 does not pulse when the charger is connected?**

- Battery is drained and will require several minutes to acknowledge that it is being charged.
- Charger is not properly connected. Check wall and DC sockets.

### **Your F1S V2 does not activate when the center button is pressed?**

- The battery is empty. Recharge your F1S V2.
- The interface of your F1S V2 is locked. Hold down **+** and **-** for 5 seconds.

If you experience any other problems with your F1S V2 or if you have any questions regarding the operation, please contact: [\*\*customercare@lelo.com\*\*](mailto:customercare@lelo.com)

## SPECIFICATIONS

<b>MATERIAL:</b>	Silicone, ABS, Aluminum alloy
<b>FINISH:</b>	Matte Black, Gunmetal
<b>SIZE:</b>	143 x $\Phi$ 71 mm / 5.6 x 2.8 in
<b>INSERTABLE LENGTH:</b>	110.72 mm / 4.3 in
<b>INTERNAL SIZE AT REST:</b>	$\Phi$ 41.2 mm / 1.62 in - Girth 129.5 mm / 5.07 in
<b>INTERNAL SIZE MAX.:</b>	$\Phi$ 47.7 mm / 1.87 in - Girth 150 mm / 5.9 in
<b>WEIGHT:</b>	285 g / 0.62 lb
<b>BATTERY:</b>	Li-Ion 850 mA 3.7 V
<b>CHARGING:</b>	2 hours at 5.0 V 700 mA
<b>USER TIME:</b>	2 hours
<b>STANDBY:</b>	90 days
<b>FREQUENCY SUCTION MOTOR:</b>	60Hz
<b>FREQUENCY VIBRATION MOTOR:</b>	90Hz
<b>INTERFACE:</b>	3-button

## **REGISTER WARRANTY**

To activate your 1-Year Limited Warranty, register the number provided on the LELO Authenticity Card at [LELO.COM/SUPPORT](https://LELO.COM/SUPPORT)

## **1-YEAR WARRANTY**

LELO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty. If you discover a defect and notify LELO during the warranty period, LELO will, at its discretion, replace the pleasure object free of charge. Claims under warranty must be supported by reasonable evidence of the date of claim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.

To claim your warranty, you must log in to your account at [LELO.COM](https://LELO.COM) then select the option to make a warranty claim. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

## DISPOSAL INFORMATION

**Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems):** The crossed-out dustbin symbol indicates that this pleasure object should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.



**Disclaimer:** Users of this product do so at their own risk. Neither LELO nor its retailers assume any responsibility or liability for the use of this product. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF exposure statement: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet the general RF exposure requirement. The device can be used in portable exposure conditions without restriction.

**Model may be changed for improvements without notice.**

© 2021 LELOi AB. ALL RIGHTS RESERVED.

DESIGNED AND DEVELOPED BY LELO SWEDEN.

MANUFACTURED FOR LELO IN CHINA.

**WEBSITE:** [WWW.LELO.COM](http://WWW.LELO.COM)

**SUPPORT:** [CUSTOMERCARE@LELO.COM](mailto:CUSTOMERCARE@LELO.COM)

**14 • ENGLISH**