





Download EDIFIER CONNECT APP from the APP store/Google Play Store For user safety and compliances, also for the optimum performance, please carefully read safety instructions and use the product in accordance with them.

Tap zone Button on the charging case Accessories: Ear tips x 7 pairs, Storage bag x1, Charging cable x1

• For the need of technical improvement and system upgrade, information and specifications contained herein may be slightly different from actual product. If any difference is found, the actual product prevails.

Note:


product.

the suitable ones to wear.

• There are different size of ear tips attached in the package, please select

• Images are for illustrative purposes only and may differ from the actual

- 2. Power on/off
- The earbuds will power on • The earbuds will power when the case is opened. off when placed in the case and the case is closed.

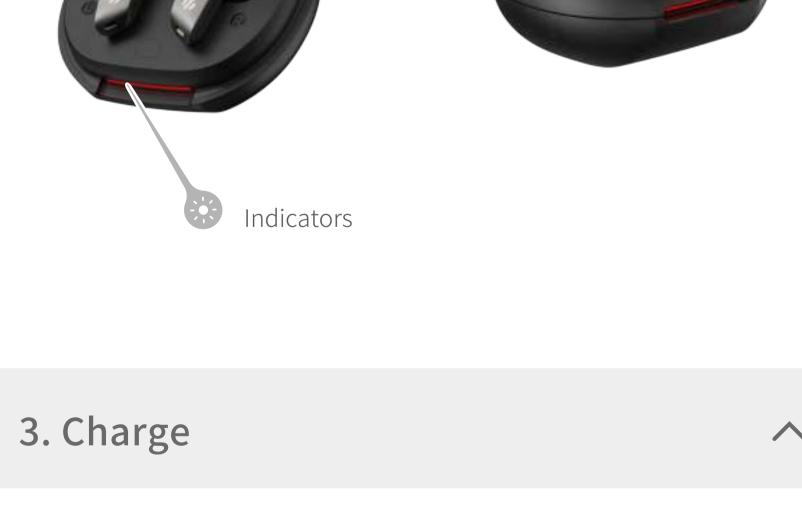

Place the earbuds in the case and close the case for charging.

Connect the case to power source with the included charging cable for

When the case is being charged, the indicators will be lit one by one from center to sides, and then turn off one by one from sides to center in a breathing pattern; After the case is fully charged, the indicators

will turn off.

charging.

Charge the earbuds

Charge the charging case

to light up from center to sides, and turn off in 3 seconds. The length of the indicators bar means battery level.

Red LED indicators will all be lit from center to sides and then extend

Open/close the charging case will auto-show its battery level:

Battery level indicator on the charging case

Low battery level of the charging case: When opening/closing the case, if the red indicators bar flash five times

charge the case in time.

Input:

Warning:

5V === 200mA (earbuds)

rapidly and then turn off it means the case is at low battery level, please

- 5V === 1A (charging case)

be dangers of fire, explosion, etc.

Bluetooth connection

4. User guide

• The rechargeable batteries that provide power for this product must be disposed properly for recycling. Do not dispose of batteries in fire to prevent an explosion. • The power source used must be approved by relative departments and in accordance with electrical specifications of devices as well as local regulatory requirements (e.g. UL, CSA, VDE, CCC), otherwise there may

• Place the earbuds in the case, press and hold the button on the case for

around 3 seconds to enter Bluetooth pairing, and the indicators on the


case will be lit one by one from left to right in a circulating pattern;

Indicators

🗶 EDIFIER NeoBuds Pro

• Set mobile phone to search for and connect to "EDIFIER NeoBuds Pro", after pairing is successful, the whole indicator bar will flash red twice and then turn off.

Functional operation

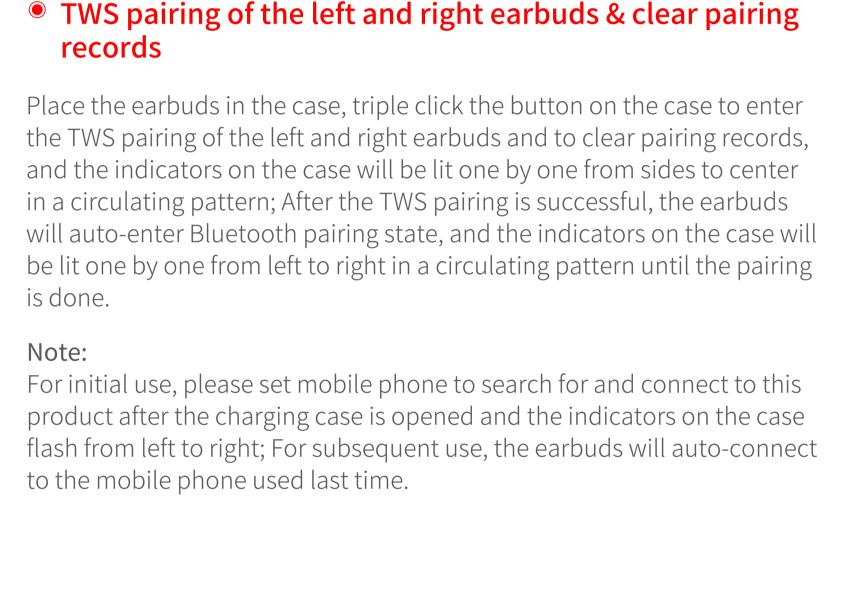

Accept/end a call: double click the left or right earbud Mode switch: double click the left earbud

triple click the left earbud

double click the right earbud

triple click the right earbud

Game mode on/off:

Pause/play:

Next track:

Tap (

CONNECT APP.

Double click the left earbud:

source.

■ No sound.

via the earbuds.

used again.

board.

earbuds. Then try again.

Control Profile) profile.

accept/end a call

• Check if the earbuds are operating.

Note:

mode & ambient sound mode through the EDIFIER CONNECT APP; It will auto-enter the standard mode & ambient sound mode when only one earbud is used. • The users can customize buttons function through the EDIFIER CONNECT APP. • The product may be updated from time to time without prior notice.

• Mode switch: It is the high noise cancellation mode & ambient sound

low noise cancellation mode & ambient sound mode or the standard

mode by default when both earbuds are used. The users can select the

Operating method: Tap! Tap! Tap! The right method to tap: The users cannot "touch" but can "tap" the earbuds! Please tap within the effective tapping area with fingertip as shown in the image below.

The users can also adjust the tapping sensitivity through the EDIFIER

*Effective tapping area: within the red dotted line

pause/play mode switch Triple click the right earbud: Triple click the left earbud: next track game mode 5. FAQs

■ When charging the charging case, the indicator is off.

• Check if the earbuds volume are at an appropriate level.

■ The call quality of the earbuds are not good.

obstacle between the earbuds and mobile phone.

• Check if mobile phone is in an area with strong signal.

• Please ensure the charging case is correctly connected with power

• Check if the earbuds are correctly connected with mobile phone.

• Check if the earbuds are operating within a normal working range.

• Please ensure the earbuds are within effective distance (10m) and no

■ When playing music, cannot control pause/play/next track

• Please ensure the paired device support AVRCP (Audio/Video Remote

Double click the right earbud:

accept/end a call

■ The tapping function is too sensitive or not sensitive. • Please ensure you are tapping within the effective area with a moderate intensity or at an appropriate angle. You can also adjust to a desired tapping sensitivity through the EDIFIER CONNECT APP.

After one earbud alone is connected to another mobile

phone, there is no sound from the other earbud when

• When one earbud alone is connected to another mobile phone, the

disconnected. To restore the two earbuds mode, triple click the button

interconnection between the left and right earbuds may have been

on the case to resume interconnection between the left and right

• Do not dismantle the product. Non-professional personnel may damage the product. • Do not drop, strongly vibrate, strike the product with hard object to avoid damaging internal circuit.

circuit. Do not use the product during intense exercise or with much

High temperature will shorten service life of electronic components,

• Do not put the product in cold places to avoid damaging internal circuit

sweat to prevent sweat from dropping into the product to make damage.

• Do not put the product in places exposed to sun or with high temperature.

- Please triple click the left earbud to switch to game mode and then start playing game. 6. Maintenance
 - If it is not used for long periods of time, please charge the product with lithium battery every three months. Keep the product away from humid places to avoid affecting internal

damage battery and make plastic components deformed.

■ There is a delay problem when playing game.

- Do not use drastic chemicals or cleaner to clean the product. • Do not use sharp objects to scratch product surface to avoid damaging shell and affecting facade.
- Model: EDF200051

Edifier International Limited

P.O. Box 6264

Hong Kong

General Post Office

- www.edifier.com © 2021 Edifier International Limited. All rights reserved.
- Printed in China NOTICE: For the need of technical improvement and system upgrade, information contained herein may be subject to change from time to time without prior notice.

product. If any difference is found, the actual product prevails.

Products of EDIFIER will be customized for different applications. Pictures

and illustrations shown on this manual may be slightly different from actual

- True Wireless Stereo Earbuds with Active Noise Cancellation





1. Product description and accessories

NeoBuds Pro