

12"

# LCD Writing Tablet



## HOW TO USE



Pull the pen out



Press the delete button to clear the screen



Scribble on the pad directly



Replace the battery by loosening the screw and pulling it out



Erase lock

## WARNING

### Important Safety Instruction

Before using the writing tablet, please ensure that you read and understand the safety precautions below:

1. Do not attempt to open the case of writing tablet or modify it in any way as this will void the warranty.
2. Keep the writing tablet away from water and other liquids as this may cause the unit to malfunction.
3. Do not place heavy objects on the writing tablet as this may cause the unit to malfunction.
4. If the exterior of writing tablet requires cleaning, wipe it with a soft dry cloth.
5. Do not dispose of the unit via conventional domestic waste.

CE RoHS FC

Made in C