



# STUNT SPRAY CAR INSTRUCTION MANUAL

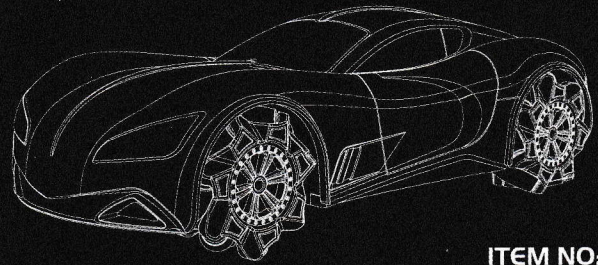


ITEM NO: Z16

## Remote Control Instructions

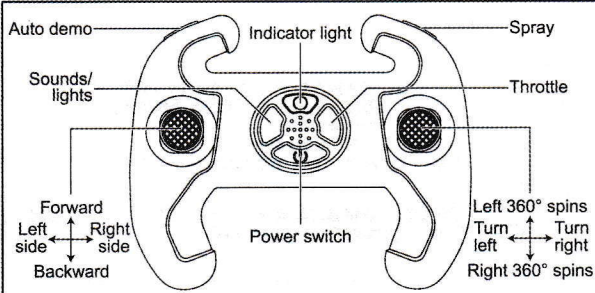

## How to play

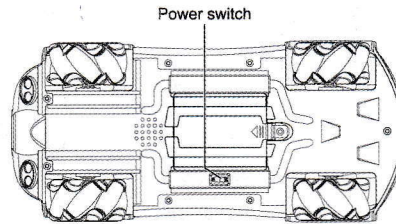


**Power ON:** Turn on the vehicle and then the remote control. The light on remote control will turn off to indicate the remote control and the vehicle is linked.  
**Remote control distance:** about 30-40 meters.  
**Operating time:** approx. 20 minutes with fully charged battery.

**Note:** Always switch vehicle OFF and remove the battery when not in use to avoid reducing the life of the battery.

## Batteries and Charging

### Battery installation for remote control

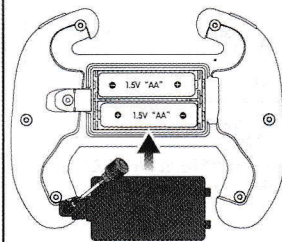


#### Battery safety information

1. Battery requirement: vehicle use 3.7V 400mAh battery; remote control requires 2 x 1.5V "AA" non-rechargeable batteries.
2. Install and remove battery properly.
3. Do not recharge non-rechargeable batteries.
4. Do not mix old and new batteries or different types of batteries.
5. Use only batteries of the same or equivalent type as recommended.
6. Insert batteries with correct polarity.
7. Always remove exhausted batteries from the toy.
8. Rechargeable batteries are only to be charged under adult supervision.
9. Remove rechargeable batteries from the toy before charging.
10. Do not short-circuit the supply terminals.

1. Loosen the screw in the battery compartment door with a Phillips screwdriver.
2. Install 2 x 1.5V "AA" batteries with correct polarity (+/-) as shown inside.
3. Replace the battery door and tighten the screw.


### Battery installation for vehicle

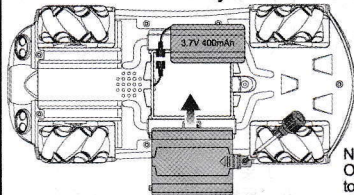

**NOTE:** Only use chargers specifically designed to charge the included battery.

1. Loosen the screw and remove the battery door. Remove the exhausted battery pack and install a fully charged one, making sure the battery connected with correct polarity (+/-). Replace the battery door and tighten the screw.
2. Connect one end of the USB charger cable to battery, other end of the USB charger cable can charge the battery by connecting a power supply medium with a USB socket. (For example, notebook computer, power adapter). The charging time is 40 minutes.

## Fill With Water for the Vehicle

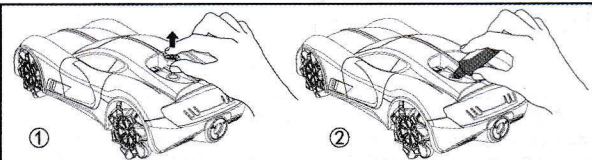


Fill the water-tube first, then remove the plug from the vehicle (Fig. 1) and insert the water-tube into the small hole of the vehicle, gently squeeze the water-tube to fill the vehicle (Fig. 2).

**NOTE:** Do not overfill the vehicle as this may cause leakage.


## Trouble Shooting Guide

Problem	Cause	Solution
Remote control does not work	1. Batteries are installed incorrectly.	1. Check that the batteries are installed with correct polarity (+/-) as shown inside the battery compartment.
	2. The battery is low.	2. Replace new batteries.
	3. Vehicle is out of range of remote control.	3. Ensure the distance of remote control within 40 meters, point remote control at the vehicle.
	4. Fail to link remote control with vehicle.	4. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.
Vehicle does not work properly	1. The power switch is in the "OFF" position.	1. Turn the power switch to the "ON" position.
	2. Fail to connect the battery pack to the vehicle with correct polarity	2. Check that the battery pack is connected to the vehicle with correct polarity.
	3. Vehicle is out of range of remote control.	3. Remove and reinstall the batteries to the remote control. Re-set the vehicle OFF to ON. Move the sticks on the remote control to re-link remote control and vehicle.

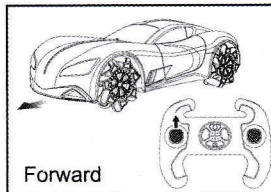


Forward

**① Forward**  
Push the left stick up to run forward. Push and hold the left stick up will make the vehicle keep driving forward.

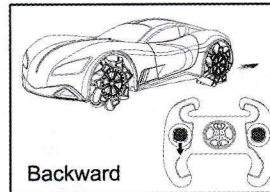


Backward

**② Backward**  
Push the left stick down to run backward. Push and hold the left stick down will make the vehicle keep driving backward.

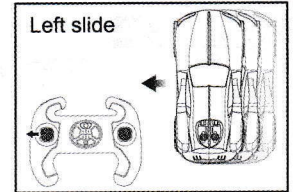


Left slide

**③ Left slide**  
Push the left stick to the left to perform left sideways drifts. Push and hold the left stick to the left will make the vehicle keep drifting to the left.

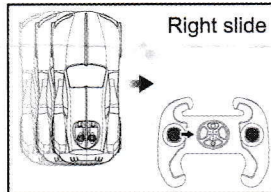


Right slide

**④ Right slide**  
Push the left stick to the right to perform right sideways drifts. Push and hold the left stick to the right will make the vehicle keep drifting to the right.

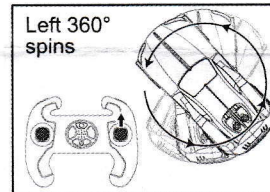


Left 360° spins

**⑤ Left 360° spins**  
Push up the right stick to perform left 360° spins. Push and hold the right stick up will make the vehicle keep 360° spinning anti-clockwise.

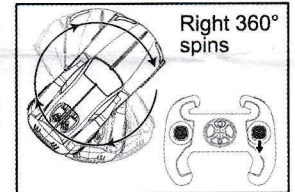


Right 360° spins

**⑥ Right 360° spins**  
Push down the right stick to perform right 360° spins. Push and hold the right stick down will make the vehicle keep 360° spinning clockwise.

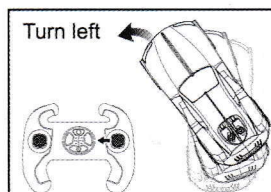


Turn left

**⑦ Turn left**  
Push the right stick to the left to turn left. Push and hold the right stick to the left will make the vehicle keep turning left.

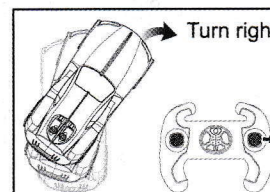


Turn right

**⑧ Turn right**  
Push the right stick to the right to turn right. Push and hold the right stick to the right will make the vehicle keep turning right.

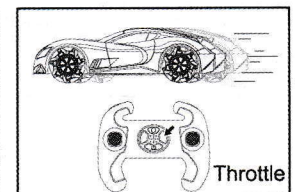


Throttle

**⑨ Throttle**  
Press the throttle button to drive the vehicle in high speed mode which will make vehicle faster and more flexible.

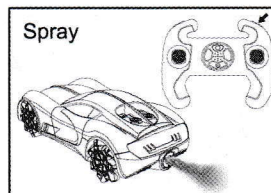


Spray

**⑩ Spray**  
Press the spray button, vehicle the begin spraying, press and hold the spray button, vehicle will stop spraying.

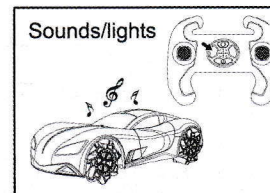

Sounds/lights

**⑪ Sounds/lights**  
Press the sounds/lights button to control the vehicle play music, press again to turn on lights, press and hold the button will turn off music and lights.

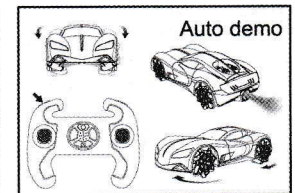

Auto demo

**⑫ Auto demo**  
Press the auto demo button to watch the vehicle perform the built-in demo function.

## Warning

Children should be supervised during play.

Please keep this instruction manual for future reference, as it contains important information.