 


Gebruikershandleiding

KWESP ANTI BLAFBAND PRO

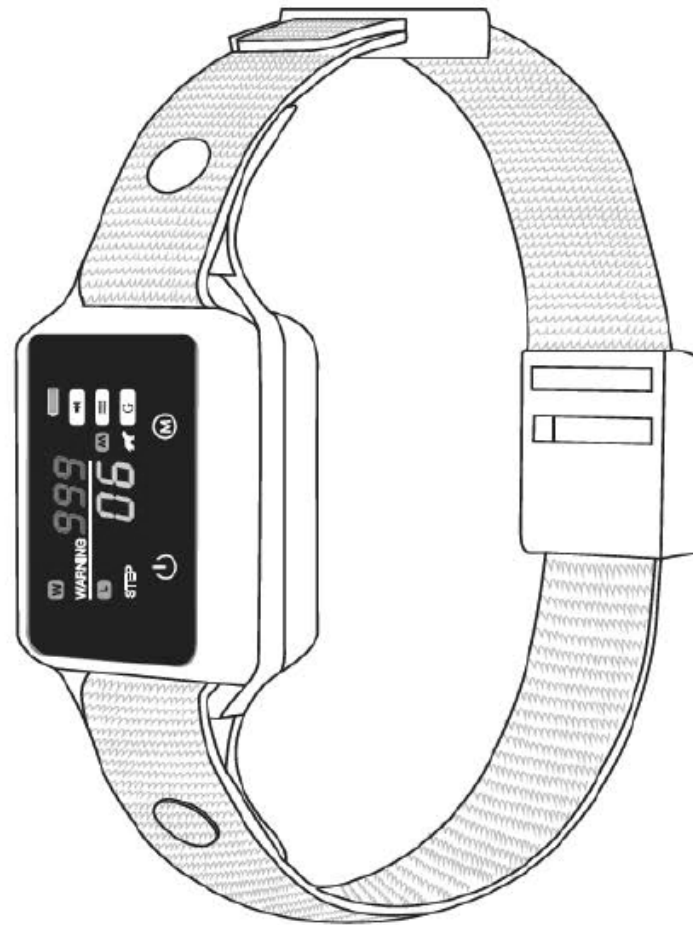

BELANGRIJKE AANDACHTSPUNTEN

1. Om te voorkomen dat het scherm onbedoeld wordt geactiveerd, verzoeken wij u om het scherm te vergrendelen nadat u de werkmodus hebt geselecteerd.
2. De triggerconditie van het product is dat geluid en lichaamsbeweging tegelijkertijd optreden. Als u merkt dat het apparaat niet wordt geactiveerd wanneer de hond blaft, is het waarschijnlijk dat de triggerconditie niet wordt voldaan. Maakt u zich geen zorgen.
3. Omdat het product een automatisch triggermechanisme heeft, kan het product in een lawaaijige omgeving onbedoeld worden geactiveerd. Wij raden u aan om een vaste plaats en tijd te kiezen om dit product te gebruiken voor speciale training van honden voor bepaald gedrag.
4. Dit is geen sieraad. Laat uw hond het daarom niet continu dragen gedurende meer dan 6 uur om overmatige druk op de huid van de hond te voorkomen en slijtage te voorkomen.
5. Mocht u nog vragen hebben, neem dan tijdig contact met ons op voor professionele hulp.

SNELSTARTGIDS

1 Aan/Uit

Houd de aan/uit-knop ingedrukt om het apparaat in- of uit te schakelen



Houd de aan/uit-knop ingedrukt

2 S/G trainingsstanden

 
Tik één keer op de **M** knop met een pieptoon om te schakelen tussen **S** en **G**, het **S** of **G** pictogram verschijnt op het scherm.



Raak de M-knop aan

3 Laten we beginnen

Tip: Het halsband wordt geactiveerd wanneer de hond blaft. Anders staat de halsband in de stand-bymodus. Om te herstellen, houdt u de **M** knop of de aan/uit knop ingedrukt.

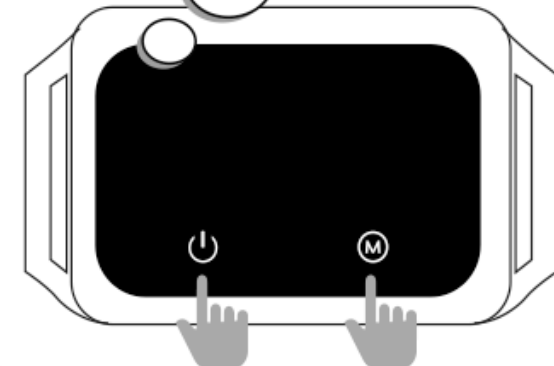

Druk op de aan/uit-knop en de M-knop tegelijkertijd

AANVULLENDE INSTELLINGEN

 
*Raadpleeg pagina 15 voor instructies over het bedienen van de modus

4 Automatische werkingsmodus

5 Vaste modus

6 Trigger-telmodus

Houd de aan/uit-knop ingedrukt om de halsband in te schakelen. Het scherm toont 'AUTO' en '01', wat geschikt is voor de eerste keer gebruikers.

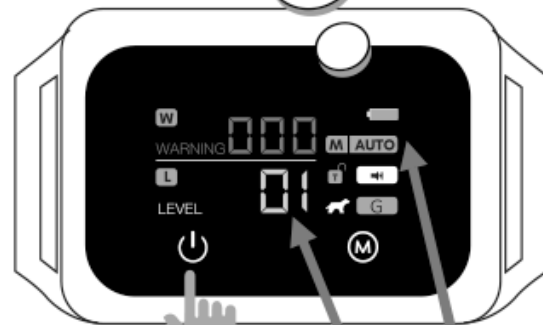


Houd de aan/uit-knop ingedrukt

M AUTO

01

 Houd de M-knop lang ingedrukt om over te schakelen naar de vaste modus. Houd de M-knop lang ingedrukt om het trainingsniveau in te stellen van 1 tot 6..

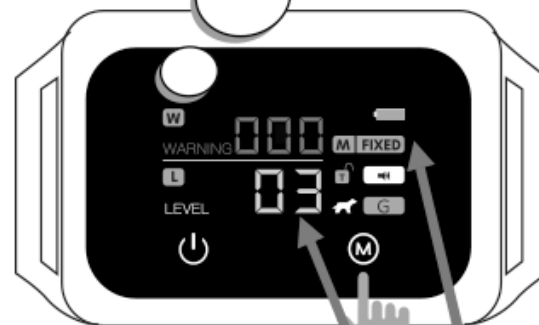

Houd lang ingedrukt

M FIXED

03

Druk 3 keer op de M-knop om het trigger-nummer te wissen. Wis het dagelijks om te bepalen of de hond vooruitgang boekt.



 
Druk 3 keer

000

MEER INSTELLINGEN

7 Vergrendel het scherm

Door twee keer op de aan/uit knop te klikken, wordt het scherm vergrendeld. De functietoetsen werken dan niet meer.

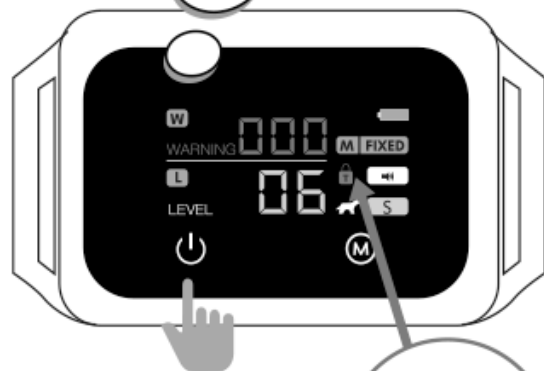


Druk twee keer



8 Ontgrendel het scherm

 Door nogmaals twee keer op de aan/uit-knop te klikken, wordt het scherm ontgrendeld en keert het systeem terug naar de normale modus.

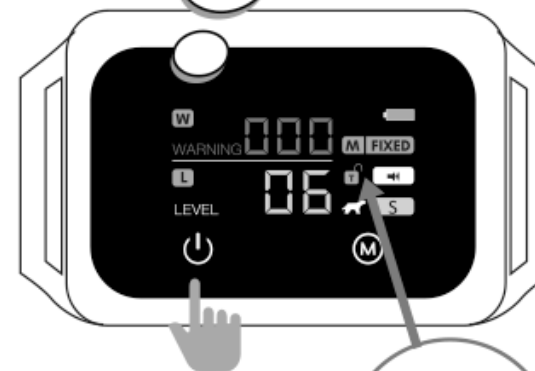


Druk twee keer



User Manual

 B801 Bark Control Collar

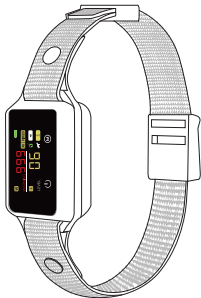

Please familiarize yourself with the Bark Collar for the safety of your pet!

Thanks for choosing our product. B801 bark control collar is a new and effective pet training aid that corrects improper barking behavior, promotes training and protects your pet. With this collar, you can enjoy the time with your pet.


Before using this product, please read through the User Manual

CONTENTS

COMPONENTS LIST - - - - -	7
KEY FEATURES - - - - -	8
DESCRIPTION - - - - -	9
OPERATION INSTRUCTIONS- - - - -	10
MODE INSTRUCTIONS - - - - -	15
TWO BUTTONS' INSTRUCTIONS - - - - -	16
TRAINING MODE TEST - - - - -	17
WEARING METHOD- - - - -	18
FAQ - - - - -	19
1-YEAR WARRANTY- - - - -	21
FCC COMPLIANCE - - - - -	22
REFERENCE SIZE FOR DIFFERENT DOGS - - - - -	23
ABOUT AFTER-SALES - - - - -	24

COMPONENTS LIST

 1. Bark Control Collar
2. Magnetic Charging Cable
3. User Manual

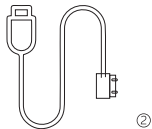

KEY FEATURES



Intelligent Dog
Barking Recognition
Chip



IP68 Waterproof



Built-in Rechargeable
Battery



Unique Screensaver
Design



Double Trigger
Identification System



Accurate Anti-False
Trigger Control
Detection

 
 


Simple Setting with
Two Buttons



Intelligent Touch
Screen

DESCRIPTION

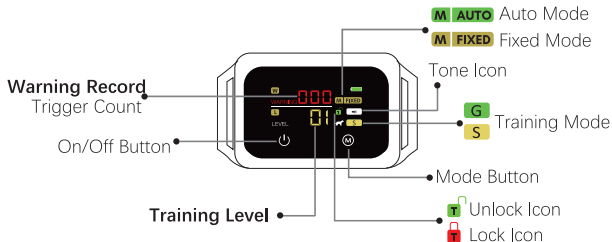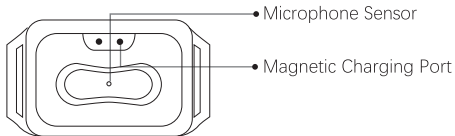

OPERATION INSTRUCTIONS

① Turn-on and turn-off

Turn-on: Press and hold the On/Off button to turn on the device.

Turn-off: Press and hold the On/Off button to turn off the device.

Screenoff: The screen will go off if no operation occurs within 30 s.

You may long press the On/Off button or M button to light the screen up.



② Two warning mode

 
It is designed with two warning modes. **Fixed mode and Auto working mode.**

Auto Mode (Factory default setting)

In order to train our puppy with friendly way, progressively level-up warning mode to help puppy memorize.

Auto Mode Setting:

Touch the M button twice to activate the Auto mode, the “M” icon will be in green color. And it will be level-up from 1 to 6 automatically after every time triggered.



Fixed Mode Setting:

Long press & hold the “M” button to activate the Fixed mode, the “M” icon will be in yellow color. At the same time, long press “M” button, you can set the training level from 1 to 6 manually.



 
③ Two training mode options: S and G

- S Mode (Factory default setting): More easier triggered, suitable for small dogs.
- G Mode: Not so easy to be triggered, which is suitable for general dog size.

How to operate:

To adjust the sensitivity level, you may press the M button for switching between S and G .

Please set the sensitivity level to “G” in case of frequent false triggering, or to “S” in case of difficult triggering.



4 Trigger Count

Each trigger will be recorded. The maximum is 999 times. **You may touch the “M” button 3 times to clear the trigger number.**

5 Protection Mode

When the product is triggered 6 times in a row, it will be entered into the protection mode, and resume work after 1 minute automatically.
The screen will show as below.



6 Charge

Please charge the device before use!

The charging cable is a DC interface and the input voltage is 5V 1A.

7 Lock/Unlock the Screen

Clicking the On/Off button 2 times to lock the screen, then the function keys will not operate.



Clicking the On/Off button 2 times again to unlock the screen, then the system will return to normal.



MODE INSTRUCTIONS

Auto mode:

Factory default automatic mode, no adjustment is required. After the dog's bark is triggered, it will automatically cycle from level 1 to level 6. This mode is suitable for dogs who are first time to use this collar.

Fixed mode:



This mode needs to be adjusted manually, which is suitable for people who want to stop barking quickly. Long press & hold the M button and adjust it to any level you want (1-6), then release the button.

Protection mode:

1. When the product is triggered 6 times, it will be entered into 1-minute protection mode and stop working. This mode is to protect the dog and train the dog to correct bad barking behaviors, rather than punishment only.

- Only 2 times barking in 10 seconds will activate 1 time, and it will be detected again till the end of this round-barking.
- When Auto-mode setting, eg. at level 3, if it activate many times in 20 seconds, it will level up at level 4, if it activate after 20 seconds, it will level down at level 2.


TWO BUTTONS' INSTRUCTIONS

Button	Long press button	Tap button one time	Tap button two times	Tap M button three times
	Turn on or off	/	Lock or Unlock the screen	/
	To switch from Auto Mode to Fixed Mode	To switch between S and G	To switch from Fixed mode to Auto Mode	To clear the trigger record
	Adjust the levels (1-6)			

TRAINING MODE TEST

1. Turn on the bark collar and switch to at level 6, then shout "woof, woof" to the collar while shaking it. Please note the collar can only be triggered by both sound and shaking.
2. Switch to Tone/Vibration modes, just shout "woof,woof" to the collar while shaking it. Normally, the collar will beep/vibrate when triggered. Please note the collar can only be triggered by both sound and shaking.

 WEARING METHOD

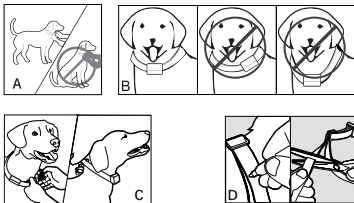

The correct wearing of the bark collar is essential for effective operation.

Wearing Steps

- ① Check that the bark collar is turned off.
- ② Keep your dog in a comfortable standing position (A).
- ③ Place the bark collar around the dog's neck with the control ring centered and the collar operating side "on/off" switch facing up (B).
- ④ Check the tightness of the bark collar by inserting a finger between the collar strap and your dog's neck making sure the the collar strap is not too tight or too loose (C).
- ⑤ If the collar strap is a little longer for your dog, please trim the collar strap (D).

Note

The following practices may be detrimental to your dog.

1. Attach the device too tightly around the dog's neck.
2. Attach a belt to the collar.
3. Leave the device on the dog for more than 6h. We recommend you reposition the collar every 2 hours, and check your dog's neck skin regularly.

Q: How can I prevent the screen from being touched by my dog by mistake?

A: After you select the model, please double-click the on-off button to lock the screen.

Q: How can I tell if my dog's behavior has improved?

A: You can refer to the number of triggers displayed on the screen.

Q: Can I let my dog wear it all the time?

A: No. To protect your dog's skin, please do not wear it more than 6 hours continuously, because the contact points will cause extra pressure on dog's neck. Also, please check your dog's neck skin regularly.

Q: Can my dog swim with the collar?

A: The waterproof level is IP68, dogs can swim with the product. But when your dog is swimming with this collar, other objects may get stuck in the collar and make your dog difficult to breathe, so for safety reasons, it is not recommended to wear this collar when your dog is swimming.

Q: Why does my collar trigger sometimes and sometimes not?

A: There are two situations:

1. The trigger condition of the product is that sound and body shaking occur at the same time. If you find that the device is not triggered when the dog barks, it is likely that the trigger condition is not met. Please don't worry.
2. Because the product is an automatic trigger mechanism, if the environment is noisy, the product may trigger falsely. We recommend that you choose a fixed place and time to use this product for special behavior training for dogs.

Q: How can I get my dogs to form positive feedback on the product?

A: Every time your dog has a good behavior, remember to reward him in time, repeat about 10 times, and your dog will have a memory. Then you can consider leaving the device.

1-YEAR WARRANTY

If the product has quality failure, please send the below info to **support@petdiarycollar.com** to activate the warranty.

1. The order screenshot to show your purchase time
2. One short video to show the problem
3. Your current shipping address

After confirmation, we will ship you the replacement part within 5 business days.

FCC COMPLIANCE

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular.

REFERENCE SIZE FOR DIFFERENT DOGS

Size	Neck(In)	Chest Measurement (In)	Back Length (In)	Type
Mini	7.8-8.6	9.8-11.8	7.5	Chihuahua, Yorkshire Terrier
Small	7.8-9.5	11.4-14.2	9	Chihuahua, Yorkshire Terrier, Poodle, Pomeranian
Medium	9.0-11.0	13.7-16.5	11	Maltese Dog, Shih Tzu
Large	9.6-12.2	16.2-18.5	12.2	Miniature Schnauzer, Pekingese
Large	11.8-13.4	18.1-20.8	13.8	Schnauzer, English Cocker Spaniel
Large	13.0-14.5	20.5-23.2	15.7	Beagle
Huge	17.0-18.9	30.0-33.0	23.6	Husky

ABOUT AFTER-SALES

1. If the product is faulty within 30 days from the purchase date, you need to take a video or picture of the faulty product. After the customer service confirms, the replacement can be sent. And the faulty product must be returned within 7 days after receiving the replacement.
2. If the product is faulty after 30 days, and it is still within the 1-year warranty period from the purchase date, the consumer will be required to return the product and pay the freight. We will test and replace the faulty parts, and returned to you free of charge.
3. This warranty is a supplement to other rights and remedies provided by law. For major failures and any other compensation, if it is a reasonably foreseeable loss or damage, you are entitled to a replacement or refund.
4. You also have the right to repair or replace the goods in the following cases: the quality of the goods is unqualified, and the failure does not constitute a major failure. If you have any questions or need more information, please contact our customer service.