 




# P4 GAMEPAD

## Operating instruction



Q300

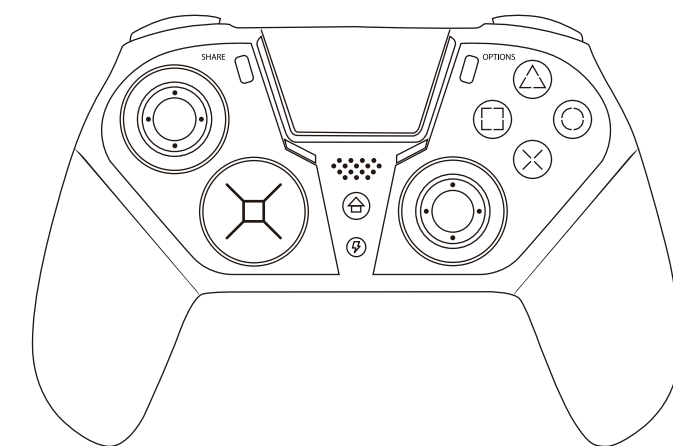
  
### Names of parts

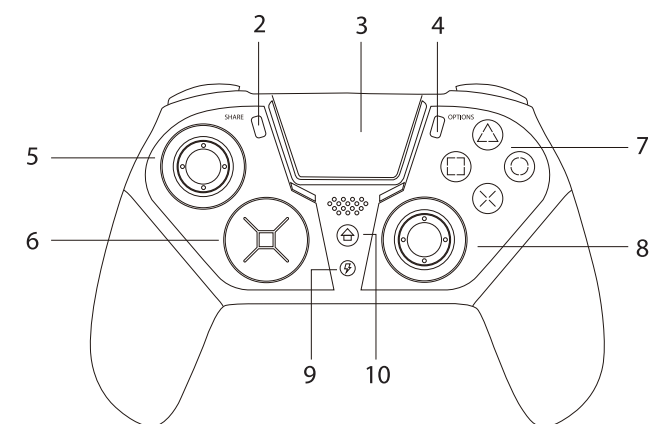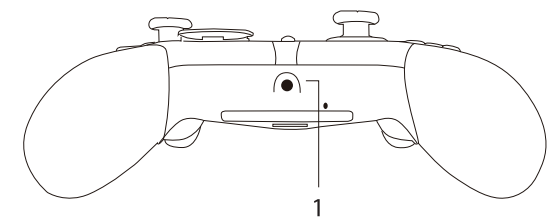

- 1. Headset jack
- 2. Share button
- 3. Touchpad
- 4. Options
- 5. L analog stick
- 6. Direction button
- 7. Function button
- 8. R analog stick
- 9. Turbo button
- 10. Home button

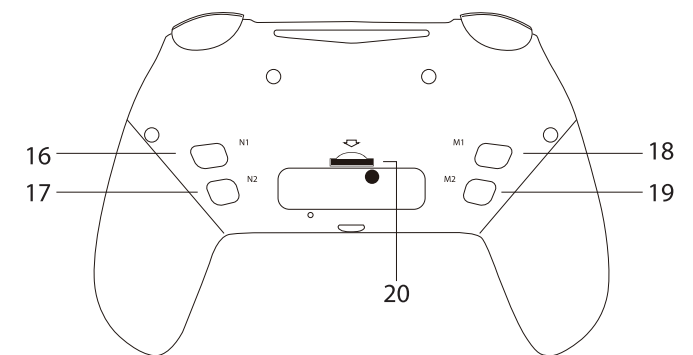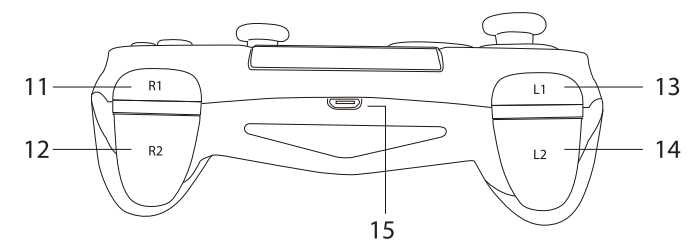

- 11. R1 button
- 12. R2 button
- 13. L1 button
- 14. L2 button
- 15. Usb charging port
- 16. N1 button
- 17. N2 button
- 18. M1 button
- 19. M2 button
- 20. Pader



### Product specifications

Material	ABS resin
Battery capacity	1000mA
Usb input voltage	5.5v / 500mah
Construction pressure	DC 3.7
Continuous use time	approximately 8 hours
Effective distance	≤10 m
Says	15.8*10*5cm
Weight	212g

### First time to pair & connect

1. Power on you p4 console.
2. Connect the USB cable to p4 console and controller.
3. Press the HOME button.
4. After the connection is successful, unplug the USB cable and automatically switch to the wireless connection mode.

### Reconnect

If your controller was once paired and connected to your p4 console, next time you can press the Home Button to make it to be rapidly connected.

### Note

Every time when the controller is successfully connected to the console, first of all, you have to move the left and right joysticks to the maximum amplitude to turn a circle to calibrate the joysticks. And press the L2 and R2 buttons to the maximum to calibrate them.

### How to use Turbo function

#### Turbo function buttons :

△ ○ × □ L1 R1 L2 R2

#### How to use Turbo function :

Press the Turbo button and turbo function button Simultaneously.

#### How to turn off Turbo function :

Press the Turbo button and turbo function button to turn off turbo function.  
If the controller is turned off, it will clear all Turbo functions.

### Programmable buttons instructions :

The buttons M1, M2, N1, N2 on the back of the controllers can be programmable as: △ ○ × □ Up、Down、Left、Right、L1、R1、L2、R2、L3、R3

#### On/Off programmable buttons steps :

1. When controller has been connected to the console, press Option and Turbo (⚡) at the same time for few seconds till the LED light flashes, after 2 seconds, LED light on.
2. Above step is for both switch on and off the programmable buttons.
3. When it's off, back buttons have no function.

#### Programmable buttons set up steps :

1. Switch on programmable buttons, once on, the initial set up for the functions are M1, M2, N1, N2 as △ ○ × □
2. Press SHARE and Fn buttons (Fn = press any of N1, N2, M1, M2), the LED light flashes, now the buttons are in programming mode.
3. Now press the button you'd like to program, then press the button you want to use on the back of the controller, LED light on, programmable

completed.

**An example:** N1 to be programmed as △ button, once it's on programming mode, press △ button, then N1 button, LED light on, programable completed.

**Note:** When the buttons haven't been programmed when it's on programming mode, after 10 seconds, programming mode cancels and the LED light on. Please make sure the controller programming mode is on before start program buttons, programmable mode set up as off at factory.

#### Clear programmed buttons steps :

When controller has been connected to the console, press SHARE and Fn at the same time for few seconds till the LED light flashes, after 5 seconds, LED light on. Now M1, M2, N1, N2 set back to △ ○ × □

**Note:** Programmable function is memorable, once restart the controller and connect with console, the programmed buttons set up remains the same unless it's been cleared before shout down the controller.

### Package contents

- P4 controller
- One USB cable
- Operation manual x 1

### Swap left joystick and D-pad

**Step 1:** Remove the cross key cover.

**Step 2:** Remove the magnetic cover.

**Step 3:** Take out the pick on the back of the controller, rotate the fixed buckles between the left joystick and the cross key to unlock state, and then take out the left button module.

**Step 4:** Select the layout you want, install the module into the controller, rotate the fixed block with the pick to the locked state, insert the pick back into the storage hole on the back of the controller, then place the magnetic cover and the cross key cover.

### Upgrade

If this product cannot be used due to console system upgrades, please contact our customer service to provide an upgrade document for upgrade.

Please read this manual carefully before using it