 


# ENCHEN

## Instruction Manuals for Hair Trimmer

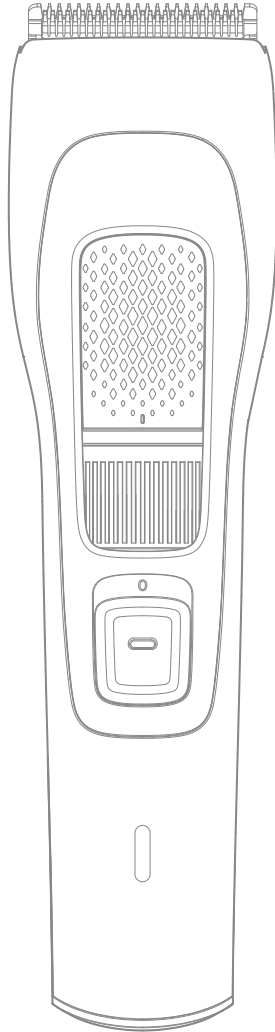

Shanghai Qiaopusi Smart  
Sci-Tech Development Co., Ltd.

# Important Precautions

## Danger

1. This product and its accessories are not toys, please keep out of reach of children to avoid danger.
2. Do not plug or unplug the power cord with wet hands to keep away the power cord from liquids.
3. Make sure that the hair trimmer, adapter and power cord are undamped and not used in the bathroom.
4. This product contains a built-in rechargeable battery, do not throw it into fire, charge, or use and place it at a high-temperature place.
5. Do not use when the power cord or adapter is damaged, or when not well-connected to the socket.

**The symbol on the right indicates that the trimmer cannot be cleaned under the tap.**




**Warning: Please keep the hair trimmer dry.**



## Warnings

1. Make sure that the power cord and product are kept dry, and do not rinse the hair trimmer with water.
2. Before connecting the product for charging, make sure that the voltage matches the local voltage.
3. Ask the manufacturer or the after-sales service department to purchase the original model for replacement if the power cord is damaged or lost.
4. Use and store the product at a temperature between 5°C and 35°C.
5. Stop using it immediately when you find any abnormality or trouble of this product. Please deal with it according to the type of malfunction, and send it to the maintenance department for repair if necessary.
6. Do not use broken or damaged trimming combs.
7. Do not disassemble the trimmer to replace the battery.
8. Do not immerse this product in water or any liquid.
9. Do not knock or drop this product. Stop using it if it is damaged due to collision or drop.
10. People with impaired limbs, mental disorders, or lack of relevant experience and knowledge (including children) should be supervised and guided for using it.
11. Do not use on animals.
12. Before taking out the battery, the motor must be power off.

# Product Description

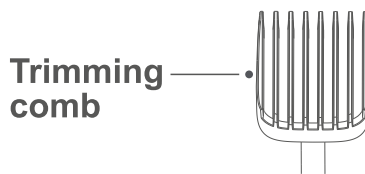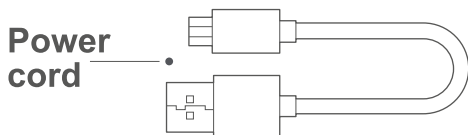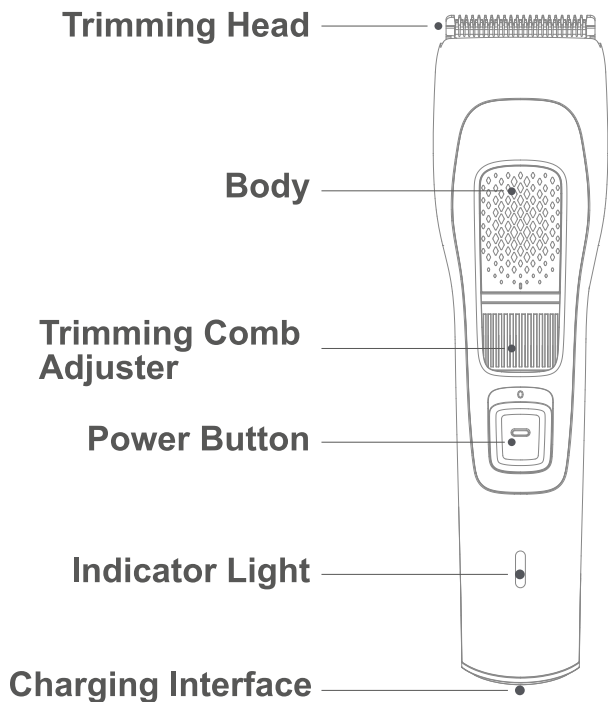

# Use

Install trimming comb

Adjust the trimming comb to the corresponding length according to the need of haircut.

Push the one end of the trimming comb into the trimmer for use. You can adjust it to the corresponding size according to the need of haircut;

You can press the trimming comb button if you do not need it, and then pull it outward with one hand to remove.

Keep your hair clean and smooth before haircut.

Do not forcibly turn off the hair trimmer when cutting hair.






Choose a suitable trimming comb gear, which ranges from lengths of 1mm to 20mm.

To trim the top and two sides

Hold the hair trimmer so that the rear of the trimming comb always touches the scalp, and slowly moves forward against the direction of hair. Move repeatedly from front to back. It is recommended that the hair around the fontanelle of babies be kept before 3 months old.

To trim the back and temples

Move repeatedly from bottom to top until the hair at the back of head and temples are cut to an appropriate size.

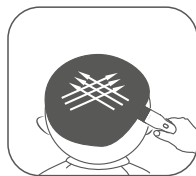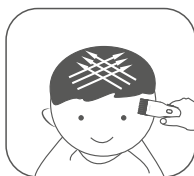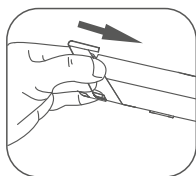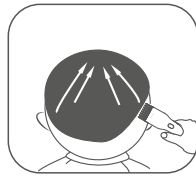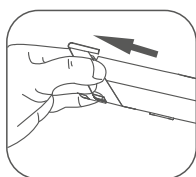

# Charging


1. Make sure that the power of the hair trimmer is off before charging.
2. Charge the hair trimmer when the battery is about to run out.
3. Charging time is about 1.5-2 hours (switch off when charging). The red light is on when charging. And the blue light is on after being fully charged and please unplug the charger. It will not affect the life of the device if you forget to unplug the charger. The device has an overcharge protection function, which can automatically disconnect the power and be in a protected state. When there is no power, plug to connect to the computer, portable charger and adapter, then turn on the switch to use it. It can work continuously for 90-150 minutes after being fully charged. The working time may vary slightly depending on use and hair quality.
4. Select an adapter within 5V-2A. An adapter that exceeds the rated voltage range should not be used.




# Cleaning and Maintenance

**Warning: Do not rinse the hair trimmer with water for it is non-waterproof.**

Apply a small amount of the lubricant provided by the manufacturer to the teeth of the trimming head before use.

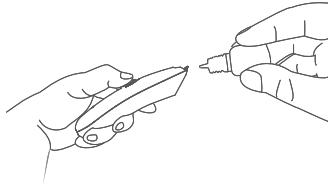

Turn off and unplug the trimmer before cleaning it. Remove the trimming comb and the trimming head. Use your thumb to hold against the trimming teeth when disassembling the trimming head. You can disassemble it when applying the force in the direction of the arrow as shown in the picture.

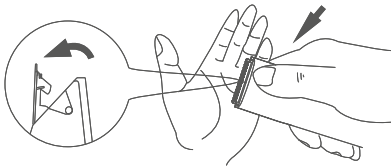

Use a special cleaning brush to gently brush off the hair on the slot of the trimming head.



## Reminder

Push with one hand and hold the trimming head with another to prevent it from falling and being damaged when disassembling it.

The service life of the hair trimmer directly depends on the frequency of uses and maintenance condition.

The trimming head will be slightly heated during use, which is normal and does not affect normal use.

# Cleaning and Care

## Repair and maintenance of trimming head

This product uses an advanced motor and a high-strength spring. For the first time or the product being unused for a long time, please remove the trimming head and slide it from left to right for several times to ensure the elasticity of the spring.

The fixed trimming head is made of special steel. The movable blade is high-density 420J2 blade. Remember to add two or three drops of lubricating oil between the fixed and movable blades to maintain the long-term sharpness, blade heating, and to reduce noise before and after use.

## Cleaning and maintenance of blade

Hold the trimmer with the front of the body facing up, and push the trimming head away with the thumbs of both hands. Use a cleaning brush to clean the blade parts, press the cleaning bar to open the blade and remove the hair between the blades. Add two or three drops of lubricant between the fixed and movable blades. The blade should be cleaned and lubricated after several uses. When installing the trimming head, put the back of the body facing up and the bottom enters the slot first, then push it firmly until a click sound is heard.

# Operation

Cutting the whole hair

1. Install and adjust the comb to an appropriate position as required.
2. Place the bottom of the comb close to the scalp and move from the four sides to the top of head.
3. Repeat moving so that hair can be evenly cut.
4. Cut hair alternately without leaving unwanted hair.

Trim the hair on the border of ear

1. Remove the comb, push the tip of the blade to touch the skin and push it slowly in the direction of the arrow.
2. It is easy to push and cut hair when holding the ear by hand.
3. It is safe to use because both ends of the blade are arc-shaped.

# Troubleshooting

Trouble	Cause	Solution
Unable to work	Button failure	Return it to after-sales maintenance
	Insufficient power	Connect it to charge
	Circuit failure	Return it to after-sales maintenance
Charging indicator light is not on	Not connected to power	Connect it to charge
	Damaged indicator light	Return it to after-sales maintenance
	Circuit failure	Return it to after-sales maintenance
Charging time is too long	At the end of the battery service life	Send the hair clipper back to the after-sales center for repair
	Circuit failure	Send the hair clipper back to the after-sales center for repair



# Environmental Protection

The built-in rechargeable battery contains substances that may pollute the environment.

Be sure to take out the battery or send this product to an officially designated recycle point for disposal before throwing it away. You can also send the discarded hair trimmer to the company's designated recycle department, and the maintenance department will disassemble and recycle the battery.

## Warning

**Prevent the battery from a short circuit to avoid burning and causing a fire.**

**Do not throw the battery into fire to avoid the explosion or the release of hazardous substances.**

## Product Parameters

Product Name:Hair Trimmer

Product Model:Sharp 3S

Rated Voltage: 5V $\text{---}$

Rated Power:5W

Charging Time:2 Hours



ENCHEN

Shanghai Qiaopusi Smart Sci-Tech Development Co., Ltd.  
Add: Room 103, 3th Bld, No.320 Donglan Rd, Minghang District,  
Shanghai, China, 201102