



GS3700 / XGS3700 Series

GbE L2+ Switch

Version 4.30
Edition 1, 10/2015

User's Guide

Default Login Details

| | |
|------------|--|
| IP Address | http://192.168.0.1 (Out-of-band MGMT port) http://192.168.1.1 (In-band ports) |
| User Name | admin |
| Password | 1234 |

IMPORTANT!

READ CAREFULLY BEFORE USE.

KEEP THIS GUIDE FOR FUTURE REFERENCE.

Note: This guide is a reference for a series of products. Therefore some features or options in this guide may not be available in your product.

Screenshots and graphics in this book may differ slightly from your product due to differences in your product firmware or your computer operating system. Every effort has been made to ensure that the information in this manual is accurate.

Related Documentation

- CLI Reference Guide

This guide explains how to use the Command-Line Interface (CLI) to configure the Switch.

Note: It is recommended you use the Web Configurator to configure the Switch.

- Web Configurator Online Help

Click the help icon in any screen for help in configuring that screen and supplementary information.

- More Information

Go to **support.zyxel.com** to find other information on the Switch.



Contents Overview

| | |
|--|-----------|
| User's Guide | 20 |
| Getting to Know Your Switch | 21 |
| Hardware Installation and Connection | 26 |
| Hardware Overview | 30 |
| The Web Configurator | 37 |
| Technical Reference | 46 |
| ZON Utility, ZON Neighbor Management and Port Status | 47 |
| Basic Setting | 56 |
| VLAN | 101 |
| Static MAC Forward Setup | 124 |
| Static Multicast Forward Setup | 127 |
| Filtering | 130 |
| Spanning Tree Protocol | 132 |
| Bandwidth Control | 157 |
| Broadcast Storm Control | 160 |
| Mirroring | 162 |
| Link Aggregation | 175 |
| Port Authentication | 185 |
| Port Security | 195 |
| Time Range | 199 |
| Classifier | 201 |
| Policy Rule | 210 |
| Queuing Method | 215 |
| VLAN Stacking | 219 |
| Multicast | 227 |
| AAA | 253 |
| IP Source Guard | 265 |
| Loop Guard | 299 |
| VLAN Mapping | 303 |
| Layer 2 Protocol Tunneling | 307 |
| sFlow | 312 |
| PPPoE | 316 |
| Error Disable | 325 |
| MAC Pinning | 333 |
| Private VLAN | 336 |
| Green Ethernet | 340 |
| Link Layer Discovery Protocol (LLDP) | 343 |

| | |
|-------------------------------|-----|
| Anti-Arpscan | 372 |
| BPDU Guard | 378 |
| OAM | 381 |
| ZULD | 390 |
| Static Route | 396 |
| Policy Routing | 400 |
| Differentiated Services | 404 |
| DHCP | 413 |
| VRRP | 430 |
| Load Sharing | 439 |
| ARP Setup | 441 |
| Maintenance | 447 |
| Access Control | 458 |
| Diagnostic | 482 |
| System Log | 485 |
| Syslog Setup | 486 |
| Cluster Management | 489 |
| MAC Table | 495 |
| IP Table | 498 |
| ARP Table | 500 |
| Routing Table | 502 |
| Path MTU Table | 503 |
| Configure Clone | 504 |
| IPv6 Neighbor Table | 508 |
| Troubleshooting | 510 |

Table of Contents

| | |
|--|-----------|
| Contents Overview | 3 |
| Table of Contents | 5 |
| | |
| Part I: User's Guide | 20 |
| | |
| Chapter 1 | |
| Getting to Know Your Switch..... | 21 |
| 1.1 Introduction | 21 |
| 1.1.1 Bridging Example | 22 |
| 1.1.2 High Performance Switching Example | 22 |
| 1.1.3 Gigabit Ethernet to the Desktop | 23 |
| 1.1.4 IEEE 802.1Q VLAN Application Example | 23 |
| 1.1.5 IPv6 Support | 24 |
| 1.2 Ways to Manage the Switch | 24 |
| 1.3 Good Habits for Managing the Switch | 25 |
| | |
| Chapter 2 | |
| Hardware Installation and Connection | 26 |
| 2.1 Freestanding Installation | 26 |
| 2.2 Mounting the Switch on a Rack | 27 |
| 2.3 Installation Requirements | 27 |
| 2.3.1 Precautions | 27 |
| 2.4 Attaching the Brackets to the Switch | 27 |
| 2.5 Mounting the Switch on a Rack | 28 |
| 2.6 Power Module Installation | 29 |
| | |
| Chapter 3 | |
| Hardware Overview | 30 |
| 3.1 Front Panel Connections | 30 |
| 3.1.1 Ethernet Ports | 31 |
| 3.1.2 SFP/SFP+ Slots | 32 |
| 3.1.3 Management Port | 33 |
| 3.1.4 Console Port | 33 |
| 3.2 Rear Panel | 34 |
| 3.2.1 Removing and Installing the Fan Module | 34 |
| 3.2.2 Power Connection | 34 |
| 3.3 LEDs | 35 |

Chapter 4
The Web Configurator 37

- 4.1 Introduction 37
- 4.2 System Login 37
- 4.3 The Web Configurator Layout 38
 - 4.3.1 Change Your Password 42
- 4.4 Saving Your Configuration 43
- 4.5 Switch Lockout 43
- 4.6 Resetting the Switch 44
 - 4.6.1 Reload the Configuration File 44
- 4.7 Logging Out of the Web Configurator 45
- 4.8 Help 45

Part II: Technical Reference..... 46

Chapter 5
ZON Utility, ZON Neighbor Management and Port Status..... 47

- 5.1 Overview 47
- 5.2 Status 47
- 5.3 ZyXEL One Network (ZON) Utility Screen 49
- 5.4 ZON Neighbor Management Screen 49
- 5.5 Port Status 51
 - 5.5.1 Port Details 52

Chapter 6
Basic Setting 56

- 6.1 System Information 56
 - 6.1.1 System Information Stacking Hardware Monitor 59
- 6.2 General Setup 61
- 6.3 Introduction to VLANs 63
- 6.4 Switch Setup 63
- 6.5 IP Setup 65
 - 6.5.1 IP Interfaces 65
 - 6.5.2 IP Status Details 66
 - 6.5.3 IP Configuration 67
- 6.6 Port Setup 69
- 6.7 PoE 72
 - 6.7.1 PoE Time Range Status 75
 - 6.7.2 PoE Setup 76
- 6.8 Interface Setup 79
- 6.9 IPv6 80

| | |
|--|------------|
| 6.9.1 IPv6 Interface Status | 80 |
| 6.9.2 IPv6 Configuration | 83 |
| 6.9.3 IPv6 Global Setup | 83 |
| 6.9.4 IPv6 Interface Setup | 84 |
| 6.9.5 IPv6 Link-Local Address Setup | 85 |
| 6.9.6 IPv6 Global Address Setup | 86 |
| 6.9.7 IPv6 Neighbor Discovery Setup | 87 |
| 6.9.8 IPv6 Router Discovery Setup | 88 |
| 6.9.9 IPv6 Prefix Setup | 89 |
| 6.9.10 IPv6 Neighbor Setup | 91 |
| 6.9.11 DHCPv6 Client Setup | 92 |
| 6.10 Stacking | 93 |
| 6.10.1 Stacking Status | 94 |
| 6.10.2 Stacking Slot | 95 |
| 6.10.3 Stacking Configuration | 97 |
| 6.11 DNS | 99 |
| Chapter 7 | |
| VLAN | 101 |
| 7.1 Introduction to IEEE 802.1Q Tagged VLANs | 101 |
| 7.1.1 Forwarding Tagged and Untagged Frames | 101 |
| 7.2 Automatic VLAN Registration | 102 |
| 7.2.1 GARP | 102 |
| 7.2.2 GVRP | 102 |
| 7.3 Port VLAN Trunking | 103 |
| 7.4 Select the VLAN Type | 103 |
| 7.5 802.1Q Static VLAN | 103 |
| 7.5.1 VLAN Status | 104 |
| 7.5.2 VLAN Details | 105 |
| 7.6 Private VLAN Status | 106 |
| 7.7 VLAN Configuration | 106 |
| 7.7.1 Configure a Static VLAN | 107 |
| 7.7.2 Configure VLAN Port Settings | 109 |
| 7.7.3 Subnet Based VLANs | 111 |
| 7.7.4 Protocol Based VLANs | 114 |
| 7.8 Port-based VLAN Setup (Standalone Mode) | 117 |
| 7.8.1 Configure a Port-based VLAN | 117 |
| 7.9 Voice VLAN | 120 |
| 7.10 MAC Based VLAN | 122 |
| Chapter 8 | |
| Static MAC Forward Setup | 124 |
| 8.1 Overview | 124 |

| | |
|---|------------|
| 8.2 Configuring Static MAC Forwarding | 124 |
| Chapter 9 | |
| Static Multicast Forward Setup | 127 |
| 9.1 Static Multicast Forwarding Overview | 127 |
| 9.2 Configuring Static Multicast Forwarding | 128 |
| Chapter 10 | |
| Filtering..... | 130 |
| 10.1 Configure a Filtering Rule | 130 |
| Chapter 11 | |
| Spanning Tree Protocol..... | 132 |
| 11.1 STP/RSTP Overview | 132 |
| 11.1.1 STP Terminology | 132 |
| 11.1.2 How STP Works | 133 |
| 11.1.3 STP Port States | 133 |
| 11.1.4 Multiple RSTP | 133 |
| 11.1.5 Multiple STP | 134 |
| 11.2 Spanning Tree Protocol Status Screen | 136 |
| 11.3 Spanning Tree Configuration | 137 |
| 11.4 Configure Rapid Spanning Tree Protocol | 138 |
| 11.5 Rapid Spanning Tree Protocol Status | 141 |
| 11.6 Configure Multiple Rapid Spanning Tree Protocol | 142 |
| 11.7 Multiple Rapid Spanning Tree Protocol Status | 145 |
| 11.8 Configure Multiple Spanning Tree Protocol | 147 |
| 11.8.1 Multiple Spanning Tree Protocol Port Configuration | 151 |
| 11.9 Multiple Spanning Tree Protocol Status | 154 |
| Chapter 12 | |
| Bandwidth Control..... | 157 |
| 12.1 Bandwidth Control Overview | 157 |
| 12.1.1 CIR and PIR | 157 |
| 12.2 Bandwidth Control Setup | 157 |
| Chapter 13 | |
| Broadcast Storm Control | 160 |
| 13.1 Broadcast Storm Control Setup | 160 |
| Chapter 14 | |
| Mirroring | 162 |
| 14.1 Port Mirroring | 162 |
| 14.1.1 Local Port Mirroring | 165 |

| | |
|---|------------|
| 14.1.2 Remote Port Mirroring | 167 |
| 14.1.3 Source | 168 |
| 14.1.4 Destination | 170 |
| 14.1.5 Connected Port | 171 |
| Chapter 15 | |
| Link Aggregation | 175 |
| 15.1 Link Aggregation Overview | 175 |
| 15.2 Dynamic Link Aggregation | 175 |
| 15.2.1 Link Aggregation ID | 176 |
| 15.3 Link Aggregation Status | 176 |
| 15.4 Link Aggregation Setting | 177 |
| 15.5 Link Aggregation Control Protocol | 180 |
| 15.6 Static Trunking Example | 183 |
| Chapter 16 | |
| Port Authentication | 185 |
| 16.1 Port Authentication Overview | 185 |
| 16.1.1 IEEE 802.1x Authentication | 185 |
| 16.1.2 MAC Authentication | 186 |
| 16.2 Port Authentication Configuration | 187 |
| 16.2.1 Activate IEEE 802.1x Security | 187 |
| 16.2.2 Guest VLAN | 189 |
| 16.2.3 Activate MAC Authentication | 192 |
| Chapter 17 | |
| Port Security | 195 |
| 17.1 About Port Security | 195 |
| 17.2 Port Security Setup | 195 |
| 17.3 VLAN MAC Address Limit | 197 |
| Chapter 18 | |
| Time Range | 199 |
| 18.1 About Time Range | 199 |
| 18.2 Time Range Setup | 199 |
| Chapter 19 | |
| Classifier | 201 |
| 19.1 About the Classifier and QoS | 201 |
| 19.2 Classifier Status | 201 |
| 19.3 Classifier Configuration | 202 |
| 19.3.1 Viewing and Editing Classifier Configuration | 206 |
| 19.4 Classifier Global Setting Configuration | 207 |

| | |
|--|------------|
| 19.5 Classifier Example | 208 |
| Chapter 20 | |
| Policy Rule | 210 |
| 20.1 Policy Rules Overview | 210 |
| 20.1.1 DiffServ | 210 |
| 20.1.2 DSCP and Per-Hop Behavior | 210 |
| 20.2 Configuring Policy Rules | 210 |
| 20.3 Policy Example | 213 |
| Chapter 21 | |
| Queuing Method | 215 |
| 21.1 Queuing Method Overview | 215 |
| 21.1.1 Strictly Priority | 215 |
| 21.1.2 Weighted Fair Queuing | 215 |
| 21.1.3 Weighted Round Robin Scheduling (WRR) | 216 |
| 21.2 Configuring Queuing | 216 |
| Chapter 22 | |
| VLAN Stacking | 219 |
| 22.1 VLAN Stacking Overview | 219 |
| 22.1.1 VLAN Stacking Example | 219 |
| 22.2 VLAN Stacking Port Roles | 220 |
| 22.3 VLAN Tag Format | 220 |
| 22.3.1 Frame Format | 221 |
| 22.4 Configuring VLAN Stacking | 221 |
| 22.4.1 Port-based Q-in-Q | 223 |
| 22.4.2 Selective Q-in-Q | 225 |
| Chapter 23 | |
| Multicast | 227 |
| 23.1 Multicast Overview | 227 |
| 23.1.1 IP Multicast Addresses | 227 |
| 23.1.2 IGMP Filtering | 227 |
| 23.1.3 IGMP Snooping | 228 |
| 23.1.4 IGMP Snooping and VLANs | 228 |
| 23.1.5 MLD Snooping-Proxy | 228 |
| 23.1.6 MLD Messages | 229 |
| 23.2 Multicast Setup | 229 |
| 23.3 IPv4 Multicast Status | 230 |
| 23.3.1 IGMP Snooping | 230 |
| 23.3.2 IGMP Snooping VLAN | 234 |
| 23.3.3 IGMP Filtering Profile | 235 |

| | |
|---|------------|
| 23.4 IPv6 Multicast Status | 236 |
| 23.4.1 MLD Snooping-proxy | 237 |
| 23.4.2 MLD Snooping-proxy VLAN | 237 |
| 23.4.3 MLD Snooping-proxy VLAN Port Role Setting | 239 |
| 23.4.4 MLD Snooping-proxy Filtering | 241 |
| 23.4.5 MLD Snooping-proxy Filtering Profile | 243 |
| 23.5 MVR Overview | 244 |
| 23.5.1 Types of MVR Ports | 245 |
| 23.5.2 MVR Modes | 245 |
| 23.5.3 How MVR Works | 245 |
| 23.6 General MVR Configuration | 246 |
| 23.6.1 MVR Group Configuration | 248 |
| 23.6.2 MVR Configuration Example | 250 |
| Chapter 24 | |
| AAA | 253 |
| 24.1 Authentication, Authorization and Accounting (AAA) | 253 |
| 24.1.1 Local User Accounts | 253 |
| 24.1.2 RADIUS and TACACS+ | 254 |
| 24.2 AAA Screens | 254 |
| 24.2.1 RADIUS Server Setup | 254 |
| 24.2.2 TACACS+ Server Setup | 256 |
| 24.2.3 AAA Setup | 257 |
| 24.2.4 Vendor Specific Attribute | 260 |
| 24.2.5 Tunnel Protocol Attribute | 261 |
| 24.3 Supported RADIUS Attributes | 261 |
| 24.3.1 Attributes Used for Authentication | 262 |
| 24.3.2 Attributes Used for Accounting | 262 |
| Chapter 25 | |
| IP Source Guard..... | 265 |
| 25.1 IP Source Guard Overview | 265 |
| 25.1.1 What You Can Do | 265 |
| 25.1.2 What You Need to Know | 266 |
| 25.2 IP Source Guard | 267 |
| 25.3 IPv4 Source Guard Setup | 268 |
| 25.4 IPv4 Source Guard Static Binding | 269 |
| 25.5 DHCP Snooping | 271 |
| 25.6 DHCP Snooping Configure | 273 |
| 25.6.1 DHCP Snooping Port Configure | 275 |
| 25.6.2 DHCP Snooping VLAN Configure | 277 |
| 25.6.3 DHCP Snooping VLAN Port Configure | 278 |
| 25.7 ARP Inspection Status | 279 |

| | |
|---|------------|
| 25.7.1 ARP Inspection VLAN Status | 280 |
| 25.7.2 ARP Inspection Log Status | 281 |
| 25.8 ARP Inspection Configure | 282 |
| 25.8.1 ARP Inspection Port Configure | 284 |
| 25.8.2 ARP Inspection VLAN Configure | 286 |
| 25.9 IPv6 Source Guard Overview | 287 |
| 25.10 IPv6 Source Binding Status | 287 |
| 25.11 IPv6 Static Binding Setup | 288 |
| 25.12 IPv6 Source Guard Policy Setup | 290 |
| 25.13 IPv6 Source Guard Port Setup | 291 |
| 25.14 IPv6 Snooping Policy Setup | 292 |
| 25.15 IPv6 Snooping VLAN Setup | 293 |
| 25.16 IPv6 DHCP Trust Setup | 294 |
| 25.17 Technical Reference | 295 |
| 25.17.1 DHCP Snooping Overview | 295 |
| 25.17.2 ARP Inspection Overview | 297 |
| Chapter 26 | |
| Loop Guard | 299 |
| 26.1 Loop Guard Overview | 299 |
| 26.2 Loop Guard Setup | 301 |
| Chapter 27 | |
| VLAN Mapping | 303 |
| 27.1 VLAN Mapping Overview | 303 |
| 27.1.1 VLAN Mapping Example | 303 |
| 27.2 Enabling VLAN Mapping | 303 |
| 27.3 Configuring VLAN Mapping | 305 |
| Chapter 28 | |
| Layer 2 Protocol Tunneling..... | 307 |
| 28.1 Layer 2 Protocol Tunneling Overview | 307 |
| 28.1.1 Layer-2 Protocol Tunneling Mode | 308 |
| 28.2 Configuring Layer 2 Protocol Tunneling | 308 |
| Chapter 29 | |
| sFlow..... | 312 |
| 29.1 sFlow Overview | 312 |
| 29.2 sFlow Port Configuration | 312 |
| 29.2.1 sFlow Collector Configuration | 314 |
| Chapter 30 | |
| PPPoE..... | 316 |

| | |
|---|------------|
| 30.1 PPPoE Intermediate Agent Overview | 316 |
| 30.1.1 PPPoE Intermediate Agent Tag Format | 316 |
| 30.1.2 Sub-Option Format | 316 |
| 30.1.3 Port State | 317 |
| 30.2 The PPPoE Screen | 318 |
| 30.3 PPPoE Intermediate Agent | 318 |
| 30.3.1 PPPoE IA Per-Port | 320 |
| 30.3.2 PPPoE IA Per-Port Per-VLAN | 322 |
| 30.3.3 PPPoE IA for VLAN | 323 |
| Chapter 31 | |
| Error Disable | 325 |
| 31.1 Error Disable Overview | 325 |
| 31.1.1 CPU Protection Overview | 325 |
| 31.1.2 Error-Disable Recovery Overview | 325 |
| 31.1.3 What You Can Do | 325 |
| 31.2 The Error Disable Screen | 326 |
| 31.3 Error-Disable Status | 326 |
| 31.4 CPU Protection Configuration | 328 |
| 31.5 Error-Disable Detect Configuration | 330 |
| 31.6 Error-Disable Recovery Configuration | 331 |
| Chapter 32 | |
| MAC Pinning | 333 |
| 32.1 MAC Pinning Overview | 333 |
| 32.2 MAC Pinning Configuration | 333 |
| Chapter 33 | |
| Private VLAN | 336 |
| 33.1 Private VLAN Overview | 336 |
| 33.1.1 Configuration | 337 |
| Chapter 34 | |
| Green Ethernet..... | 340 |
| 34.1 Green Ethernet Overview | 340 |
| 34.2 Configuring Green Ethernet | 340 |
| Chapter 35 | |
| Link Layer Discovery Protocol (LLDP) | 343 |
| 35.1 LLDP Overview | 343 |
| 35.2 LLDP-MED Overview | 344 |
| 35.3 LLDP Screens | 345 |
| 35.4 LLDP Local Status | 346 |

| | |
|--|------------|
| 35.4.1 LLDP Local Port Status Detail | 348 |
| 35.5 LLDP Remote Status | 352 |
| 35.5.1 LLDP Remote Port Status Detail | 352 |
| 35.6 LLDP Configuration | 358 |
| 35.6.1 LLDP Configuration Basic TLV Setting | 361 |
| 35.6.2 LLDP Configuration Basic Org-specific TLV Setting | 362 |
| 35.7 LLDP-MED Configuration | 364 |
| 35.8 LLDP-MED Network Policy | 366 |
| 35.9 LLDP-MED Location | 368 |
| Chapter 36 | |
| Anti-Arpscan | 372 |
| 36.1 Anti-Arpscan Overview | 372 |
| 36.1.1 What You Can Do | 372 |
| 36.1.2 What You Need to Know | 372 |
| 36.2 Anti-Arpscan Status | 373 |
| 36.3 Anti-Arpscan Host Status | 374 |
| 36.4 Anti-Arpscan Trust Host | 374 |
| 36.5 Anti-Arpscan Configure | 375 |
| Chapter 37 | |
| BPDU Guard | 378 |
| 37.1 BPDU Guard Overview | 378 |
| 37.1.1 What You Can Do | 378 |
| 37.2 BPDU Guard Status | 378 |
| 37.3 BPDU Guard Configuration | 379 |
| Chapter 38 | |
| OAM | 381 |
| 38.1 OAM Overview | 381 |
| 38.1.1 What You Can Do | 381 |
| 38.2 OAM Status | 381 |
| 38.2.1 OAM Details | 383 |
| 38.3 OAM Configuration | 387 |
| 38.4 OAM Remote Loopback | 389 |
| Chapter 39 | |
| ZULD | 390 |
| 39.1 ZULD Overview | 390 |
| 39.1.1 What You Can Do | 390 |
| 39.1.2 What You Need to Know | 390 |
| 39.2 ZULD Status | 391 |
| 39.3 ZULD Configuration | 393 |

| | |
|---|------------|
| Chapter 40 | |
| Static Route | 396 |
| 40.1 Static Routing Overview | 396 |
| 40.2 Static Routing | 396 |
| 40.3 Configuring IPv4 Static Routing | 397 |
| 40.4 Configuring IPv6 Static Routing | 398 |
| Chapter 41 | |
| Policy Routing | 400 |
| 41.1 Policy Route Overview | 400 |
| 41.1.1 Benefits | 400 |
| 41.2 Configuring Policy Routing Profile | 400 |
| 41.2.1 Policy Routing Rule Configuration | 401 |
| Chapter 42 | |
| Differentiated Services | 404 |
| 42.1 DiffServ Overview | 404 |
| 42.1.1 DSCP and Per-Hop Behavior | 404 |
| 42.1.2 DiffServ Network Example | 404 |
| 42.2 Two Rate Three Color Marker Traffic Policing | 405 |
| 42.2.1 TRTCM - Color-blind Mode | 406 |
| 42.2.2 TRTCM - Color-aware Mode | 406 |
| 42.3 Activating DiffServ | 406 |
| 42.3.1 Configuring 2-Rate 3 Color Marker Settings | 408 |
| 42.3.2 DSCP Profile | 410 |
| 42.4 DSCP-to-IEEE 802.1p Priority Settings | 411 |
| 42.4.1 Configuring DSCP Settings | 412 |
| Chapter 43 | |
| DHCP | 413 |
| 43.1 DHCP Overview | 413 |
| 43.1.1 DHCP Modes | 413 |
| 43.1.2 DHCP Configuration Options | 413 |
| 43.2 DHCP Configuration | 413 |
| 43.3 DHCPv4 Status | 414 |
| 43.3.1 DHCPv4 Server Status Detail | 414 |
| 43.4 DHCPv4 Relay | 415 |
| 43.4.1 DHCPv4 Relay Agent Information | 416 |
| 43.4.2 DHCPv4 Option 82 Profile | 416 |
| 43.4.3 Configuring DHCPv4 Global Relay | 418 |
| 43.4.4 DHCPv4 Global Relay Port Configure | 418 |
| 43.4.5 Global DHCP Relay Configuration Example | 420 |
| 43.5 Configuring DHCP VLAN Settings | 420 |

| | |
|--|------------|
| 43.5.1 DHCPv4 VLAN Port Configure | 422 |
| 43.5.2 Example: DHCP Relay for Two VLANs | 423 |
| 43.6 DHCPv6 Status | 424 |
| 43.7 DHCPv6 Information | 425 |
| 43.8 DHCPv6 Prefix Delegation | 426 |
| 43.9 DHCPv6 Relay | 428 |
| Chapter 44 | |
| VRRP | 430 |
| 44.1 VRRP Overview | 430 |
| 44.2 VRRP Status | 431 |
| 44.3 VRRP Configuration | 431 |
| 44.3.1 IP Interface Setup | 431 |
| 44.3.2 VRRP Parameters | 433 |
| 44.3.3 Configuring VRRP Parameters | 433 |
| 44.3.4 Viewing VRRP Summary | 434 |
| 44.4 VRRP Configuration Examples | 435 |
| 44.4.1 One Subnet Network Example | 435 |
| 44.4.2 Two Subnets Example | 436 |
| Chapter 45 | |
| Load Sharing | 439 |
| 45.1 Load Sharing Overview | 439 |
| 45.2 Configuring Load Sharing | 439 |
| Chapter 46 | |
| ARP Setup | 441 |
| 46.1 ARP Overview | 441 |
| 46.1.1 How ARP Works | 441 |
| 46.1.2 ARP Learning Mode | 441 |
| 46.2 ARP Setup | 443 |
| 46.2.1 ARP Learning | 443 |
| 46.2.2 Static ARP | 445 |
| Chapter 47 | |
| Maintenance | 447 |
| 47.1 The Maintenance Screen | 447 |
| 47.2 Firmware Upgrade | 448 |
| 47.3 Restore a Configuration File | 450 |
| 47.4 Backup a Configuration File | 451 |
| 47.5 Erase Running-Configuration | 451 |
| 47.6 Save Configuration | 452 |
| 47.7 Reboot System | 452 |

| | |
|---|------------|
| 47.7.1 Load Stacking Default | 452 |
| 47.7.2 Load Factory Default | 453 |
| 47.8 Tech-Support | 453 |
| 47.9 FTP Command Line | 455 |
| 47.9.1 Filename Conventions | 455 |
| 47.9.2 FTP Command Line Procedure | 456 |
| 47.9.3 GUI-based FTP Clients | 456 |
| 47.9.4 FTP Restrictions | 457 |
| Chapter 48 | |
| Access Control | 458 |
| 48.1 Access Control Overview | 458 |
| 48.1.1 What You Can Do | 458 |
| 48.2 The Access Control Main Screen | 458 |
| 48.3 About SNMP | 459 |
| 48.3.1 SNMP v3 and Security | 460 |
| 48.3.2 Supported MIBs | 460 |
| 48.3.3 SNMP Traps | 461 |
| 48.3.4 Configuring SNMP | 465 |
| 48.3.5 Configuring SNMP Trap Group | 466 |
| 48.3.6 Enabling/Disabling Sending of SNMP Traps on a Port | 467 |
| 48.3.7 Configuring SNMP User | 469 |
| 48.4 Setting Up Login Accounts | 471 |
| 48.5 SSH Overview | 472 |
| 48.6 How SSH works | 473 |
| 48.7 SSH Implementation on the Switch | 474 |
| 48.7.1 Requirements for Using SSH | 474 |
| 48.8 Introduction to HTTPS | 474 |
| 48.9 HTTPS Example | 475 |
| 48.9.1 Internet Explorer Warning Messages | 475 |
| 48.9.2 Mozilla Firefox Warning Messages | 477 |
| 48.9.3 The Main Screen | 478 |
| 48.10 Service Access Control | 479 |
| 48.11 Remote Management | 480 |
| Chapter 49 | |
| Diagnostic | 482 |
| 49.1 Diagnostic | 482 |
| Chapter 50 | |
| System Log | 485 |
| 50.1 Overview | 485 |
| 50.2 System Log | 485 |

| | |
|--|------------|
| Chapter 51 | |
| Syslog Setup | 486 |
| 51.1 Syslog Overview | 486 |
| 51.2 Syslog Setup | 486 |
| Chapter 52 | |
| Cluster Management | 489 |
| 52.1 Clustering Management Status Overview | 489 |
| 52.2 Cluster Management Status | 490 |
| 52.2.1 Cluster Member Switch Management | 491 |
| 52.3 Clustering Management Configuration | 493 |
| Chapter 53 | |
| MAC Table | 495 |
| 53.1 MAC Table Overview | 495 |
| 53.2 Viewing the MAC Table | 496 |
| Chapter 54 | |
| IP Table | 498 |
| 54.1 IP Table Overview | 498 |
| 54.2 Viewing the IP Table | 499 |
| Chapter 55 | |
| ARP Table | 500 |
| 55.1 ARP Table Overview | 500 |
| 55.1.1 How ARP Works | 500 |
| 55.2 The ARP Table Screen | 500 |
| Chapter 56 | |
| Routing Table | 502 |
| 56.1 Overview | 502 |
| 56.2 Viewing the Routing Table Status | 502 |
| Chapter 57 | |
| Path MTU Table | 503 |
| 57.1 Path MTU Overview | 503 |
| 57.2 Viewing the Path MTU Table | 503 |
| Chapter 58 | |
| Configure Clone | 504 |
| 58.1 Configure Clone | 504 |

| | |
|--|------------|
| Chapter 59 | |
| IPv6 Neighbor Table..... | 508 |
| 59.1 IPv6 Neighbor Table Overview | 508 |
| 59.2 Viewing the IPv6 Neighbor Table | 508 |
| Chapter 60 | |
| Troubleshooting..... | 510 |
| 60.1 Power, Hardware Connections, and LEDs | 510 |
| 60.2 Switch Access and Login | 511 |
| 60.3 Switch Configuration | 513 |
| Appendix A Common Services | 514 |
| Appendix B IPv6 | 517 |
| Appendix C Customer Support | 526 |
| Appendix D Legal Information | 533 |
| Index | 539 |

PART I

User's Guide

Getting to Know Your Switch

This chapter introduces the main features and applications of the Switch.

1.1 Introduction

Your Switch is a layer 2+ , Gigabit Ethernet (GbE) switch with two power slots for hot-swappable RPS300 or RPS600-HP power modules. The Switch provides four SFP or SFP+ slots for uplink. By integrating router functions, the Switch performs wire-speed layer-3 routing in addition to layer-2 switching.

This User's Guide covers the following models: GS3700-24, GS3700-24HP, GS3700-48, GS3700-48HP, XGS3700-24, XGS3700-24HP, XGS3700-48, and XGS3700-48HP.

Table 1 Switch Comparison Table

| PORT/SWITCH DETAILS | GS3700-24 | GS3700-24HP | GS3700-48 | GS3700-48HP | XGS3700-24 | XGS3700-24HP | XGS3700-48 | XGS3700-48HP |
|---|-----------|-------------|-----------|-------------|------------|--------------|------------|--------------|
| 24 10/100/1000Base-T Ethernet ports | ✔ | ✔ | | | ✔ | ✔ | | |
| 48 10/100/1000Base-T Ethernet ports | | | ✔ | ✔ | | | ✔ | ✔ |
| 4 1GbE SFP slots | ✔ | ✔ | ✔ | ✔ | | | | |
| 4 10GbE SFP+ slots | | | | | ✔ | ✔ | ✔ | ✔ |
| Supports IEEE 802.3af and IEEE 802.3at PoE standards | | ✔ | | ✔ | | ✔ | | ✔ |
| Supports IEEE 802.3az EEE Energy Efficient Ethernet (EEE) | ✔ | ✔ | ✔ | ✔ | ✔ | ✔ | ✔ | ✔ |

With its built-in web configurator, including the ZyXEL One Network (ZON) Neighbor Management feature ([Section 5.4 on page 49](#)), viewing, managing and configuring the Switch and its neighboring devices is easy. In addition, the Switch can also be managed via Telnet, any terminal emulator program on the console port, or third-party SNMP management.


In addition, ZyXEL offers a proprietary software program called ZyXEL One Network (ZON) Utility, it is a utility tool that assists you to set up and maintain network devices in a more simple and efficient way. You can download the ZON Utility at www.zyxel.com and install it on a PC. For more information on ZON Utility see [Section 5.3 on page 49](#).

See the datasheet for a full list of software features available on the Switch.

1.1.1 Bridging Example


In this example the Switch connects different company departments (**RD** and **Sales**) to the corporate backbone. It can alleviate bandwidth contention and eliminate server and network bottlenecks. All users that need high bandwidth can connect to high-speed department servers via the Switch. You can provide a super-fast uplink connection by using the optional 10 Gigabit uplink module on the Switch.

Figure 1 Bridging Application

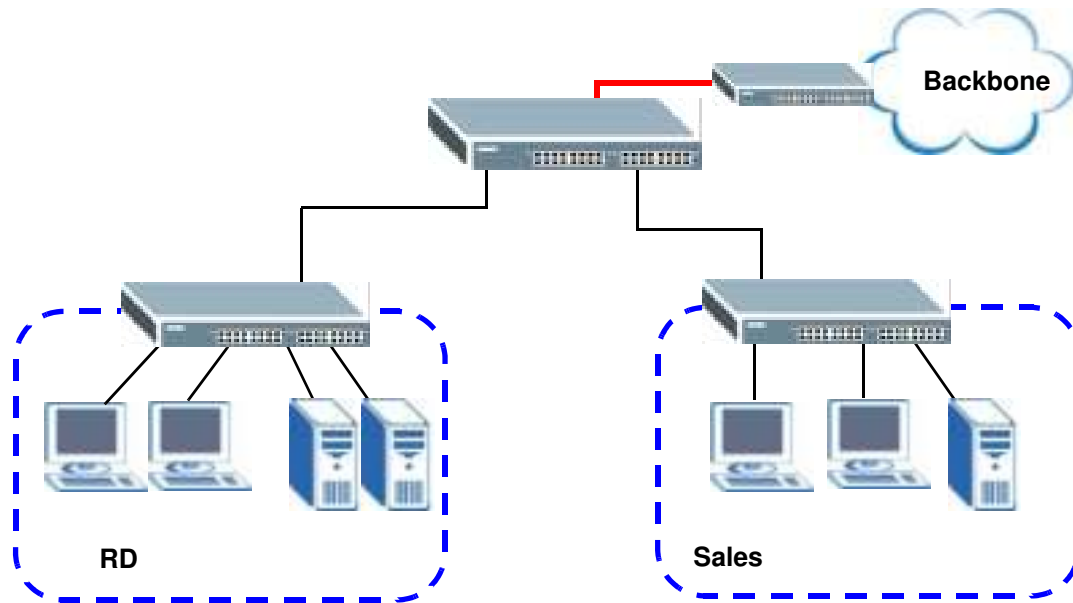

1.1.2 High Performance Switching Example


The Switch is ideal for connecting two geographically dispersed networks that need high bandwidth. In the following example, a company uses the optional 10 Gigabit uplink modules to connect the headquarters to a branch office network. Within the headquarters network, a company can use trunking to group several physical ports into one logical higher-capacity link. Trunking can be used if for example, it is cheaper to use multiple lower-speed links than to under-utilize a high-speed, but more costly, single-port link.

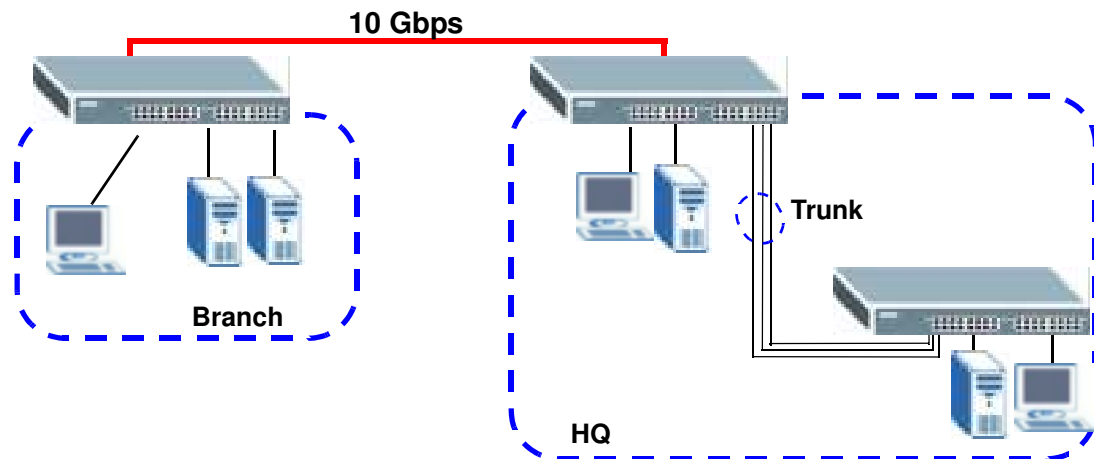Figure 2 High Performance Switching

1.1.3 Gigabit Ethernet to the Desktop

The Switch is an ideal solution for small networks which demand high bandwidth for a group of heavy traffic users. You can connect computers and servers directly to the Switch's port or connect other switches to the Switch. Use the optional 10 Gigabit uplink module to provide high speed access to a data server and the Internet. The uplink module supports a fiber-optic connection which alleviates the distance limitations of copper cabling.

In this example, all computers can share high-speed applications on the server and access the Internet. To expand the network, simply add more networking devices such as switches, routers, computers, print servers and so on.

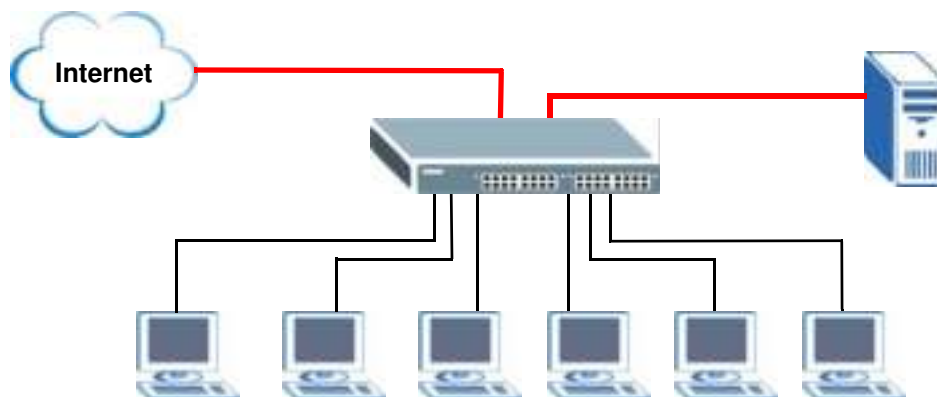Figure 3 Gigabit to the Desktop

1.1.4 IEEE 802.1Q VLAN Application Example

A VLAN (Virtual Local Area Network) allows a physical network to be partitioned into multiple logical networks. Stations on a logical network belong to one or more groups. With VLAN, a station cannot directly talk to or hear from stations that are not in the same group(s) unless such traffic first goes through a router.


For more information on VLANs, refer to [Chapter 7 on page 101](#).

1.1.4.1 Tag-based VLAN Example

Ports in the same VLAN group share the same frame broadcast domain, thus increasing network performance by reducing broadcast traffic. VLAN groups can be modified at any time by adding, moving or changing ports without any re-cabling.

Shared resources such as a server can be used by all ports in the same VLAN as the server. In the following figure only ports that need access to the server need to be part of VLAN 1. Ports can belong to other VLAN groups too.

Figure 4 Shared Server Using VLAN Example

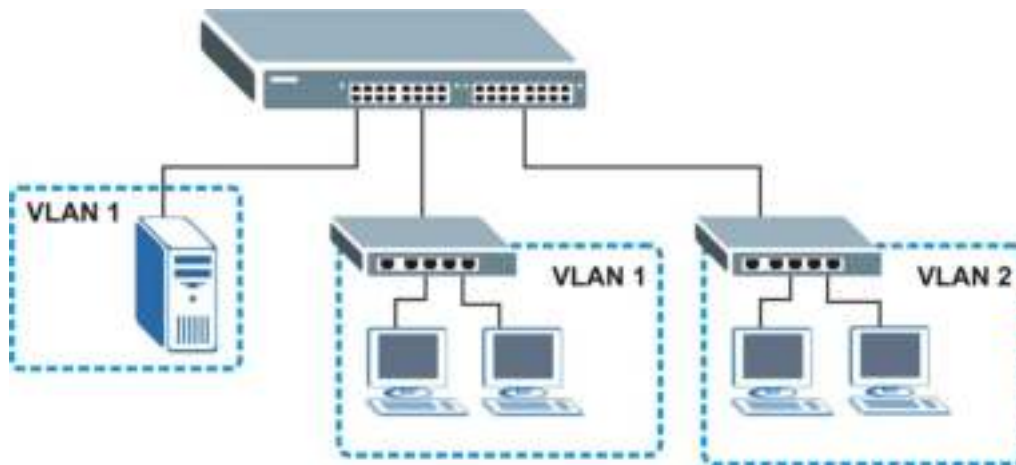

1.1.5 IPv6 Support

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses. At the time of writing, the Switch supports the following features.

- Static address assignment and stateless auto-configuration
- Neighbor Discovery Protocol (a protocol used to discover other IPv6 devices in a network)
- Remote Management using ping SNMP, telnet, HTTP and FTP services
- ICMPv6 to report errors encountered in packet processing and perform diagnostic functions, such as "ping"
- IPv4/IPv6 dual stack; the Switch can run IPv4 and IPv6 at the same time
- DHCPv6 client and relay
- Multicast Listener Discovery (MLD) snooping and proxy

For more information on IPv6, refer to [Appendix B on page 517](#) and the CLI Reference Guide.

1.2 Ways to Manage the Switch

Use any of the following methods to manage the Switch.

- Web Configurator. This is recommended for everyday management of the Switch using a (supported) web browser. See [Chapter 4 on page 37](#).
- Command Line Interface. Line commands offer an alternative to the Web Configurator and may be necessary to configure advanced features. See the CLI Reference Guide.
- FTP. Use File Transfer Protocol for firmware upgrades and configuration backup/restore. See [Section 47.9 on page 455](#).
- SNMP. The device can be monitored and/or managed by an SNMP manager. See [Section 48.3 on page 459](#).

1.3 Good Habits for Managing the Switch

Do the following things regularly to make the Switch more secure and to manage the Switch more effectively.

- Change the password. Use a password that's not easy to guess and that consists of different types of characters, such as numbers and letters.
- Write down the password and put it in a safe place.
- Back up the configuration (and make sure you know how to restore it). Restoring an earlier working configuration may be useful if the device becomes unstable or even crashes. If you forget your password, you will have to reset the Switch to its factory default settings. If you backed up an earlier configuration file, you would not have to totally re-configure the Switch. You could simply restore your last configuration.


Hardware Installation and Connection

This chapter shows you how to install and connect the Switch.

2.1 Freestanding Installation

- 1 Make sure the Switch is clean and dry.
- 2 Set the Switch on a smooth, level surface strong enough to support the weight of the Switch and the connected cables. Make sure there is a power outlet nearby.
- 3 Make sure there is enough clearance around the Switch to allow air circulation and the attachment of cables and the power cord.
- 4 Remove the adhesive backing from the rubber feet.
- 5 Attach the rubber feet to each corner on the bottom of the Switch. These rubber feet help protect the Switch from shock or vibration and ensure space between devices when stacking.

Figure 5 Attaching Rubber Feet

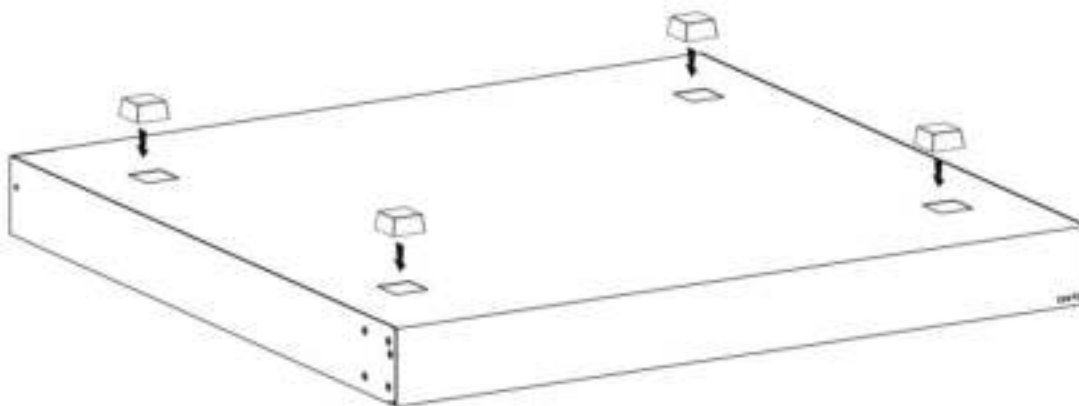

Note: Do NOT block the ventilation holes. Leave space between devices when stacking.

Note: For proper ventilation, allow at least 4 inches (10 cm) of clearance at the front and 3.4 inches (8 cm) at the back of the Switch. This is especially important for enclosed rack installations.

2.2 Mounting the Switch on a Rack

This section lists the rack mounting requirements and precautions and describes the installation steps of how to mount the Switch in a 19-inch rack with the included rack mounting kit.

Note: ZyXEL provides extensible rear mounting brackets (RM400) to install the Switch in a 21-inch, 23-inch or 24-inch rack. See the **RM400 Hardware Installation Guide**.

2.3 Installation Requirements

- Two front mounting brackets (short), two sliding rails and two rear mounting brackets.
- Eight M4 metric screws with large heads and a #2 Philips screwdriver for attaching the brackets to the Switch.
- Four M4 metric screws with small heads and a #2 Philips screwdriver for attaching the sliding rails to the Switch.
- Eight M6 metric rack screws and a screwdriver for attaching the Switch (with attached brackets) to the rack. Rack depth can be from 90 to 120 cm.

Note: Failure to use the proper screws may damage the unit.

2.3.1 Precautions


- Make sure the rack will safely support the combined weight of all the equipment it contains. The maximum weight a bracket can hold is 27 Kg.
- Make sure the position of the Switch does not make the rack unstable or top-heavy. Take all necessary precautions to anchor the rack securely before installing the unit.

2.4 Attaching the Brackets to the Switch

Use the M4 screws (smaller than the rack screws) to attach the brackets to the Switch.

- 1 Position the smaller front mounting bracket on one side of the Switch, lining up the four screw holes on the bracket with the screw holes on the side of the Switch.
- 2 Use a #2 Philips screwdriver to install the M4 screws with large heads through the mounting bracket holes into the Switch.
- 3 Repeat steps 1 and 2 to install the second front mounting bracket on the other side of the Switch.
- 4 Position a sliding rail on one side at the rear of the Switch, lining up the two screw holes on the sliding rail with the screw holes on the side of the Switch.
- 5 Use a screwdriver to install the M4 screws with small heads through the sliding rail holes into the Switch.
- 6 Repeat steps 1 and 2 to install the second sliding rail on the other side of the Switch.

- 7 Slide the rear bracket along the rail and set the bracket in place depending on the depth of the rack. The rear brackets can be used with a 19-inch rack.

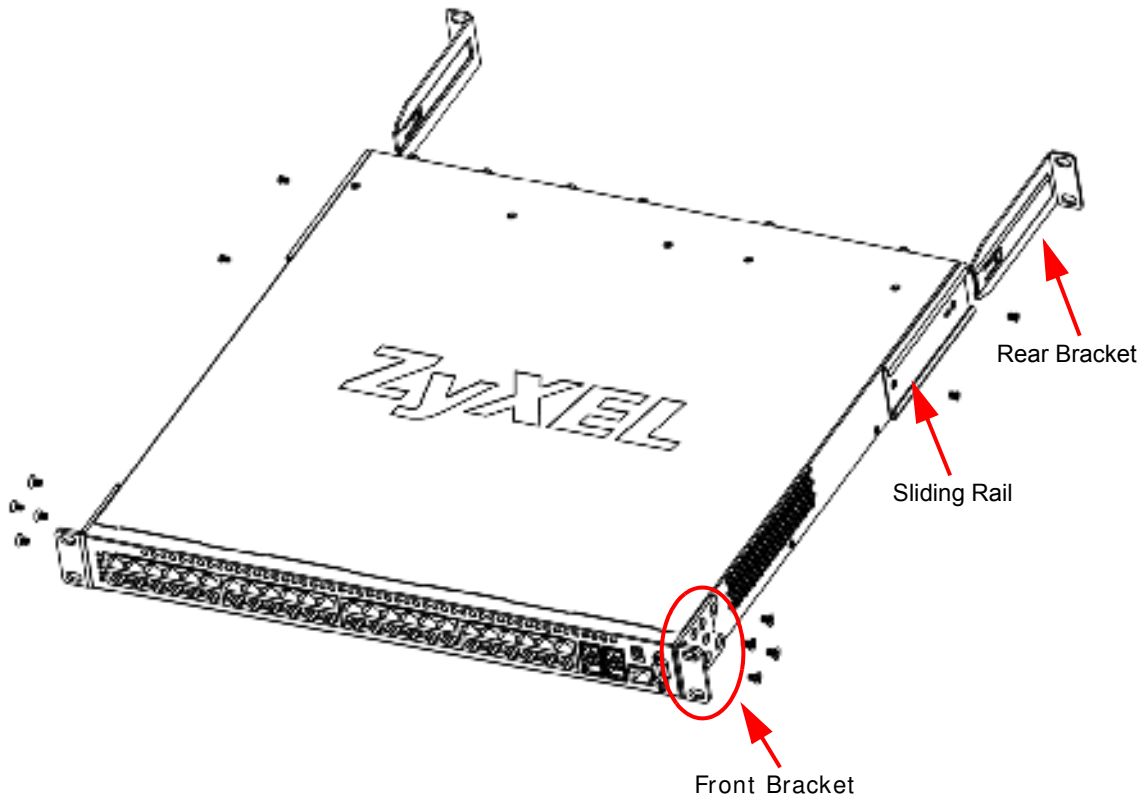


You may now mount the Switch on a rack. Proceed to the next section.

2.5 Mounting the Switch on a Rack

Use the M6 rack screws (larger than the M4 screws) to mount the Switch with brackets on the rack.

- 1 Position a front mounting bracket (that is already attached to the Switch) on one side of the rack, lining up the two screw holes on the bracket with the screw holes at the front of the rack.
- 2 Use a screwdriver to install the rack screws through the mounting bracket holes into the rack.
- 3 Repeat steps 1 and 2 to attach the other front mounting bracket on the other side of the rack.
- 4 Position a rear mounting bracket (that is already attached to the Switch) on one side of the rack, lining up the two screw holes on the bracket with the screw holes at the rear of the rack.
- 5 Use a screwdriver to install the rack screws through the mounting bracket holes into the rack.
- 6 Repeat steps 4 and 5 to attach the other rear mounting bracket on the other side of the rack.

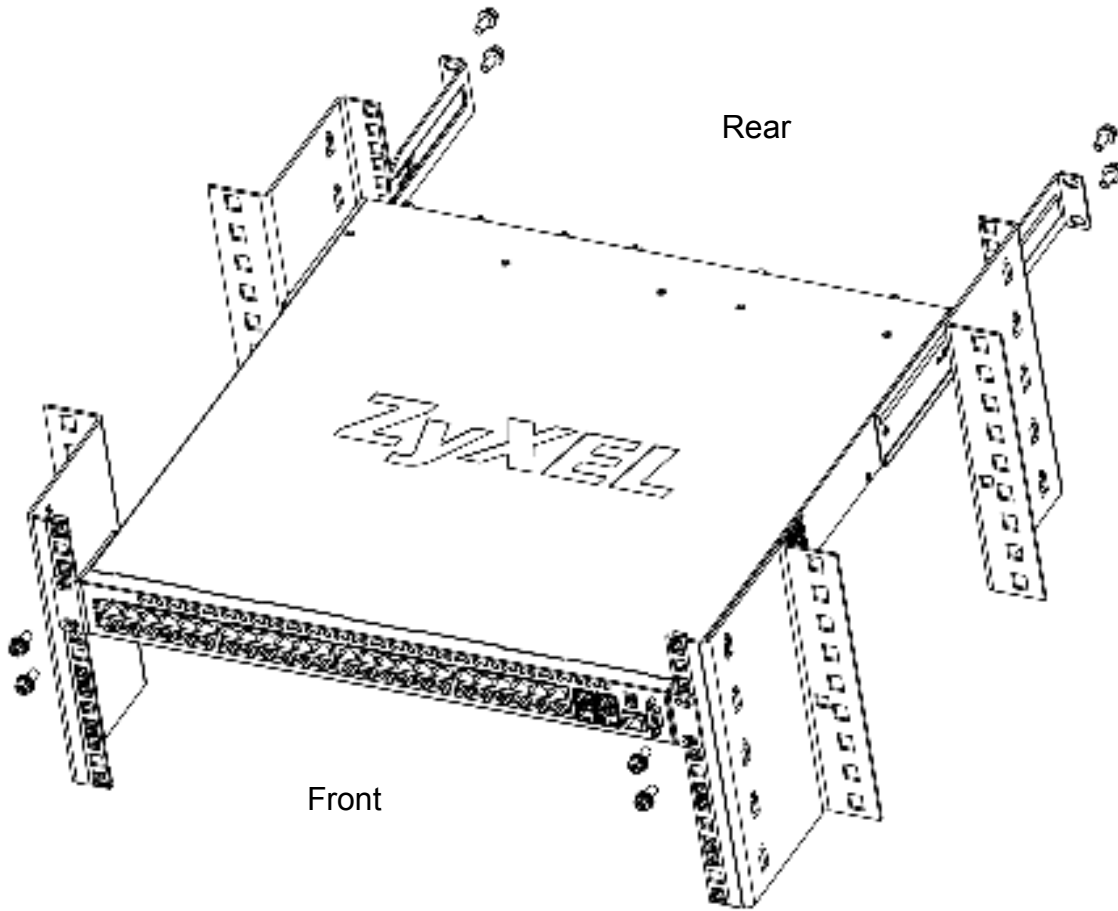

2.6 Power Module Installation

There is one power module installed in the first power slot of the Switch by default. See the **Power Module Hardware Installation Guide** for how to install a second power module or remove the power module.

Hardware Overview

This chapter describes the front panel and rear panel of the Switch and shows you how to make the hardware connections.

3.1 Front Panel Connections

The figure below shows the front panel of the Switch.

Figure 6 Front Panel: GS3700 Series

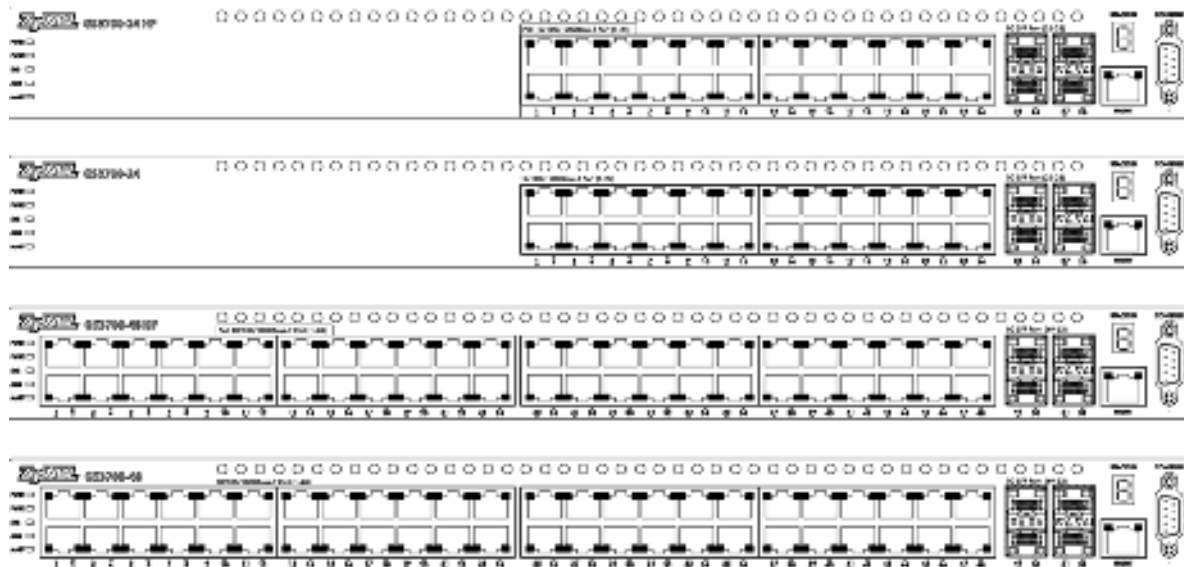
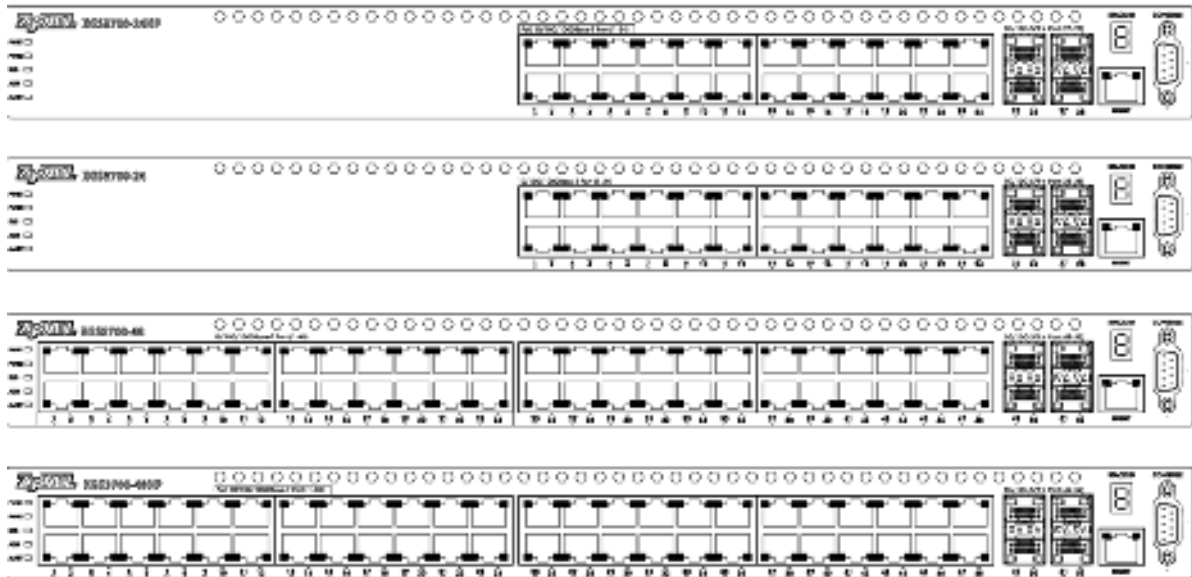


Figure 7 Front Panel: XGS3700 Series

The following table describes the ports.

Table 2 Panel Connections

| CONNECTOR | DESCRIPTION |
|---|--|
| 24 or 48 10/100/1000Base-T RJ-45 Ethernet Ports | Connect these ports to a computer, a hub, an Ethernet switch or router. |
| 4 SFP or SFP+ Slots | Use Small Form-Factor Pluggable (SFP) or SFP+ transceivers in these ports for fiber-optic or copper connections to a computer, a hub, an Ethernet switch or router. You can also insert an SFP+ Direct Attach Copper (DAC) in the SFP+ slot. |
| RJ-45 out-of-band Management Port | Connect to a computer using an RJ-45 Ethernet cable for local configuration of the Switch. |
| Console Port | Only connect this port to your computer (using an RS-232 cable) if you want to configure the Switch using the command line interface (CLI) via the console port. |

3.1.1 Ethernet Ports

The Switch has 1000Base-T auto-negotiating, auto-crossover Ethernet ports. In 10/100/1000 Mbps Gigabit Ethernet, the speed can be 10Mbps, 100 Mbps or 1000 Mbps. The duplex mode can be both half or full duplex at 100 Mbps and full duplex only at 1000 Mbps.

An auto-negotiating port can detect and adjust to the optimum Ethernet speed (10/100/1000 Mbps) and duplex mode (full duplex or half duplex) of the connected device.

An auto-crossover (auto-MDI/MDI-X) port automatically works with a straight-through or crossover Ethernet cable.

3.1.1.1 Default Ethernet Settings

The factory default negotiation settings for the Ethernet ports on the Switch are:

- Speed: Auto
- Duplex: Auto
- Flow control: Off
- Dual Personality Interface: Fiber-optic module first

3.1.2 SFP/SFP+ Slots

These are four slots for Small Form-Factor Pluggable (SFP) or SFP+ modules, such as an SFP/SFP+ transceiver. The SFP+ (SFP Plus) is an enhanced version of the SFP and supports data rates of 10 Gbps. A transceiver is a single unit that houses a transmitter and a receiver. Use a transceiver to connect a fiber-optic cable to the Switch. The Switch does not come with transceivers. You must use transceivers that comply with the Small Form-Factor Pluggable (SFP) Transceiver MultiSource Agreement (MSA). See the SFF committee's INF-8074i specification Rev 1.0 for details.

You can change transceivers while the Switch is operating. You can use different transceivers to connect to Ethernet switches with different types of fiber-optic connectors.

- Type: SFP or SFP+ connection interface
- Connection speed: 1 or 10 Gigabit per second (Gbps)


To avoid possible eye injury, do not look into an operating fiber-optic module's connectors.

3.1.2.1 Transceiver Installation


Use the following steps to install a transceiver.

- 1 Insert the transceiver into the slot with the exposed section of PCB board facing down.

Figure 8 Transceiver Installation Example

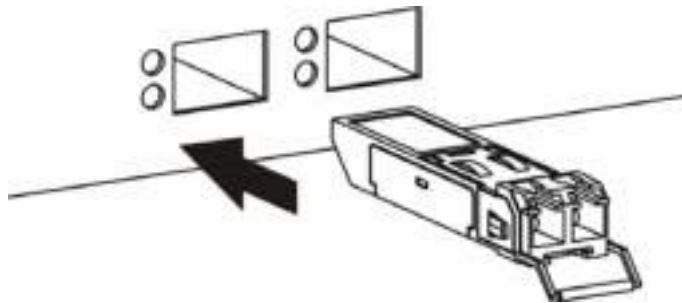


- 2 Press the transceiver firmly until it clicks into place.
- 3 The Switch automatically detects the installed transceiver. Check the LEDs to verify that it is functioning properly.

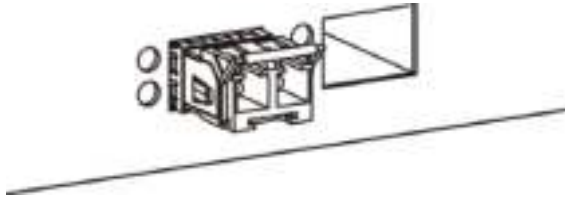Figure 9 Installed Transceiver


3.1.2.2 Transceiver Removal

Use the following steps to remove a transceiver.

- 1 Open the transceiver's latch (latch styles vary).

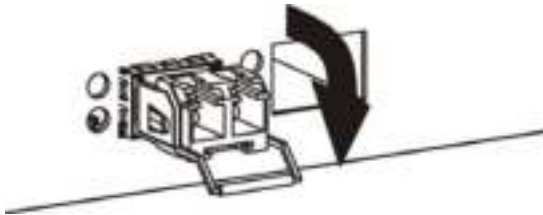Figure 10 Opening the Transceiver's Latch Example

- 2 Pull the transceiver out of the slot.

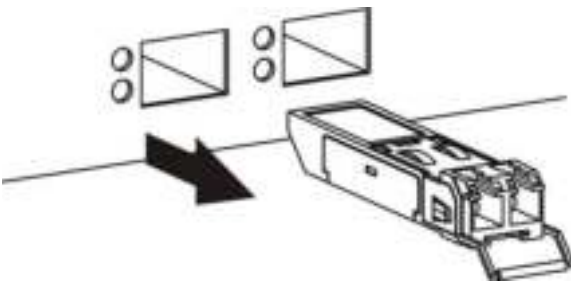Figure 11 Transceiver Removal Example

3.1.3 Management Port

The 100Base-T Ethernet **MGMT** (management) port is used for local management. Connect directly to this port using an Ethernet cable. You can configure the Switch via Telnet or the web configurator.

The default IP address of the management port is 192.168.0.1 with a subnet mask of 255.255.255.0.

3.1.4 Console Port

For local management, you can use a computer with terminal emulation software configured to the following parameters:

- VT100 terminal emulation
- 9600 bps

- No parity, 8 data bits, 1 stop bit
- No flow control


Connect the male 9-pin end of the RS-232 console cable to the console port of the Switch. Connect the female end to a serial port (COM1, COM2 or other COM port) of your computer.

3.2 Rear Panel

The following figures show the rear panels of the Switch. The rear panels contain:

- A slot for a fan module (A)
- Two slots for power modules with power receptacles (B and C)

Figure 12 Rear Panel

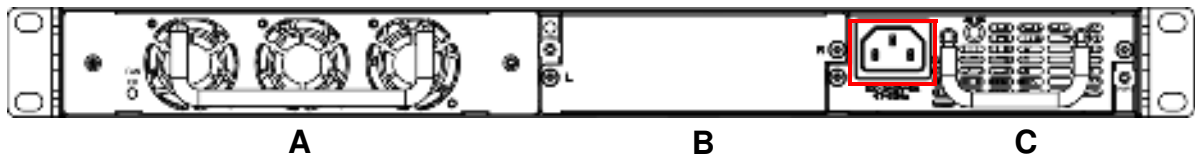

3.2.1 Removing and Installing the Fan Module

See the **Fan Module Hardware Installation Guide** to see how to install the fan module in the Switch.

3.2.2 Power Connection

Make sure you are using the correct power source and that no objects obstruct the airflow of the fans.

The Switch uses two power supply modules, one of which is redundant, so if one power module fails the system can operate on the remaining module.

Connecting the Power

Use the following procedures to connect the Switch to a power source after you have installed it in a rack.

Note: Use the included power cord for the AC power connection.

- 1 Connect the female end of the power cord to the AC power socket.
- 2 Connect the other end of the cord to a power outlet.

Disconnecting the Power

The power input connectors can be disconnected from the power source individually.

- 1 Disconnect the power cord from the power outlet.
- 2 Disconnect the power cord from the AC power socket.

3.3 LEDs

The following table describes the LEDs.

Table 3 LEDs

| LED | COLOR | STATUS | DESCRIPTION |
|-----------------------------|-------|----------|--|
| PWR1 (Power 1) | Green | On | The system is receiving power from the power module in the first power slot. |
| | | Off | The system is not receiving power from the power module in the first power slot. |
| | Amber | On | The power module in the first power slot fails to supply power or its fan is not functioning at a proper speed. |
| PWR2 (Power 2) | Green | On | The system is receiving power from the power module in the second power slot. |
| | | Off | The system is not receiving power from the power module in the second power slot. |
| | Amber | On | The power module in the second power slot fails to supply power or its fan is not functioning at a proper speed. |
| SYS (System) | Green | Blinking | The system is rebooting and performing self-diagnostic tests. |
| | | On | The system is on and functioning properly. |
| | | Off | The power is off or the system is not ready or malfunctioning. |
| ALM (Alarm) | Red | On | There is a hardware failure, such as high device temperature, wrong voltage and abnormal fan speed. |
| | | Off | The system is functioning normally. |
| MAST (Master) | Green | On | The Switch is acting as a standalone switch or the master in stacking. |
| | | Off | The Switch is acting as a non-master member in a stack or it is in standalone mode. |
| 10/100/1000Base-T Ports | | | |
| 1-24 or 1-48 | Green | Blinking | The port is receiving or transmitting data at 10 or 1000 Mbps. |
| | | On | The port has a successful 10 or 1000 Mbps connection. |
| LNK/ACT (Left) | Amber | Blinking | The port is receiving or transmitting data 100 Mbps. |
| | | On | The port has a successful 100 Mbps connection. |
| | | Off | This link is disconnected or the port is disabled. |
| PoE 10/100/1000Base-T Ports | | | |
| 1-24 or 1-48 | Green | Blinking | The port is receiving or transmitting data at 10 or 1000 Mbps. |
| | | On | The port has a successful 10 or 1000 Mbps connection. |
| LNK/ACT (Left) | Amber | Blinking | The port is receiving or transmitting data 100 Mbps. |
| | | On | The port has a successful 100 Mbps connection. |
| | | Off | This link is disconnected or the port is disabled. |

Table 3 LEDs (continued)

| LED | COLOR | STATUS | DESCRIPTION |
|-----------------------------|------------------|----------|--|
| 1-24 or 1-48 POE (Right) | Green | On | Power is supplied to the PoE port. |
| | | Off | Power is not supplied to the PoE port. |
| 1G SFP Slots | | | |
| 25-28 or 49-52 LNK/ACT | Green (Right) | Blinking | The port is receiving or transmitting data at 1 Gbps. |
| | | On | The port has a successful 1 Gbps connection. |
| | | Off | This link is disconnected. |
| 1G/10G SFP+ Slots | | | |
| 25-28 or 49-52 LNK/ACT | Green (Right) | Blinking | The port is receiving or transmitting data at 1 Gbps. |
| | | On | The port has a successful 1 Gbps connection. |
| | Blue (Left) | Blinking | The port is receiving or transmitting data 10 Gbps. |
| | | On | The port has a successful 10 Gbps connection. |
| | | Off | This link is disconnected. |
| STACK ID | | | The LED is showing the Stack ID number of the Switch. ID 0 means it is a standalone Switch. |
| MGMT (Management) | Green | Blinking | The system is transmitting or receiving to/from an Ethernet device at 10 Mbps through the MGMT port. |
| | | On | The MGMT port is connected at 10 Mbps. |
| | | Off | The MGMT port is not connected at 10 Mbps, to an Ethernet device, or the port is disabled. |
| | Amber | Blinking | The system is transmitting or receiving to/from an Ethernet device at 100 Mbps through the MGMT port. |
| | | On | The MGMT port is connected at 100 Mbps. |
| | | Off | The MGMT port is not connected at 100 Mbps, to an Ethernet device, or the port is disabled. |

The Web Configurator

This section introduces the configuration and functions of the web configurator.

4.1 Introduction

The web configurator is an HTML-based management interface that allows easy Switch setup and management via Internet browser. Supported browsers at the time of writing are:

- IE 8 or later
- Chrome 34.0.1847.131 or later
- Firefox 29.0.1 or later
- Opera 21.0 or later
- Safari 5.1.7 or later

The recommended screen resolution is 1024 by 768 pixels. In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device. Web pop-up blocking is enabled by default in some browsers.
- JavaScript (enabled by default).
- Java permissions (enabled by default).

4.2 System Login

- 1 Start your web browser.
- 2 Type "http://" and the IP address of the Switch (for example, the default management IP address is 192.168.1.1 through an in-band (non-**MGMT**) port and 192.168.0.1 through the **MGMT** port) in the Location or Address field. Press [ENTER]. Your computer must be in the same subnet in order to access this website address.
- 3 The login screen appears. The default username is **admin** and associated default password is **1234**. The date and time display as shown if you have not configured a time server nor manually entered a time and date in the **General Setup** screen.

Figure 13 Web Configurator: Login

- 4 Click **OK** to view the first web configurator screen.

4.3 The Web Configurator Layout

The **Status** screen is the first screen that displays when you access the web configurator. This guide uses the XGS3700-48HP screens as an example. The screens may vary slightly for different models.

The following figure shows the navigating components of a web configurator screen.

Figure 14 The Web Configurator Layout

A - Click the menu items to open submenu links, and then click on a submenu link to open the screen in the main window.

B, C, D, E, F- These are quick links which allow you to perform certain tasks no matter which screen you are currently working in.

B - Click this link to update the information in the screen you are viewing currently.

C - Click this link to save your configuration into the Switch's nonvolatile memory. Nonvolatile memory is saved in the configuration file from which the Switch booted from and it stays the same even if the Switch's power is turned off. See [Section 47.6 on page 452](#) for information on saving your settings to a specific configuration file.

D - Click this link to go to the status page of the Switch.

E - Click this link to log out of the web configurator.

F - Click this link to display web help pages. The help pages provide descriptions for all of the configuration screens.

G - Click this link to go to the ZON **Neighbor** Management screen where you can see and manage neighbor devices learned by the Switch.

In the navigation panel, click a main link to reveal a list of submenu links.

Table 4 Navigation Panel Sub-links Overview

| BASIC SETTING | ADVANCED APPLICATION | IP APPLICATION | MANAGEMENT |
|--|--|---|--|
| <div data-bbox="293 814 521 1213"> <p>MENU Basic Setting Advanced Application IP Application Management</p> <p>System Info General Setup Switch Setup IP Setup Port Setup PoE Setup Interface Setup IPv6 Stacking DNS</p> </div> | <div data-bbox="594 814 821 1665"> <p>MENU Basic Setting Advanced Application IP Application Management</p> <p>VLAN Static MAC Forwarding Static Multicast Forwarding Filtering Spanning Tree Protocol Bandwidth Control Broadcast Storm Control Mirroring Link Aggregation Port Authentication Port Security Time Range Classifier Policy Rule Queuing Method VLAN Stacking Multicast AAA IP Source Guard Loop Guard VLAN Mapping Layer 2 Protocol Tunneling sFlow PPPoE Errdisable MAC Pinning Private VLAN Green Ethernet LLDP Anti-Arpscan BPDU Guard OAM ZUID</p> </div> | <div data-bbox="889 814 1117 1150"> <p>MENU Basic Setting Advanced Application IP Application Management</p> <p>Static Routing Policy Routing DiffServ DHCP VRRP Load Sharing ARP Setup</p> </div> | <div data-bbox="1190 814 1417 1308"> <p>MENU Basic Setting Advanced Application IP Application Management</p> <p>Maintenance Access Control Diagnostic System Log Syslog Setup Cluster Management MAC Table IP Table ARP Table Routing Table Path MTU Table Configure Clone IPv6 Neighbor Table Port Status</p> </div> |

The following table describes the links in the navigation panel.

Table 5 Navigation Panel Links

| LINK | DESCRIPTION |
|-----------------------------|---|
| Basic Settings | |
| System Info | This link takes you to a screen that displays general system and hardware monitoring information. |
| General Setup | This link takes you to a screen where you can configure general identification information and time settings for the Switch. |
| Switch Setup | This link takes you to a screen where you can set up global Switch parameters such as VLAN type, MAC address learning, GARP and priority queues. |
| IP Setup | This link takes you to a screen where you can configure the IP address, subnet mask (necessary for Switch management) and set up to 128 IP routing domains. |
| Port Setup | This link takes you to screens where you can configure speed, flow control and priority settings for individual Switch ports. |
| PoE Setup | For PoE model(s). This link takes you to a screen where you can set priorities, PoE power-up settings and schedule so that the Switch is able to reserve and allocate power to certain PDs. |
| Interface Setup | This link takes you to a screen where you can create IPv6 interfaces on the Switch. |
| IPv6 | This link takes you to a screen where you can enable an IPv6 interface and configure the IPv6 settings on the Switch. |
| Stacking | This link takes you to a screen where you can view and configure stacking system for the Switch. |
| DNS | This link takes you to a screen where you can configure DNS (domain name server) IP addresses. |
| Advanced Application | |
| VLAN | This link takes you to screens where you can configure port-based or 802.1Q VLAN (depending on what you configured in the Switch Setup menu). You can also configure a protocol based VLAN or a subnet based VLAN in these screens. |
| Static MAC Forwarding | This link takes you to screens where you can configure static MAC addresses for a port. These static MAC addresses do not age out. |
| Static Multicast Forwarding | This link takes you to a screen where you can configure static multicast MAC addresses for port(s). These static multicast MAC addresses do not age out. |
| Filtering | This link takes you to a screen to set up filtering rules. |
| Spanning Tree Protocol | This link takes you to screens where you can configure the RSTP/MRSTP/MSTP to prevent network loops. |
| Bandwidth Control | This link takes you to screens where you can cap the maximum bandwidth allowed on a port. |
| Broadcast Storm Control | This link takes you to a screen to set up broadcast filters. |
| Mirroring | This link takes you to screens where you can copy traffic from one port or ports to another port in order that you can examine the traffic from the first port without interference. |
| Link Aggregation | This link takes you to screen where you can logically aggregate physical links to form one logical, higher-bandwidth link. |
| Port Authentication | This link takes you to a screen where you can configure IEEE 802.1x port authentication as well as MAC authentication for clients communicating via the Switch. |
| Port Security | This link takes you to a screen where you can activate MAC address learning and set the maximum number of MAC addresses to learn on a port. |
| Time Range | This link takes you to a screen where you can configure time range for time-oriented features like Classifier. |

Table 5 Navigation Panel Links (continued)

| LINK | DESCRIPTION |
|----------------------------|--|
| Classifier | This link takes you to screens where you can configure the Switch to group packets based on the specified criteria. |
| Policy Rule | This link takes you to a screen where you can configure the Switch to perform special treatment on the grouped packets. |
| Queuing Method | This link takes you to a screen where you can configure queuing with associated queue weights for each port. |
| VLAN Stacking | This link takes you to screens where you can activate and configure VLAN stacking. |
| Multicast | This link takes you to screen where you can configure various multicast features, IGMP snooping, MLD snooping-proxy and create multicast VLANs. |
| AAA | This link takes you to a screen where you can configure authentication, authorization and accounting services via external servers. The external servers can be either RADIUS (Remote Authentication Dial-In User Service) or TACACS+ (Terminal Access Controller Access-Control System Plus). |
| IP Source Guard | This link takes you to screens where you can configure filtering of unauthorized DHCP and ARP packets in your network. |
| Loop Guard | This link takes you to a screen where you can configure protection against network loops that occur on the edge of your network. |
| VLAN Mapping | This link takes you to screens where you can configure VLAN mapping settings on the Switch. |
| Layer 2 Protocol Tunneling | This link takes you to a screen where you can configure L2PT (Layer 2 Protocol Tunneling) settings on the Switch. |
| sFlow | This link takes you to screens where you can configure sFlow settings on the Switch. |
| PPPoE | This link takes you to screens where you can configure how the Switch gives a PPPoE termination server additional subscriber information that the server can use to identify and authenticate a PPPoE client. |
| Errdisable | This link takes you to a screens where you can view errdisable status and configure errdisable settings in CPU protection, errdisable detect, and errdisable recovery. |
| MAC Pinning | This link takes you to a screen where you can set specific ports to have priority over other ports in MAC address learning. |
| Private VLAN | This link takes you to a screen where you can block traffic between ports in a VLAN on the Switch. |
| Green Ethernet | This link takes you to a screen where you can configure the Switch to reduce port power consumption. |
| LLDP | This link takes you to a screen where you can configure LLDP settings. |
| Anti-Arpscan | This link takes you to screens where you can enable anti-arpscan on the Switch and ports, and view the port state. You can also create trusted hosts, view blocked hosts and unblock them. |
| BPDUGuard | This link takes you to screens where you can enable BPDUGuard on the Switch and ports, and view the port state. |
| OAM | This link takes you to screens where you can enable Ethernet OAM on the Switch, view the configuration of ports on which Ethernet OAM is enabled and perform remote-loopback tests. |
| ZULD | This link takes you to screens where you can enable ZULD on a port and configure related settings. |
| IP Application | |
| Static Routing | This link takes you to a screen where you can configure static routes. A static route defines how the Switch should forward traffic by configuring the TCP/IP parameters manually. |
| Policy Routing | This link takes you to screens where you can configure policy routing rules. |

Table 5 Navigation Panel Links (continued)

| LINK | DESCRIPTION |
|---------------------|---|
| DiffServ | This link takes you to screens where you can enable DiffServ, configure marking rules and set DSCP-to-IEEE802.1p mappings. |
| DHCP | This link takes you to screens where you can configure the DHCP settings. |
| VRRP | This link takes you to screens where you can configure redundant virtual router for your network. |
| Load Sharing | This link takes you to a screen where you can enable Equal-Cost MultiPath (ECMP) routing and set the criteria the Switch uses to determine the routing path for a packet. |
| ARP Setup | This link takes you to a screen where you can configure ARP learning mode on a per-port basis and create static ARP entries which do not age out. |
| Management | |
| Maintenance | This link takes you to screens where you can perform firmware and configuration file maintenance as well as reboot the system. |
| Access Control | This link takes you to screens where you can change the system login password and configure SNMP and remote management. |
| Diagnostic | This link takes you to screens where you can ping IP addresses, run traceroute, test port(s). |
| System Log | This link takes you to a screen where you can view system logs. |
| Syslog Setup | This link takes you to a screen where you can setup system logs and a system log server. |
| Cluster Management | This link takes you to a screen where you can configure clustering management and view its status. |
| MAC Table | This link takes you to a screen where you can view the MAC address and VLAN ID of a device attach to a port. You can also view what kind of MAC address it is. |
| IP Table | This link takes you to a screen where you can view the IP addresses and VLAN ID of a device attached to a port. You can also view what kind of device it is. |
| ARP Table | This link takes you to a screen where you can view the MAC address – IP address resolution table. |
| Routing Table | This link takes you to a screen where you can view the routing table. |
| Path MTU Table | This link takes you to a screen where you can view the IPv6 path MTU table. |
| Configure Clone | This link takes you to a screen where you can copy attributes of one port to (an)other port(s). |
| IPv6 Neighbor Table | This link takes you to a screen where you can view the Switch's IPv6 neighbor table. |
| Port Status | This link takes you to a screen where you can view the port statistics. |

4.3.1 Change Your Password

After you log in for the first time, it is recommended you change the default administrator password. Click **Management** > **Access Control** > **Logins** to display the next screen.

Figure 15 Change Administrator Login Password

Logins Access Control

Administrator

Old Password

New Password

Retype to confirm

Please record your new password whenever you change it. The system will lock you out if you have forgotten your password.

Edit Logins

| Login | User Name | Password | Retype to confirm | Privilege |
|-------|-----------|----------|-------------------|-----------|
| 1 | | | | |
| 2 | | | | |
| 3 | | | | |
| 4 | | | | |

Apply Cancel

4.4 Saving Your Configuration

When you are done modifying the settings in a screen, click **Apply** to save your changes back to the run-time memory. Settings in the run-time memory are lost when the Switch's power is turned off.

Click the **Save** link in the upper right hand corner of the web configurator to save your configuration to nonvolatile memory. Nonvolatile memory refers to the Switch's storage that remains even if the Switch's power is turned off.

Note: Use the **Save** link when you are done with a configuration session.

4.5 Switch Lockout

You could block yourself (and all others) from using in-band-management (managing through the data ports) if you do one of the following:

- 1 Delete the management VLAN (default is VLAN 1).
- 2 Delete all port-based VLANs with the CPU port as a member. The "CPU port" is the management port of the Switch.
- 3 Filter all traffic to the CPU port.
- 4 Disable all ports.
- 5 Misconfigure the text configuration file.
- 6 Forget the password and/or IP address.

- 7 Prevent all services from accessing the Switch.
- 8 Change a service port number but forget it.

Note: Be careful not to lock yourself and others out of the Switch. If you do lock yourself out, try using out-of-band management (via the management port) to configure the Switch.

4.6 Resetting the Switch

If you lock yourself (and others) from the Switch or forget the administrator password, you will need to reload the factory-default configuration file or reset the Switch back to the factory defaults.

4.6.1 Reload the Configuration File

Uploading the factory-default configuration file replaces the current configuration file with the factory-default configuration file. This means that you will lose all previous configurations and the speed of the console port will be reset to the default of 9600bps with 8 data bit, no parity, one stop bit and flow control set to none. The password will also be reset to "1234" and the IP address to 192.168.1.1.

To upload the configuration file, do the following:

- 1 Connect to the console port using a computer with terminal emulation software. See [Section 3.2 on page 34](#) for details.
- 2 Disconnect and reconnect the Switch's power to begin a session. When you reconnect the Switch's power, you will see the initial screen.
- 3 When you see the message "Press any key to enter Debug Mode within 3 seconds ..." press any key to enter debug mode.
- 4 Type `atlc` after the "Enter Debug Mode" message.
- 5 Wait for the "Starting XMODEM upload" message before activating XMODEM upload on your terminal.
- 6 After a configuration file upload, type `atgo` to restart the Switch.

Figure 16 Resetting the Switch: Via the Console Port

```

Bootbase Version: V1.00 | 12/11/2012 13:49:40
RAM: Size = 524288 Kbytes
DRAM POST: Testing: 524288K
OK
DRAM Test SUCCESS !

ZyNOS Version: V4.10(AAGF.5)b1 | 6/5/2014 20:10:8


Press any key to enter debug mode within 3 seconds.
.....
Enter Debug Mode
ras> atlc
Starting XMODEM upload (CRC mode)....
CCCCCCCCCCCCCCCC
Total 393216 bytes received.
Erasing..
.....
OK
ras> atgo

```

The Switch is now reinitialized with a default configuration file including the default password of "1234".

4.7 Logging Out of the Web Configurator

Click **Logout** in a screen to exit the web configurator. You have to log in with your password again after you log out. This is recommended after you finish a management session for security reasons.

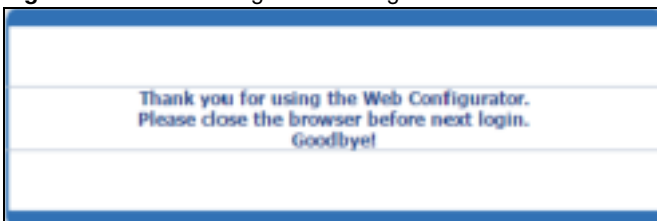Figure 17 Web Configurator: Logout Screen

4.8 Help

The web configurator's online help has descriptions of individual screens and some supplementary information.

Click the **Help** link from a web configurator screen to view an online help description of that screen.

PART II

Technical Reference

ZON Utility, ZON Neighbor Management and Port Status

5.1 Overview

This chapter describes the screens for System Status, ZON Utility, ZON Neighbor Management, Port Status and Port Details.

5.2 Status

The **Status** screen displays when you log into the Switch or click **Status** at the top right corner of the web configurator. The **Status** screen displays general device information, system status, and its IP addresses.

Figure 18 Status

| Status | | Neighbor | |
|--|---------------------------------|---|--|
| Device Information | | | |
| Device Type | XGS3700-24 | System Name | XGS3700 |
| Boot Version | V1.00 03/27/2013 | System Location | |
| Firmware Version | V4.30(AAOC 0x7 10/06/2015) | System Time | 01/01/1970 00:05:33 |
| Serial Number | S132L30000670 | System Up Time | 000 days,00 hours,05 mins,36 secs |
| MAC Address | 00:19:xb:00:08:02 | Login Timeout(min): | 3 |
| Stacking Topology | Chain | | |
| Detail | | | |
| IP Address Information | | | |
| IPv4 Address | 192.168.1.1 | | |
| Subnet Mask | 255.255.255.0 | | |
| Default Gateway | 0.0.0.0 | | IP Setup |
| IPv6 Global Unicast Address | | | |
| IPv6 Link-Local Address | | | IPv6 configuration |
| Device Status and Quick Configuration | | | |
| STP | Disable Setting | SNMP Status (I) | Enable Setting |
| Port Mirroring | Disable Setting | 802.1X Status | Disable Setting |
| Storm Control | Disable Setting | DHCP Relay | Disable Setting |
| IGMP Snooping | Disable Setting | IPSG | Disable Setting |
| Stacking Status | Enable Setting | | |
| Quick Links | | | |
| Port Status | PoE Status | Link Aggregation Status | MAC Table |
| Routing Table | IP Table | Diagnostic | System Log |
| Remote Access Control | Tech-support | VLAN Setup | Service Access Control |

The following table describes the fields in the above screen.

Table 6 Status

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| Device Information | |
| Device Type | This field displays the model name of this Switch. |
| System Name | This field displays the name used to identify the Switch on any network. |
| Boot Version | This field displays the version number and date of the boot module that is currently on the Switch. |
| System Location | This field displays the geographic location of your Switch. You can change the setting in the Basic Setting > General Setup screen. |
| Firmware Version | This field displays the version number and date of the firmware the Switch is currently running. |
| System Time | This field displays the current date and time in the UAG. The format is mm-dd-yyyy hh:mm:ss. |
| Serial Number | This field displays the serial number of this Switch. The serial number is used for device tracking and control. |
| System Up Time | This field displays how long the Switch has been running since it last restarted or was turned on. |
| MAC Address | This field displays the MAC addresses of the Switch. |
| Login Timeout | This field displays how many minutes a management session can be left idle before the session times out. After it times out you have to log in with your password again. |
| Stacking topology (Stacking mode) | This field displays whether the current topology is Chain or Ring . |
| Detail | Click this link to go to the Basic Setting > System Info screen to check other detailed information, such as system resource usage and the Switch temperature, fan speeds or voltage. |
| IP Address Information | |
| IPv4 Address | This field displays the Switch's current IPv4 address. |
| Subnet Mask | This field displays the Switch's subnet mask. |
| Default Gateway | This field displays the IP address of the Switch's default gateway. |
| IP Setup | Click the link to go to the Basic Setting > IP Setup screen. |
| IPv6 Global Unicast Address | This field displays the Switch's IPv6 global unicast address. |
| IPv6 Link-Local Address | This field displays the Switch's IPv6 link-local address. |
| IPv6 configuration | Click the link to go to the Basic Setting > IPv6 screen. |
| Device Status and Quick Configuration | <p>This section shows whether a feature is enabled or not on the Switch. You can click a feature's Setting link to go to the configuration screen for the feature.</p> <p>Hover your cursor over a red exclamation mark to display information about the feature.</p> <p>Note: The Stacking Status field is displayed only on the Switch with stacking support.</p> |
| Quick Links | This section provides the shortcut link to a specific configuration screen. |


5.3 ZyXEL One Network (ZON) Utility Screen

ZON Utility is a program designed to help you deploy and manage a network more efficiently. It detects devices automatically and allows you to do basic settings on devices in the network without having to be near it.

The ZON Utility issues requests via ZyXEL Discovery Protocol (ZDP) and in response to the query, the device responds back with basic information including IP address, firmware version, location, system and model name in the same broadcast domain. The information is then displayed in the ZON Utility screen and you can perform tasks like basic configuration of the devices and batch firmware upgrade in it. You can download the ZON Utility at www.zyxel.com and install it on a PC.

The following figure shows the ZON Utility screen.


Figure 19 ZON Utility Screen

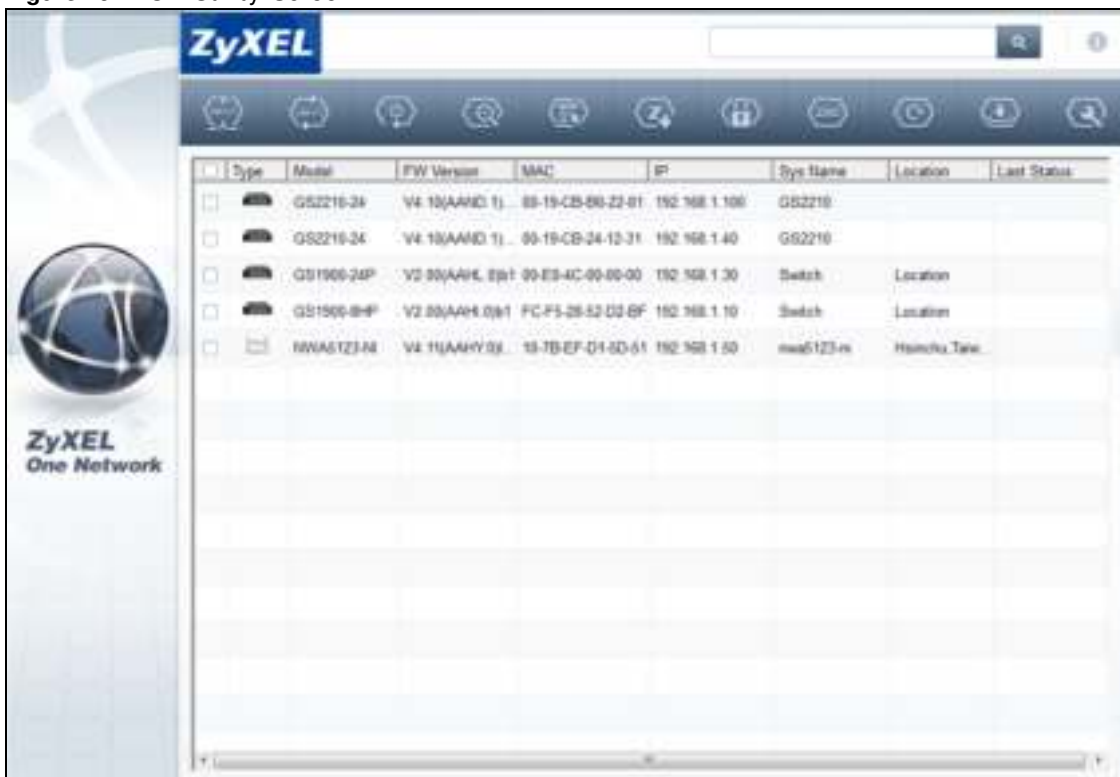

5.4 ZON Neighbor Management Screen

The ZON Neighbor Management screen allows you to view and manage the Switch's neighboring devices more conveniently. It uses Layer Link Discovery Protocol (LLDP) to discover all neighbor devices connected to the Switch including non-ZyXEL devices. You can perform tasks on the neighboring devices like login, reboot (turn the power off and then back on again), and reset to factory default settings in the Neighbor Management screen. For more information on LLDP, see [Section 35.2 on page 344](#).

Click **Status > Neighbor** to see the following screen.

 Figure 20 Status > Neighbor

The following table describes the fields in the above screen.

Table 7 Status > Neighbor

| LABEL | DESCRIPTION |
|------------------|--|
| Local | |
| Port | This shows the port of the Switch, on which the neighboring device is discovered. |
| Desc. | This shows the port description of the Switch. |
| PoE Draw | This shows the consumption that the neighboring device connected to this port draws from the Switch. This allows you to plan and use within the power budget of the Switch. |
| Remote | |
| Port | This show the number of the neighbor device's port which is connected to the Switch. |
| Desc. | This shows the description of the neighbor device's port which is connected to the Switch. |
| Model | This shows the model name of the neighbor device. This field will show "-" for non-ZyXEL devices. |
| System Name | This shows the system name of the neighbor device. |
| Location | This shows the geographic location of the neighbor device. |
| Firm ware | This shows the firmware version of the neighbor device. This field will show "-" for non-ZyXEL devices. |
| IP | This shows the IP address of the neighbor device. The IP address is a hyper link that you can click to log into and manage the neighbor device through its web configurator. This field will show "-" for non-ZyXEL devices. |
| MAC | This shows the MAC address of the neighbor device. This field will show "-" for non-ZyXEL devices. |
| PWR Cycle | <p>Click the Cycle button to turn OFF the power of the neighbor device and turn it back ON again. A count down button (from 5 to 0) starts.</p> <p>Note: The Switch must support power sourcing (PSE) or the network device is a powered device (PD).</p> <p>Note: If multiple neighbor devices use the same port, the Cycle button is displayed only on the first device, others will show "-" instead.</p> |
| Reset to Default | <p>Click the Reset button to reset the neighbor device to its factory default settings. A warning message "Are you sure you want to load factory default?" appears prompting you to confirm the action. After confirming the action a count down button (from 5 to 0) starts.</p> <p>Note: The Switch must support power sourcing (PSE) or the network device is a powered device (PD).</p> <p>Note: If multiple neighbor devices use the same port, the Reset button is not available and will show "-" instead.</p> <p>Note: You can only reset ZyXEL products.</p> |

5.5 Port Status

This screen displays a port statistical summary with links to each port showing statistical details. To view the port statistics, click **Status** in all web configurator screens and then the **Port Status** link in the **Quick Links** section of the **Status** screen to display the **Port Status** screen as shown next. You can also click **Management > Port Status** to see the following screen.

Figure 21 Port Status (Standalone mode)

| Port Status | | | | | | | | | | | |
|-------------|-------|------|------------|-----|----------|--------|--------|--------|---------|---------|----------|
| Port | Name | Link | State | PD | LACP | TxPkts | RxPkts | Errors | Tx KB/s | Rx KB/s | Up Time |
| 1 | 100MF | | FORWARDING | Off | Disabled | 34922 | 796299 | 1 | 0.0 | 1.602 | 94:51:42 |
| 2 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 3 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 4 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 5 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 6 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 7 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 8 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 9 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 10 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 11 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 12 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 13 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 14 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 15 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |

Any
 Port

Figure 22 Port Status (Stacking mode)

| Port Status | | | | | | | | | | | |
|-------------|-------|------|------------|-----|----------|--------|--------|--------|---------|---------|----------|
| SLOT 1 ▼ | | | | | | | | | | | |
| Port | Name | Link | State | PD | LACP | TxPkts | RxPkts | Errors | Tx KB/s | Rx KB/s | Up Time |
| 11 | 100MF | | FORWARDING | Off | Disabled | 23763 | 417173 | 0 | 2.489 | 2.742 | 75:22:55 |
| 12 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 13 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 14 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 15 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 16 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 17 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 18 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |
| 19 | Down | | STOP | Off | Disabled | 0 | 0 | 0 | 0.0 | 0.0 | 0:00:00 |

Any
 Port

The following table describes the labels in this screen.

Table 8 Port Status

| LABEL | DESCRIPTION |
|----------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This identifies the Ethernet port. In stacking mode, the first number represents the slot and the second the port number. Click a port number to display the Port Details screen (refer to Figure 23 on page 53). |

Table 8 Port Status

| LABEL | DESCRIPTION |
|---------------|--|
| Name | This is the name you assigned to this port in the Basic Setting > Port Setup screen. |
| Link | This field displays the speed (such as 100M for 100 Mbps, 1000M for 1000 Mbps, or 10G for 10 Gbps) and the duplex (F for full duplex). This field displays Down if the port is not connected to any device. |
| State | If STP (Spanning Tree Protocol) is enabled, this field displays the STP state of the port. (See Section 11.1.3 on page 133 for more information). If STP is disabled, this field displays FORWARDING if the link is up, otherwise, it displays STOP . |
| PD | (For PoE models only) This field displays whether or not a powered device (PD) is allowed to receive power from the Switch on this port. |
| LACP | This field displays whether LACP (Link Aggregation Control Protocol) has been enabled on the port. |
| TxPkts | This field shows the number of transmitted frames on this port. |
| RxPkts | This field shows the number of received frames on this port. |
| Errors | This field shows the number of received errors on this port. |
| Tx KB/s | This field shows the transmission speed of data sent on this port in kilobytes per second. |
| Rx KB/s | This field shows the transmission speed of data received on this port in kilobytes per second. |
| Up Time | This field shows the total amount of time in hours, minutes and seconds the port has been up. |
| Clear Counter | Select Port , type a port number and then click Clear Counter to erase the recorded statistical information for that port, or select Any to clear statistics for all ports. |

5.5.1 Port Details

Click a number in the **Port** column in the **Port Status** screen to display individual port statistics. Use this screen to check status and detailed performance data about an individual port on the Switch.

Figure 23 Port Status: Port Details

| Port Details | | Port Status |
|---------------------|--------------|-------------|
| Port Info | Port NO. | 1 |
| | Name | |
| | Link | 100MF |
| | State | FORWARDING |
| | LACP | Disabled |
| | TxPkts | 35034 |
| | RxPkts | 797796 |
| | Errors | 1 |
| | Tx KB/s | 0.0 |
| | Rx KB/s | 1.560 |
| | Up Time | 84:57:58 |
| TX Packet | Unicast | 23640 |
| | Multicast | 11394 |
| | Broadcast | 0 |
| | Pause | 0 |
| | Tagged | 0 |
| RX Packet | Unicast | 224664 |
| | Multicast | 363040 |
| | Broadcast | 210091 |
| | Pause | 0 |
| | Control | 0 |
| TX Collision | Single | 0 |
| | Multiple | 0 |
| | Excessive | 0 |
| | Late | 0 |
| Error Packet | RX CRC | 1 |
| | Length | 0 |
| | Runt | 0 |
| Distribution | 64 | 494597 |
| | 65 to 127 | 258969 |
| | 128 to 255 | 54799 |
| | 256 to 511 | 12436 |
| | 512 to 1023 | 4212 |
| | 1024 to 1518 | 7817 |
| | Giant | 0 |

The following table describes the labels in this screen.

Table 9 Port Status: Port Details

| LABEL | DESCRIPTION |
|-----------|---|
| Port Info | |
| Port NO. | This field displays the port number you are viewing. In stacking mode, the first number represents the slot and the second the port number. |
| Name | This field displays the name of the port. |
| Link | This field displays the speed (such as 100M for 100Mbps, 1000M for 1000 Mbps, or 10G for 10 Gbps) and the duplex (F for full duplex). |
| State | If STP (Spanning Tree Protocol) is enabled, this field displays the STP state of the port (see Section 11.1.3 on page 133 for more information). If STP is disabled, this field displays FORWARDING if the link is up, otherwise, it displays STOP . |
| LACP | This field shows if LACP is enabled on this port or not. |
| TxPkts | This field shows the number of transmitted frames on this port |

Table 9 Port Status: Port Details (continued)

| LABEL | DESCRIPTION |
|--|--|
| RxPkts | This field shows the number of received frames on this port |
| Errors | This field shows the number of received errors on this port. |
| Tx KBs/s | This field shows the transmission speed of data sent on this port in kilobytes per second. |
| Rx KBs/s | This field shows the transmission speed of data received on this port in kilobytes per second. |
| Up Time | This field shows the total amount of time the connection has been up. |
| Tx Packet | |
| The following fields display detailed information about packets transmitted. | |
| Unicast | This field shows the number of good unicast packets transmitted. |
| Multicast | This field shows the number of good multicast packets transmitted. |
| Broadcast | This field shows the number of good broadcast packets transmitted. |
| Pause | This field shows the number of 802.3x Pause packets transmitted. |
| Tagged | This field shows the number of packets with VLAN tags transmitted. |
| Rx Packet | |
| The following fields display detailed information about packets received. | |
| Unicast | This field shows the number of good unicast packets received. |
| Multicast | This field shows the number of good multicast packets received. |
| Broadcast | This field shows the number of good broadcast packets received. |
| Pause | This field shows the number of 802.3x Pause packets received. |
| Control | This field shows the number of control packets received (including those with CRC error) but it does not include the 802.3x Pause packets. |
| TX Collision | |
| The following fields display information on collisions while transmitting. | |
| Single | This is a count of successfully transmitted packets for which transmission is inhibited by exactly one collision. |
| Multiple | This is a count of successfully transmitted packets for which transmission was inhibited by more than one collision. |
| Excessive | This is a count of packets for which transmission failed due to excessive collisions. Excessive collision is defined as the number of maximum collisions before the retransmission count is reset. |
| Late | This is the number of times a late collision is detected, that is, after 512 bits of the packets have already been transmitted. |
| Error Packet | |
| The following fields display detailed information about packets received that were in error. | |
| RX CRC | This field shows the number of packets received with CRC (Cyclic Redundant Check) error(s). |
| Length | This field shows the number of packets received with a length that was out of range. |
| Runt | This field shows the number of packets received that were too short (shorter than 64 octets), including the ones with CRC errors. |
| Distribution | |
| 64 | This field shows the number of packets (including bad packets) received that were 64 octets in length. |
| 65 to 127 | This field shows the number of packets (including bad packets) received that were between 65 and 127 octets in length. |
| 128 to 255 | This field shows the number of packets (including bad packets) received that were between 128 and 255 octets in length. |

Table 9 Port Status: Port Details (continued)

| LABEL | DESCRIPTION |
|--------------|--|
| 256 to 511 | This field shows the number of packets (including bad packets) received that were between 256 and 511 octets in length. |
| 512 to 1023 | This field shows the number of packets (including bad packets) received that were between 512 and 1023 octets in length. |
| 1024 to 1518 | This field shows the number of packets (including bad packets) received that were between 1024 and 1518 octets in length. |
| Giant | This field shows the number of packets (including bad packets) received that were between 1519 octets and the maximum frame size. The maximum frame size varies depending on your Switch model. |

Basic Setting

This chapter describes how to configure the **Basic Setting** screens.

6.1 System Information

In the navigation panel, click **Basic Setting** > **System Info** to display the screen as shown.

You can check the firmware version number and monitor the Switch temperature, fan speeds and voltage in this screen.

Figure 24 Basic Setting > System Info (Standalone Mode)

| System Info | | | |
|-------------------|-------------------------------|--|--|
| System Name | XGS3700 | | |
| Product Model | XGS3700-48HP | | |
| ZyNOS F/W Version | V4.30(AAGF.0.B.3 07/17/2015 | | |
| Ethernet Address | 00:19:cb:00:00:02 | | |

| CPU Utilization | |
|-----------------|-------|
| Current (%) | 21.88 |

| Memory Utilization | | | |
|--------------------|--------------|-------------|-----------------|
| Name | Total (byte) | Used (byte) | Utilization (%) |
| common | 55893120 | 11318200 | 20 |

| Hardware Monitor | | | | | |
|-----------------------|---------|--------|--------|-----------|--------|
| Temperature Unit: C ▼ | | | | | |
| Temperature (C) | Current | MAX | MIN | Threshold | Status |
| MAC | 45.0 | 51.0 | 44.0 | 85.0 | Normal |
| CPU | 50.0 | 52.0 | 45.0 | 85.0 | Normal |
| PHY_1 | 45.0 | 50.0 | 43.0 | 85.0 | Normal |
| PHY_2 | 46.0 | 50.0 | 43.0 | 85.0 | Normal |
| Board_1 | 44.0 | 46.0 | 41.0 | 85.0 | Normal |
| Board_2 | 36.0 | 40.0 | 34.0 | 85.0 | Normal |
| FAN Speed (RPM) | Current | MAX | MIN | Threshold | Status |
| FAN1 | 4891 | 8729 | 4847 | 500 | Normal |
| FAN2 | 4761 | 8523 | 4728 | 500 | Normal |
| FAN3 | 4821 | 8677 | 4770 | 500 | Normal |
| Voltage (V) | Current | MAX | MIN | Threshold | Status |
| 2.5V | 2.493 | 2.493 | 2.493 | ±1.5% | Normal |
| 1.6V | 1.767 | 1.767 | 1.775 | ±1.5% | Normal |
| 3.3V | 3.308 | 3.308 | 3.308 | ±1.5% | Normal |
| 5V | 4.986 | 4.986 | 4.986 | ±1.5% | Normal |
| 12V | 11.781 | 11.781 | 11.781 | ±1.10% | Normal |
| 1.0V | 0.896 | 0.896 | 0.883 | ±1.5% | Normal |
| 0.9V | 0.896 | 0.896 | 0.896 | ±1.5% | Normal |
| 3.3V | 3.308 | 3.308 | 3.308 | ±1.5% | Normal |
| 1.05V | 1.028 | 1.054 | 1.028 | ±1.5% | Normal |
| 1.2V | 1.155 | 1.155 | 1.155 | ±1.5% | Normal |
| Power Source | | | | | Status |
| PSU_1 | | | | | Normal |
| PSU_2 | | | | | Absent |

Figure 25 Basic Setting > System Info (Stacking Mode)

| System Info | | | | | |
|--------------------|------------------------------|-------------|-----------------|--------|--------------|
| System Name | XGS3700 | | | | |
| Product Model | XGS3700-48HP | | | | |
| ZyNOS F/W Version | V4.30(AAGF 01b3 07/17/2015 | | | | |
| Ethernet Address | 00-19-cb-00-00-02 | | | | |
| CPU Utilization | | | | | |
| Current (%) | 22.12 | | | | |
| Memory Utilization | | | | | |
| Name | Total (byte) | Used (byte) | Utilization (%) | | |
| common | 55893120 | 20384128 | 36 | | |
| Hardware Status | | | | | |
| Slot | Name | Voltage | Temperature | Fan | Power Source |
| 1 | XGS3700-48HP | Normal | Normal | Normal | Normal |
| 2 | XGS3700-24 | Normal | Normal | Normal | Normal |

The following table describes the labels in these screens.

Table 10 Basic Setting > System Info (Standalone and Stacking Modes)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| System Name | This field displays the descriptive name of the Switch for identification purposes. |
| Product Model | This field displays the product model of the Switch. Use this information when searching for firmware upgrade or looking for other support information in the website. |
| ZyNOS F/W Version | This field displays the version number of the Switch 's current firmware including the date created. |
| Ethernet Address | This field refers to the Ethernet MAC (Media Access Control) address of the Switch. |
| CPU Utilization | CPU utilization quantifies how busy the system is. Current (%) displays the current percentage of CPU utilization. |
| Memory Utilization | Memory Utilization shows how much DRAM memory is available and in use. It also displays the current percentage of memory utilization. |
| Name | This field displays the name of memory pool. |
| Total | This field displays the total number of bytes in this memory pool. |
| Used | This field displays the number of bytes being used in this memory pool. |
| Utilization | This field displays the percentage (%) of memory being used in this memory pool. |
| Hardware Monitor (Standalone Mode) | |
| Temperature Unit | The Switch has temperature sensors that are capable of detecting and reporting if the temperature rises above the threshold. You may choose the temperature unit (Centigrade or Fahrenheit) in this field. |
| Temperature | BOARD , MAC and PHY refer to the location of the temperature sensors on the Switch printed circuit board. |
| Current | This shows the current temperature at this sensor. |
| MAX | This field displays the maximum temperature measured at this sensor. |

Table 10 Basic Setting > System Info (Standalone and Stacking Modes) (continued)

| LABEL | DESCRIPTION |
|---------------------------------|---|
| MIN | This field displays the minimum temperature measured at this sensor. |
| Threshold | This field displays the upper temperature limit at this sensor. |
| Status | This field displays Normal for temperatures below the threshold and Error for those above. |
| Fan Speed (RPM) | A properly functioning fan is an essential component (along with a sufficiently ventilated, cool operating environment) in order for the device to stay within the temperature threshold. Each fan has a sensor that is capable of detecting and reporting if the fan speed falls below the threshold shown. |
| Current | This field displays this fan's current speed in Revolutions Per Minute (RPM). |
| MAX | This field displays this fan's maximum speed measured in Revolutions Per Minute (RPM). |
| MIN | This field displays this fan's minimum speed measured in Revolutions Per Minute (RPM). "< 41" is displayed for speeds too small to measure (under 2000 RPM). |
| Threshold | This field displays the minimum speed at which a normal fan should work. |
| Status | Normal indicates that this fan is functioning above the minimum speed. Error indicates that this fan is functioning below the minimum speed. |
| Voltage(V) | The power supply for each voltage has a sensor that is capable of detecting and reporting if the voltage falls out of the tolerance range. |
| Current | This is the current voltage reading. |
| MAX | This field displays the maximum voltage measured at this point. |
| MIN | This field displays the minimum voltage measured at this point. |
| Threshold | This field displays the percentage tolerance of the voltage with which the Switch still works. |
| Status | Normal indicates that the voltage is within an acceptable operating range at this point; otherwise Error is displayed. |
| Power Source | The power source of the Switch has a sensor that is capable of detecting and reporting if the power source falls out of the normal status. |
| Status | Normal indicates that the power source is within normal status. Error indicates that the power source is not within normal status. Absent indicates that you do not insert the power module. Present indicates that you insert the power module, but there is no available power. |
| Hardware Status (Stacking Mode) | |
| Slot | This number identifies the Switch in the stack. Click the number to see more detailed information on the Switch. |
| Name | This is the system name of the Switch in the stack. |
| Voltage | This shows if the power supply voltage sensor is within normal tolerance range. |
| Temperature | This shows if the temperature sensors on the Switch printed circuit board are within normal tolerance range. |
| Fan | This shows if the fan sensors are within normal tolerance range. |
| Power Source | This shows whether the power sources are within normal status or not. Error indicates that the power source is not within normal status. Otherwise, Normal is displayed. You can click the index number in the Slot field to view the details. |

6.1.1 System Information Stacking Hardware Monitor

Click a slot number in the System Information screen to display more detailed hardware information on a Switch.

Figure 26 Basic Setting > System Info > Hardware Monitor (Stacking Mode)

| Hardware Monitor | | | | | System Info |
|------------------------|---------|--------|--------|-----------|-------------|
| SLOT 1 | | | | | |
| Temperature Unit (C) ▾ | | | | | |
| Temperature (C) | Current | MAX | MIN | Threshold | Status |
| 1MAC | 49.0 | 50.0 | 44.0 | 55.0 | Normal |
| 1CPU | 49.0 | 52.0 | 46.0 | 55.0 | Normal |
| 1PHY_1 | 46.0 | 47.0 | 41.0 | 55.0 | Normal |
| 1PHY_2 | 46.0 | 47.0 | 40.0 | 55.0 | Normal |
| 1Board_1 | 43.0 | 45.0 | 41.0 | 55.0 | Normal |
| 1Board_2 | 37.0 | 38.0 | 34.0 | 55.0 | Normal |
| FAN Speed (RPM) | Current | MAX | MIN | Threshold | Status |
| 1FAN1 | 4878 | 9747 | 4863 | 500 | Normal |
| 1FAN2 | 4766 | 9540 | 4732 | 500 | Normal |
| 1FAN3 | 4812 | 9677 | 4787 | 500 | Normal |
| Voltage (V) | Current | MAX | MIN | Threshold | Status |
| 1Q.5V | 2.493 | 2.493 | 2.493 | +/-6% | Normal |
| 1V1.8V | 1.787 | 1.787 | 1.787 | +/-6% | Normal |
| 1Q.3V | 3.308 | 3.308 | 3.308 | +/-6% | Normal |
| 15V | 4.986 | 4.986 | 4.986 | +/-6% | Normal |
| 1V2V | 11.781 | 11.781 | 11.781 | +/-10% | Normal |
| 1V1.0V | 0.996 | 0.996 | 0.993 | +/-6% | Normal |
| 14.0V | 0.896 | 0.896 | 0.896 | +/-6% | Normal |
| 1Q.3V | 3.308 | 3.308 | 3.308 | +/-6% | Normal |
| 1V1.35V | 1.026 | 1.054 | 1.026 | +/-6% | Normal |
| 1V1.2V | 1.156 | 1.156 | 1.156 | +/-6% | Normal |
| Power Source | | | | | Status |
| 1PSU_1 | | | | | Normal |
| 1PSU_2 | | | | | Absent |

The following table describes the labels in this screen.

Table 11 Basic Setting > System Info > Hardware Monitor (Stacking Mode)

| LABEL | DESCRIPTION |
|------------------|--|
| SLOT | This number identifies the Switch in the stack. |
| Temperature Unit | The Switch has temperature sensors that are capable of detecting and reporting if the temperature rises above the threshold. You may choose the temperature unit (Centigrade or Fahrenheit) in this field. |
| Temperature | BOARD, PHY, CPU and MAC refer to the location of the temperature sensors on the Switch printed circuit board. |
| Current | This shows the current temperature at this sensor. |
| MAX | This field displays the maximum temperature measured at this sensor. |
| MIN | This field displays the minimum temperature measured at this sensor. |
| Threshold | This field displays the upper temperature limit at this sensor. |
| Status | This field displays Normal for temperatures below the threshold and Error for those above. |
| Fan Speed (RPM) | A properly functioning fan is an essential component (along with a sufficiently ventilated, cool operating environment) in order for the device to stay within the temperature threshold. Each fan has a sensor that is capable of detecting and reporting if the fan speed falls below the threshold shown. |
| Current | This field displays this fan's current speed in Revolutions Per Minute (RPM). |
| MAX | This field displays this fan's maximum speed measured in RPM. |
| MIN | This field displays this fan's minimum speed measured in RPM. "<41" is displayed for speeds too small to measure (under 2000 RPM). |
| Threshold | This field displays the minimum speed at which a normal fan should work. |
| Status | Normal indicates that this fan is functioning above the minimum speed. Error indicates that this fan is functioning below the minimum speed. |

Table 11 Basic Setting > System Info > Hardware Monitor (Stacking Mode) (continued)

| LABEL | DESCRIPTION |
|--------------|---|
| Voltage (V) | The power supply for each voltage has a sensor that is capable of detecting and reporting if the voltage falls out of the tolerance range. |
| Current | This is the current voltage reading. |
| MAX | This field displays the maximum voltage measured at this point. |
| MIN | This field displays the minimum voltage measured at this point. |
| Threshold | This field displays the percentage tolerance of the voltage with which the Switch still works. |
| Status | Normal indicates that the voltage is within an acceptable operating range at this point; otherwise Error is displayed. |
| Power Source | The power source of the Switch has a sensor that is capable of detecting and reporting if the power source falls out of the normal status. |
| Status | Normal indicates that the power source is within normal status. Error indicates that the power source is not within normal status. Absent indicates that you do not insert the power module. Present indicates that you insert the power module, but there is no available power. |

6.2 General Setup

Use this screen to configure general settings such as the system name and time. Click **Basic Setting > General Setup** in the navigation panel to display the screen as shown.

Figure 27 Basic Setting > General Setup

The following table describes the labels in this screen.

Table 12 Basic Setting > General Setup

| LABEL | DESCRIPTION |
|-------------|---|
| System Name | Type a descriptive name for identification purposes. This name consists of up to 64 printable ASCII characters; spaces are allowed. |
| Location | Type the geographic location of your Switch. You can use up to 32 printable ASCII characters; spaces are allowed. |

Table 12 Basic Setting > General Setup (continued)

| LABEL | DESCRIPTION |
|-----------------------------|---|
| Contact Person's Name | Type the name of the person in charge of this Switch. You can use up to 32 printable ASCII characters; spaces are allowed. |
| Use Time Server when Bootup | <p>Type the time service protocol that your timeserver uses. Not all time servers support all protocols, so you may have to use trial and error to find a protocol that works. The main differences between them are the time format.</p> <p>When you select the Daytime (RFC 867) format, the Switch displays the day, month, year and time with no time zone adjustment. When you use this format, it is recommended that you use a Daytime timeserver within your geographical time zone.</p> <p>Time (RFC-868) format displays a 4-byte integer giving the total number of seconds since 1970/1/1 at 0:0:0.</p> <p>NTP (RFC-1305) is similar to Time (RFC-868).</p> <p>None is the default value. Enter the time manually. Each time you turn on the Switch, the time and date will be reset to 1970-1-1 0:0.</p> |
| Time Server IP Address | Type the IP address of your timeserver. The Switch searches for the timeserver for up to 60 seconds. If you select a timeserver that is unreachable, then this screen will appear locked for 60 seconds. Please wait. |
| Current Time | This field displays the time you open this menu (or refresh the menu). |
| New Time (hh:min:ss) | Enter the new time in hour, minute and second format. The new time then appears in the Current Time field after you click Apply . |
| Current Date | This field displays the date you open this menu. |
| New Date (yyyy-mm-dd) | Enter the new date in year, month and day format. The new date then appears in the Current Date field after you click Apply . |
| Time Zone | Select the time difference between UTC (Universal Time Coordinated, formerly known as GMT, Greenwich Mean Time) and your time zone from the drop-down list box. |
| Daylight Saving Time | <p>Daylight saving is a period from late spring to early fall when many countries set their clocks ahead of normal local time by one hour to give more daytime light in the evening.</p> <p>Select this option if you use Daylight Saving Time.</p> |
| Start Date | <p>Configure the day and time when Daylight Saving Time starts if you selected Daylight Saving Time. The time is displayed in the 24 hour format. Here are a couple of examples:</p> <p>Daylight Saving Time starts in most parts of the United States on the second Sunday of March. Each time zone in the United States starts using Daylight Saving Time at 2 A.M. local time. So in the United States you would select Second, Sunday, March and 2:00.</p> <p>Daylight Saving Time starts in the European Union on the last Sunday of March. All of the time zones in the European Union start using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select Last, Sunday, March and the last field depends on your time zone. In Germany for instance, you would select 2:00 because Germany's time zone is one hour ahead of GMT or UTC (GMT+ 1).</p> |
| End Date | <p>Configure the day and time when Daylight Saving Time ends if you selected Daylight Saving Time. The time field uses the 24 hour format. Here are a couple of examples:</p> <p>Daylight Saving Time ends in the United States on the last Sunday of October. Each time zone in the United States stops using Daylight Saving Time at 2 A.M. local time. So in the United States you would select First, Sunday, November and 2:00.</p> <p>Daylight Saving Time ends in the European Union on the last Sunday of October. All of the time zones in the European Union stop using Daylight Saving Time at the same moment (1 A.M. GMT or UTC). So in the European Union you would select Last, Sunday, October and the last field depends on your time zone. In Germany for instance, you would select 2:00 because Germany's time zone is one hour ahead of GMT or UTC (GMT+ 1).</p> |

Table 12 Basic Setting > General Setup (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

6.3 Introduction to VLANs

A VLAN (Virtual Local Area Network) allows a physical network to be partitioned into multiple logical networks. Devices on a logical network belong to one group. A device can belong to more than one group. With VLAN, a device cannot directly talk to or hear from devices that are not in the same group(s); the traffic must first go through a router.

In MTU (Multi-Tenant Unit) applications, VLAN is vital in providing isolation and security among the subscribers. When properly configured, VLAN prevents one subscriber from accessing the network resources of another on the same LAN, thus a user will not see the printers and hard disks of another user on the same network.

VLAN also increases network performance by limiting broadcasts to a smaller and more manageable logical broadcast domain. In traditional switched environments, all broadcast packets go to each and every individual port. With VLAN, all broadcasts are confined to a specific broadcast domain.

Note: VLAN is unidirectional; it only governs outgoing traffic.

See [Chapter 7 on page 101](#) for information on port-based and 802.1Q tagged VLANs.

6.4 Switch Setup

Click **Basic Setting** > **Switch Setup** in the navigation panel to display the screen as shown. The VLAN setup screens change depending on whether you choose **802.1Q** or **Port Based** in the **VLAN Type** field in this screen (in Standalone mode). Refer to the chapter on VLAN.

Figure 28 Basic Setting > Switch Setup

The screenshot shows the 'Switch Setup' configuration window. At the top, 'VLAN Type' is set to '802.1Q'. Below it, 'Bridge Control Protocol Transparency' is set to 'Active'. The 'MAC Address Learning' section has 'Aging Time' set to '300 seconds'. The 'ARP Aging Time' section has 'Aging Time' set to '300 seconds'. The 'GARP Timer' section has 'Join Timer' set to '200 milliseconds', 'Leave Timer' set to '600 milliseconds', and 'Leave All Timer' set to '10000 milliseconds'. The 'Priority Queue Assignment' section shows a list of levels from Level 7 to Level 0, with Level 7 selected. At the bottom, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 13 Basic Setting > Switch Setup

| LABEL | DESCRIPTION |
|---|---|
| VLAN Type (Standalone mode only) | Choose 802.1Q or Port Based . The VLAN Setup screen changes depending on whether you choose 802.1Q VLAN type or Port Based VLAN type in this screen. See Chapter 7 on page 101 for more information. The Switch does not have port-based VLAN available in stacking mode (Active is enabled in Basic Setting > Stacking > Configuration), so this field does not display in stacking mode. |
| Bridge Control Protocol Transparency | Select Active to allow the Switch to handle bridging control protocols (STP, for example). You also need to define how to treat a BPDU in the Port Setup screen. |
| MAC Address Learning | MAC address learning reduces outgoing traffic broadcasts. For MAC address learning to occur on a port, the port must be active. |
| Aging Time | Enter a time from 10 to 1000000 seconds. This is how long all dynamically learned MAC addresses remain in the MAC address table before they age out (and must be relearned). |
| ARP Aging Time | |
| Aging Time | Enter a time from 60 to 1000000 seconds. This is how long dynamically learned ARP entries remain in the ARP table before they age out (and must be relearned). The setting here applies to ARP entries which are newly added in the ARP table after you click Apply . |
| GARP Timer: Switches join VLANs by making a declaration. A declaration is made by issuing a Join message using GARP. Declarations are withdrawn by issuing a Leave message. A Leave All message terminates all registrations. GARP timers set declaration timeout values. See Chapter 7 on page 101 for more background information. | |
| Join Timer | Join Timer sets the duration of the Join Period timer for GVRP in milliseconds. Each port has a Join Period timer. The allowed Join Time range is between 100 and 65535 milliseconds; the default is 200 milliseconds. See Chapter 7 on page 101 for more background information. |
| Leave Timer | Leave Time sets the duration of the Leave Period timer for GVRP in milliseconds. Each port has a single Leave Period timer. Leave Time must be two times larger than Join Timer ; the default is 600 milliseconds. |
| Leave All Timer | Leave All Timer sets the duration of the Leave All Period timer for GVRP in milliseconds. Each port has a single Leave All Period timer. Leave All Timer must be larger than Leave Timer. |

Table 13 Basic Setting > Switch Setup (continued)

| LABEL | DESCRIPTION |
|--|---|
| Priority Queue Assignment | IEEE 802.1p defines up to eight separate traffic types by inserting a tag into a MAC-layer frame that contains bits to define class of service. Frames without an explicit priority tag are given the default priority of the ingress port. Use the following fields to configure the priority level-to-physical queue mapping. The Switch has eight physical queues that you can map to the 8 priority levels. On the Switch, traffic assigned to higher index queues gets through faster while traffic in lower index queues is dropped if the network is congested. |
| Priority Level (The following descriptions are based on the traffic types defined in the IEEE 802.1d standard (which incorporates the 802.1p). | |
| Level 7 | Typically used for network control traffic such as router configuration messages. |
| Level 6 | Typically used for voice traffic that is especially sensitive to jitter (jitter is the variations in delay). |
| Level 5 | Typically used for video that consumes high bandwidth and is sensitive to jitter. |
| Level 4 | Typically used for controlled load, latency-sensitive traffic such as SNA (Systems Network Architecture) transactions. |
| Level 3 | Typically used for "excellent effort" or better than best effort and would include important business traffic that can tolerate some delay. |
| Level 2 | This is for "spare bandwidth". |
| Level 1 | This is typically used for non-critical "background" traffic such as bulk transfers that are allowed but that should not affect other applications and users. |
| Level 0 | Typically used for best-effort traffic. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

6.5 IP Setup

Use the **IP Setup** screen to configure the default gateway device, the default domain name server and add IP domains.

6.5.1 IP Interfaces

The Switch needs an IP address for it to be managed over the network. The factory default IP address is 192.168.1.1. The subnet mask specifies the network number portion of an IP address. The factory default subnet mask is 255.255.255.0.

On the Switch, an IP address is not bound to any physical ports. Since each IP address on the Switch must be in a separate subnet, the configured IP address is also known as IP interface (or routing domain). In addition, this allows routing between subnets based on the IP address without additional routers.

You can configure multiple routing domains on the same VLAN as long as the IP address ranges for the domains do not overlap. To change the IP address of the Switch in a routing domain, simply add a new routing domain entry with a different IP address in the same subnet.

You can configure up to 128 IP domains which are used to access and manage the Switch from the ports belonging to the pre-defined VLAN(s).

Note: You must configure a VLAN first. Each VLAN can only have one management IP address.

Figure 29 Basic Setting > IP Setup

| Index | IP Address | IP Subnet Mask | VID | Type | Renew | Release |
|-------|------------|----------------|-----|--------|-------|---------|
| 1 | 0.0.0.0 | 0.0.0.0 | 1 | DHCP | Click | Click |
| 2 | | 255.255.255.0 | 1 | Static | | |

The following table describes the labels in this screen.

Table 14 Basic Setting > IP Setup

| LABEL | DESCRIPTION |
|----------------|---|
| Index | This field displays the index number of an entry. |
| IP Address | This field displays IP address of the Switch in the IP domain. |
| IP Subnet Mask | This field displays the subnet mask of the Switch in the IP domain. |
| VID | This field displays the VLAN identification number of the IP domain on the Switch. |
| Type | This shows whether this IP address is dynamically assigned from a DHCP server or manually assigned (Static). |
| Renew | Click this to renew the dynamic IP address. |
| Release | Click this to release the dynamic IP address. |

6.5.2 IP Status Details

Use this screen to view IP status details. Click a number in the **Index** column in the **IP Status** screen to display the screen as shown next.

Figure 30 Basic Setting > IP Setup > IP Status Details: Static

| | |
|----------------|---------------|
| Type | Static |
| VID | 1 |
| IP Address | 192.168.1.1 |
| IP Subnet Mask | 255.255.255.0 |

The following table describes the labels in this screen.

Table 15 Basic Setting > IP Setup > IP Status Details: Static

| LABEL | DESCRIPTION |
|----------------|--|
| Type | This shows whether this IP address is dynamically assigned from a DHCP server or manually assigned (Static or DHCP). |
| VID | This is the VLAN identification number to which an IP routing domain belongs. |
| IP Address | This is the IP address of your Switch in dotted decimal notation for example 192.168.1.1. |
| IP Subnet Mask | This is the IP subnet mask of your Switch in dotted decimal notation for example 255.255.255.0. |

Figure 31 Basic Setting > IP Setup > IP Status Details: DHCP

| IP Status Detail | | IP Status |
|------------------|---------|-----------|
| Type | DHCP | |
| VID | 1 | |
| IP Address | 0.0.0.0 | |
| IP Subnet Mask | 0.0.0.0 | |
| Lease Time | | |
| Renew Time | | |
| Rebind Time | | |
| Lease Time Start | | |
| Lease Time End | | |
| Default Gateway | | |
| DNS Server | | |
| DNS Server | | |

The following table describes the labels in this screen.

Table 16 Basic Setting > IP Setup > IP Status Details: DHCP

| LABEL | DESCRIPTION |
|------------------|---|
| Type | This shows whether the IP address is dynamically assigned from a DHCP server or manually assigned (Static or DHCP). |
| VID | This is the VLAN identification number to which an IP routing domain belongs. |
| IP Address | This is the IP address of your Switch in dotted decimal notation for example 192.168.1.1. |
| IP Subnet Mask | This is the IP subnet mask of your Switch in dotted decimal notation for example 255.255.255.0. |
| Lease Time | This displays the length of time in seconds that this interface can use the current dynamic IP address from the DHCP server. |
| Renew Time | This displays the length of time from the lease start that the Switch will request to renew its current dynamic IP address from the DHCP server. |
| Rebind Time | This displays the length of time from the lease start that the Switch will request to get any dynamic IP address from the DHCP server. |
| Lease Time Start | This displays the date and time that the current dynamic IP address assignment from the DHCP server began. You should configure date and time in Basic Setting > General Setup . |
| Lease Time End | This displays the date and time that the current dynamic IP address assignment from the DHCP server will end. You should configure date and time in Basic Setting > General Setup . |
| Default Gateway | This displays the IP address of the default gateway assigned by the DHCP server. 0.0.0.0 means no gateway is assigned. |
| DNS Server | This displays the IP address of the primary and secondary DNS servers assigned by the DHCP server. 0.0.0.0 means no DNS server is assigned. |

6.5.3 IP Configuration

Use this screen to configure the default gateway device, the default domain name server and add IP domains.

Figure 32 Basic Setting > IP Setup > IP Configuration

The following table describes the labels in this screen.

Table 17 Basic Setting > IP Setup > IP Configuration

| LABEL | DESCRIPTION |
|---|--|
| Default Gateway | Type the IP address of the default outgoing gateway in dotted decimal notation, for example 192.168.1.254. |
| Default Management | Specify which traffic flow (In-Band or Out-of-band) the Switch is to send packets originating from itself (such as SNMP traps) or packets with unknown source. Select Out-of-band to have the Switch send the packets to the management port labelled MGMT . This means that device(s) connected to the other port(s) do not receive these packets. Select In-Band to have the Switch send the packets to all ports except the management port (labelled MGMT) to which connected device(s) do not receive these packets. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Out-of-band Management IP Address | |
| Use these fields to set the settings for the out-of-band management port. | |
| IP Address | Enter the out-of-band management IP address of your Switch in dotted decimal notation. For example, 192.168.0.1. |
| IP Subnet Mask | Enter the IP subnet mask of your Switch in dotted decimal notation, for example, 255.255.255.0. |

Table 17 Basic Setting > IP Setup > IP Configuration (continued)

| LABEL | DESCRIPTION |
|--|---|
| Default Gateway | Enter the IP address of the default outgoing gateway in dotted decimal notation, for example, 192.168.0.254 |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| IP Interface | |
| Use these fields to create or edit IP routing domains on the Switch. | |
| DHCP Client | Select this option if you have a DHCP server that can assign the Switch an IP address, subnet mask, a default gateway IP address and a domain name server IP address automatically. |
| Static IP Address | Select this option if you don't have a DHCP server or if you wish to assign static IP address information to the Switch. You need to fill in the following fields when you select this option. |
| IP Address | Enter the IP address of your Switch in dotted decimal notation, for example, 192.168.1.1. This is the IP address of the Switch in an IP routing domain. |
| IP Subnet Mask | Enter the IP subnet mask of an IP routing domain in dotted decimal notation, for example, 255.255.255.0. |
| VID | Enter the VLAN identification number to which an IP routing domain belongs. |
| Add | Click this to create a new entry. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Index | This field displays the index number of an entry. |
| IP Address | This field displays IP address of the Switch in the IP domain. |
| IP Subnet Mask | This field displays the subnet mask of the Switch in the IP domain. |
| VID | This field displays the VLAN identification number of the IP domain on the Switch. |
| Type | This field displays the type of IP address status. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. Note: Deleting all IP subnets locks you out of the Switch. |
| Cancel | Click Cancel to clear the check boxes. |

6.6 Port Setup

Use this screen to configure Switch port settings. Click **Basic Setting > Port Setup** in the navigation panel to display the configuration screen.

Figure 33 Basic Setting > Port Setup (GS3700 Series)

| Port Setup | | | | | | | | |
|------------|-------------------------------------|------|--------------|----------------|--------------------------|-----------------|--------------|--|
| Port | Active | Name | Type | Speed / Duplex | Flow Control | 802.1p Priority | BPDU Control | |
| * | <input type="checkbox"/> | | - | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 2 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 3 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 4 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 5 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 6 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 7 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 8 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 18 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 19 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 20 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 21 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 22 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 23 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 24 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 25 | <input checked="" type="checkbox"/> | | 1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 26 | <input checked="" type="checkbox"/> | | 1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 27 | <input checked="" type="checkbox"/> | | 1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 28 | <input checked="" type="checkbox"/> | | 1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |

Apply Cancel

Figure 34 Basic Setting > Port Setup (XGS3700 Series: Standalone mode)

| Port Setup | | | | | | | | |
|------------|-------------------------------------|------|--------------|---------------------|--------------------------|-----------------|--------------|------------|
| Port | Active | Name | Type | Speed / Duplex | Flow Control | 802.1p Priority | BPDU Control | Media Type |
| * | <input type="checkbox"/> | | - | 1000M / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 1 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 2 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 3 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 4 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 5 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 6 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 7 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 8 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 9 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 49 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 50 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 51 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 52 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |

Apply Cancel

Figure 35 Basic Setting > Port Setup (XGS3700 Series: Stacking mode)

| Port | Active | Name | Type | Speed / Duplex | Flow Control | 802.1p Priority | BPDU Control | Media Type |
|------|-------------------------------------|------|--------------|-------------------|--------------------------|-----------------|--------------|------------|
| 1/* | <input type="checkbox"/> | | - | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 1/1 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/2 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/3 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/4 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/5 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/6 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/7 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/8 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/48 | <input checked="" type="checkbox"/> | | 10/100/1000M | Auto-1000M | <input type="checkbox"/> | 0 | Peer | |
| 1/49 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |
| 1/50 | <input checked="" type="checkbox"/> | | 1000M/10G | 10G / Full Duplex | <input type="checkbox"/> | 0 | Peer | sfp_plus |

The following table describes the labels in this screen.

Table 18 Basic Setting > Port Setup

| LABEL | DESCRIPTION |
|----------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This is the port index number. In stacking mode, the first number is the slot ID and the second is the port number. * means all ports. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable a port. The factory default for all ports is enabled. A port must be enabled for data transmission to occur. |
| Name | Type a descriptive name that identifies this port. You can enter up to 64 alpha-numerical characters. Note: Due to space limitations, the port name may be truncated in some web configurator screens. |
| Type | This field displays 10M / 100M / 1000M for a 1000Base-T connection, 1000M for a 1000Base-X connection, and 10G for a 10 Gigabit connection (available only on the Switch that has a 10 Gigabit interface). |

Table 18 Basic Setting > Port Setup (continued)

| LABEL | DESCRIPTION |
|-----------------|--|
| Speed/Duplex | <p>Select the speed and the duplex mode of the Ethernet connection on this port. The choices are Auto, 10M/ Half Duplex, 10M/ Full Duplex, 100M/ Half Duplex and 100M/ Full Duplex for a 100Base-T connection. 1000M/ Full Duplex is supported by both 1000Base-T and 1000Base-X connections. 10G/ Full Duplex is supported by the 10 Gigabit Ethernet connections on the Switch that has a 10 Gigabit interface.</p> <p>Selecting Auto (auto-negotiation) allows one port to negotiate with a peer port automatically to obtain the connection speed and duplex mode that both ends support. When auto-negotiation is turned on, a port on the Switch negotiates with the peer automatically to determine the connection speed and duplex mode. If the peer port does not support auto-negotiation or turns off this feature, the Switch determines the connection speed by detecting the signal on the cable and using half duplex mode. When the Switch's auto-negotiation is turned off, a port uses the pre-configured speed and duplex mode when making a connection, thus requiring you to make sure that the settings of the peer port are the same in order to connect.</p> |
| Flow Control | <p>A concentration of traffic on a port decreases port bandwidth and overflows buffer memory causing packet discards and frame losses. Flow Control is used to regulate transmission of signals to match the bandwidth of the receiving port.</p> <p>The Switch uses IEEE 802.3x flow control in full duplex mode and backpressure flow control in half duplex mode.</p> <p>IEEE 802.3x flow control is used in full duplex mode to send a pause signal to the sending port, causing it to temporarily stop sending signals when the receiving port memory buffers fill.</p> <p>Back Pressure flow control is typically used in half duplex mode to send a "collision" signal to the sending port (mimicking a state of packet collision) causing the sending port to temporarily stop sending signals and resend later. Select Flow Control to enable it.</p> |
| 802.1p Priority | <p>This priority value is added to incoming frames without a (802.1p) priority queue tag. See Priority Queue Assignment in Table 13 on page 64 for more information.</p> |
| BPDU Control | <p>Configure the way to treat BPDUs received on this port. You must activate bridging control protocol transparency in the Switch Setup screen first.</p> <p>Select Peer to process any BPDU (Bridge Protocol Data Units) received on this port.</p> <p>Select Tunnel to forward BPDUs received on this port.</p> <p>Select Discard to drop any BPDU received on this port.</p> <p>Select Network to process a BPDU with no VLAN tag and forward a tagged BPDU.</p> |
| Media Type | <p>On the Switch that has a 10 Gigabit interface, such as the SFP+ slot, you can insert either an SFP+ transceiver or an SFP+ Direct Attach Copper (DAC). An SFP+ Direct Attach Copper (DAC) is an SFP+ housing that has no optical module but uses a fixed-length passive copper cable assembly, which reduces cost and power significantly.</p> <p>Select the media type (sfp_plus or dac10g) of the SFP+ module that is attached to the 10 Gigabit interface.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |


6.7 PoE

Note: The PoE function and the following screens are available for models ending in "HP" only.

The Switch supports both the IEEE 802.3af Power over Ethernet (PoE) and IEEE 802.3at High Power over Ethernet (PoE) standards. The Switch is Power Sourcing Equipment (PSE) because it provides a source of power via its Ethernet ports, and each device that receives power through an Ethernet port is a Powered Device (PD).

In the figure below, the IP camera and IP phone get their power directly from the Switch. Aside from minimizing the need for cables and wires, PoE removes the hassle of trying to find a nearby electric outlet to power up devices.

Figure 36 Powered Device Examples

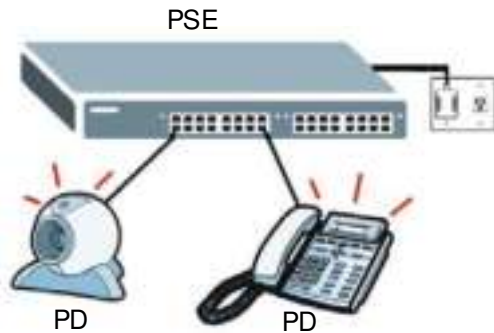

You can also set priorities so that the Switch is able to reserve and allocate power to certain PDs.

Note: The PoE devices that supply or receive power and their connected Ethernet cables must all be completely indoors.

To view the current amount of power that PDs are receiving from the Switch, click **Basic Setting** > **PoE Setup**.

Figure 37 Basic Setting > PoE Setup (Standalone mode)

| PoE Status | | | | PoE Time Range Status | | | PoE Setup |
|---------------------|--|--|--|-----------------------|--|--|-----------|
| PoE Mode | | | | Consumption | | | |
| Total Power (W) | | | | 460.0 | | | |
| Consuming Power (W) | | | | 0.0 | | | |
| Allocated Power (W) | | | | NA | | | |
| Remaining Power (W) | | | | 460.0 | | | |

| Port | State | Class | PD Priority | Power-Up | Consuming Power (mW) | Max Power (mW) |
|------|--------|-------|-------------|----------|----------------------|----------------|
| 1 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 2 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 3 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 4 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 5 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 6 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 7 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 8 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 9 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 10 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 41 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 42 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 43 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 44 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 45 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 46 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 47 | Enable | 0 | Low | 802.3af | 0 | 0 |
| 48 | Enable | 0 | Low | 802.3af | 0 | 0 |

Figure 38 Basic Setting > PoE Setup (Stacking mode)

| PoE Status | | PoE Setup | |
|---------------------|--|-------------|--|
| SLOT 1 | | | |
| PoE Mode | | Consumption | |
| Total Power (W) | | 450.0 | |
| Consuming Power (W) | | 0.0 | |
| Allocated Power (W) | | NA | |
| Remaining Power (W) | | 450.0 | |

| Port | State | Class | PD Priority | Consuming Power (mW) | Max Power (mW) |
|------|--------|-------|-------------|----------------------|----------------|
| 1/1 | Enable | 0 | Low | 0 | 0 |
| 1/2 | Enable | 0 | Low | 0 | 0 |
| 1/3 | Enable | 0 | Low | 0 | 0 |
| 1/4 | Enable | 0 | Low | 0 | 0 |
| 1/5 | Enable | 0 | Low | 0 | 0 |
| 1/6 | Enable | 0 | Low | 0 | 0 |
| 1/7 | Enable | 0 | Low | 0 | 0 |
| 1/8 | Enable | 0 | Low | 0 | 0 |
| 1/9 | Enable | 0 | Low | 0 | 0 |
| 1/10 | Enable | 0 | Low | 0 | 0 |
| 1/45 | Enable | 0 | Low | 0 | 0 |
| 1/46 | Enable | 0 | Low | 0 | 0 |
| 1/47 | Enable | 0 | Low | 0 | 0 |
| 1/48 | Enable | 0 | Low | 0 | 0 |

The following table describes the labels in this screen.

Table 19 Basic Setting > PoE Setup

| LABEL | DESCRIPTION |
|-------------------------------------|--|
| PoE Status | |
| PoE Mode | This field displays the power management mode used by the Switch, whether it is in Classification or Consumption mode. |
| Total Power (W) | This field displays the total power the Switch can provide to the connected PoE-enabled devices on the PoE ports. |
| Consuming Power (W) | This field displays the total amount of power the Switch is currently supplying to the connected PoE-enabled devices. |
| Allocated Power (W) | This field displays the total amount of power the Switch has reserved for PoE after negotiating with the connected PoE device(s). Consuming Power (W) can be less than or equal but not more than the Allocated Power (W) . |
| Remaining Power (W) | This field displays the amount of power the Switch can still provide for PoE. Note: The Switch must have at least 16 W of remaining power in order to supply power to a PoE device, even if the PoE device needs less than 16 W. |
| Port (Standalone and stacking mode) | This is the port index number. |
| State | This field shows which ports can receive power from the Switch. You can set this in the Basic Setting > PoE Setup screen. <ul style="list-style-type: none"> • Disable - The PD connected to this port cannot get power. • Enable - The PD connected to this port can receive power. |

Table 19 Basic Setting > PoE Setup

| LABEL | DESCRIPTION |
|----------------------------|--|
| Class | <p>This shows the power classification of the PD.</p> <p>This is a number from 0 to 4, where each value represents a range of power (W) and current (mA) that the PD requires to function. The ranges are as follows.</p> <ul style="list-style-type: none"> • Class 0 - Default, 0.44 to 12.94 • Class 1 - Optional, 0.44 to 3.84 • Class 2 - Optional, 3.84 to 6.49 • Class 3 - Optional, 6.49 to 12.95 • Class 4 - Reserved (PSEs classify as Class 0) in a switch that supports IEEE 802.3af only. Optional, 12.95 to 25.50 in a switch that supports IEEE 802.3at. |
| PD Priority | <p>When the total power requested by the PDs exceeds the total PoE power budget on the Switch, you can set the PD priority to allow the Switch to provide power to ports with higher priority first.</p> <ul style="list-style-type: none"> • Critical has the highest priority. • High has the Switch assign power to the port after all critical priority ports are served. • Low has the Switch assign power to the port after all critical and high priority ports are served. |
| Power-Up (Standalone mode) | This field displays the PoE standard the Switch uses to provide power on this port. |
| Consuming Power (mW) | This field displays the current amount of power consumed by the PD from the Switch on this port. |
| Max Power (mW) | This field displays the maximum amount of power the PD could use from the Switch on this port. |

6.7.1 PoE Time Range Status

Use this screen to see whether PoE is scheduled to be enabled on a port. Click the **PoE Time Range Status** link in the **Basic Setting > PoE Status** screen. The following screen opens.

Figure 39 Basic Setting > PoE Setup > PoE Time Range Status

| Port | Time Range | state |
|------|------------|-------|
| 1 | | - |
| 2 | | - |
| 3 | | - |
| 4 | | - |
| 5 | | - |
| 6 | | - |
| 7 | | - |
| 8 | | - |
| 9 | | - |
| 10 | | - |
| 11 | | - |
| 12 | | - |
| 13 | | - |
| 14 | | - |
| 15 | | - |
| 16 | | - |
| 17 | | - |
| 18 | | - |
| 19 | | - |
| 20 | | - |
| 21 | | - |
| 22 | | - |
| 23 | | - |
| 24 | | - |
| 25 | | - |
| 26 | | - |
| 27 | | - |
| 28 | | - |
| 29 | | - |
| 30 | | - |
| 31 | | - |
| 32 | | - |
| 33 | | - |
| 34 | | - |
| 35 | | - |
| 36 | | - |
| 37 | | - |
| 38 | | - |
| 39 | | - |
| 40 | | - |
| 41 | | - |
| 42 | | - |
| 43 | | - |
| 44 | | - |
| 45 | | - |
| 46 | | - |
| 47 | | - |
| 48 | | - |

The following table describes the labels in this screen.

Table 20 Basic Setting > PoE Setup > PoE Time Range Status

| LABEL | DESCRIPTION |
|------------|--|
| Port | This is the number of the port on the Switch. |
| Time Range | This field displays the name of the schedule which is applied to the port. PoE is enabled at the specified time/date. |
| state | This field displays whether the port can receive power from the Switch (In) or not (Out) currently. It shows - if there is no schedule applied to the port. |

6.7.2 PoE Setup

Use this screen to set the priority levels for the Switch in distributing power to PDs.

Click **Basic Setting** > **PoE Setup** in the navigation panel to display the screen as shown.

Figure 40 Basic Setting > PoE Setup > PoE Setup (Standalone mode)

| Port | PD | PD Priority | Power-Up | Max Power (mW) | Time Range |
|------|-------------------------------------|-------------|-----------|----------------|------------|
| * | <input type="checkbox"/> | Critical ▼ | 802.3af ▼ | | ▼ |
| 1 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 2 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 3 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 4 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 5 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 6 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 7 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 8 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 44 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 45 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 46 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 47 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |
| 48 | <input checked="" type="checkbox"/> | Low ▼ | 802.3af ▼ | | ▼ |

Apply Cancel

Figure 41 Basic Setting > PoE Setup > PoE Setup (Stacking mode)

| Port | PD | PD Priority | Max Power (mW) |
|------|-------------------------------------|-------------|----------------|
| 1/* | <input type="checkbox"/> | Critical ▼ | |
| 1/1 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/2 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/3 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/4 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/5 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/6 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/7 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/8 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/9 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/45 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/46 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/47 | <input checked="" type="checkbox"/> | Low ▼ | |
| 1/48 | <input checked="" type="checkbox"/> | Low ▼ | |

The following table describes the labels in this screen.

Table 21 Basic Setting > PoE Setup > PoE Setup

| LABEL | DESCRIPTION |
|------------------------------------|--|
| PoE Mode | <p>Select the power management mode you want the Switch to use.</p> <ul style="list-style-type: none"> • Classification - Select this if you want the Switch to reserve the Max Power (mW) to each PD according to the power classification of the PD. If the total power supply available is not enough to supply all connected PDs, then PDs with lower priority do not get power to function. • Consumption - Select this if you want the Switch to manage the total power supply so that each connected PD gets a resource. However, the power allocated by the Switch may be less than the Max Power (mW) of the PD. PDs with higher priority also get more power than those with lower priority levels. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or Stacking mode) | This is the port index number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| PD | <p>Select this to provide power to a PD connected to the port.</p> <p>If left unchecked, the PD connected to the port cannot receive power from the Switch.</p> |

Table 21 Basic Setting > PoE Setup > PoE Setup (continued)

| LABEL | DESCRIPTION |
|------------------------------|--|
| PD Priority | <p>This field is not available for the SFP or SFP+ ports.</p> <p>When the total power requested by the PDs exceeds the total PoE power budget on the Switch, you can set the PD priority to allow the Switch to provide power to ports with higher priority.</p> <p>Select Critical to give the PD connected to this port the highest priority.</p> <p>Select High to set the Switch to assign the remaining power to the port after all critical priority ports are served.</p> <p>Select Low to set the Switch to assign the remaining power to the port after all critical and high priority ports are served.</p> |
| Power-Up (Standalone mode) | <p>Set how the Switch provides power to a connected PD at power-up.</p> <p>802.3af - the Switch follows the IEEE 802.3af Power over Ethernet standard to supply power to the connected PDs during power-up.</p> <p>Legacy - the Switch can provide power to the connected PDs that require high inrush currents at power-up. Inrush current is the maximum, instantaneous input current drawn by the PD when first turned on.</p> <p>Pre-802.3at - the Switch initially offers power on the port according to the IEEE 802.3af standard, and then switches to support the IEEE 802.3at standard within 75 milliseconds after a PD is connected to the port. Select this option if the Switch is performing 2-event Layer-1 classification (PoE+ hardware classification) or the connected PD is NOT performing Layer 2 power classification using Link Layer Discovery Protocol (LLDP).</p> <p>802.3at - the Switch supports the IEEE 802.3at High Power over Ethernet standard and can supply power of up to 30W per Ethernet port. IEEE 802.3at is also known as PoE+ or PoE Plus. An IEEE 802.3at compatible device is referred to as Type 2. Power Class 4 (High Power) can only be used by Type 2 devices. If the connected PD requires a Class 4 current when it is turned on, it will be powered up in this mode.</p> |
| Max Power (mW) | <p>Set the maximum amount of power (from 1000 to 33000) the PD could use from the Switch on this port. Otherwise, leave the field blank to allow the connected PD to use power up to 33W in Consumption mode and 30W in Classification mode.</p> |
| Time Range (Standalone mode) | <p>Select a pre-defined schedule (created using the Advanced Application > Time Range screen) to control when the Switch enables PoE to provide power on the port.</p> <p>If you leave this field blank, PoE is disabled on the port.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |

Note: If the priority settings for two or more PoE ports are the same and the power budget is not enough, the ports will shut down randomly. We strongly recommend you set the priority for each PoE port to make sure the high priority ports get power.

Note: The total power available varies by Switch. Use the `show pwr` command to see the total power available for your Switch. The number of ports that can be powered by PoE is the (total power available) / (maximum power available per port).

In **Consumption** mode the power available per port is from 1 to 33 watts. Configure the maximum power available per port in the **Max Power (mW)** field in **Basic Setting > PoE Status > PoE Setup**.

In **Classification** mode the power available per port is from 1 to 30 watts. The maximum power available per port depends on the the power classification of the connected PD - see the **Class** field in **Basic Setting > PoE Status > PoE Setup**.

6.8 Interface Setup

An IPv6 address is configured on a per-interface basis. The interface can be a physical interface (for example, an Ethernet port) or a virtual interface (for example, a VLAN). The Switch supports the VLAN interface type for IPv6 at the time of writing.

Use this screen to set IPv6 interfaces on which you can configure an IPv6 address to access and manage the Switch. Click **Basic Setting > Interface Setup** in the navigation panel to display the configuration screen.

Figure 42 Basic Setting > Interface Setup

| Index | Interface Type | Interface ID | Interface |
|-------|----------------|--------------|-----------|
| 1 | VLAN | 123 | VLAN123 |
| 2 | VLAN | 1111 | VLAN1111 |

The following table describes the labels in this screen.

Table 22 Basic Setting > Interface Setup

| LABEL | DESCRIPTION |
|----------------|---|
| Interface Type | Select the type of IPv6 interface for which you want to configure. The Switch supports the VLAN interface type for IPv6 at the time of writing. |
| Interface ID | Specify a unique identification number (from 1 to 4094) for the interface. Note: To have IPv6 function properly, you should configure a static VLAN with the same ID number in the Advanced Setup > VLAN screens. |
| Add | Click this to create a new entry. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |

Table 22 Basic Setting > Interface Setup (continued)

| LABEL | DESCRIPTION |
|----------------|--|
| Index | This field displays the index number of an entry. |
| Interface Type | This field displays the type of interface. |
| Interface ID | This field displays the identification number of the interface. |
| Interface | This field displays the interface's descriptive name which is generated automatically by the Switch. The name is from a combination of the interface type and ID number. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

6.9 IPv6

Use this screen to view the IPv6 interface status and configure Switch's management IPv6 addresses. See [Appendix B on page 517](#) for more information about IPv6.

Click **Basic Setting** > **IPv6** in the navigation panel to display the IPv6 status screen as shown next.

Figure 43 Basic Setting > IPv6 Status

| Index | Interface | Active |
|-------|-----------|--------|
| 1 | VLAN123 | No |
| 2 | VLAN1111 | No |

The following table describes the labels in this screen.

Table 23 Basic Setting > IPv6 Status

| LABEL | DESCRIPTION |
|-----------|---|
| Index | This field displays the index number of an IPv6 interface. Click on an index number to view more interface details. |
| Interface | This is the name of the IPv6 interface you created. |
| Active | This field displays whether the IPv6 interface is activated or not. |

6.9.1 IPv6 Interface Status

Use this screen to view a specific IPv6 interface status and detailed information. Click an interface index number in the **Basic Setting** > **IPv6** screen. The following screen opens.

Figure 44 Basic Setting > IPv6 Interface Status

The screenshot shows the 'IPv6 Interface Status' page for 'Interface: VLAN123'. The page is divided into several sections:

- IPv6 Active:** disable
- MTU Size:**
- ICMPv6 Rate Limit Bucket Size:**
- ICMPv6 Rate Limit Error Interval:**
- Stateless Address Autoconfig:**
- Link Local Address:**
- Global Unicast Address(es):**
- Joined Group Address(es):**
- ND DAD Active:**
- Number of DAD Attempts:**
- NS-Interval (millisecond):**
- ND Reachable Time (millisecond):**
- DHCPv6 Client Active:** No
- Identity Association:**
 - IA Type
 - IAID
 - T1
 - T2
 - State
 - SID
 - Address
 - Preferred Lifetime
 - Valid Lifetime
- DNS Domain List:**

At the bottom of the page, there are two buttons: 'Restart DHCPv6 Client' and 'Click Here'.

The following table describes the labels in this screen.

Table 24 Basic Setting > IPv6 Interface Status

| LABEL | DESCRIPTION |
|----------------------------------|--|
| IPv6 Active | This field displays whether the IPv6 interface is activated or not. |
| MTU Size | This field displays the Maximum Transmission Unit (MTU) size for IPv6 packets on this interface. |
| ICMPv6 Rate Limit Bucket Size | This field displays the maximum number of ICMPv6 error messages which are allowed to transmit in a given time interval. If the bucket is full, subsequent error messages are suppressed. |
| ICMPv6 Rate Limit Error Interval | This field displays the time period (in milliseconds) during which ICMPv6 error messages of up to the bucket size can be transmitted. 0 means no limit. |
| Stateless Address Autoconfig | This field displays whether the Switch's interface can automatically generate a link-local address via stateless autoconfiguration. |

Table 24 Basic Setting > IPv6 Interface Status (continued)

| LABEL | DESCRIPTION |
|---------------------------------|---|
| Link Local Address | This field displays the Switch's link-local IP address and prefix generated by the interface. It also shows whether the IP address is preferred, which means it is a valid address and can be used as a sender or receiver address. |
| Global Unicast Address(es) | This field displays the Switch's global unicast address to identify this interface. |
| Joined Group Address(es) | This field displays the IPv6 multicast addresses of groups the Switch's interface joins. |
| ND DAD Active | This field displays whether Neighbor Discovery (ND) Duplicate Address Detection (DAD) is enabled on the interface. |
| Number of DAD Attempts | This field displays the number of consecutive neighbor solicitations the Switch sends for this interface. |
| NS-Interval (millisecond) | This field displays the time interval (in milliseconds) at which neighbor solicitations are re-sent for this interface. |
| ND Reachable Time (millisecond) | This field displays how long (in milliseconds) a neighbor is considered reachable for this interface. |
| DHCPv6 Client Active | This field displays whether the Switch acts as a DHCPv6 client to get an IPv6 address from a DHCPv6 server. |
| Identity Association | An Identity Association (IA) is a collection of addresses assigned to a DHCP client, through which the server and client can manage a set of related IP addresses. Each IA must be associated with exactly one interface. |
| IA Type | The IA type is the type of address in the IA. Each IA holds one type of address. IA_NA means an identity association for non-temporary addresses and IA_TA is an identity association for temporary addresses. |
| IAID | Each IA consists of a unique IAID and associated IP information. |
| T1 | This field displays the DHCPv6 T1 timer. After T1, the Switch sends the DHCPv6 server a Renew message. An IA_NA option contains the T1 and T2 fields, but an IA_TA option does not. The DHCPv6 server uses T1 and T2 to control the time at which the client contacts with the server to extend the lifetimes on any addresses in the IA_NA before the lifetimes expire. |
| T2 | This field displays the DHCPv6 T2 timer. If the time T2 is reached and the server does not respond, the Switch sends a Rebind message to any available server. |
| State | This field displays the state of the TA. It shows <ul style="list-style-type: none"> Active when the Switch obtains addresses from a DHCPv6 server and the TA is created. Renew when the TA's address lifetime expires and the Switch sends out a Renew message. Rebind when the Switch doesn't receive a response from the original DHCPv6 server and sends out a Rebind message to another DHCPv6 server. |
| SID | This field displays the DHCPv6 server's unique ID. |
| Address | This field displays the Switch's global address which is assigned by the DHCPv6 server. |
| Preferred Lifetime | This field displays how long (in seconds) that the global address remains preferred. |
| Valid Lifetime | This field displays how long (in seconds) that the global address is valid. |
| DNS | This field displays the DNS server address assigned by the DHCPv6 server. |
| Domain List | This field displays the address record when the Switch queries the DNS server to resolve domain names. |
| Restart DHCPv6 Client | Click Click Here to send a new DHCP request to the DHCPv6 server and update the IPv6 address and DNS information for this interface. |

6.9.2 IPv6 Configuration

Use this screen to configure IPv6 settings on the Switch. Click the **IPv6 Configuration** link in the **Basic Setting > IPv6** screen. The following screen opens.

Figure 45 Basic Setting > IPv6 > IPv6 Configuration

| IPv6 Configuration | | IPv6 Status |
|-------------------------|-------------------------------|----------------------------|
| | IPv6 Global Setup | Click Here |
| | IPv6 Interface Setup | Click Here |
| IPv6 Addressing | IPv6 Link-Local Address Setup | Click Here |
| | IPv6 Global Address Setup | Click Here |
| IPv6 Neighbor Discovery | IPv6 Neighbor Discovery Setup | Click Here |
| | IPv6 Router Discovery Setup | Click Here |
| | IPv6 Prefix Setup | Click Here |
| | IPv6 Neighbor Setup | Click Here |
| | DHCPv6 Client Setup | Click Here |

The following table describes the labels in this screen.

Table 25 Basic Setting > IPv6 > IPv6 Configuration

| LABEL | DESCRIPTION |
|-------------------------------|---|
| IPv6 Global Setup | Click the link to go to a screen where you can configure the global IPv6 settings on the Switch. |
| IPv6 Interface Setup | Click the link to go to a screen where you can enable an IPv6 interface on the Switch. |
| IPv6 Addressing | |
| IPv6 Link-Local Address Setup | Click the link to go to a screen where you can configure the IPv6 link-local address for an interface. |
| IPv6 Global Address Setup | Click the link to go to a screen where you can configure the IPv6 global address for an interface. |
| IPv6 Neighbor Discovery | |
| IPv6 Neighbor Discovery Setup | Click the link to go to a screen where you can configure the IPv6 neighbor discovery settings. |
| IPv6 Router Discovery Setup | Click the link to go to a screen where you can configure the IPv6 router discovery settings. |
| IPv6 Prefix Setup | Click the link to go to a screen where you can configure the Switch's IPv6 prefix list. |
| IPv6 Neighbor Setup | Click the link to go to a screen where you can create a static IPv6 neighbor entry in the Switch's IPv6 neighbor table. |
| DHCPv6 Client Setup | Click the link to go to a screen where you can configure the Switch DHCP settings. |

6.9.3 IPv6 Global Setup

Use this screen to configure the global IPv6 settings. Click the link next to **IPv6 Global Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 46 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Global Setup

The following table describes the labels in this screen.

Table 26 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Global Setup

| LABEL | DESCRIPTION |
|----------------------------------|---|
| IPv6 Hop Limit | Specify the maximum number of hops (from 1 to 255) in router advertisements. This is the maximum number of hops on which an IPv6 packet is allowed to transmit before it is discarded by an IPv6 router, which is similar to the TTL field in IPv4. |
| ICMPv6 Rate Limit Bucket Size | Specify the maximum number of ICMPv6 error messages (from 1 to 200) which are allowed to transmit in a given time interval. If the bucket is full, subsequent error messages are suppressed. |
| ICMPv6 Rate Limit Error Interval | Specify the time period (from 0 to 2147483647 milliseconds) during which ICMPv6 error messages of up to the bucket size can be transmitted. 0 means no limit. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |

6.9.4 IPv6 Interface Setup

Use this screen to turn on or off an IPv6 interface and enable stateless autoconfiguration on it. Click the link next to **IPv6 Interface Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 47 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Interface Setup

| Index | Interface | Active | Address Autoconfig |
|-------|-----------|--------|--------------------|
| 1 | VLAN123 | No | No |
| 2 | VLAN1111 | No | No |

The following table describes the labels in this screen.

Table 27 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Interface Setup

| LABEL | DESCRIPTION |
|--------------------|---|
| Interface | Select the IPv6 interface you want to configure. |
| Active | Select this option to enable the interface. |
| Address Autoconfig | Select this option to allow the interface to automatically generate a link-local address via stateless autoconfiguration. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| Active | This field displays whether the IPv6 interface is activated or not. |
| Address Autoconfig | This field displays whether stateless autoconfiguration is enabled on the interface. |

6.9.5 IPv6 Link-Local Address Setup

A link-local address uniquely identifies a device on the local network (the LAN). It is similar to a “private IP address” in IPv4. You can have the same link-local address on multiple interfaces on a device. A link-local unicast address has a predefined prefix of fe80::/10.

Use this screen to configure the interface's link-local address and default gateway. Click the link next to **IPv6 Link-Local Address Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 48 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Link-Local Address Setup

| Index | Interface | IPv6 Link Local Address | IPv6 Default Gateway |
|-------|-----------|-------------------------|----------------------|
| 1 | VLAN123 | | |
| 2 | VLAN1111 | | |

The following table describes the labels in this screen.

Table 28 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Link-Local Address Setup

| LABEL | DESCRIPTION |
|--------------------|--|
| Interface | Select the IPv6 interface you want to configure. |
| Link-Local Address | Manually configure a static IPv6 link-local address for the interface. |

Table 28 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Link-Local Address Setup (continued)

| LABEL | DESCRIPTION |
|-------------------------|---|
| Default Gateway | Set the default gateway IPv6 address for the interface. When an interface cannot find a routing information for a frame's destination, it forwards the packet to the default gateway. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| IPv6 Link-Local Address | This is the static IPv6 link-local address for the interface. |
| IPv6 Default Gateway | This is the default gateway IPv6 address for the interface. |

6.9.6 IPv6 Global Address Setup

Use this screen to configure the interface's IPv6 global address. Click the link next to **IPv6 Global Address Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 49 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Global Address Setup

The screenshot shows the 'IPv6 Global Address Setup' configuration page. At the top, there are tabs for 'IPv6 Global Address Setup' and 'IPv6 Configuration'. The 'Interface' dropdown is set to 'VLAN123'. Below it are input fields for 'IPv6 Global Address' and 'Prefix Length', and a checkbox for 'EUI-64' which is checked. There are three buttons: 'Add', 'Cancel', and 'Clear'. Below this is a table with the following columns: 'Index', 'Interface', 'IPv6 Global Address/Prefix Length', and 'EUI-64'. Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 29 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Global Address Setup

| LABEL | DESCRIPTION |
|---------------------|---|
| Interface | Select the IPv6 interface you want to configure. |
| IPv6 Global Address | Manually configure a static IPv6 global address for the interface. |
| Prefix Length | Specify an IPv6 prefix length that specifies how many most significant bits (start from the left) in the address compose the network address. |
| EUI-64 | Select this option to have the interface ID be generated automatically using the EUI-64 format. |
| Add | Click Add to create a new entry or update an existing one. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |

Table 29 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Global Address Setup (continued)

| LABEL | DESCRIPTION |
|---------------------------------------|---|
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| IPv6 Global Address/ Prefix Length | This field displays the IPv6 global address and prefix length for the interface. |
| EUI-64 | This shows whether the interface ID of the global address is generated using the EUI-64 format. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click Delete to remove the selected entry(ies) from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

6.9.7 IPv6 Neighbor Discovery Setup

Use this screen to configure neighbor discovery settings for each interface. Click the link next to **IPv6 Neighbor Discovery Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 50 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Discovery Setup

| Index | Interface | DAD Attempts | NS Interval | Reachable Time |
|-------|-----------|--------------|-------------|----------------|
| 1 | VLAN123 | 1 | 1000 | 30000 |
| 2 | VLAN1111 | 1 | 1000 | 30000 |

The following table describes the labels in this screen.

Table 30 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Discovery Setup

| LABEL | DESCRIPTION |
|----------------|--|
| Interface | Select the IPv6 interface you want to configure. |
| DAD Attempts | The Switch uses Duplicate Address Detection (DAD) with neighbor solicitation and advertisement messages to check whether an IPv6 address is already in use before assigning it to an interface, such as the link-local address it creates through stateless address autoconfiguration. Specify the number of consecutive neighbor solicitations (from 0 to 600) the Switch sends for this interface. Enter 0 to turn off DAD. |
| NS Interval | Specify the time interval (from 1000 to 3600000 milliseconds) at which neighbor solicitations are re-sent for this interface. |
| Reachable Time | Specify how long (from 1000 to 3600000 milliseconds) a neighbor is considered reachable for this interface. |

Table 30 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Discovery Setup (continued)

| LABEL | DESCRIPTION |
|----------------|---|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| DAD Attempts | This field displays the number of consecutive neighbor solicitations the Switch sends for this interface. |
| NS Interval | This field displays the time interval (in milliseconds) at which neighbor solicitations are re-sent for this interface. |
| Reachable Time | This field displays how long (in milliseconds) a neighbor is considered reachable for this interface. |

6.9.8 IPv6 Router Discovery Setup

Use this screen to configure router discovery settings for each interface. Click the link next to **IPv6 Router Discovery Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 51 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Router Discovery Setup

| Index | Interface | Flags | Minimum Interval | Maximum Interval | Lifetime | Suppress |
|-------|-----------|-------|------------------|------------------|----------|----------|
| 1 | VLAN123 | | 200 | 600 | 1800 | No |
| 2 | VLAN1111 | | 200 | 600 | 1800 | No |

The following table describes the labels in this screen.

Table 31 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Router Discovery Setup

| LABEL | DESCRIPTION |
|------------------|--|
| Interface | Select the IPv6 interface you want to configure. |
| Flags | Select the Managed Config Flag option to have the Switch set the “managed address configuration” flag (the M flag) to 1 in IPv6 router advertisements, which means IPv6 hosts use DHCPv6 to obtain IPv6 stateful addresses. Deselect the option to set the flag to 0 and the host will not use DHCPv6 to obtain IPv6 stateful addresses. Select the Other Config Flag option to have the Switch set the “Other stateful configuration” flag (the O flag) to 1 in IPv6 router advertisements, which means IPv6 hosts use DHCPv6 to obtain additional configuration settings, such as DNS information. Deselect the option to set the flag to 0 and the host will not use DHCPv6 to obtain additional configuration settings. |
| Minimum Interval | Specify the minimum time interval (from 3 to 1350 seconds) at which the Switch sends router advertisements for this interface. Note: The minimum time interval cannot be greater than three-quarters of the maximum time interval. |
| Maximum Interval | Specify the maximum time interval (from 4 to 1800 seconds) at which the Switch sends router advertisements for this interface. |
| Lifetime | Specify how long (from 0 to 9000 seconds) the router in router advertisements can be used as a default router for this interface. |
| Suppress | Select this option to set the Switch to not send router advertisements and responses to router solicitations on this interface. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| Flags | This field displays whether IPv6 hosts use DHCPv6 to obtain IPv6 stateful addresses (M) and/or additional configuration settings (O). |
| Minimum Interval | This field displays the minimum time interval at which the Switch sends router advertisements for this interface. |
| Maximum Interval | This field displays the maximum time interval at which the Switch sends router advertisements for this interface. |
| Lifetime | This field displays how long the router in router advertisements can be used as a default router for this interface. |
| Suppress | This field displays whether the Switch sends router advertisements and responses to router solicitations on this interface (No) or not (Yes). |

6.9.9 IPv6 Prefix Setup

Use this screen to configure the Switch's IPv6 prefix list for each interface. Click the link next to **IPv6 Prefix Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 52 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Prefix Setup

The following table describes the labels in this screen.

Table 32 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Prefix Setup

| LABEL | DESCRIPTION |
|----------------------|--|
| Interface | Select the IPv6 interface you want to configure. |
| Prefix | Set the IPv6 prefix that the Switch includes in router advertisements for this interface. |
| Prefix Length | Set the prefix length that the Switch includes in router advertisements for this interface. |
| Valid Lifetime | Specify how long (from 0 to 4294967295 seconds) the prefix is valid for on-link determination. |
| Preferred Lifetime | Specify how long (from 0 to 4294967295 seconds) that addresses generated from the prefix via stateless address autoconfiguration remain preferred. The preferred lifetime cannot exceed the valid lifetime. |
| Flags | Select No-Autoconfig Flag to not allow IPv6 hosts to use this prefix for stateless address autoconfiguration. Select No-Onlink Flag to not allow the specified prefix to be used for on-link determination. Select No-Advertise Flag to set the Switch to not include the specified IPv6 prefix, prefix length in router advertisements for this interface. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| Prefix/Prefix Length | This field displays the IPv6 prefix and prefix length that the Switch includes in router advertisements for this interface. |
| Valid Lifetime | This field displays the IPv6 prefix valid lifetime. |

Table 32 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Prefix Setup (continued)

| LABEL | DESCRIPTION |
|--------------------|---|
| Preferred Lifetime | This field displays the preferred lifetime of an IPv6 address generated from the prefix. |
| Delete | Check the entry(ies) that you want to remove in the Delete column and then click Delete to remove the selected entry(ies) from the summary table. |
| Cancel | Click Cancel to clear the Delete check boxes. |

6.9.10 IPv6 Neighbor Setup

Use this screen to create a static IPv6 neighbor entry in the Switch's IPv6 neighbor table to store the neighbor information permanently. Click the link next to **IPv6 Neighbor Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 53 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Setup

The following table describes the labels in this screen.

Table 33 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Setup

| LABEL | DESCRIPTION |
|------------------|---|
| Interface Type | Select the type of IPv6 interface for which you want to configure. The Switch supports the VLAN interface type for IPv6 at the time of writing. |
| Interface ID | Specify a unique identification number (from 1 to 4094) for the interface. Note: A static IPv6 neighbor entry displays in the Management > Neighbor Table screen only when the interface ID is also created in the Basic Setup > Interface Setup screen. Note: To have IPv6 function properly, you should configure a static VLAN with the same ID number in the Advanced Setup > VLAN screens. |
| Neighbor Address | Specify the IPv6 address of the neighboring device which can be reached through the interface. |
| MAC | Specify the MAC address of the neighboring device which can be reached through the interface. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |

Table 33 Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Setup (continued)

| LABEL | DESCRIPTION |
|------------------|---|
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| Neighbor Address | This field displays the IPv6 address of the neighboring device which can be reached through the interface |
| MAC | This field displays the MAC address of the neighboring device which can be reached through the interface. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click Delete to remove the selected entry(ies) from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

6.9.11 DHCPv6 Client Setup

Use this screen to configure the Switch's DHCP settings when it is acting as a DHCPv6 client. Click the link next to **IPv6 Neighbor Setup** in the **IPv6 Configuration** screen to display the screen as shown next.

Figure 54 Basic Setting > IPv6 > IPv6 Configuration > DHCPv6 Client Setup

| Index | Interface | IA-NA | Rapid-Commit | DNS | Domain-List | Information Refresh Minimum |
|-------|-----------|-------|--------------|-----|-------------|-----------------------------|
| 1 | VLAN123 | No | No | No | No | 86400 |
| 2 | VLAN1111 | No | No | No | No | 86400 |

The following table describes the labels in this screen.

Table 34 Basic Setting > IPv6 > IPv6 Configuration > DHCPv6 Client Setup

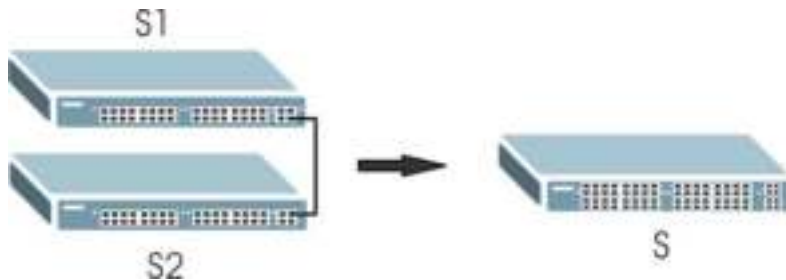
| LABEL | DESCRIPTION |
|-----------|---|
| Interface | Select the IPv6 interface you want to configure. |
| IA Type | Select IA-NA to set the Switch to get a non-temporary IP address from the DHCPv6 server for this interface. Optionally, you can also select Rapid-Commit to have the Switch send its DHCPv6 Solicit message with a Rapid Commit option to obtain information from the DHCPv6 server by a rapid two-message exchange. The Switch discards any Reply messages that do not include a Rapid Commit option. The DHCPv6 server should also support the Rapid Commit option to have it work well. |

Table 34 Basic Setting > IPv6 > IPv6 Configuration > DHCPv6 Client Setup (continued)

| LABEL | DESCRIPTION |
|-----------------------------|---|
| Options | Select DNS to have the Switch obtain DNS server IPv6 addresses and/or select Domain-List to have the Switch obtain a list of domain names from the DHCP server. |
| Information Refresh Minimum | Specify the time interval (from 600 to 4294967295 seconds) at which the Switch exchanges other configuration information with a DHCPv6 server again. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the interface index number. Click on an index number to change the settings. |
| Interface | This is the name of the IPv6 interface you created. |
| IA-NA | This field displays whether the Switch obtains a non-temporary IP address from the DHCPv6 server. |
| Rapid-Commit | This field displays whether the Switch obtains information from the DHCPv6 server by a rapid two-message exchange. |
| DNS | This field displays whether the Switch obtains DNS server IPv6 addresses from the DHCPv6 server. |
| Domain-List | This field displays whether the Switch obtains a list of domain names from the DHCP server. |
| Information Refresh Minimum | This field displays the time interval (in seconds) at which the Switch exchanges other configuration information with a DHCPv6 server again. |

6.10 Stacking

Stacking is directly connecting Switches to form a larger system that behaves as a single Switch or a virtual chassis with increased port density.

Figure 55 Switch Stacking Concept

The last two SFP ports of your Switch are dedicated for Switch stacking. These are the Switches that support stacking at the time of writing.

Table 35 Switch Stacking

| MODELS WITH STACKING SUPPORT |
|------------------------------|
| XGS3700-24 |
| XGS3700-24HP |

Table 35 Switch Stacking

| MODELS WITH STACKING SUPPORT |
|------------------------------|
| XGS3700-48 |
| XGS3700-48HP |


Note: Up to 8 Switches per stack are allowed.

You can manage each Switch in the stack from a master Switch using its web configurator or console. Each Switch supports up to two stacking channels. Use the master Switch to assign a 'slot ID' for each 'linecard' non-master Switch. 'Slot' refers to a Switch in the the 'virtual chassis' stack.

The advantages of stacking are:

- High port density - for example, two 24-port Switches can become one 48-port logical Switch
- Centralized management - log into a single IP address of the master switch to control all Switches in the stacking system using the web configurator, CLI, SNMP or FTP
- Redundancy - Data redundancy allows traffic to be forwarded even if one Switch in the stack fails. Management redundancy lets you still manage the stack even if one Switch in the stack fails
- Modularity and hot-swappable - you can add, remove, or replace Switches to increase or decrease the stack with minimum disruption to ongoing network traffic.

You can build a Switch stack using a ring or chain topology. In a ring topology, the last Switch is connected to the first.

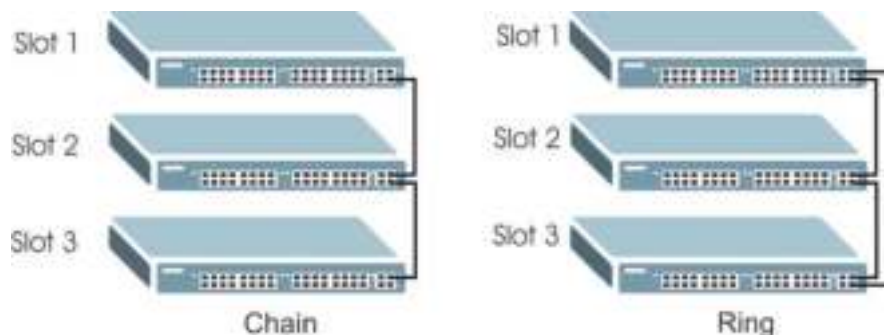Figure 56 Stacking Topology

6.10.1 Stacking Status

Click **Basic Setting** > **Stacking** in the navigation panel to display the **Stacking Status** screen as shown next.

Figure 57 Basic Setting > Stacking Status

| Stacking Status | | | | Configuration |
|-----------------|--------------|--------|-------------------|---------------|
| Slot | Name | Status | MAC address | Role |
| 1 | XGS3700-48HP | active | 00:19:eb:00:00:02 | master |
| 2 | XGS3700-24 | active | d0:b2:de:71:96:d7 | backup |

| StackingTopology : Chain | | | | |
|--------------------------|--------------------|-------|--------------------|-------|
| Slot | Stacking Channel 1 | | Stacking Channel 2 | |
| No. | Neighbor | Speed | Neighbor | Speed |
| 1 | - | - | slot 2 | 10G |
| 2 | - | - | slot 1 | 10G |

The following table describes the labels in this screen.

Table 36 Basic Setting > Stacking > Stacking Status

| LABEL | DESCRIPTION |
|-------------------------------|---|
| Slot | 'Slot' refers to a Switch in the the 'virtual chassis' stack. This field displays the slot ID of the stacked Switch. You can click the ID number to go to the Stacking Slot Status screen. |
| Name | This field displays the model name of the stacked Switch. |
| Status | This field displays whether the stacked Switch is active or inactive in a stack system. Init means the slot ID is initialized by the master Switch. |
| MAC address | This field displays the MAC address of the stacked Switch. |
| Role | This field displays whether the Switch is a master, backup or linecard. There's only one master and one backup Switch in the stacking model; all others are linecard Switches. |
| Stacking Topology: Ring/Chain | |
| Slot No. | This field displays the slot ID number of the stacked Switch. |
| Stacking Channel1 | |
| Neighbor | This field displays the neighbor Switch that is connected using slot channel 1 of the Switch. |
| Speed | This field displays the Ethernet speed of stacking channel 1 of the Switch. |
| Stacking Channel2 | |
| Neighbor | This field displays the neighbor Switch that is connected to slot channel 2 of the Switch. |
| Speed | This field displays the Ethernet speed of stacking channel 2 of the Switch. |

6.10.2 Stacking Slot

Click **Basic Setting > Stacking > Stacking Status > Slot number** in the navigation panel to display the **Stacking Slot Status** screen as shown next.

Figure 58 Basic Setting > Stacking > Stacking Status > Slot number

| Stacking Slot Status | | Stacking Status |
|--------------------------------|-------------------|-----------------|
| Slot | 1 | |
| Stacking | active | |
| Role | master | |
| Force Master Mode | inactive | |
| Priority | 32 | |
| Slot ID After Reboot | auto | |
| Stacking Status | active | |
| Master Capable | auto | |
| Stacking MAC Address | 00:19:cb:00:00:02 | |
| Stacking Channel 1 | down | |
| Stacking Channel 2 | up | |
| Stacking Up Time | 1:42:48 | |
| ZyNOS Version *Running / Flash | V4.30(AAGF.0)03 | |

The following table describes the labels in this screen.

Table 37 Basic Setting > Stacking > Stacking Status > Slot number

| LABEL | DESCRIPTION |
|------------------------------|--|
| Slot | This field displays the slot ID of the Switch. |
| Stacking | This field displays whether the Switch is active in the stacking system. |
| Role | This field displays whether the stacked Switch is a master or linecard Switch. |
| Force Master Mode | This field displays whether the Force Master Mode is enabled or disabled on this Switch. The Active Force Master Mode forces this Switch to become a master Switch. This Switch will have the highest priority over all other Switch in the stack. If two Switches are set as masters, they will have the same priority level, but the Switch that has the longest active run-time will be selected as the master Switch automatically. |
| Priority | This field displays the priority level of the Switch. A higher number represents higher priority. |
| Slot ID After Reboot | This field displays the slot ID of the Switch after a reboot. You can save the slot ID of the Switch after a reboot by clicking Freeze in the Stacking Configuration screen. See Section 6.10.3 on page 97 . |
| Stacking Status | This field displays whether the stacked Switch is active or inactive in a stack. Init means the slot ID is initialized by the master Switch. |
| Master Capable | This field displays whether the Switch has capacity to become a master Switch. Auto means the stack system master election process will determine if the Switch can be assigned as a master Switch. |
| Stacking MAC Address | This field displays the stacking Switch MAC address. |
| Stacking Channel 1 | This field displays the status of the port stacking channel 1 of the Switch. It will display up for active or down for inactive. |
| Stacking Channel 2 | This field displays the status of the port stacking channel 2 of the Switch. It will display up for active or down for inactive. |
| Stacking Up Time | This field displays the time that the active Switch in a stack has been running. |
| ZyNOS version *Running/Flash | This field displays the ZyNOS firmware that is currently running on the Switch. |

6.10.3 Stacking Configuration

A supported Switch can change between stacking and standalone mode by selecting the **Active** check box in the **Basic Setting > Stacking > Configuration** screen.

Note: When you change modes, all configurations except user accounts, but including running configuration, config01 and config02 will be erased and the Switch will reboot with a new config01. Therefore, you should back up previous configurations if you want to reload them later.

Stacking will automatically choose a master Switch in a stack but you can overwrite that by actively forcing a Switch to become a master Switch. In the **Stacking Configuration** screen, click **Active Force Master Mode** to choose the master Switch. This master Switch will have the highest priority over all other stacked Switches even when they have same priority value.

If two or more Switches have **Active Force Master Mode** enabled, then the Switch will use **System Priority** to determine which is master. If they have the same **System Priority**, then the Switch with the longest up-time is selected. Uptime is measured in increments of 10 minutes. The Switch with the higher number of increments is selected. If they have the same uptime, then the Switch with the lowest MAC address will be the master.

This is the master election priority in a stack system:


- 1 **Active Force Master Mode**
- 2 Highest **Stacking Priority**
- 3 Longest **System Up Time**
- 4 Lowest MAC Address

Note: Master election occurs when a stacking port link status changes (up / down). The link status changes when (for example):

- a stacking port cable is disconnected
- a Switch in the stack reboots (as happens after you change stacking mode to standalone)
- you add a Switch to the stack or
- a Switch in the stack shuts down.

Use the following procedure to create a stack:

- 1 Select a Switch to be the master. Change its mode to stacking mode. You will see a message asking you to confirm the change. Click **OK** to confirm and the Switch will reboot automatically using a new config01.

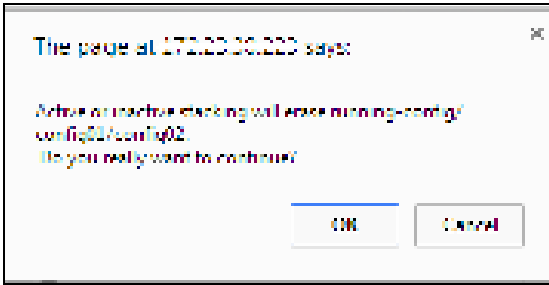

- 2 After reboot completes, the master LED will turn on.
- 3 Configure the Switch stacking priority to a high value, such as 63.
- 4 Change a second Switch to stacking mode and wait for it to finish rebooting automatically. This master LED will also turn on.
- 5 Connect the two Switches using the stacking ports for the Switch defined.
- 6 The second Switch master LED will then turn off, and its **Sys** LED will blink while it's initializing. Please wait until it stops blinking, indicating that it has joined the stack.
- 7 Repeat steps 4 to 6 to connect other Switches to the stack.

When the Switch is in Stacking mode, the web configurator will change port and VLAN port settings to support the stacking mode. See [Section 6.6 on page 69](#) and [Section 7.7 on page 106](#) for details on the port settings.

Click **Basic Setting** > **Stacking** > **Configuration** to see the following screen.

Figure 59 Basic Setting > Stacking > Configuration



The following table describes the labels in this screen.

Table 38 Basic Setting > Stacking > Configuration

| LABEL | DESCRIPTION |
|----------------------|---|
| Active | Select the Active check box to put the Switch in stacking mode. This will erase the running configuration, config01 and config02. The master Switch's login will remain unchanged. If you want to reload a previous configuration, please back one up first. |
| Apply | Click Apply to activate the stacking mode. |
| Cancel | Click Cancel to clear the Active check box. |
| Force Master Mode | Select the Force Master Mode check box to force this Switch to become a master Switch. |
| System Priority | Enter a number (from 1 to 63) to assign a priority for the stacking Switch. The higher the number, the higher the priority. |
| Apply | Click Apply to save the Active Force Master Mode and System Priority fields. |
| Cancel | Click Cancel to clear the Active Force Master Mode and System Priority fields. |
| Slot ID Freeze | Click the Freeze button to have the Switch retain its slot ID after reboot. |
| Slot | This field displays the slot or port channel of the stacked Switch. |
| MAC Address | This field displays the MAC address of the stacked Switch. |
| Type | This field displays the model name of the Switch. |
| Slot ID After Reboot | Choose Auto to have a new slot ID assigned after reboot. If you want to keep the original slot ID after reboot, you can click Freeze or select an ID in the Slot ID After Reboot list box. |
| Apply | Click Apply to save the Slot ID After reboot field. |
| Cancel | Click Cancel to clear the Slot ID After reboot field. |

6.11 DNS

DNS (Domain Name System) is for mapping a domain name to its corresponding IP address and vice versa. Use the **DNS** screen to configure and view the default DNS servers on the Switch.

Figure 60 Basic Setting > DNS

The following table describes the labels in this screen.

Table 39 Basic Setting > DNS

| LABEL | DESCRIPTION |
|---------------------------|---|
| Static Domain Name Server | |
| Preference | This is the priority of the DNS server address. |

Table 39 Basic Setting > DNS (continued)

| LABEL | DESCRIPTION |
|--------------------------|---|
| Server Address | Enter a domain name server IPv6/IPv4 address in order to be able to use a domain name instead of an IP address. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Domain Name Server Table | |
| Index | This field displays priority of the DNS server address. |
| Server Address | This field displays the IP address of the DNS server. |
| Source | This field displays whether the DNS server address is configured manually (Static) or obtained automatically using DHCP/DHCPv6 (Dynamic). |

The type of screen you see here depends on the **VLAN Type** you selected in the **Switch Setup** screen which is only available in standalone mode. The Switch does not support port-based VLANs in stacking mode. This chapter shows you how to configure 802.1Q tagged and port-based VLANs.

7.1 Introduction to IEEE 802.1Q Tagged VLANs

A tagged VLAN uses an explicit tag (VLAN ID) in the MAC header to identify the VLAN membership of a frame across bridges - they are not confined to the switch on which they were created. The VLANs can be created statically by hand or dynamically through GVRP. The VLAN ID associates a frame with a specific VLAN and provides the information that switches need to process the frame across the network. A tagged frame is four bytes longer than an untagged frame and contains two bytes for the TPID (Tag Protocol Identifier, residing within the type/length field of the Ethernet frame) and two bytes for the TCI (Tag Control Information, starting after the source address field of the Ethernet frame).

The CFI (Canonical Format Indicator) is a single-bit flag, always set to zero for Ethernet switches. If a frame received at an Ethernet port has a CFI set to 1, then that frame should not be forwarded as it is to an untagged port. The remaining twelve bits define the VLAN ID, giving a possible maximum number of 4,096 VLANs. Note that user priority and VLAN ID are independent of each other. A frame with VID (VLAN Identifier) of null (0) is called a priority frame, meaning that only the priority level is significant and the default VID of the ingress port is given as the VID of the frame. Of the 4096 possible VIDs, a VID of 0 is used to identify priority frames and the value 4095 (FFF) is reserved, so the maximum possible number of VLAN configurations is 4,094.

| TPID | User Priority | CFI | VLAN ID |
|---------|---------------|-------|---------|
| 2 Bytes | 3 Bits | 1 Bit | 12 bits |

7.1.1 Forwarding Tagged and Untagged Frames

Each port on the Switch is capable of passing tagged or untagged frames. To forward a frame from an 802.1Q VLAN-aware switch to an 802.1Q VLAN-unaware switch, the Switch first decides where to forward the frame and then strips off the VLAN tag. To forward a frame from an 802.1Q VLAN-unaware switch to an 802.1Q VLAN-aware switch, the Switch first decides where to forward the frame, and then inserts a VLAN tag reflecting the ingress port's default VID. The default PVID is VLAN 1 for all ports, but this can be changed.

A broadcast frame (or a multicast frame for a multicast group that is known by the system) is duplicated only on ports that are members of the VID (except the ingress port itself), thus confining the broadcast to a specific domain.

7.2 Automatic VLAN Registration

GARP and GVRP are the protocols used to automatically register VLAN membership across switches.

7.2.1 GARP

GARP (Generic Attribute Registration Protocol) allows network switches to register and de-register attribute values with other GARP participants within a bridged LAN. GARP is a protocol that provides a generic mechanism for protocols that serve a more specific application, for example, GVRP.

7.2.1.1 GARP Timers

Switches join VLANs by making a declaration. A declaration is made by issuing a Join message using GARP. Declarations are withdrawn by issuing a Leave message. A Leave All message terminates all registrations. GARP timers set declaration timeout values.

7.2.2 GVRP

GVRP (GARP VLAN Registration Protocol) is a registration protocol that defines a way for switches to register necessary VLAN members on ports across the network. Enable this function to permit VLAN groups beyond the local Switch.

Please refer to the following table for common IEEE 802.1Q VLAN terminology.

Table 40 IEEE 802.1Q VLAN Terminology


| VLAN PARAMETER | TERM | DESCRIPTION |
|-----------------------------|------------------------|--|
| VLAN Type | Permanent VLAN | This is a static VLAN created manually. |
| | Dynamic VLAN | This is a VLAN configured by a GVRP registration/deregistration process. |
| VLAN Administrative Control | Registration Fixed | Fixed registration ports are permanent VLAN members. |
| | Registration Forbidden | Ports with registration forbidden are forbidden to join the specified VLAN. |
| | Normal Registration | Ports dynamically join a VLAN using GVRP. |
| VLAN Tag Control | Tagged | Ports belonging to the specified VLAN tag all outgoing frames transmitted. |
| | Untagged | Ports belonging to the specified VLAN don't tag all outgoing frames transmitted. |
| VLAN Port | Port VID | This is the VLAN ID assigned to untagged frames that this port received. |
| | Acceptable Frame Type | You may choose to accept both tagged and untagged incoming frames, just tagged incoming frames or just untagged incoming frames on a port. |
| | Ingress filtering | If set, the Switch discards incoming frames for VLANs that do not have this port as a member. |

7.3 Port VLAN Trunking

Enable **VLAN Trunking** on a port to allow frames belonging to unknown VLAN groups to pass through that port. This is useful if you want to set up VLAN groups on end devices without having to configure the same VLAN groups on intermediary devices.

The following figure describes **VLAN Trunking**. Suppose you want to create VLAN groups 1 and 2 (V1 and V2) on devices A and B. Without **VLAN Trunking**, you must configure VLAN groups 1 and 2 on all intermediary switches C, D and E; otherwise they will drop frames with unknown VLAN group tags. However, with **VLAN Trunking** enabled on a port(s) in each intermediary switch you only need to create VLAN groups in the end devices (A and B). C, D and E automatically allow frames with VLAN group tags 1 and 2 (VLAN groups that are unknown to those switches) to pass through their VLAN trunking port(s).

Figure 61 Port VLAN Trunking

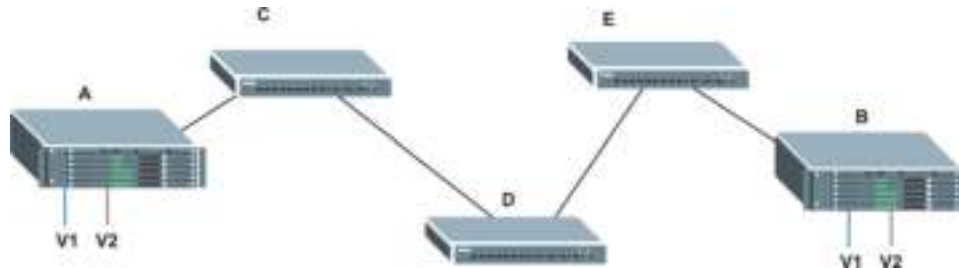

7.4 Select the VLAN Type

Select a VLAN type in the **Basic Setting > Switch Setup** screen. VLAN Type is not applicable in Stacking mode.

Figure 62 Switch Setup: Select VLAN Type



7.5 802.1Q Static VLAN

Make sure **802.1Q** is selected in the **Basic Setting > Switch Setup** screen.

Use a static VLAN to decide whether an incoming frame on a port should be

- sent to a VLAN group as normal depending on its VLAN tag.
- sent to a group whether it has a VLAN tag or not.
- blocked from a VLAN group regardless of its VLAN tag.

You can also tag all outgoing frames (that were previously untagged) from a port with the specified VID.

7.5.1 VLAN Status

See [Section 7.1 on page 101](#) for more information on 802.1Q VLAN. Click **Advanced Application > VLAN** from the navigation panel to display the **VLAN Status** screen as shown next.

Figure 63 Advanced Application > VLAN: VLAN Status



The following table describes the labels in this screen.

Table 41 Advanced Application > VLAN: VLAN Status

| LABEL | DESCRIPTION |
|------------------------------|--|
| VLAN Search by VID | Enter an existing VLAN ID number(s) (separated by a comma) and click Search to display only the specified VLAN(s) in the list below. Leave this field blank and click Search to display all VLANs configured on the Switch. |
| The Number of VLAN | This is the number of VLANs configured on the Switch. |
| The Number of Search Results | This is the number of VLANs that match the searching criteria and display in the list below. This field displays only when you use the Search button to look for certain VLANs. |
| Index | This is the VLAN index number. Click on an index number to view more VLAN details. |
| VID | This is the VLAN identification number that was configured in the Static VLAN screen. |
| Elapsed Time | This field shows how long it has been since a normal VLAN was registered or a static VLAN was set up. |
| Status | This field shows how this VLAN was added to the Switch. <ul style="list-style-type: none"> • Dynamic - using GVRP • Static - manually added as a normal VLAN • Private - manually added as a private VLAN (primary, isolated or community) • Voice - manually added as a Voice VLAN • RMirror - manually added as a remote port mirroring VLAN • MVR - added via Multicast VLAN Registration (MVR) |
| Change Pages | Click Previous or Next to show the previous/next screen if all status information cannot be seen in one screen. |

7.5.2 VLAN Details

Use this screen to view detailed port settings and status of the VLAN group. See [Section 7.1 on page 101](#) for more information on 802.1Q VLAN. Click on an index number in the **VLAN Status** screen to display VLAN details.

Figure 64 Advanced Application > VLAN > VLAN Detail

| VLAN Detail | | VLAN Status | | | |
|-------------|------|---|--|--------------|--------|
| VID | Slot | Port Number | | Elapsed Time | Status |
| 1 | | 2 4 6 8 10 12 14 16 18 20 22 24 26 28 30 32 34 36 38 40 42 44 46 48 50 52 | | | |

| Private VLAN Status | | | |
|---------------------|----------------|------|-----------|
| Primary VLAN | Secondary VLAN | Type | Port List |
| | | | |

Change Pages Previous Next

The following table describes the labels in this screen.

Table 42 Advanced Application > VLAN > VLAN Detail

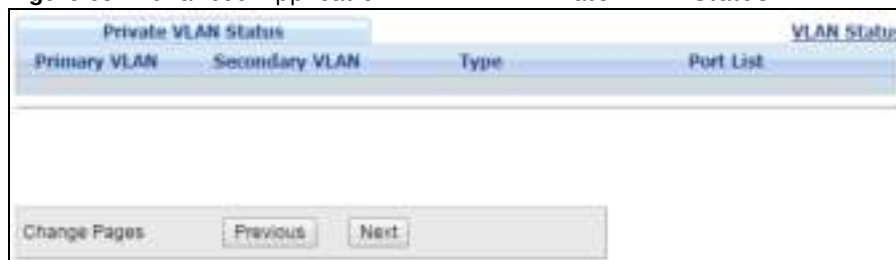
| LABEL | DESCRIPTION |
|---------------------|--|
| VLAN Status | Click this to go to the VLAN Status screen. |
| VID | This is the VLAN identification number that was configured in the Static VLAN screen. |
| Slot | 'Slot' refers to a Switch in the the 'virtual chassis' stack. This field displays the slot ID of the stacked Switch. |
| Port Number | This column displays the ports that are participating in a VLAN. A tagged port is marked as T , an untagged port is marked as U and ports not participating in a VLAN are marked as "-". |
| Elapsed Time | This field shows how long it has been since a normal VLAN was registered or a static VLAN was set up. |
| Status | This field shows how this VLAN was added to the Switch. <ul style="list-style-type: none"> • Dynamic - using GVRP • Static - manually added as a normal VLAN • Private - manually added as a private VLAN (primary, isolated or community) • Voice - manually added as a Voice VLAN • RMirror - manually added as a remote port mirroring VLAN • MVR - added via Multicast VLAN Registration (MVR) |
| Private VLAN Status | These fields show private VLAN information for the selected VLAN. See Section 33.1 on page 336 for more information on private VLANs. |
| Primary VLAN | This field shows the primary VLAN ID in the selected VLAN. |
| Secondary VLAN | This field shows the secondary VLAN ID in the selected VLAN. |
| Type | This field shows the type of private VLAN: Primary , Community or Isolated . |

Table 42 Advanced Application > VLAN > VLAN Detail (continued)

| LABEL | DESCRIPTION |
|--------------|---|
| Port List | This shows the ports mapped to the private VLAN using the Advanced Application > Private VLAN or Advanced Application > VLAN > Static VLAN screen. |
| Change Pages | Click Previous or Next to show the previous/next screen if all status information cannot be seen in one screen. |

7.6 Private VLAN Status

Use this screen to view all private VLANs created on the Switch. Click **Advanced Application > VLAN > Private VLAN Status** to see the following screen.

Figure 65 Advanced Application > VLAN > Private VLAN Status

The following table describes the labels in this screen.

Table 43 Advanced Application > VLAN > Private VLAN Status

| LABEL | DESCRIPTION |
|---------------------|---|
| Private VLAN Status | These fields show information for the all private VLANs. See also Advanced Application > Private VLAN . |
| Primary VLAN | This field shows the primary VLAN ID in a private VLAN. |
| Secondary VLAN | This field shows the secondary VLAN ID in a private VLAN. |
| Type | This field shows the type of private VLAN: Primary , Community or Isolated . |
| Port List | This shows the ports mapped to the private VLAN using the Advanced Application > Private VLAN or Advanced Application > VLAN > Static VLAN screen. |
| Change Pages | Use the Previous and Next buttons to display different pages. |

7.7 VLAN Configuration

Use this screen to view IEEE 802.1Q VLAN parameters for the Switch. Click **Advanced Application > VLAN > VLAN Configuration** to see the following screen.

Figure 66 Advanced Application > VLAN > VLAN Configuration

The following table describes the labels in the above screen.

Table 44 Advanced Application > VLAN > VLAN Configuration

| LABEL | DESCRIPTION |
|---------------------------|--|
| Static VLAN Setup | Click Click Here to configure the Static VLAN for the Switch. |
| VLAN Port Setup | Click Click Here to configure the VLAN Port for the Switch. |
| Subnet Based VLAN Setup | Click Click Here to configure the Subnet Based VLAN for the Switch. |
| Protocol Based VLAN Setup | Click Click Here to configure the Protocol Based VLAN for the Switch. |
| Voice VLAN Setup | Click Click Here to configure the Voice VLAN for the Switch. |
| MAC Based VLAN Setup | Click Click Here to configure the MAC Based VLAN for the Switch. |

7.7.1 Configure a Static VLAN

Use this screen to configure a static VLAN for the Switch. Click the **Static VLAN Setup** link in the **VLAN Configuration** screen to display the screen as shown next.

Figure 67 Advanced Application > VLAN > VLAN Configuration > Static VLAN Setup

The following table describes the related labels in this screen.

Table 45 Advanced Application > VLAN > VLAN Configuration > Static VLAN Setup

| LABEL | DESCRIPTION |
|-----------------------|--|
| ACTIVE | Select this check box to activate the VLAN settings. |
| Name | Enter a descriptive name for the VLAN group for identification purposes. This name consists of up to 64 printable characters; spaces are allowed. |
| VLAN Group ID | Enter the VLAN ID for this static entry; the valid range is between 1 and 4094. |
| VLAN Type | Select Normal (static) or Private . For Private VLANs, select Primary , Isolated or Community . |
| Association VLAN List | Primary private VLANs can associate with several (secondary) Community private VLANs and up to one (secondary) Isolated private VLAN. You only configure VLAN Association List for Primary private VLANs. Use a dash to associate consecutive VLANs and a comma (no spaces) to associate non-consecutive VLANs. For example, 51-53 includes 51, 52 and 53, but 51,53 does not include 52. Secondary private VLANs can only be associated with one primary private VLAN. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |

Table 45 Advanced Application > VLAN > VLAN Configuration > Static VLAN Setup (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| Port | The port number identifies the port you are configuring. In stacking mode, the first number represents the slot and the second the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Control | Select Normal for the port to dynamically join this VLAN group using GVRP. This is the default selection. Select Fixed for the port to be a permanent member of this VLAN group. Select Forbidden if you want to prohibit the port from joining this VLAN group. |
| Tagging | Select TX Tagging if you want the port to tag all outgoing frames transmitted with this VLAN Group ID. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| VID | This field displays the ID number of the VLAN group. Click the number to edit the VLAN settings. |
| Active | This field indicates whether the VLAN settings are enabled (Yes) or disabled (No). |
| Name | This field displays the descriptive name for this VLAN group. |
| VLAN Type | This field displays the Normal or Private (Primary, Isolated or Community) type VLAN configured in the top part of this screen. |
| Association VLAN List | This field displays which secondary private VLANs are associated with a primary private VLAN configured in the top part of this screen. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the Delete check boxes. |

7.7.2 Configure VLAN Port Settings

Use the VLAN Port Setting screen to configure the static VLAN (IEEE 802.1Q) settings on a port. See [Section 7.1 on page 101](#) for more information on 802.1Q VLAN. Click the **VLAN Port Setup** link in the **VLAN Configuration** screen.

Figure 68 Advanced Application > VLAN > VLAN Configuration > VLAN Port Setup: Standalone mode

| Port | Ingress Check | PVID | GVRP | Acceptable Frame Type | VLAN Trunking | Isolation |
|------|--------------------------|------|-------------------------------------|-----------------------|--------------------------|--------------------------|
| * | <input type="checkbox"/> | | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 17 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 18 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 19 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 20 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 21 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 22 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 23 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 24 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 25 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 26 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 27 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 28 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 29 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 30 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 31 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 32 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 33 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 34 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 35 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 36 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 37 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 38 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 39 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 40 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 41 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 42 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 43 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 44 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 45 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 46 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 47 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 48 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |

Figure 69 Advanced Application > VLAN > VLAN Configuration > VLAN Port Setup: Stacking mode

| Port | Ingress Check | PVID | GVRP | Acceptable Frame Type | VLAN Trunking | Isolation |
|------|--------------------------|------|-------------------------------------|-----------------------|--------------------------|--------------------------|
| 1/* | <input type="checkbox"/> | | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/7 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/8 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/9 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/10 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/11 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/12 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/13 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/14 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/15 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/16 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/17 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/18 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/19 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/20 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/21 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/22 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/23 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/24 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/25 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/26 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/27 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/28 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/29 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/30 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/31 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/32 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/33 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/34 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/35 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/36 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/37 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/38 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/39 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/40 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/41 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/42 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/43 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/44 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/45 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/46 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/47 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/48 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> | 1 | <input checked="" type="checkbox"/> | All | <input type="checkbox"/> | <input type="checkbox"/> |

The following table describes the labels in this screen.

Table 46 Advanced Application > VLAN > VLAN Configuration > VLAN Port Setup: Standalone/ Stacking mode

| LABEL | DESCRIPTION |
|-----------------------|--|
| GVRP | GVRP (GARP VLAN Registration Protocol) is a registration protocol that defines a way for switches to register necessary VLAN members on ports across the network. Select this check box to permit VLAN groups beyond the local Switch. |
| SLOT1 | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch. |
| Port | This field displays the port number of the Switch. In stacking mode, the first number represents the slot and the second the port number. Please note that the default stacking ports (the last two ports of your Switch) cannot be configured. They are reserved for stacking only. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Ingress Check | If this check box is selected for a port, the Switch discards incoming frames for VLANs that do not include this port in its member set. Clear this check box to disable ingress filtering. |
| PVID | A PVID (Port VLAN ID) is a tag that adds to incoming untagged frames received on a port so that the frames are forwarded to the VLAN group that the tag defines. Enter a number between 1 and 4094 as the port VLAN ID. |
| GVRP | Select this check box to allow GVRP on this port. |
| Acceptable Frame Type | Specify the type of frames allowed on a port. Choices are All , Tag Only and Untag Only . Select All from the drop-down list box to accept all untagged or tagged frames on this port. This is the default setting. Select Tag Only to accept only tagged frames on this port. All untagged frames will be dropped. Select Untag Only to accept only untagged frames on this port. All tagged frames will be dropped. Note that when the Switch is in stacking mode and the master Switch has VLAN1, all other ports will be configured to untagged port. |
| VLAN Trunking | Enable VLAN Trunking on ports connected to other switches or routers (but not ports directly connected to end users) to allow frames belonging to unknown VLAN groups to pass through the Switch. |
| Isolation | Select this to allows this port to communicate only with the CPU management port and the ports on which the isolation feature is not enabled. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

7.7.3 Subnet Based VLANs

Subnet based VLANs allow you to group traffic into logical VLANs based on the source IP subnet you specify. When a frame is received on a port, the Switch checks if a tag is added already and the IP


subnet it came from. The untagged packets from the same IP subnet are then placed in the same subnet based VLAN. One advantage of using subnet based VLANs is that priority can be assigned to traffic from the same IP subnet.

Note: Subnet based VLAN applies to un-tagged packets and is applicable only when you use IEEE 802.1Q tagged VLAN.

For example, an ISP (Internet Service Provider) may divide different types of services it provides to customers into different IP subnets. Traffic for voice services is designated for IP subnet 172.16.1.0/24, video for 192.168.1.0/24 and data for 10.1.1.0/24. The Switch can then be configured to group incoming traffic based on the source IP subnet of incoming frames.

You can then configure a subnet based VLAN with priority 6 and VID of 100 for traffic received from IP subnet 172.16.1.0/24 (voice services). You can also have a subnet based VLAN with priority 5 and VID of 200 for traffic received from IP subnet 192.168.1.0/24 (video services). Lastly, you can configure VLAN with priority 3 and VID of 300 for traffic received from IP subnet 10.1.1.0/24 (data services). All untagged incoming frames will be classified based on their source IP subnet and prioritized accordingly. That is, video services receive the highest priority and data the lowest.

Figure 70 Subnet Based VLAN Application Example

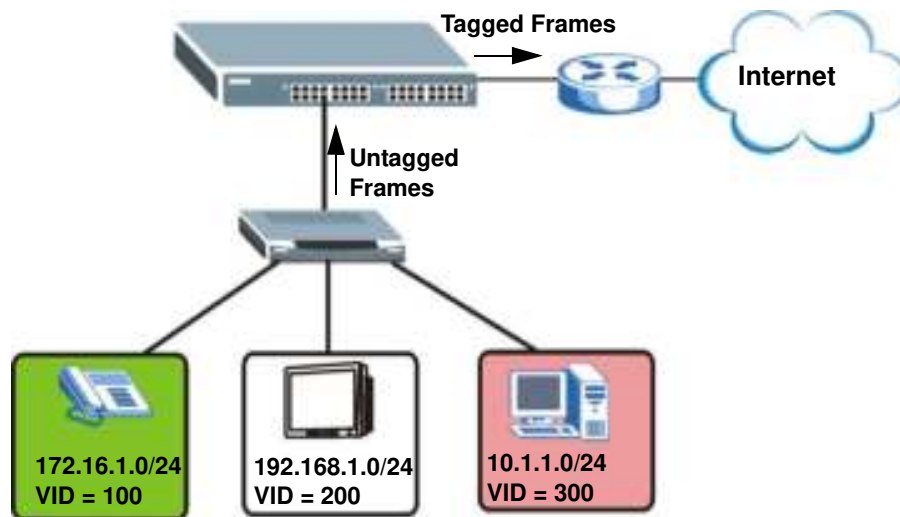

7.7.3.1 Configuring Subnet Based VLAN

Click the **Subnet Based VLAN Setup** link in the **VLAN Configuration** screen to display the configuration screen as shown.

Figure 71 Advanced Application > VLAN > VLAN Configuration > Subnet Based VLAN Setup

The following table describes the labels in this screen.

Table 47 Advanced Application > VLAN > VLAN Configuration > Subnet Based VLAN Setup

| LABEL | DESCRIPTION |
|--------------------|--|
| Active | Select this check box to activate this subnet based VLANs on the Switch. |
| DHCP-Vlan Override | When DHCP snooping is enabled DHCP clients can renew their IP address through the DHCP VLAN or via another DHCP server on the subnet based VLAN. Select this checkbox to force the DHCP clients in this IP subnet to obtain their IP addresses through the DHCP VLAN. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Active | Select this check box to activate the IP subnet VLAN you are creating or editing. |
| Name | Enter up to 32 alphanumeric characters to identify this subnet based VLAN. |
| IP | Enter the IP address of the subnet for which you want to configure this subnet based VLAN. |
| Mask-Bits | Enter the bit number of the subnet mask. To find the bit number, convert the subnet mask to binary format and add all the 1's together. Take "255.255.255.0" for example. 255 converts to eight 1s in binary. There are three 255s, so add three eights together and you get the bit number (24). |
| VID | Enter the ID of a VLAN with which the untagged frames from the IP subnet specified in this subnet based VLAN are tagged. This must be an existing VLAN which you defined in the Advanced Application > VLAN > Static VLAN screen. |
| Priority | Select the priority level that the Switch assigns to frames belonging to this VLAN. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Index | This is the index number identifying this subnet based VLAN. Click on any of these numbers to edit an existing subnet based VLAN. |
| Active | This field shows whether the subnet based VLAN is active or not. |
| Name | This field shows the name the subnet based VLAN. |

Table 47 Advanced Application > VLAN > VLAN Configuration > Subnet Based VLAN Setup

| LABEL | DESCRIPTION |
|-----------|---|
| IP | This field shows the IP address of the subnet for this subnet based VLAN. |
| Mask-Bits | This field shows the subnet mask in bit number format for this subnet based VLAN. |
| VID | This field shows the VLAN ID of the frames which belong to this subnet based VLAN. |
| Priority | This field shows the priority which is assigned to frames belonging to this subnet based VLAN. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click this to delete the subnet based VLANs which you marked for deletion. |
| Cancel | Click Cancel to clear the check boxes. |

7.7.4 Protocol Based VLANs

Protocol based VLANs allow you to group traffic into logical VLANs based on the protocol you specify. When an upstream frame is received on a port (configured for a protocol based VLAN), the Switch checks if a tag is added already and its protocol. The untagged packets of the same protocol are then placed in the same protocol based VLAN. One advantage of using protocol based VLANs is that priority can be assigned to traffic of the same protocol.

Note: Protocol based VLAN applies to un-tagged packets and is applicable only when you use IEEE 802.1Q tagged VLAN.

For example, ports 1, 2, 3 and 4 belong to static VLAN 100, and ports 4, 5, 6, 7 belong to static VLAN 120. You can configure a protocol based VLAN A with priority 2 for ARP traffic received on port 1, 2 and 3. You can also have a protocol based VLAN B with priority 3 for Apple Talk traffic received on port 6 and 7. All upstream ARP traffic from port 1, 2 and 3 will be grouped together, and all upstream Apple Talk traffic from port 6 and 7 will be in another group and have higher priority than ARP traffic when they go through the uplink port to a backbone switch C.

Figure 72 Protocol Based VLAN Application Example

7.7.4.1 Configuring Protocol Based VLAN

Click the **Protocol Based VLAN Setup** link in the **VLAN Configuration** screen to display the configuration screen as shown.

Figure 73 Advanced Application > VLAN > VLAN Configuration > Protocol Based VLAN Setup

The following table describes the labels in this screen.

Table 48 Advanced Application > VLAN > VLAN Configuration > Protocol Based VLAN Setup

| LABEL | DESCRIPTION |
|---------------|--|
| Active | Select this check box to activate this protocol based VLAN. |
| Port | Type a port number to be included in this protocol based VLAN. In stacking mode, the first box field is the slot ID and the second field is the port number. This port must belong to a static VLAN in order to participate in a protocol based VLAN. See Chapter 7 on page 101 for more details on setting up VLANs. |
| Name | Enter up to 32 alphanumeric characters to identify this protocol based VLAN. |
| Ethernet-type | Use the drop down list box to select a predefined protocol to be included in this protocol based VLAN or select Others and type the protocol number in hexadecimal notation. For example, the IP protocol in hexadecimal notation is 0800, and Novell IPX protocol is 8137. Note: Protocols in the hexadecimal number range of 0x0000 to 0x05ff are not allowed to be used for protocol based VLANs. |
| VID | Enter the ID of a VLAN to which the port belongs. This must be an existing VLAN which you defined in the Advanced Application > VLAN > Static VLAN screen. |
| Priority | Select the priority level that the Switch will assign to frames belonging to this VLAN. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Index | This is the index number identifying this protocol based VLAN. Click on any of these numbers to edit an existing protocol based VLAN. |
| Active | This field shows whether the protocol based VLAN is active or not. |
| Port | This field shows which port belongs to this protocol based VLAN. In stacking mode, the first number represents the slot and the second the port number. |
| Name | This field shows the name the protocol based VLAN. |
| Ethernet-type | This field shows which Ethernet protocol is part of this protocol based VLAN. |
| VID | This field shows the VLAN ID of the port. |

Table 48 Advanced Application > VLAN > VLAN Configuration > Protocol Based VLAN Setup

| LABEL | DESCRIPTION |
|----------|---|
| Priority | This field shows the priority which is assigned to frames belonging to this protocol based VLAN. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click this to delete the protocol based VLANs which you marked for deletion. |
| Cancel | Click Cancel to clear the check boxes. |

7.7.4.2 Create an IP-based VLAN Example

This example shows you how to create an IP VLAN which includes ports 1, 4 and 8. Follow these steps using the screen below:

- 1 Activate this protocol based VLAN.
- 2 Type the port number you want to include in this protocol based VLAN. Type **1**.
- 3 Give this protocol-based VLAN a descriptive name. Type **IP-VLAN**.
- 4 Select the protocol. Leave the default value **IP**.
- 5 Type the VLAN ID of an existing VLAN. In our example we already created a static VLAN with an ID of 5. Type **5**.
- 6 Leave the priority set to **0** and click **Add**.

Figure 74 Protocol Based VLAN Configuration Example

The screenshot shows the 'Protocol Based VLAN' configuration window. The 'Active' checkbox is checked. The 'Port' field contains '1', 'Name' contains 'IP-VLAN', 'Ethernet-type' is set to 'IP', 'VID' is '5', and 'Priority' is '0'. There are 'Add' and 'Cancel' buttons below the form. At the bottom of the window, there is a table with columns: Index, Active, Port, Name, Ethernet-type, VID, Priority. A red 'EXAMPLE' stamp is located in the bottom right corner of the screenshot.

To add more ports to this protocol based VLAN.

- 1 Click the index number of the protocol based VLAN entry. Click **1**
- 2 Change the value in the **Port** field to the next port you want to add.
- 3 Click **Add**.

7.8 Port-based VLAN Setup (Standalone Mode)

Port-based VLANs are VLANs where the packet forwarding decision is based on the destination MAC address and its associated port.

Port-based VLANs require allowed outgoing ports to be defined for each port. Therefore, if you wish to allow two subscriber ports to talk to each other, for example, between conference rooms in a hotel, you must define the egress (an egress port is an outgoing port, that is, a port through which a data packet leaves) for both ports.

Port-based VLANs are specific only to the Switch on which they were created.

Note: When you activate port-based VLAN, the Switch uses a default VLAN ID of 1. You cannot change it.

Note: In screens (such as **IP Setup** and **Filtering**) that require a VID, you must enter 1 as the VID.


The port-based VLAN setup screen is shown next. The **CPU** management port forms a VLAN with all Ethernet ports.

7.8.1 Configure a Port-based VLAN

Select **Port Based** as the **VLAN Type** in the **Switch Setup** screen and then click **VLAN** from the navigation panel to display the following screen. Select either **All Connected** or **Port Isolated** from the drop-down list depending on your VLAN and VLAN security requirements. If VLAN members need to communicate directly with each other, then select **All Connected**. Select **Port Isolated** if you want to restrict users from communicating directly. Click **Apply** to save your settings.


The following screen shows users on a port-based, all-connected VLAN configuration.

Figure 75 Advanced Application > VLAN > Port Based VLAN Setup (All Connected)

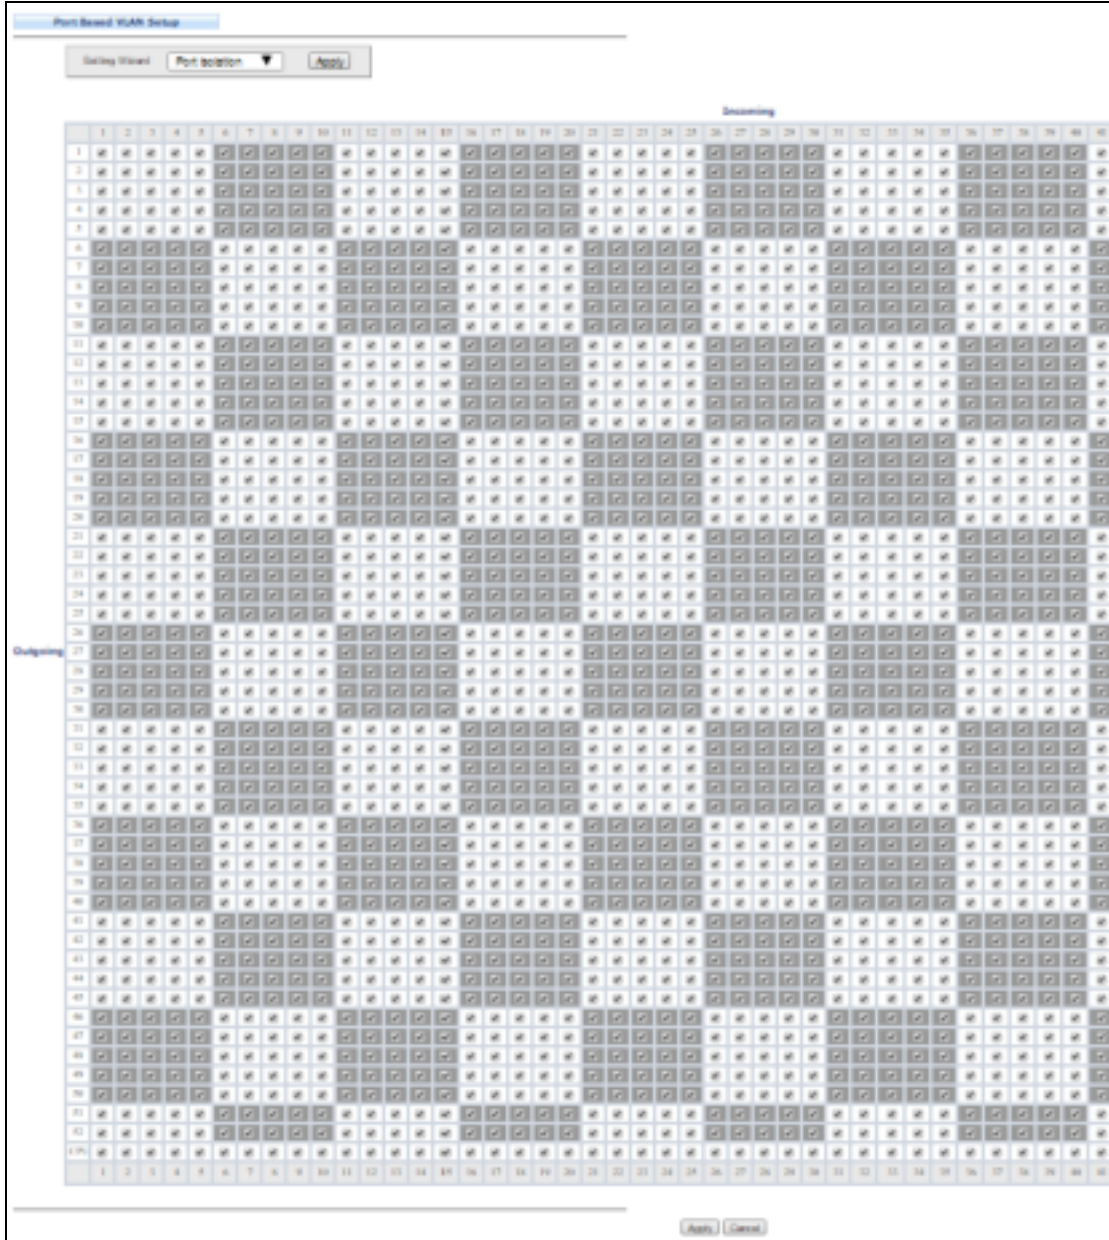

The following screen shows users on a port-based, port-isolated VLAN configuration.

Figure 76 Advanced Application > VLAN: Port Based VLAN Setup (Port Isolation)

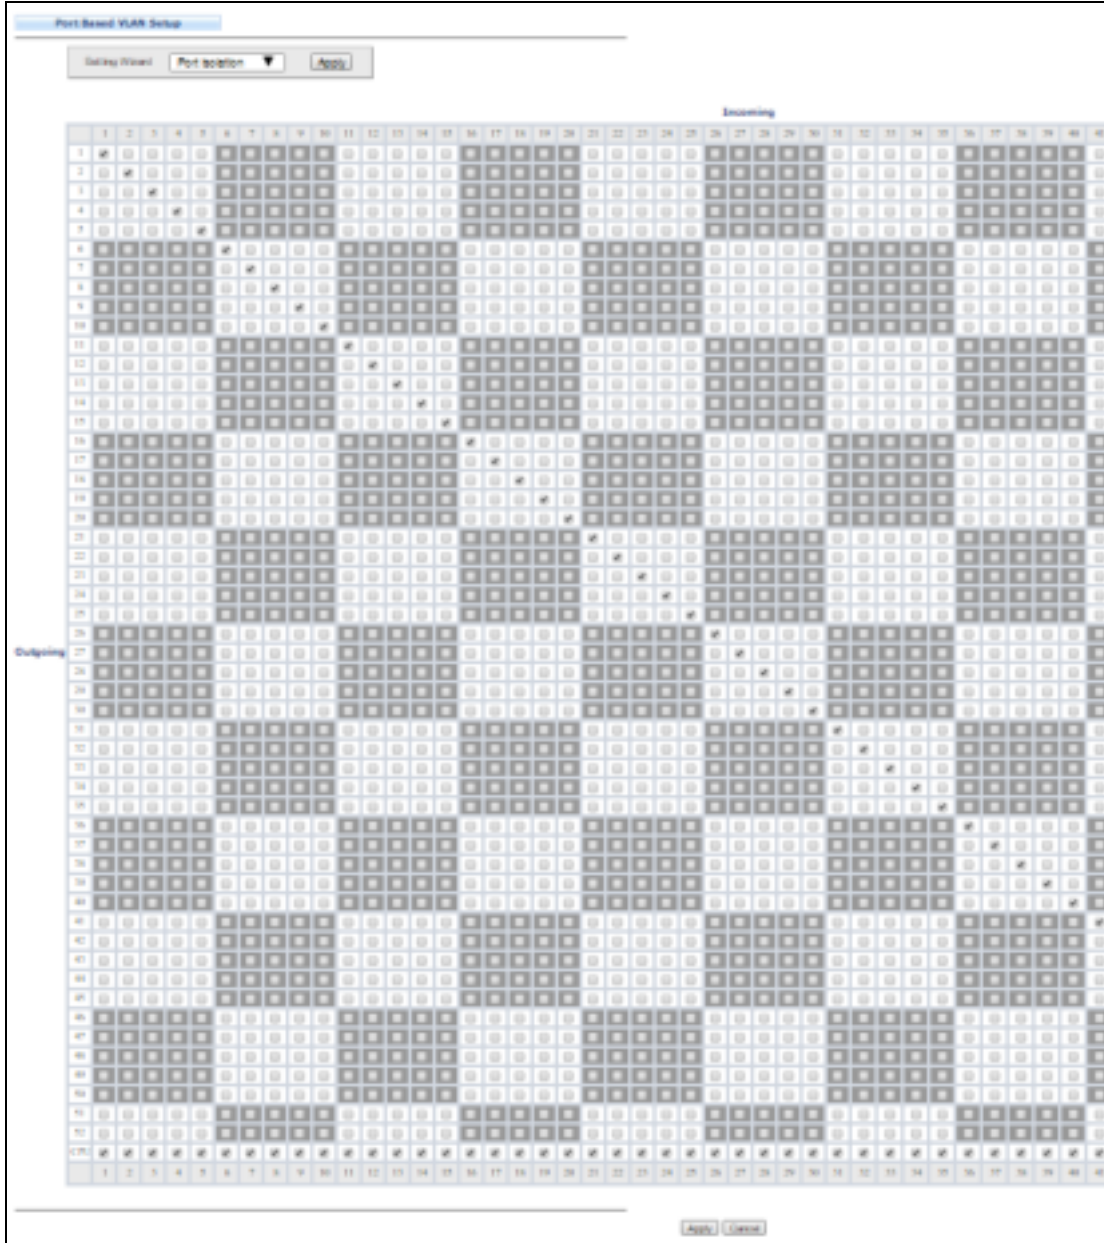

The following table describes the labels in this screen.

Table 49 Advanced Application > VLAN: Port Based VLAN Setup

| LABEL | DESCRIPTION |
|----------------|--|
| Setting Wizard | <p>Choose All connected or Port isolation.</p> <p>All connected means all ports can communicate with each other, that is, there are no virtual LANs. All incoming and outgoing ports are selected. This option is the most flexible but also the least secure.</p> <p>Port isolation means that each port can only communicate with the CPU management port and cannot communicate with each other. All incoming ports are selected while only the CPU outgoing port is selected. This option is the most limiting but also the most secure.</p> <p>After you make your selection, click Apply (top right of screen) to display the screens as mentioned above. You can still customize these settings by adding/deleting incoming or outgoing ports, but you must also click Apply at the bottom of the screen.</p> |
| Incoming | <p>These are the ingress ports; an ingress port is an incoming port, that is, a port through which a data packet enters. If you wish to allow two subscriber ports to talk to each other, you must define the ingress port for both ports. The numbers in the top row denote the incoming port for the corresponding port listed on the left (its outgoing port). CPU refers to the Switch management port. By default it forms a VLAN with all Ethernet ports. If it does not form a VLAN with a particular port then the Switch cannot be managed from that port.</p> |
| Outgoing | <p>These are the egress ports. An egress port is an outgoing port, that is, a port through which a data packet leaves. If you wish to allow two subscriber ports to talk to each other, you must define the egress port for both ports. CPU refers to the Switch management port. By default it forms a VLAN with all Ethernet ports. If it does not form a VLAN with a particular port then the Switch cannot be managed from that port.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |

7.9 Voice VLAN

Voice VLAN ensures that the sound quality of an IP phone is preserved from deteriorating when the data traffic on the Switch ports is high. It groups the voice traffic with defined priority into an assigned VLAN which enables the separation of voice and data traffic coming onto the Switch port.

You can set priority level to the Voice VLAN and add MAC address of IP phones from specific manufacturers by using its ID from the Organizationally Unique Identifiers (OUI).

Click the **Voice VLAN Setup** link in the **VLAN Configuration** screen to display the configuration screen as shown.

Figure 77 Advanced Application > VLAN > VLAN Configuration > Voice VLAN Setup

The following table describes the fields in the above screen.

Table 50 Advanced Application > VLAN > VLAN Configuration > Voice VLAN Setup

| LABEL | DESCRIPTION |
|-------------------------|--|
| Voice VLAN Global Setup | |
| Voice VLAN | Click the Voice VLAN radio button if you want to enable the Voice VLAN feature. Type a VLAN ID number in the box next to the radio button that is associated with the Voice VLAN. Click Disable radio button if you do not want to enable the Voice VLAN feature. |
| Priority | Select the priority level of the Voice VLAN from 0 to 7. Default setting is 5. The higher the numeric value you assign, the higher the priority for this Voice VLAN. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to default settings. |
| Voice VLAN OUI Setup | |
| OUI address | Type the IP Phone manufacturer's OUI MAC address. The first three bytes is the manufacturer identifier, the last three bytes is a unique station ID. |
| OUI mask | Type the IP Phone manufacturer's OUI mask address. |
| Description | Type an description up to 32 characters for the Voice VLAN device. For example: Siemens. |
| Add | Click Add to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Index | This field displays the index number of the Voice VLAN. |
| OUI address | This field displays the OUI address of the Voice VLAN. |
| OUI mask | This field displays the OUI mask address of the Voice VLAN. |
| Description | This field displays the description of the Voice VLAN with OUI address. |

Table 50 Advanced Application > VLAN > VLAN Configuration > Voice VLAN Setup

| LABEL | DESCRIPTION |
|--------|---|
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

7.10 MAC Based VLAN

The MAC-based VLAN feature assigns incoming untagged packets to a VLAN and classifies the traffic based on the source MAC address of the packet. When untagged packets arrive at the switch, the source MAC address of the packet is looked up in a MAC to VLAN mapping table. If an entry is found, the corresponding VLAN ID is assigned to the packet. The assigned VLAN ID is verified against the VLAN table. If the VLAN is valid, ingress processing on the packet continues; otherwise, the packet is dropped.

This feature allows users to change ports without having to reconfigure the VLAN. You can assign priority to the MAC-based VLAN and define a MAC to VLAN mapping table by entering a specified source MAC address in the MAC-based VLAN setup screen. You can also delete a MAC-based VLAN entry in the same screen.

Click the **MAC-based VLAN Setup** link in the **VLAN Configuration** screen to see the following screen.

Figure 78 Advanced Application > VLAN > VLAN Configuration > MAC-based VLAN Setup

The following table describes the fields in the above screen.

Table 51 Advanced Application > VLAN > VLAN Configuration > MAC-based VLAN Setup

| LABEL | DESCRIPTION |
|-------------|--|
| Name | Type a name up to 32 alpha numeric characters for the MAC-based VLAN entry. |
| MAC Address | Type a MAC address that is bind to the MAC-based VLAN entry. This is the source MAC address of the data packet that is looked up when untagged packets arrive at the Switch. |
| VID | Type an ID (from 1 to 4094) for the VLAN ID that is associated with the MAC-based VLAN entry. |

Table 51 Advanced Application > VLAN > VLAN Configuration > MAC-based VLAN Setup

| LABEL | DESCRIPTION |
|-------------|---|
| Priority | Type a priority (0-7) for the MAC-based VLAN entry. The higher the numeric value you assign, the higher the priority for this MAC-based VLAN entry. |
| Add | Click Add to save the new MAC-based VLAN entry. |
| Cancel | Click Cancel to clear the fields in the MAC-based VLAN entry. |
| Index | This field displays the index number of the MAC-based VLAN entry. |
| Name | This field displays the name of the MAC-based VLAN entry. |
| MAC Address | This field displays the source MAC address that is bind to the MAC-based VLAN entry. |
| VID | This field displays the VLAN ID of the MAC-based VLAN entry. |
| Priority | This field displays the priority level of the MAC-based VLAN entry. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Static MAC Forward Setup

Use these screens to configure static MAC address forwarding.

8.1 Overview

This chapter discusses how to configure forwarding rules based on MAC addresses of devices on your network.

8.2 Configuring Static MAC Forwarding

A static MAC address is an address that has been manually entered in the MAC address table. Static MAC addresses do not age out. When you set up static MAC address rules, you are setting static MAC addresses for a port. This may reduce the need for broadcasting.

Static MAC address forwarding together with port security allows only computers in the MAC address table on a port to access the Switch. See [Chapter 17 on page 195](#) for more information on port security.

Click **Advanced Application > Static MAC Forwarding** in the navigation panel to display the configuration screen as shown.

Figure 79 Advanced Application > Static MAC Forwarding (Standalone mode)

The screenshot displays the 'Static MAC Forwarding' configuration interface. At the top, there is a title bar 'Static MAC Forwarding'. Below it is a form with the following fields:

- Active:** A checkbox with a small square icon.
- Name:** A text input field.
- MAC Address:** A text input field.
- VID:** A text input field.
- Port:** A text input field.

Below the form are three buttons: **Add**, **Cancel**, and **Clear**. At the bottom of the screen, there is a table with the following columns: **Index**, **Active**, **Name**, **MAC Address**, **VID**, and **Port**. Below the table are two buttons: **Delete** and **Cancel**.

Figure 80 Advanced Application > Static MAC Forwarding (Stacking mode)

The following table describes the labels in this screen.

Table 52 Advanced Application > Static MAC Forwarding

| LABEL | DESCRIPTION |
|-----------------------------------|---|
| Active | Select this check box to activate your rule. You may temporarily deactivate a rule without deleting it by clearing this check box. |
| Name | Enter a descriptive name for identification purposes for this static MAC address forwarding rule. |
| MAC Address | Enter the MAC address in valid MAC address format, that is, six hexadecimal character pairs. Note: Static MAC addresses do not age out. |
| VID | Enter the VLAN identification number. |
| Port(standalone or stacking mode) | Enter the port where the MAC address entered in the previous field will be automatically forwarded. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| Add | Click this to create a new entry or to update an existing one. This saves your rule to the Switch's run-time memory. The Switch loses this rule if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | Click an index number to modify a static MAC address rule for a port. |
| Active | This field displays whether this static MAC address forwarding rule is active (Yes) or not (No). You may temporarily deactivate a rule without deleting it. |
| Name | This field displays the descriptive name for identification purposes for this static MAC address-forwarding rule. |
| MAC Address | This field displays the MAC address that will be forwarded and the VLAN identification number to which the MAC address belongs. |
| VID | This field displays the ID number of the VLAN group. |
| Port | This field displays the port where the MAC address shown in the next field will be forwarded. In stacking mode, the first number represents the slot and the second the port number. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |

Table 52 Advanced Application > Static MAC Forwarding (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Static Multicast Forward Setup

Use these screens to configure static multicast address forwarding.

9.1 Static Multicast Forwarding Overview

A multicast MAC address is the MAC address of a member of a multicast group. A static multicast address is a multicast MAC address that has been manually entered in the multicast table. Static multicast addresses do not age out. Static multicast forwarding allows you (the administrator) to forward multicast frames to a member without the member having to join the group first.

If a multicast group has no members, then the switch will either flood the multicast frames to all ports or drop them. You can configure this in the **Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping** screen (see [Section 23.3.1 on page 230](#)). [Figure 81](#) shows such unknown multicast frames flooded to all ports. With static multicast forwarding, you can forward these multicasts to port(s) within a VLAN group. [Figure 82](#) shows frames being forwarded to devices connected to port 3. [Figure 83](#) shows frames being forwarded to ports 2 and 3 within VLAN group 4.

Figure 81 No Static Multicast Forwarding

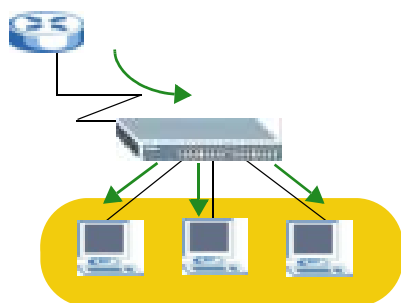


Figure 82 Static Multicast Forwarding to A Single Port

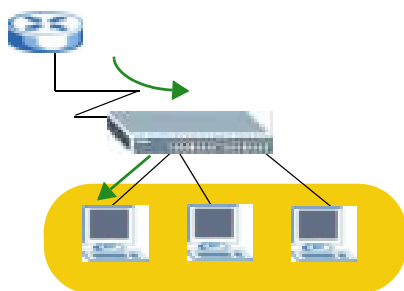
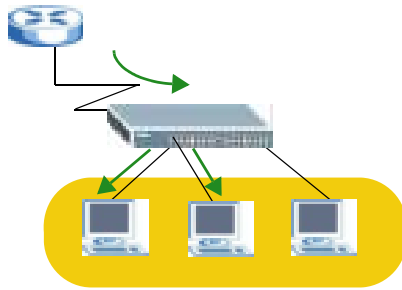


Figure 83 Static Multicast Forwarding to Multiple Ports

9.2 Configuring Static Multicast Forwarding

Use this screen to configure rules to forward specific multicast frames, such as streaming or control frames, to specific port(s).

Click **Advanced Application > Static Multicast Forwarding** to display the configuration screen as shown.

Figure 84 Advanced Application > Static Multicast Forwarding

The following table describes the labels in this screen.

Table 53 Advanced Application > Static Multicast Forwarding

| LABEL | DESCRIPTION |
|-------------|---|
| Active | Select this check box to activate your rule. You may temporarily deactivate a rule without deleting it by clearing this check box. |
| Name | Type a descriptive name (up to 32 printable ASCII characters) for this static multicast MAC address forwarding rule. This is for identification only. |
| MAC Address | Enter a multicast MAC address which identifies the multicast group. The last binary bit of the first octet pair in a multicast MAC address must be 1. For example, the first octet pair 00000001 is 01 and 00000011 is 03 in hexadecimal, so 01:00:5e:00:00:0A and 03:00:5e:00:00:27 are valid multicast MAC addresses. |
| VID | You can forward frames with matching destination MAC address to port(s) within a VLAN group. Enter the ID that identifies the VLAN group here. If you don't have a specific target VLAN, enter 1. |

Table 53 Advanced Application > Static Multicast Forwarding (continued)

| LABEL | DESCRIPTION |
|-------------|---|
| Port | <p>Enter the port(s) where frames with destination MAC address that matched the entry above are forwarded. You can enter multiple ports separated by (no space) comma (,) or hyphen for a range. For example, enter "3-5" for ports 3, 4, and 5. Enter "3,5,7" for ports 3, 5, and 7.</p> <p>In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example.</p> |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your rule to the Switch's run-time memory. The Switch loses this rule if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | Click Cancel to reset the fields to their last saved values. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | Click an index number to modify a static multicast MAC address rule for port(s). |
| Active | This field displays whether a static multicast MAC address forwarding rule is active (Yes) or not (No). You may temporarily deactivate a rule without deleting it. |
| Name | This field displays the descriptive name for identification purposes for a static multicast MAC address-forwarding rule. |
| MAC Address | This field displays the multicast MAC address that identifies a multicast group. |
| VID | This field displays the ID number of a VLAN group to which frames containing the specified multicast MAC address will be forwarded. |
| Port | This field displays the port(s) within a identified VLAN group to which frames containing the specified multicast MAC address will be forwarded. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Filtering

This chapter discusses MAC address port filtering.

10.1 Configure a Filtering Rule

Configure the Switch to filter traffic based on the traffic's source, destination MAC addresses and/or VLAN group (ID).

Click **Advanced Application > Filtering** in the navigation panel to display the screen as shown next.

Figure 85 Advanced Application > Filtering

The following table describes the related labels in this screen.

Table 54 Advanced Application > Filtering

| LABEL | DESCRIPTION |
|--------|--|
| Active | Make sure to select this check box to activate your rule. You may temporarily deactivate a rule without deleting it by deselecting this check box. |
| Name | Type a descriptive name (up to 32 printable ASCII characters) for this rule. This is for identification only. |

Table 54 Advanced Application > Filtering (continued)

| LABEL | DESCRIPTION |
|-------------|---|
| Action | <p>Select Discard source to drop frames from the source MAC address (specified in the MAC field). The Switch can still send frames to the MAC address.</p> <p>Select Discard destination to drop frames to the destination MAC address (specified in the MAC address). The Switch can still receive frames originating from the MAC address.</p> <p>Select Discard source and Discard destination to block traffic to/from the MAC address specified in the MAC field.</p> |
| MAC | Type a MAC address in a valid MAC address format, that is, six hexadecimal character pairs. |
| VID | Type the VLAN group identification number. |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays the index number of the rule. Click an index number to change the settings. |
| Active | This field displays Yes when the rule is activated and No when is it deactivated. |
| Name | This field displays the descriptive name for this rule. This is for identification purposes only. |
| MAC Address | This field displays the source/destination MAC address with the VLAN identification number to which the MAC address belongs. |
| VID | This field displays the VLAN group identification number. |
| Action | This field displays Discard source , Discard destination , or Discard both depending on what you configured above. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the rule(s) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

Spanning Tree Protocol

The Switch supports Spanning Tree Protocol (STP), Rapid Spanning Tree Protocol (RSTP) and Multiple Spanning Tree Protocol (MSTP) as defined in the following standards.

- IEEE 802.1D Spanning Tree Protocol
- IEEE 802.1w Rapid Spanning Tree Protocol
- IEEE 802.1s Multiple Spanning Tree Protocol

The Switch also allows you to set up multiple STP configurations (or trees). Ports can then be assigned to the trees.

11.1 STP/RSTP Overview

(R)STP detects and breaks network loops and provides backup links between switches, bridges or routers. It allows a Switch to interact with other (R)STP-compliant switches in your network to ensure that only one path exists between any two stations on the network.

The Switch uses IEEE 802.1w RSTP (Rapid Spanning Tree Protocol) that allows faster convergence of the spanning tree than STP (while also being backwards compatible with STP-only aware bridges). In RSTP, topology change information is directly propagated throughout the network from the device that generates the topology change. In STP, a longer delay is required as the device that causes a topology change first notifies the root bridge and then the root bridge notifies the network. Both RSTP and STP flush unwanted learned addresses from the filtering database. In RSTP, the port states are Discarding, Learning, and Forwarding.

Note: In this user's guide, "STP" refers to both STP and RSTP.

11.1.1 STP Terminology

The root bridge is the base of the spanning tree.

Path cost is the cost of transmitting a frame onto a LAN through that port. The recommended cost is assigned according to the speed of the link to which a port is attached. The slower the media, the higher the cost.

Table 55 STP Path Costs

| | LINK SPEED | RECOMMENDED VALUE | RECOMMENDED RANGE | ALLOWED RANGE |
|-----------|------------|-------------------|-------------------|---------------|
| Path Cost | 4Mbps | 250 | 100 to 1000 | 1 to 65535 |
| Path Cost | 10Mbps | 100 | 50 to 600 | 1 to 65535 |
| Path Cost | 16Mbps | 62 | 40 to 400 | 1 to 65535 |
| Path Cost | 100Mbps | 19 | 10 to 60 | 1 to 65535 |

Table 55 STP Path Costs

| | LINK SPEED | RECOMMENDED VALUE | RECOMMENDED RANGE | ALLOWED RANGE |
|-----------|------------|-------------------|-------------------|---------------|
| Path Cost | 1Gbps | 4 | 3 to 10 | 1 to 65535 |
| Path Cost | 10Gbps | 2 | 1 to 5 | 1 to 65535 |

On each bridge, the bridge communicates with the root through the root port. The root port is the port on this Switch with the lowest path cost to the root (the root path cost). If there is no root port, then this Switch has been accepted as the root bridge of the spanning tree network.

For each LAN segment, a designated bridge is selected. This bridge has the lowest cost to the root among the bridges connected to the LAN.

11.1.2 How STP Works

After a bridge determines the lowest cost-spanning tree with STP, it enables the root port and the ports that are the designated ports for connected LANs, and disables all other ports that participate in STP. Network packets are therefore only forwarded between enabled ports, eliminating any possible network loops.

STP-aware switches exchange Bridge Protocol Data Units (BPDUs) periodically. When the bridged LAN topology changes, a new spanning tree is constructed.

Once a stable network topology has been established, all bridges listen for Hello BPDUs (Bridge Protocol Data Units) transmitted from the root bridge. If a bridge does not get a Hello BPDU after a predefined interval (Max Age), the bridge assumes that the link to the root bridge is down. This bridge then initiates negotiations with other bridges to reconfigure the network to re-establish a valid network topology.

11.1.3 STP Port States

STP assigns five port states to eliminate packet looping. A bridge port is not allowed to go directly from blocking state to forwarding state so as to eliminate transient loops.

Table 56 STP Port States


| PORT STATE | DESCRIPTION |
|------------|---|
| Disabled | STP is disabled (default). |
| Blocking | Only configuration and management BPDUs are received and processed. |
| Listening | All BPDUs are received and processed. Note: The listening state does not exist in RSTP. |
| Learning | All BPDUs are received and processed. Information frames are submitted to the learning process but not forwarded. |
| Forwarding | All BPDUs are received and processed. All information frames are received and forwarded. |

11.1.4 Multiple RSTP

MRSTP (Multiple RSTP) is ZyXEL's proprietary feature that is compatible with RSTP and STP. With MRSTP, you can have more than one spanning tree on your Switch and assign port(s) to each tree. Each spanning tree operates independently with its own bridge information.

In the following example, there are two RSTP instances (**MRSTP1** and **MRSTP2**) on switch **A**.

Figure 86 MRSTP Network Example

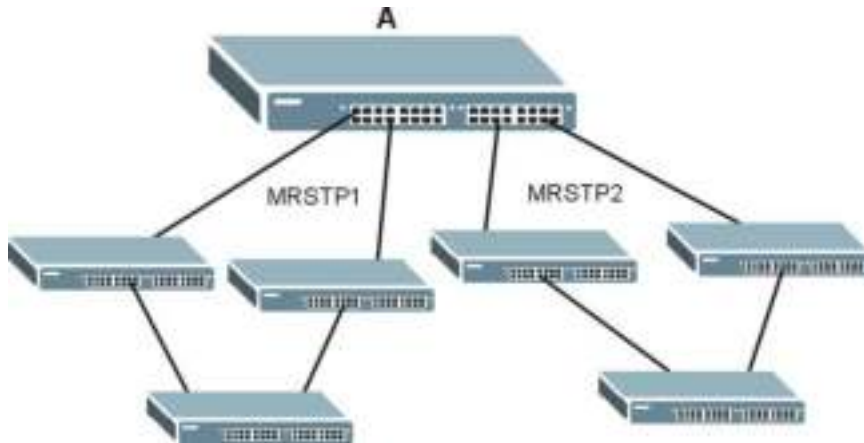

To set up MRSTP, activate MRSTP on the Switch and specify which port(s) belong to which spanning tree.

Note: Each port can belong to one STP tree only.


11.1.5 Multiple STP

Multiple Spanning Tree Protocol (IEEE 802.1s) is backwards compatible with STP/RSTP and addresses the limitations of existing spanning tree protocols (STP and RSTP) in networks to include the following features:


- One Common and Internal Spanning Tree (CIST) that represents the entire network's connectivity.
- Grouping of multiple bridges (or switching devices) into regions that appear as one single bridge on the network.
- A VLAN can be mapped to a specific Multiple Spanning Tree Instance (MSTI). MSTI allows multiple VLANs to use the same spanning tree.
- Load-balancing is possible as traffic from different VLANs can use distinct paths in a region.

11.1.5.1 MSTP Network Example

The following figure shows a network example where two VLANs are configured on the two switches. If the switches are using STP or RSTP, the link for VLAN 2 will be blocked as STP and RSTP allow only one link in the network and block the redundant link.

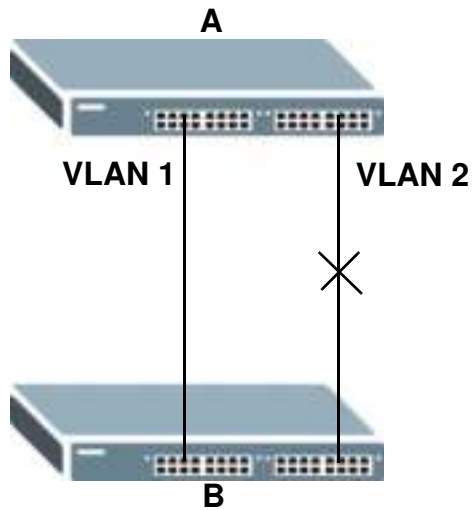Figure 87 STP/RSTP Network Example

With MSTP, VLANs 1 and 2 are mapped to different spanning trees in the network. Thus traffic from the two VLANs travel on different paths. The following figure shows the network example using MSTP.

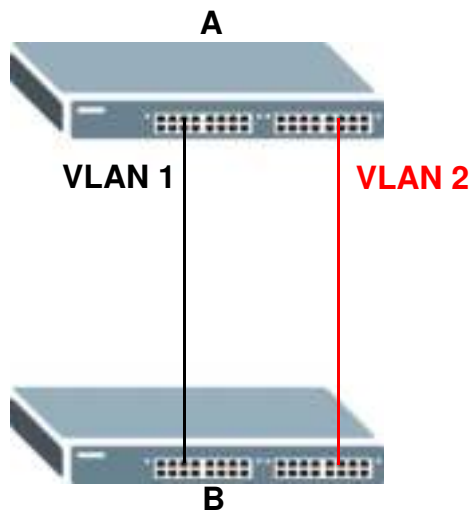Figure 88 MSTP Network Example

11.1.5.2 MST Region

An MST region is a logical grouping of multiple network devices that appears as a single device to the rest of the network. Each MSTP-enabled device can only belong to one MST region. When BPDUs enter an MST region, external path cost (of paths outside this region) is increased by one. Internal path cost (of paths within this region) is increased by one when BPDUs traverse the region.

Devices that belong to the same MST region are configured to have the same MSTP configuration identification settings. These include the following parameters:


- Name of the MST region
- Revision level as the unique number for the MST region
- VLAN-to-MST Instance mapping

11.1.5.3 MST Instance

An MST Instance (MSTI) is a spanning tree instance. VLANs can be configured to run on a specific MSTI. Each created MSTI is identified by a unique number (known as an MST ID) known internally to a region. Thus an MSTI does not span across MST regions.

The following figure shows an example where there are two MST regions. Regions 1 and 2 have 2 spanning tree instances.


Figure 89 MSTIs in Different Regions

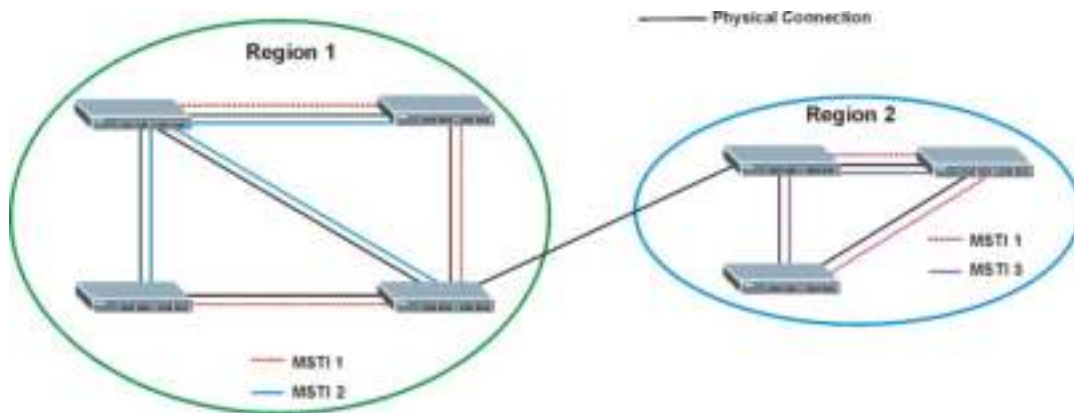

11.1.5.4 Common and Internal Spanning Tree (CIST)

A CIST represents the connectivity of the entire network and it is equivalent to a spanning tree in an STP/RSTP. The CIST is the default MST instance (MSTID 0). Any VLANs that are not members of an MST instance are members of the CIST. In an MSTP-enabled network, there is only one CIST that runs between MST regions and single spanning tree devices. A network may contain multiple MST regions and other network segments running RSTP.

Figure 90 MSTP and Legacy RSTP Network Example

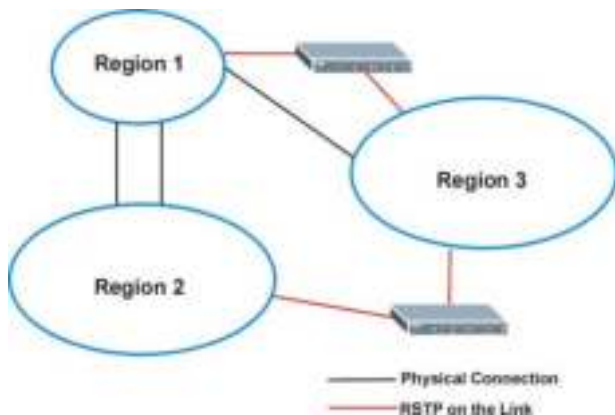

11.2 Spanning Tree Protocol Status Screen

Click **Advanced Application > Spanning Tree Protocol** to see the screen as shown.

Figure 91 Advanced Application > Spanning Tree Protocol (Standalone mode)

| Spanning Tree Protocol Status | | Configuration RSTP MRSTP MSTP | |
|-------------------------------|-------------------|-------------------------------|----------------------|
| Spanning Tree Protocol: RSTP | | | |
| Bridge | Root | Our Bridge | |
| Bridge ID | 0000-000000000000 | 0000-000000000000 | |
| Hello Time (second) | 0 | 0 | |
| Max Age (second) | 0 | 0 | |
| Forwarding Delay (second) | 0 | 0 | |
| Cost to Bridge | 0 | | |
| Port ID | 0X0000 | | |
| Topology Changed Times | | 0 | |
| Time Since Last Change | | 0:00:00 | |
| Port | Port State | Port Role | Designated Bridge ID |
| | | | Designated Port ID |
| | | | Designated Cost |
| | | | Root Guard State |

Figure 92 Advanced Application > Spanning Tree Protocol (Stacking mode)

| Spanning Tree Protocol Status | | Configuration RSTP MRSTP MSTP | |
|-------------------------------|-------------------|-------------------------------|----------------------|
| Spanning Tree Protocol: RSTP | | | |
| Bridge | Root | Our Bridge | |
| Bridge ID | 0000-000000000000 | 0000-000000000000 | |
| Hello Time (second) | 0 | 0 | |
| Max Age (second) | 0 | 0 | |
| Forwarding Delay (second) | 0 | 0 | |
| Cost to Bridge | 0 | | |
| Port ID | 0X0000 | | |
| Topology Changed Times | | 0 | |
| Time Since Last Change | | 0:00:00 | |
| SLOT 1 | | | |
| Port | Port State | Port Role | Designated Bridge ID |
| | | | Designated Port ID |
| | | | Designated Cost |

This screen differs depending on which STP mode (RSTP, MRSTP or MSTP) you configure on the Switch. This screen is described in detail in the section that follows the configuration section for each STP mode. Click **Configuration** to activate one of the STP standards on the Switch.

11.3 Spanning Tree Configuration

Use the **Spanning Tree Configuration** screen to activate one of the STP modes on the Switch. Click **Configuration** in the **Advanced Application > Spanning Tree Protocol**.

Figure 93 Advanced Application > Spanning Tree Protocol > Configuration

| Spanning Tree Configuration | | Status |
|--|--|--------|
| Spanning Tree Mode: | <input checked="" type="radio"/> Rapid Spanning Tree <input type="radio"/> Multiple Rapid Spanning Tree <input type="radio"/> Multiple Spanning Tree | |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | | |

The following table describes the labels in this screen.

Table 57 Advanced Application > Spanning Tree Protocol > Configuration

| LABEL | DESCRIPTION |
|--------------------|--|
| Spanning Tree Mode | You can activate one of the STP modes on the Switch. Select Rapid Spanning Tree , Multiple Rapid Spanning Tree or Multiple Spanning Tree . See Section 11.1 on page 132 for background information on STP. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

11.4 Configure Rapid Spanning Tree Protocol

Use this screen to configure RSTP settings, see [Section 11.1 on page 132](#) for more information on RSTP. Click **RSTP** in the **Advanced Application > Spanning Tree Protocol** screen.

Figure 94 Advanced Application > Spanning Tree Protocol > RSTP (Standalone mode)

The screenshot displays the configuration interface for the Rapid Spanning Tree Protocol. At the top, the title is "Rapid Spanning Tree Protocol" with a "Status" link on the right. Below the title, there is a section for general settings:

- Active:** A checkbox that is currently checked.
- Bridge Priority:** A dropdown menu showing the value "32768".
- Hello Time:** A field with the value "2" and the unit "Seconds".
- MAX Age:** A field with the value "20" and the unit "Seconds".
- Forwarding Delay:** A field with the value "15" and the unit "Seconds".

Below these settings is a table with the following columns: Port, Active, Edge, Root Guard, Priority, and Path Cost. The table lists ports from 1 to 52. For ports 1 through 10, the "Active" checkbox is checked, and the "Priority" is set to 128. For ports 49 through 52, the "Active" checkbox is unchecked, and the "Priority" is set to 128. The "Path Cost" for ports 1-10 is 4, and for ports 49-52 it is 2. At the bottom of the screen, there are "Apply" and "Cancel" buttons.

Figure 95 Advanced Application > Spanning Tree Protocol > RSTP (Stacking mode)

| Rapid Spanning Tree Protocol | | | | | Status |
|------------------------------|--------------------------|--------------------------|----------|-----------|---------|
| Active | <input type="checkbox"/> | | | | |
| Bridge Priority | 32768 | | | | |
| Hello Time | 2 | | | | Seconds |
| MAX Age | 20 | | | | Seconds |
| Forwarding Delay | 15 | | | | Seconds |
| SLOT 1 | | | | | |
| Port | Active | Edge | Priority | Path Cost | |
| * | <input type="checkbox"/> | <input type="checkbox"/> | | | |
| 1/1 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/2 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/3 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/4 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/5 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/6 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/7 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/8 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/9 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/10 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/11 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/12 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/13 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/14 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/15 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/16 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/17 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/18 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/19 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/20 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/21 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/22 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/23 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/24 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/25 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/26 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/27 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/28 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/29 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/30 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/31 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/32 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/33 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/34 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/35 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/36 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/37 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/38 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/39 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/40 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/41 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/42 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/43 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/44 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/45 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/46 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/47 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/48 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 4 | |
| 1/49 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |
| 1/50 | <input type="checkbox"/> | <input type="checkbox"/> | 128 | 2 | |

The following table describes the labels in this screen.

Table 58 Advanced Application > Spanning Tree Protocol > RSTP

| LABEL | DESCRIPTION |
|-----------------|--|
| Status | Click Status to display the RSTP Status screen (see Figure 96 on page 141). |
| Active | Select this check box to activate RSTP. Clear this checkbox to disable RSTP. Note: You must also activate Rapid Spanning Tree in the Advanced Application > Spanning Tree Protocol > Configuration screen to enable RSTP on the Switch. |
| Bridge Priority | Bridge priority is used in determining the root switch, root port and designated port. The switch with the highest priority (lowest numeric value) becomes the STP root switch. If all switches have the same priority, the switch with the lowest MAC address will then become the root switch. Select a value from the drop-down list box. The lower the numeric value you assign, the higher the priority for this bridge. Bridge Priority determines the root bridge, which in turn determines Hello Time, Max Age and Forwarding Delay. |
| Hello Time | This is the time interval in seconds between BPDUs (Bridge Protocol Data Units) configuration message generations by the root switch. The allowed range is 1 to 10 seconds. |

Table 58 Advanced Application > Spanning Tree Protocol > RSTP (continued)

| LABEL | DESCRIPTION |
|-------------------------------------|--|
| Max Age | This is the maximum time (in seconds) a switch can wait without receiving a BPDU before attempting to reconfigure. All switch ports (except for designated ports) should receive BPDUs at regular intervals. Any port that ages out STP information (provided in the last BPDU) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the switch ports attached to the network. The allowed range is 6 to 40 seconds. |
| Forwarding Delay | <p>This is the maximum time (in seconds) a switch will wait before changing states. This delay is required because every switch must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a blocking state; otherwise, temporary data loops might result. The allowed range is 4 to 30 seconds.</p> <p>As a general rule:</p> <p>Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age} \geq 2 * (\text{Hello Time} + 1)$</p> |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone and stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Active | Select this check box to activate RSTP on this port. |
| Edge | <p>Select this check box to configure a port as an edge port when it is directly attached to a computer. An edge port changes its initial STP port state from blocking state to forwarding state immediately without going through listening and learning states right after the port is configured as an edge port or when its link status changes.</p> <p>Note: An edge port becomes a non-edge port as soon as it receives a Bridge Protocol Data Unit (BPDU).</p> |
| Root Guard (Standalone mode) | <p>Select this check box to enable root guard on this port in order to prevent the switch(es) attached to the port from becoming the root bridge.</p> <p>With root guard enabled, a port is blocked when the Switch receives a superior BPDU on it. The Switch allows traffic to pass through this port again when the switch connected to the port stops to send superior BPDUs.</p> |
| Priority | <p>Configure the priority for each port here.</p> <p>Priority decides which port should be disabled when more than one port forms a loop in a switch. Ports with a higher priority numeric value are disabled first. The allowed range is between 0 and 255 and the default value is 128.</p> |
| Path Cost | Path cost is the cost of transmitting a frame on to a LAN through that port. It is recommended to assign this value according to the speed of the bridge. The slower the media, the higher the cost - see Table 55 on page 132 for more information. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

11.5 Rapid Spanning Tree Protocol Status

Click **Advanced Application** > **Spanning Tree Protocol** in the navigation panel to display the status screen as shown next. See [Section 11.1 on page 132](#) for more information on RSTP.

Note: This screen is only available after you activate RSTP on the Switch.

Figure 96 Advanced Application > Spanning Tree Protocol > Status: RSTP

The screenshot shows the 'Spanning Tree Protocol Status' screen for RSTP. It features a navigation bar with 'Configuration', 'RSTP', 'MRSTP', and 'MSTP'. Below the navigation bar, there are two columns: 'Bridge' and 'Our Bridge'. The 'Root' column is also present. The data is as follows:

| Bridge | Root | Our Bridge |
|---------------------------|-------------------|-------------------|
| Bridge ID | 8000-0019cb000002 | 8000-0019cb000002 |
| Hello Time (second) | 2 | 2 |
| Max Age (second) | 20 | 20 |
| Forwarding Delay (second) | 15 | 15 |
| Cost to Bridge | 0 | |
| Port ID | 0X0000 | |
| Topology Changed Times | 0 | |
| Time Since Last Change | 0:00:22 | |

At the bottom of the screen, there is a table header for port details:

| Port | Port State | Port Role | Designated Bridge ID | Designated Port ID | Designated Cost | Root Guard State |
|------|------------|-----------|----------------------|--------------------|-----------------|------------------|
|------|------------|-----------|----------------------|--------------------|-----------------|------------------|

The following table describes the labels in this screen.

Table 59 Advanced Application > Spanning Tree Protocol > Status: RSTP

| LABEL | DESCRIPTION |
|---------------------------|--|
| Configuration | Click Configuration to specify which STP mode you want to activate. Click RSTP to edit RSTP settings on the Switch. |
| Bridge | Root refers to the base of the spanning tree (the root bridge). Our Bridge is this Switch. This Switch may also be the root bridge. |
| Bridge ID | This is the unique identifier for this bridge, consisting of the bridge priority plus the MAC address. This ID is the same for Root and Our Bridge if the Switch is the root switch. |
| Hello Time (second) | This is the time interval (in seconds) at which the root switch transmits a configuration message. The root bridge determines Hello Time, Max Age and Forwarding Delay. |
| Max Age (second) | This is the maximum time (in seconds) a switch can wait without receiving a configuration message before attempting to reconfigure. |
| Forwarding Delay (second) | This is the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding). See Section 11.1.3 on page 133 for information on port states. Note: The listening state does not exist in RSTP. |
| Cost to Bridge | This is the path cost from the root port on this Switch to the root switch. |
| Port ID | This is the priority and number of the port on the Switch through which this Switch must communicate with the root of the Spanning Tree. |
| Topology Changed Times | This is the number of times the spanning tree has been reconfigured. |
| Time Since Last Change | This is the time since the spanning tree was last reconfigured. |
| Port | This field displays the number of the port on the Switch. |

Table 59 Advanced Application > Spanning Tree Protocol > Status: RSTP (continued)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Port State | <p>This field displays the port state in STP.</p> <ul style="list-style-type: none"> • Discarding - The port does not forward/process received frames or learn MAC addresses, but still listens for BPDUs. • Learning - The port learns MAC addresses and processes BPDUs, but does not forward frames yet. • Forwarding - The port is operating normally. It learns MAC addresses, processes BPDUs and forwards received frames. |
| Port Role | <p>This field displays the role of the port in STP.</p> <ul style="list-style-type: none"> • Root - A forwarding port on a non-root bridge, which has the lowest path cost and is the best port from the non-root bridge to the root bridge. A root bridge does not have a root port. • Designated - A forwarding port on the designated bridge for each connected LAN segment. A designated bridge has the lowest path cost to the root bridge among the bridges connected to the LAN segment. All the ports on a root bridge (root switch) are designated ports. • Alternate - A blocked port, which has a best alternate path to the root bridge. This path is different from using the root port. The port moves to the forwarding state when the designated port for the LAN segment fails. • Backup - A blocked port, which has a backup/redundant path to a LAN segment where a designated port is already connected when a switch has two links to the same LAN segment. • Disabled - Not strictly part of STP. The port can be disabled manually. |
| Designated Bridge ID | <p>This field displays the identifier of the designated bridge to which this port belongs when the port is a designated port. Otherwise, it displays the identifier of the designated bridge for the LAN segment to which this port is connected.</p> |
| Designated Port ID | <p>This field displays the priority and number of the bridge port (on the designated bridge), through which the designated bridge transmits the stored configuration messages.</p> |
| Designated Cost | <p>This field displays the path cost to the LAN segment to which the port is connected when the port is a designated port. Otherwise, it displays the path cost to the root bridge from the designated port for the LAN segment to which this port is connected,</p> |
| Root Guard State (Standalone mode) | <p>This field displays the state of the port on which root guard is enabled.</p> <ul style="list-style-type: none"> • Root-inconsistent - the Switch receives superior BPDUs on the port and blocks the port. • Forwarding - the Switch unblocks and allows the port to forward frames again. |

11.6 Configure Multiple Rapid Spanning Tree Protocol

To configure MRSTP, click **MRSTP** in the **Advanced Application > Spanning Tree Protocol** screen. See [Section 11.1 on page 132](#) for more information on MRSTP.

Figure 97 Advanced Application > Spanning Tree Protocol > MRSTP (Standalone mode)

| Multiple Rapid Spanning Tree Protocol | | | | | | | | Status |
|---------------------------------------|-------------------------------------|-----------------|------------|---------|---------|---------|------------------|--------|
| Tree | Active | Bridge Priority | Hello Time | | MAX Age | | Forwarding Delay | |
| 1 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 2 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 3 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 4 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |

| Port | Active | Edge | Root Guard | Priority | Path Cost | Tree |
|------|-------------------------------------|-------------------------------------|-------------------------------------|----------|-----------|------|
| * | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | | | 1 ▼ |
| 1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 3 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 4 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 5 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 6 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 7 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 51 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 2 | 1 ▼ |
| 52 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 2 | 1 ▼ |

Apply Cancel

Figure 98 Advanced Application > Spanning Tree Protocol > MRSTP (Stacking mode)

| Multiple Rapid Spanning Tree Protocol | | | | | | | | Status |
|---------------------------------------|-------------------------------------|-----------------|------------|---------|---------|---------|------------------|--------|
| Tree | Active | Bridge Priority | Hello Time | | MAX Age | | Forwarding Delay | |
| 1 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 2 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 3 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |
| 4 | <input checked="" type="checkbox"/> | 32768 ▼ | 2 | seconds | 20 | seconds | 15 | |

SLOT 1 ▼

| Port | Active | Edge | Priority | Path Cost | Tree |
|------|-------------------------------------|-------------------------------------|----------|-----------|------|
| 1/* | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | | | 1 ▼ |
| 1/1 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/2 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/3 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/4 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/5 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/6 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/7 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/8 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 4 | 1 ▼ |
| 1/9 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 2 | 1 ▼ |
| 1/10 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | 128 | 2 | 1 ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 60 Advanced Application > Spanning Tree Protocol > MRSTP

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Status | Click Status to display the MRSTP Status screen (see Figure 99 on page 145). |
| Tree | This is a read only index number of the STP trees. |
| Active | Select this check box to activate an STP tree. Clear this checkbox to disable an STP tree. Note: You must also activate Multiple Rapid Spanning Tree in the Advanced Application > Spanning Tree Protocol > Configuration screen to enable MRSTP on the Switch. |
| Bridge Priority | Bridge priority is used in determining the root switch, root port and designated port. The switch with the highest priority (lowest numeric value) becomes the STP root switch. If all switches have the same priority, the switch with the lowest MAC address will then become the root switch. Select a value from the drop-down list box. The lower the numeric value you assign, the higher the priority for this bridge. Bridge Priority determines the root bridge, which in turn determines Hello Time, Max Age and Forwarding Delay. |
| Hello Time | This is the time interval in seconds between BPDU (Bridge Protocol Data Units) configuration message generations by the root switch. The allowed range is 1 to 10 seconds. |
| Max Age | This is the maximum time (in seconds) a switch can wait without receiving a BPDU before attempting to reconfigure. All switch ports (except for designated ports) should receive BPDUs at regular intervals. Any port that ages out STP information (provided in the last BPDU) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the Switch ports attached to the network. The allowed range is 6 to 40 seconds. |
| Forwarding Delay | This is the maximum time (in seconds) a switch will wait before changing states. This delay is required because every switch must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a blocking state; otherwise, temporary data loops might result. The allowed range is 4 to 30 seconds. As a general rule: Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age} \geq 2 * (\text{Hello Time} + 1)$ |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to activate STP on this port. |
| Edge | Select this check box to configure a port as an edge port when it is directly attached to a computer. An edge port changes its initial STP port state from blocking state to forwarding state immediately without going through listening and learning states right after the port is configured as an edge port or when its link status changes. Note: An edge port becomes a non-edge port as soon as it receives a Bridge Protocol Data Unit (BPDU). |

Table 60 Advanced Application > Spanning Tree Protocol > MRSTP (continued)

| LABEL | DESCRIPTION |
|------------------------------|--|
| Root Guard (Standalone mode) | Select this check box to enable root guard on this port in order to prevent the switch(es) attached to the port from becoming the root bridge. With root guard enabled, a port is blocked when the Switch receives a superior BPDU on it. The Switch allows traffic to pass through this port again when the switch connected to the port stops to send superior BPDUs. |
| Priority | Configure the priority for each port here. Priority decides which port should be disabled when more than one port forms a loop in the Switch. Ports with a higher priority numeric value are disabled first. The allowed range is between 0 and 255 and the default value is 128. |
| Path Cost | Path cost is the cost of transmitting a frame on to a LAN through that port. It is recommended that you assign this value according to the speed of the bridge. The slower the media, the higher the cost - see Table 55 on page 132 for more information. |
| Tree | Select which STP tree configuration this port should participate in. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

11.7 Multiple Rapid Spanning Tree Protocol Status

Click **Advanced Application** > **Spanning Tree Protocol** in the navigation panel to display the status screen as shown next. See [Section 11.1 on page 132](#) for more information on MRSTP.

Note: This screen is only available after you activate MRSTP on the Switch.

Figure 99 Advanced Application > Spanning Tree Protocol > Status: MRSTP

The screenshot displays the 'Spanning Tree Protocol Status' for MRSTP. At the top, there are tabs for 'Configuration', 'RSTP', 'MRSTP', and 'MSTP'. Below the tabs, the 'Spanning Tree Protocol: MRSTP' section shows 'Tree 1' selected. A comparison table lists parameters for 'Bridge' and 'Our Bridge'. Below this, a table shows 'Topology Changed Times' and 'Time Since Last Change'. The main part of the screen is a table listing port details.

| Bridge | Root | Our Bridge |
|---------------------------|------------------|------------------|
| Bridge ID | 8000-0019c000002 | 8000-0019c000002 |
| Hello Time (second) | 2 | 2 |
| Max Age (second) | 20 | 20 |
| Forwarding Delay (second) | 15 | 15 |
| Cost to Bridge | 0 | |
| Port ID | 0x0000 | |
| Topology Changed Times | 2 | |
| Time Since Last Change | 0:00:00 | |

| Port | Port State | Port Role | Designated Bridge ID | Designated Port ID | Designated Cost | Root Guard State |
|------|------------|------------|----------------------|--------------------|-----------------|------------------|
| 1 | FORWARDING | Designated | 8000-0019c000002 | 0x0001 | 0 | Forwarding |
| 2 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 3 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 4 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 5 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 50 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 51 | DISCARDING | Disabled | 0000-000000000000 | 0x0000 | 0 | Forwarding |
| 52 | FORWARDING | Designated | 8000-0019c000002 | 0x0034 | 0 | Forwarding |

The following table describes the labels in this screen.

Table 61 Advanced Application > Spanning Tree Protocol > Status: MRSTP

| LABEL | DESCRIPTION |
|---------------------------|---|
| Configuration | Click Configuration to specify which STP mode you want to activate. Click MRSTP to edit MRSTP settings on the Switch. |
| Tree | Select which STP tree configuration you want to view. |
| Bridge | Root refers to the base of the spanning tree (the root bridge). Our Bridge is this Switch. This Switch may also be the root bridge. |
| Bridge ID | This is the unique identifier for this bridge, consisting of bridge priority plus MAC address. This ID is the same for Root and Our Bridge if the Switch is the root switch. |
| Hello Time (second) | This is the time interval (in seconds) at which the root switch transmits a configuration message. The root bridge determines Hello Time, Max Age and Forwarding Delay. |
| Max Age (second) | This is the maximum time (in seconds) a switch can wait without receiving a configuration message before attempting to reconfigure. |
| Forwarding Delay (second) | This is the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding). Note: The listening state does not exist in RSTP. |
| Cost to Bridge | This is the path cost from the root port on this Switch to the root switch. |
| Port ID | This is the priority and number of the port on the Switch through which this Switch must communicate with the root of the Spanning Tree. |
| Topology Changed Times | This is the number of times the spanning tree has been reconfigured. |
| Time Since Last Change | This is the time since the spanning tree was last reconfigured. |
| Port | This field displays the number of the port on the Switch. |
| Port State | This field displays the port state in STP. <ul style="list-style-type: none"> • Discarding - The port does not forward/process received frames or learn MAC addresses, but still listens for BPDUs. • Learning - The port learns MAC addresses and processes BPDUs, but does not forward frames yet. • Forwarding - The port is operating normally. It learns MAC addresses, processes BPDUs and forwards received frames. |
| Port Role | This field displays the role of the port in STP. <ul style="list-style-type: none"> • Root - A forwarding port on a non-root bridge, which has the lowest path cost and is the best port from the non-root bridge to the root bridge. A root bridge does not have a root port. • Designated - A forwarding port on the designated bridge for each connected LAN segment. A designated bridge has the lowest path cost to the root bridge among the bridges connected to the LAN segment. All the ports on a root bridge (root switch) are designated ports. • Alternate - A blocked port, which has a best alternate path to the root bridge. This path is different from using the root port. The port moves to the forwarding state when the designated port for the LAN segment fails. • Backup - A blocked port, which has a backup/redundant path to a LAN segment where a designated port is already connected when a switch has two links to the same LAN segment. • Disabled - Not strictly part of STP. The port can be disabled manually. |
| Designated Bridge ID | This field displays the identifier of the designated bridge to which this port belongs when the port is a designated port. Otherwise, it displays the identifier of the designated bridge for the LAN segment to which this port is connected. |
| Designated Port ID | This field displays the priority and number of the bridge port (on the designated bridge), through which the designated bridge transmits the stored configuration messages. |

Table 61 Advanced Application > Spanning Tree Protocol > Status: MRSTP (continued)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Designated Cost | This field displays the path cost to the LAN segment to which the port is connected when the port is a designated port. Otherwise, it displays the path cost to the root bridge from the designated port for the LAN segment to which this port is connected. |
| Root Guard State (Standalone mode) | This field displays the state of the port on which root guard is enabled. <ul style="list-style-type: none"> • Root - inconsistent - the Switch receives superior BPDUs on the port and blocks the port. • Forwarding - the Switch unbolcks and allows the port to forward frames again. |

11.8 Configure Multiple Spanning Tree Protocol

To configure MSTP, click **MSTP** in the **Advanced Application > Spanning Tree Protocol** screen. See [Section 11.1.5 on page 134](#) for more information on MSTP.

Figure 100 Advanced Application > Spanning Tree Protocol > MSTP (Standalone mode)

Multiple Spanning Tree Protocol Port. Status

Bridge:

| | | | |
|--------------------|--------------------------|---------|--|
| Active | <input type="checkbox"/> | | |
| Hello Time | 2 | seconds | |
| MAX Age | 20 | seconds | |
| Forwarding Delay | 15 | seconds | |
| Maximum hops | 20 | | |
| Configuration Name | 0019cb000002 | | |
| Revision Number | 0 | | |

Instance:

| | | | |
|-----------------|-------|-----|---|
| Instance | | | |
| Bridge Priority | 32768 | | |
| VLAN Range | Start | End | <input type="button" value="Add"/> <input type="button" value="Remove"/> <input type="button" value="Clear"/> |
| Enabled VLAN(s) | | | |

| Port | Active | Priority | Path Cost |
|------|--------------------------|----------|-----------|
| - | <input type="checkbox"/> | | |
| 1 | <input type="checkbox"/> | 128 | 4 |
| 2 | <input type="checkbox"/> | 128 | 4 |
| ... | | | |
| ... | | 128 | 2 |

| Instance | VLAN | Active Port |
|----------|--------|-------------|
| 0 | 1-4094 | - |

Figure 101 Advanced Application > Spanning Tree Protocol > MSTP (Stacking mode)

Multiple Spanning Tree Protocol Port Status

Bridge:

| | |
|--------------------|-------------------------------------|
| Active | <input checked="" type="checkbox"/> |
| Hello Time | 2 seconds |
| MAX Age | 20 seconds |
| Forwarding Delay | 15 seconds |
| Maximum hops | 20 |
| Configuration Name | 0019cb000002 |
| Revision Number | 0 |

Apply Cancel

Instance:

| | |
|-----------------|----------------------------|
| Instance | 0 |
| Bridge Priority | 32768 |
| VLAN Range | Start End Add Remove Clear |
| Enabled VLAN(s) | |

SLOT 1

| Port | Active | Priority | Path Cost |
|------|-------------------------------------|----------|-----------|
| 1/1 | <input checked="" type="checkbox"/> | 128 | 4 |
| 1/49 | <input checked="" type="checkbox"/> | 128 | 2 |
| 1/50 | <input checked="" type="checkbox"/> | 128 | 2 |

Add Cancel

| Instance | VLAN | Active Port |
|----------|--------|-------------|
| 0 | 1-4094 | - |

Delete Cancel

The following table describes the labels in this screen.

Table 62 Advanced Application > Spanning Tree Protocol > MSTP

| LABEL | DESCRIPTION |
|------------|---|
| Status | Click Status to display the MSTP Status screen (see Figure 104 on page 154). |
| Active | Select this check box to activate MSTP on the Switch. Clear this checkbox to disable MSTP on the Switch. Note: You must also activate Multiple Spanning Tree in the Advanced Application > Spanning Tree Protocol > Configuration screen to enable MSTP on the Switch. |
| Hello Time | This is the time interval in seconds between BPDU (Bridge Protocol Data Units) configuration message generations by the root switch. The allowed range is 1 to 10 seconds. |

Table 62 Advanced Application > Spanning Tree Protocol > MSTP (continued)

| LABEL | DESCRIPTION |
|------------------------------------|---|
| MaxAge | This is the maximum time (in seconds) a switch can wait without receiving a BPDU before attempting to reconfigure. All switch ports (except for designated ports) should receive BPDUs at regular intervals. Any port that ages out STP information (provided in the last BPDU) becomes the designated port for the attached LAN. If it is a root port, a new root port is selected from among the Switch ports attached to the network. The allowed range is 6 to 40 seconds. |
| Forwarding Delay | This is the maximum time (in seconds) a switch will wait before changing states. This delay is required because every switch must receive information about topology changes before it starts to forward frames. In addition, each port needs time to listen for conflicting information that would make it return to a blocking state; otherwise, temporary data loops might result. The allowed range is 4 to 30 seconds. As a general rule: Note: $2 * (\text{Forward Delay} - 1) \geq \text{Max Age} \geq 2 * (\text{Hello Time} + 1)$ |
| Maximum hops | Enter the number of hops (between 1 and 255) in an MSTP region before the BPDU is discarded and the port information is aged. |
| Configuration Name | Enter a descriptive name (up to 32 characters) of an MST region. |
| Revision Number | Enter a number to identify a region's configuration. Devices must have the same revision number to belong to the same region. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Instance | Use this section to configure MSTI (Multiple Spanning Tree Instance) settings. |
| Instance | Enter the number you want to use to identify this MST instance on the Switch. The Switch supports instance numbers 0-16. |
| Bridge Priority | Set the priority of the Switch for the specific spanning tree instance. The lower the number, the more likely the Switch will be chosen as the root bridge within the spanning tree instance. Enter priority values between 0 and 61440 in increments of 4096 (thus valid values are 4096, 8192, 12288, 16384, 20480, 24576, 28672, 32768, 36864, 40960, 45056, 49152, 53248, 57344 and 61440). |
| VLAN Range | Enter the start of the VLAN ID range that you want to add or remove from the VLAN range edit area in the Start field. Enter the end of the VLAN ID range that you want to add or remove from the VLAN range edit area in the End field. Next click: <ul style="list-style-type: none">• Add - to add this range of VLAN(s) to be mapped to the MST instance.• Remove - to remove this range of VLAN(s) from being mapped to the MST instance.• Clear - to remove all VLAN(s) from being mapped to this MST instance. |
| Enabled VLAN(s) | This field displays which VLAN(s) are mapped to this MST instance. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |

Table 62 Advanced Application > Spanning Tree Protocol > MSTP (continued)

| LABEL | DESCRIPTION |
|-------------|--|
| Active | Select this check box to add this port to the MST instance. |
| Priority | Configure the priority for each port here. Priority decides which port should be disabled when more than one port forms a loop in the Switch. Ports with a higher priority numeric value are disabled first. The allowed range is between 0 and 255 and the default value is 128. |
| Path Cost | Path cost is the cost of transmitting a frame on to a LAN through that port. It is recommended to assign this value according to the speed of the bridge. The slower the media, the higher the cost - see Table 55 on page 132 for more information. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses this change if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Instance | This field displays the ID of an MST instance. |
| VLAN | This field displays the VID (or VID ranges) to which the MST instance is mapped. |
| Active Port | This field display the ports configured to participate in the MST instance. |
| | Select an entry's check box to select a specific entry. |
| Delete | Check the rule(s) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

11.8.1 Multiple Spanning Tree Protocol Port Configuration

To configure MSTP ports, click **Port** in the **Advanced Application > Spanning Tree Protocol > MSTP** screen.

Figure 102 Advanced Application > Spanning Tree Protocol > MSTP > Port (Standalone mode)

| MSTP Port Configuration | | MSTP |
|-------------------------|--------------------------|--------------------------|
| Port | Edge | Root Guard |
| * | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

Figure 103 Advanced Application > Spanning Tree Protocol > MSTP > Port (Stacking mode)

| Port | Edge |
|------|--------------------------|
| 1/1 | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> |
| 1/7 | <input type="checkbox"/> |
| 1/8 | <input type="checkbox"/> |
| 1/9 | <input type="checkbox"/> |
| 1/10 | <input type="checkbox"/> |
| 1/11 | <input type="checkbox"/> |
| 1/12 | <input type="checkbox"/> |
| 1/13 | <input type="checkbox"/> |
| 1/14 | <input type="checkbox"/> |
| 1/15 | <input type="checkbox"/> |
| 1/16 | <input type="checkbox"/> |
| 1/17 | <input type="checkbox"/> |
| 1/18 | <input type="checkbox"/> |
| 1/19 | <input type="checkbox"/> |
| 1/20 | <input type="checkbox"/> |
| 1/21 | <input type="checkbox"/> |
| 1/22 | <input type="checkbox"/> |
| 1/23 | <input type="checkbox"/> |
| 1/24 | <input type="checkbox"/> |
| 1/25 | <input type="checkbox"/> |
| 1/26 | <input type="checkbox"/> |
| 1/27 | <input type="checkbox"/> |
| 1/28 | <input type="checkbox"/> |
| 1/29 | <input type="checkbox"/> |
| 1/30 | <input type="checkbox"/> |
| 1/31 | <input type="checkbox"/> |
| 1/32 | <input type="checkbox"/> |
| 1/33 | <input type="checkbox"/> |
| 1/34 | <input type="checkbox"/> |
| 1/35 | <input type="checkbox"/> |
| 1/36 | <input type="checkbox"/> |
| 1/37 | <input type="checkbox"/> |
| 1/38 | <input type="checkbox"/> |
| 1/39 | <input type="checkbox"/> |
| 1/40 | <input type="checkbox"/> |
| 1/41 | <input type="checkbox"/> |
| 1/42 | <input type="checkbox"/> |
| 1/43 | <input type="checkbox"/> |
| 1/44 | <input type="checkbox"/> |
| 1/45 | <input type="checkbox"/> |
| 1/46 | <input type="checkbox"/> |
| 1/47 | <input type="checkbox"/> |
| 1/48 | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> |

The following table describes the labels in this screen.

Table 63 Advanced Application > Spanning Tree Protocol > MSTP > Port

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Edge | <p>Select this check box to configure a port as an edge port when it is directly attached to a computer. An edge port changes its initial STP port state from blocking state to forwarding state immediately without going through listening and learning states right after the port is configured as an edge port or when its link status changes.</p> <p>Note: An edge port becomes a non-edge port as soon as it receives a Bridge Protocol Data Unit (BPDU).</p> |

Table 63 Advanced Application > Spanning Tree Protocol > MSTP > Port (continued)

| LABEL | DESCRIPTION |
|------------------------------|--|
| Root Guard (Standalone mode) | Select this check box to enable root guard on this port in order to prevent the switch(es) attached to the port from becoming the root bridge. With root guard enabled, a port is blocked when the Switch receives a superior BPDU on it. The Switch allows traffic to pass through this port again when the switch connected to the port stops to send superior BPDUs. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

11.9 Multiple Spanning Tree Protocol Status

Click **Advanced Application > Spanning Tree Protocol** in the navigation panel to display the status screen as shown next. See [Section 11.1.5 on page 134](#) for more information on MSTP.

Note: This screen is only available after you activate MSTP on the Switch.

Figure 104 Advanced Application > Spanning Tree Protocol > Status: MSTP

| Spanning Tree Protocol Status | | | Configuration | RSTP | MRSTP | MSTP |
|-------------------------------|-------------------|-------------------|----------------------|--------------------|-----------------|------------------|
| Spanning Tree Protocol: MSTP | | | | | | |
| CST | | | | | | |
| Bridge | Root | Our Bridge | | | | |
| Bridge ID | 0000-000000000000 | 0000-000000000000 | | | | |
| Hello Time (second) | 0 | 0 | | | | |
| Max Age (second) | 0 | 0 | | | | |
| Forwarding Delay (second) | 0 | 0 | | | | |
| Cost to Bridge | 0 | 0 | | | | |
| Port ID | 0=0000 | 0=0000 | | | | |
| Configuration Name | 0019c0000002 | | | | | |
| Revision Number | 0 | | | | | |
| Configuration Digest | 0 | | | | | |
| Topology Changed Times | 0 | | | | | |
| Time Since Last Change | 0:00:00 | | | | | |
| Instance: | | | | | | |
| Instance | VLAN | | | | | |
| 0 | 1-4094 | | | | | |
| MSTI 0 | | | | | | |
| Bridge | Regional Root | Our Bridge | | | | |
| Bridge ID | 0000-000000000000 | 0000-000000000000 | | | | |
| Internal Cost | 0 | 0 | | | | |
| Port ID | 0=0000 | 0=0000 | | | | |
| Port | Port State | Port Role | Designated Bridge ID | Designated Port ID | Designated Cost | Root Guard State |

The following table describes the labels in this screen.

Table 64 Advanced Application > Spanning Tree Protocol > Status: MSTP

| LABEL | DESCRIPTION |
|---------------------------|--|
| Configuration | Click Configuration to specify which STP mode you want to activate. Click MSTP to edit MSTP settings on the Switch. |
| CST | This section describes the Common Spanning Tree settings. |
| Bridge | Root refers to the base of the spanning tree (the root bridge). Our Bridge is this Switch. This Switch may also be the root bridge. |
| Bridge ID | This is the unique identifier for this bridge, consisting of bridge priority plus MAC address. This ID is the same for Root and Our Bridge if the Switch is the root switch. |
| Hello Time (second) | This is the time interval (in seconds) at which the root switch transmits a configuration message. |
| Max Age (second) | This is the maximum time (in seconds) a switch can wait without receiving a configuration message before attempting to reconfigure. |
| Forwarding Delay (second) | This is the time (in seconds) the root switch will wait before changing states (that is, listening to learning to forwarding). |
| Cost to Bridge | This is the path cost from the root port on this Switch to the root switch. |
| Port ID | This is the priority and number of the port on the Switch through which this Switch must communicate with the root of the Spanning Tree. |
| Configuration Name | This field displays the configuration name for this MST region. |
| Revision Number | This field displays the revision number for this MST region. |
| Configuration Digest | A configuration digest is generated from the VLAN-MSTI mapping information. This field displays the 16-octet signature that is included in an MSTP BPDU. This field displays the digest when MSTP is activated on the system. |
| Topology Changed Times | This is the number of times the spanning tree has been reconfigured. |
| Time Since Last Change | This is the time since the spanning tree was last reconfigured. |
| Instance: | These fields display the MSTI to VLAN mapping. In other words, which VLANs run on each spanning tree instance. |
| Instance | This field displays the MSTI ID. |
| VLAN | This field displays which VLANs are mapped to an MSTI. |
| MSTI | Select the MST instance settings you want to view. |
| Bridge | Root refers to the base of the MST instance. Our Bridge is this Switch. This Switch may also be the root bridge. |
| Bridge ID | This is the unique identifier for this bridge, consisting of bridge priority plus MAC address. This ID is the same for Root and Our Bridge if the Switch is the root switch. |
| Internal Cost | This is the path cost from the root port in this MST instance to the regional root switch. |
| Port ID | This is the priority and number of the port on the Switch through which this Switch must communicate with the root of the MST instance. |
| Port | This field displays the number of the port on the Switch. |

Table 64 Advanced Application > Spanning Tree Protocol > Status: MSTP (continued)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Port State | <p>This field displays the port state in STP.</p> <ul style="list-style-type: none"> • Discarding - The port does not forward/process received frames or learn MAC addresses, but still listens for BPDUs. • Learning - The port learns MAC addresses and processes BPDUs, but does not forward frames yet. • Forwarding - The port is operating normally. It learns MAC addresses, processes BPDUs and forwards received frames. |
| Port Role | <p>This field displays the role of the port in STP.</p> <ul style="list-style-type: none"> • Root - A forwarding port on a non-root bridge, which has the lowest path cost and is the best port from the non-root bridge to the root bridge. A root bridge does not have a root port. • Designated - A forwarding port on the designated bridge for each connected LAN segment. A designated bridge has the lowest path cost to the root bridge among the bridges connected to the LAN segment. All the ports on a root bridge (root switch) are designated ports. • Alternate - A blocked port, which has a best alternate path to the root bridge. This path is different from using the root port. The port moves to the forwarding state when the designated port for the LAN segment fails. • Backup - A blocked port, which has a backup/redundant path to a LAN segment where a designated port is already connected when a switch has two links to the same LAN segment. • Disabled - Not strictly part of STP. The port can be disabled manually. |
| Designated Bridge ID | <p>This field displays the identifier of the designated bridge to which this port belongs when the port is a designated port. Otherwise, it displays the identifier of the designated bridge for the LAN segment to which this port is connected.</p> |
| Designated Port ID | <p>This field displays the priority and number of the bridge port (on the designated bridge), through which the designated bridge transmits the stored configuration messages.</p> |
| Designated Cost | <p>This field displays the path cost to the LAN segment to which the port is connected when the port is a designated port. Otherwise, it displays the path cost to the root bridge from the designated port for the LAN segment to which this port is connected.</p> |
| Root Guard State (Standalone mode) | <p>This field displays the state of the port on which root guard is enabled.</p> <ul style="list-style-type: none"> • Root - inconsistent - the Switch receives superior BPDUs on the port and blocks the port. • Forwarding - the Switch unblocks and allows the port to forward frames again. |

Bandwidth Control

This chapter shows you how to cap the maximum bandwidth using the **Bandwidth Control** screen.

12.1 Bandwidth Control Overview

Bandwidth control means defining a maximum allowable bandwidth for incoming and/or out-going traffic flows on a port.

12.1.1 CIR and PIR

The Committed Information Rate (CIR) is the guaranteed bandwidth for the incoming traffic flow on a port. The Peak Information Rate (PIR) is the maximum bandwidth allowed for the incoming traffic flow on a port when there is no network congestion.

The CIR and PIR should be set for all ports that use the same uplink bandwidth. If the CIR is reached, packets are sent at the rate up to the PIR. When network congestion occurs, packets through the ingress port exceeding the CIR will be marked for drop.

Note: The CIR should be less than the PIR.

Note: The sum of CIRs cannot be greater than or equal to the uplink bandwidth.

12.2 Bandwidth Control Setup

Click **Advanced Application > Bandwidth Control** in the navigation panel to bring up the screen as shown next.

Figure 105 Advanced Application > Bandwidth Control (Standalone mode)

| Port | Active | Ingress Rate | | | Egress Rate | |
|------|--------------------------|--------------|--------------------------|-----------|--------------------------|--------|
| | | Current Rate | Active | Peak Rate | Active | Kbps |
| * | <input type="checkbox"/> | | <input type="checkbox"/> | Kbps | <input type="checkbox"/> | Kbps |
| 1 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 2 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 3 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 4 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 5 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 6 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 7 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| ... | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 51 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 52 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |

Figure 106 Advanced Application > Bandwidth Control (Stacking mode)

| Port | Active | Ingress Rate | | | Egress Rate | |
|------|--------------------------|--------------|--------------------------|-----------|--------------------------|--------|
| | | Current Rate | Active | Peak Rate | Active | Kbps |
| 17 | <input type="checkbox"/> | | <input type="checkbox"/> | Kbps | <input type="checkbox"/> | Kbps |
| 1/1 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/2 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/3 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/4 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/5 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/6 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/7 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/8 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/9 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/10 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 1/11 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| ... | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 149 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 149 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |
| 150 | <input type="checkbox"/> | 1 | <input type="checkbox"/> | 1 Kbps | <input type="checkbox"/> | 1 Kbps |

The following table describes the related labels in this screen.

Table 65 Advanced Application > Bandwidth Control

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select this check box to enable bandwidth control on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |

Table 65 Advanced Application > Bandwidth Control (continued)

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Ingress Rate | |
| Active | Select this check box to activate commit rate limits on this port. |
| Commit Rate | Specify the guaranteed bandwidth allowed in kilobits per second (Kbps) for the incoming traffic flow on a port. The commit rate should be less than the peak rate. The sum of commit rates cannot be greater than or equal to the uplink bandwidth. |
| Active | Select this check box to activate peak rate limits on this port. |
| Peak Rate | Specify the maximum bandwidth allowed in kilobits per second (Kbps) for the incoming traffic flow on a port. |
| Active | Select this check box to activate egress rate limits on this port. |
| Egress Rate | Specify the maximum bandwidth allowed in kilobits per second (Kbps) for the out-going traffic flow on a port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Broadcast Storm Control

This chapter introduces and shows you how to configure the broadcast storm control feature.

13.1 Broadcast Storm Control Setup

Broadcast storm control limits the number of broadcast, multicast and destination lookup failure (DLF) packets the Switch receives per second on the ports. When the maximum number of allowable broadcast, multicast and/or DLF packets is reached per second, the subsequent packets are discarded. Enable this feature to reduce broadcast, multicast and/or DLF packets in your network. You can specify limits for each packet type on each port.

Click **Advanced Application > Broadcast Storm Control** in the navigation panel to display the screen as shown next.

Figure 107 Advanced Application > Broadcast Storm Control (Standalone mode)

| Port | Broadcast (pkt/s) | Multicast (pkt/s) | DLF (pkt/s) |
|------|----------------------------|----------------------------|----------------------------|
| * | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 2 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 3 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 4 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 5 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 6 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 7 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 8 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 9 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 50 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 51 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |
| 52 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 | <input type="checkbox"/> 0 |

Figure 108 Advanced Application > Broadcast Storm Control (Stacking mode)

| Port | Broadcast (pkt/s) | Multicast (pkt/s) | DLF (pkt/s) |
|------|-------------------|-------------------|-------------|
| 1/1 | 0 | 0 | 0 |
| 1/2 | 0 | 0 | 0 |
| 1/3 | 0 | 0 | 0 |
| 1/4 | 0 | 0 | 0 |
| 1/5 | 0 | 0 | 0 |
| 1/6 | 0 | 0 | 0 |
| 1/7 | 0 | 0 | 0 |
| 1/48 | 0 | 0 | 0 |
| 1/49 | 0 | 0 | 0 |
| 1/50 | 0 | 0 | 0 |

The following table describes the labels in this screen.

Table 66 Advanced Application > Broadcast Storm Control

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this check box to enable traffic storm control on the Switch. Clear this check box to disable this feature. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Broadcast (pkt/s) | Select this option and specify how many broadcast packets the port receives per second. |
| Multicast (pkt/s) | Select this option and specify how many multicast packets the port receives per second. |
| DLF (pkt/s) | Select this option and specify how many destination lookup failure (DLF) packets the port receives per second. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Mirroring


This chapter discusses port mirroring setup screens.

14.1 Port Mirroring


Port mirroring allows you to copy a traffic flow to a monitor port (the port you copy the traffic to) in order that you can examine the traffic from the monitor port without interference.

The Switch supports both local port mirroring and remote port mirroring.

In local port mirroring, the mirroring ports (through which traffic you copy passes) and the monitor port are on the same device.

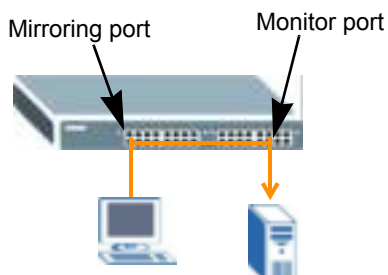


In remote port mirroring (RMirror), the mirroring ports and monitor port can be on different devices in a network. You can use it to monitor multiple switches across your network. The traffic from the source device's mirroring port(s) is sent to a reflector port for VLAN tagging and copied to the connected port(s). Traffic are then carried over the specified remote port mirroring (RMirror) VLAN and sent to the destination device's monitor port through the connected ports that connect to other switches.

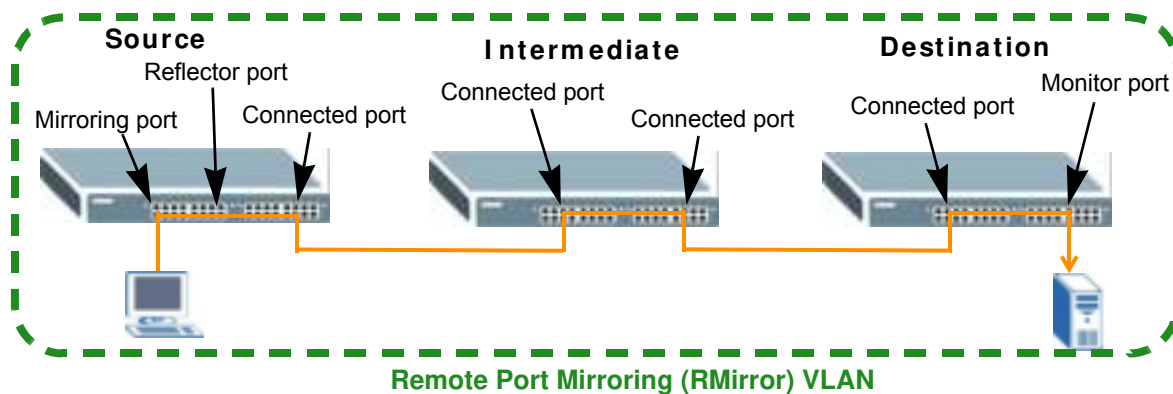


Single-Destination RMirror

If the mirrored traffic is forwarded to one single destination switch, you can disable the reflector port. The Switch adds RMirror VLAN tag and forwards mirrored traffic from the mirroring port to the connected port directly.

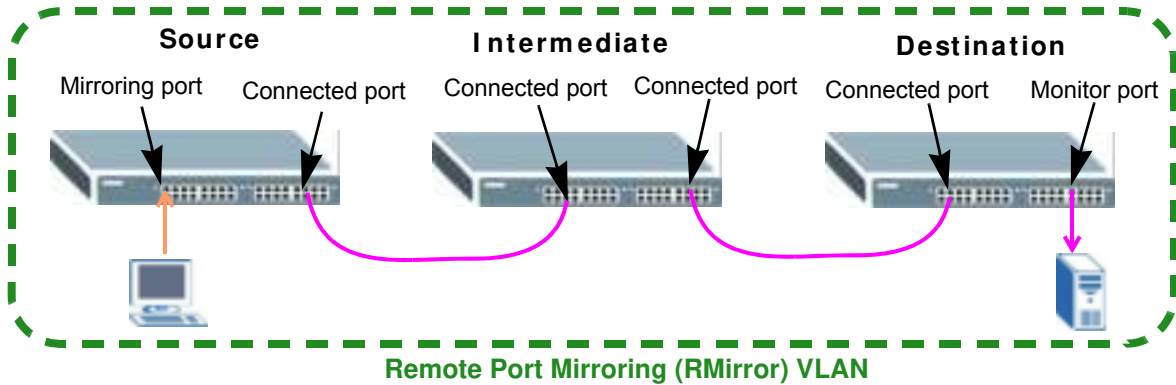

Multi-Destination RMirror

If you configure more than one connected port on the source switch to forward the mirrored traffic to multiple destination switches, you must enable a reflector port on the source switch.

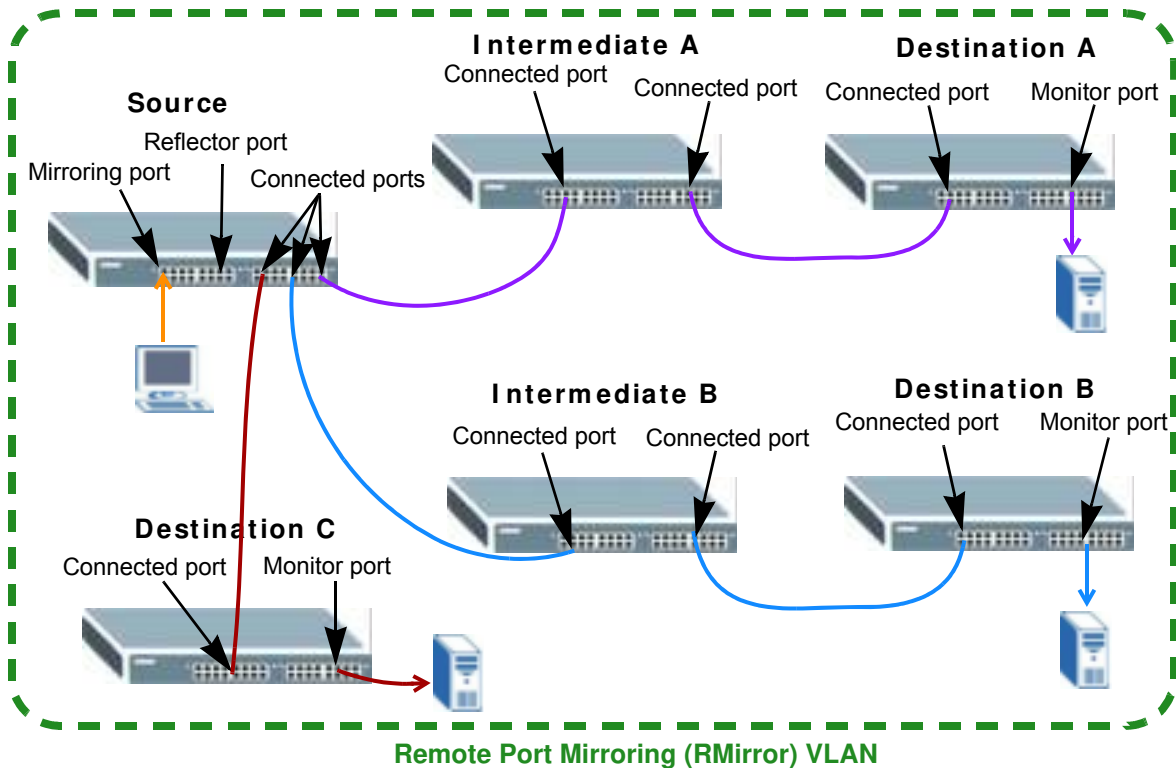

Port Rules in Port Mirroring

The following table shows the rule for a port in remote port mirroring. For example, a port on the source device can be a mirroring port in both RMirror VLAN 1 and RMirror VLAN 2. But when the port is the source device's mirroring port in RMirror VLAN 1, it cannot be the reflector port or monitor port in another RMirror VLAN.

Table 67 Port Rules between Different Remote Port Mirroring VLANs

| | | RMirror VLAN 1 | | | | |
|----------------|---|-----------------------|-----------------------|----------------|---|--------------------------|
| | | Source Mirroring Port | Source Reflector Port | Connected Port | Source Connected Port in Single-Destination RMirror | Destination Monitor Port |
| RMirror VLAN 2 | Source Mirroring Port | Y | N | Y | N | N |
| | Source Reflector Port | N | N | N | N | N |
| | Connected Port | Y | N | Y | Y | N |
| | Source Connected Port in Single-Destination RMirror | N | N | Y | N | N |
| | Destination Monitor Port | N | N | N | N | N |

The following table shows the rule for a port used in both local port mirroring and remote port mirroring. For example, the RMirror mirroring port on the source device can also be used as the mirroring port in local port mirroring. But it cannot be the monitor port in local port mirroring.

Table 68 Port Rules between Remote and Local Port Mirroring

| | | RMirror | | | | |
|----------------------|----------------|-----------------------|-----------------------|----------------|---|--------------------------|
| | | Source Mirroring Port | Source Reflector Port | Connected Port | Source Connected Port in Single-Destination RMirror | Destination Monitor Port |
| Local Port Mirroring | Mirroring Port | Y | N | Y | N | N |
| | Monitor Port | N | N | N | N | N |

14.1.1 Local Port Mirroring

Click **Advanced Application** > **Mirroring** in the navigation panel to display the **Mirroring** screen. Use this screen to select a monitor port and specify the traffic flow to be copied to the monitor port.

Figure 109 Advanced Application > Mirroring (Standalone mode)

| Port | Mirrored | Direction |
|------|--------------------------|-----------|
| * | <input type="checkbox"/> | Ingress ▼ |
| 1 | <input type="checkbox"/> | Ingress ▼ |
| 2 | <input type="checkbox"/> | Ingress ▼ |
| 3 | <input type="checkbox"/> | Ingress ▼ |
| 4 | <input type="checkbox"/> | Ingress ▼ |
| 5 | <input type="checkbox"/> | Ingress ▼ |
| 6 | <input type="checkbox"/> | Ingress ▼ |
| 7 | <input type="checkbox"/> | Ingress ▼ |
| 8 | <input type="checkbox"/> | Ingress ▼ |
| 9 | <input type="checkbox"/> | Ingress ▼ |
| 10 | <input type="checkbox"/> | Ingress ▼ |
| 11 | <input type="checkbox"/> | Ingress ▼ |
| ... | | |
| 51 | <input type="checkbox"/> | Ingress ▼ |
| 52 | <input type="checkbox"/> | Ingress ▼ |

Apply Cancel

Figure 110 Advanced Application > Mirroring (Stacking mode)

| Port | Mirrored | Direction |
|------|--------------------------|-----------|
| 1/1 | <input type="checkbox"/> | Ingress ▼ |
| 1/1 | <input type="checkbox"/> | Ingress ▼ |
| 1/2 | <input type="checkbox"/> | Ingress ▼ |
| 1/3 | <input type="checkbox"/> | Ingress ▼ |
| 1/4 | <input type="checkbox"/> | Ingress ▼ |
| 1/5 | <input type="checkbox"/> | Ingress ▼ |
| 1/6 | <input type="checkbox"/> | Ingress ▼ |
| 1/7 | <input type="checkbox"/> | Ingress ▼ |
| 1/8 | <input type="checkbox"/> | Ingress ▼ |
| 1/9 | <input type="checkbox"/> | Ingress ▼ |
| 1/10 | <input type="checkbox"/> | Ingress ▼ |
| 1/11 | <input type="checkbox"/> | Ingress ▼ |
| 1/12 | <input type="checkbox"/> | Ingress ▼ |
| 1/13 | <input type="checkbox"/> | Ingress ▼ |
| 1/14 | <input type="checkbox"/> | Ingress ▼ |
| 1/15 | <input type="checkbox"/> | Ingress ▼ |
| 1/16 | <input type="checkbox"/> | Ingress ▼ |
| 1/17 | <input type="checkbox"/> | Ingress ▼ |
| 1/18 | <input type="checkbox"/> | Ingress ▼ |
| 1/19 | <input type="checkbox"/> | Ingress ▼ |
| 1/20 | <input type="checkbox"/> | Ingress ▼ |
| 1/21 | <input type="checkbox"/> | Ingress ▼ |
| 1/22 | <input type="checkbox"/> | Ingress ▼ |
| 1/23 | <input type="checkbox"/> | Ingress ▼ |
| 1/24 | <input type="checkbox"/> | Ingress ▼ |
| 1/25 | <input type="checkbox"/> | Ingress ▼ |
| 1/26 | <input type="checkbox"/> | Ingress ▼ |
| 1/27 | <input type="checkbox"/> | Ingress ▼ |
| 1/28 | <input type="checkbox"/> | Ingress ▼ |
| 1/29 | <input type="checkbox"/> | Ingress ▼ |
| 1/30 | <input type="checkbox"/> | Ingress ▼ |
| 1/31 | <input type="checkbox"/> | Ingress ▼ |
| 1/32 | <input type="checkbox"/> | Ingress ▼ |
| 1/33 | <input type="checkbox"/> | Ingress ▼ |
| 1/34 | <input type="checkbox"/> | Ingress ▼ |
| 1/35 | <input type="checkbox"/> | Ingress ▼ |
| 1/36 | <input type="checkbox"/> | Ingress ▼ |
| 1/37 | <input type="checkbox"/> | Ingress ▼ |
| 1/38 | <input type="checkbox"/> | Ingress ▼ |
| 1/39 | <input type="checkbox"/> | Ingress ▼ |
| 1/40 | <input type="checkbox"/> | Ingress ▼ |
| 1/41 | <input type="checkbox"/> | Ingress ▼ |
| 1/42 | <input type="checkbox"/> | Ingress ▼ |
| 1/43 | <input type="checkbox"/> | Ingress ▼ |
| 1/44 | <input type="checkbox"/> | Ingress ▼ |
| 1/45 | <input type="checkbox"/> | Ingress ▼ |
| 1/46 | <input type="checkbox"/> | Ingress ▼ |
| 1/47 | <input type="checkbox"/> | Ingress ▼ |
| 1/48 | <input type="checkbox"/> | Ingress ▼ |
| 1/49 | <input type="checkbox"/> | Ingress ▼ |
| 1/50 | <input type="checkbox"/> | Ingress ▼ |

The following table describes the labels in this screen.

Table 69 Advanced Application > Mirroring

| LABEL | DESCRIPTION |
|---------------------------------------|---|
| Active | Select this check box to activate port mirroring on the Switch. Clear this check box to disable the feature. |
| Monitor Port | The monitor port is the port you copy the traffic to in order to examine it in more detail without interfering with the traffic flow on the original port(s). Type the port number of the monitor port. In stacking mode, the first number represents the slot and the second the port number. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Mirrored | Select this option to mirror the traffic on a port. |
| Direction | Specify the direction of the traffic to mirror by selecting from the drop-down list box. Choices are Egress (outgoing), Ingress (incoming) and Both . |

Table 69 Advanced Application > Mirroring (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

14.1.2 Remote Port Mirroring

Use this screen to create a remote port mirroring (RMirror) VLAN through which the mirrored traffic is forwarded.

Click the **RMirror** link in the **Advanced Application > Mirroring** screen. The following screen opens.

Figure 111 Advanced Application > Mirroring > RMirror

The following table describes the labels in this screen.

Table 70 Advanced Application > Mirroring > RMirror


| LABEL | DESCRIPTION |
|-----------------|---|
| Active | Select the option to enable the VLAN. |
| RMirror VLAN ID | Specify the ID number of remote port mirroring (RMirror) VLAN. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | This field displays the ID number of the RMirror VLAN. Click on the VLAN ID number to change the settings. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Active | This field displays whether the VLAN is enabled or not. |
| Delete | Check the rule(s) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

14.1.3 Source

Use this screen to configure the reflector port and specify the traffic flow to be copied to the monitor port when the Switch is the source device in remote port mirroring.

Click the **Source** link in the **RMirror** screen. The following screen opens.

Figure 112 Advanced Application > Mirroring > RMirror > Source (Standalone mode)

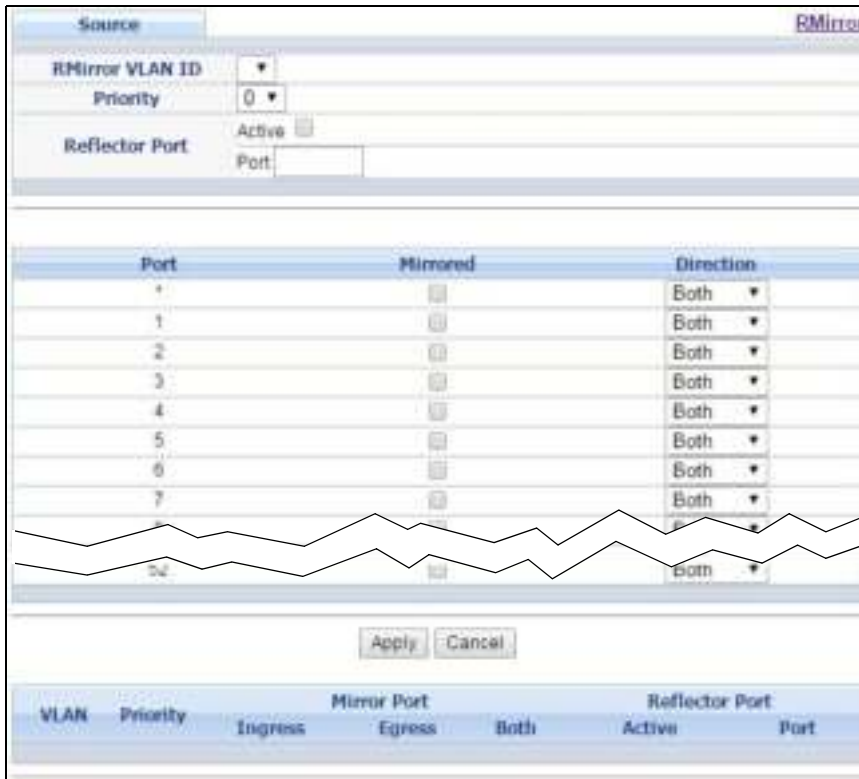

The screenshot shows the 'Source' configuration page for Remote Port Mirroring. It features the following elements:

- Form Fields:**
 - RMirror VLAN ID:** A dropdown menu.
 - Priority:** A dropdown menu with '0' selected.
 - Reflector Port:** A text input field.
 - Active:** A checkbox.
- Table:** A table with three columns: 'Port', 'Mirrored', and 'Direction'.

| Port | Mirrored | Direction |
|------|--------------------------|-----------|
| 1 | <input type="checkbox"/> | Both |
| 2 | <input type="checkbox"/> | Both |
| 3 | <input type="checkbox"/> | Both |
| 4 | <input type="checkbox"/> | Both |
| 5 | <input type="checkbox"/> | Both |
| 6 | <input type="checkbox"/> | Both |
| 7 | <input type="checkbox"/> | Both |
| 8 | <input type="checkbox"/> | Both |
| 9 | <input type="checkbox"/> | Both |
| 10 | <input type="checkbox"/> | Both |
| 11 | <input type="checkbox"/> | Both |
| 12 | <input type="checkbox"/> | Both |
| 13 | <input type="checkbox"/> | Both |
| 14 | <input type="checkbox"/> | Both |
| 15 | <input type="checkbox"/> | Both |
| 16 | <input type="checkbox"/> | Both |
| 17 | <input type="checkbox"/> | Both |
| 18 | <input type="checkbox"/> | Both |
| 19 | <input type="checkbox"/> | Both |
| 20 | <input type="checkbox"/> | Both |
| 21 | <input type="checkbox"/> | Both |
| 22 | <input type="checkbox"/> | Both |
| 23 | <input type="checkbox"/> | Both |
| 24 | <input type="checkbox"/> | Both |
- Buttons:** 'Apply' and 'Cancel' buttons are located below the table.
- Summary Table:** A table at the bottom provides a summary of the configuration:

| VLAN | Priority | Mirror Port | | | Reflector Port | |
|------|----------|-------------|--------|------|----------------|------|
| | | Ingress | Egress | Both | Active | Port |
| | | | | | | |

Figure 113 Advanced Application > Mirroring > RMirror > Source (Stacking mode)

The screenshot shows the 'Source' configuration page for RMirror in stacking mode. The top section contains configuration fields: 'RMirror VLAN ID' (dropdown), 'Priority' (dropdown set to 0), 'Reflector Port' (checkbox 'Active' and a port number dropdown set to 1), and an 'Apply' button. Below this is a table for 'SLOT 1' with columns 'Port', 'Mirrored', and 'Direction'. The 'Port' column lists 1/1 through 1/11, followed by 1/46 through 1/50. The 'Mirrored' column has checkboxes, and the 'Direction' column has dropdowns set to 'Both'. At the bottom, there are 'Apply' and 'Cancel' buttons, and a legend for the table labels: VLAN, Priority, Ingress, Mirror Port (Egress, Both), Reflector Port (Active, Port).

The following table describes the labels in this screen.

Table 71 Advanced Application > Mirroring > RMirror > Source

| LABEL | DESCRIPTION |
|------------------------------------|---|
| RMirror VLAN ID | Select the RMirror VLAN over which the mirrored traffic is forwarded. |
| Priority | Enter the priority of the mirrored traffic. |
| Reflector Port | Select the check box to enable the specified reflector port. Enter the number of reflector port that adds the RMirror VLAN tag to all mirrored traffic and forwards traffic to the connected port(s) in the same RMirror VLAN. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |

Table 71 Advanced Application > Mirroring > RMirror > Source (continued)

| LABEL | DESCRIPTION |
|----------------|---|
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Mirrored | Select this option to mirror the traffic on a port. |
| Direction | Specify the direction of the traffic to mirror by selecting from the drop-down list box. Choices are Egress (outgoing), Ingress (incoming) and Both . |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | This field displays the ID number of RMirror VLAN over which the mirrored traffic is forwarded. |
| Priority | This field displays the priority of the mirrored traffic. |
| Mirror Port | |
| Ingress | This field displays the number of port(s) on which the incoming traffic is mirrored. |
| Egress | This field displays the number of port(s) on which the outgoing traffic is mirrored. |
| Both | This field displays the number of port(s) on which the incoming and outgoing traffic is mirrored. |
| Reflector Port | This field displays whether the reflector port is enabled and the number of reflector port in this RMirror VLAN. |

14.1.4 Destination

Use this screen to specify the RMirror VLAN and configure the monitor port when the Switch is the destination device in remote port mirroring.

Click the **Destination** link in the **RMirror** screen. The following screen opens.

Figure 114 Advanced Application > Mirroring > RMirror > Destination

The screenshot shows the 'Destination' configuration page for RMirror. It includes a header with 'Destination' and 'RMirror'. The main configuration area contains:

- RMirror VLAN ID**: A dropdown menu.
- Monitor Port**: A text input field.
- Tagging**: Radio buttons for 'Untagged' (selected) and 'Tagged'.

Below the configuration fields are 'Apply' and 'Cancel' buttons. At the bottom of the page, there is a table with columns for 'VLAN', 'Monitor Port', and 'Tagging', and 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 72 Advanced Application > Mirroring > RMirror > Destination

| LABEL | DESCRIPTION |
|-----------------|---|
| RMirror VLAN ID | Select the RMirror VLAN over which the mirrored traffic is forwarded. |
| Monitor Port | Specify the port to which you copy the traffic in order to examine it in more detail without interfering with the traffic flow on the original port(s). |
| Tagging | Select whether to add the RMirror VLAN tag to mirrored traffic on the monitor port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | This field displays the ID number of RMirror VLAN over which the mirrored traffic is forwarded. |
| Monitor Port | This field displays the number of port that receives the mirrored traffic from the source device for analysis. |
| Tagging | This field displays whether the mirrored traffic is tagged with the RMirror VLAN ID. |
| Delete | Check the rule(s) that you want to remove in the Delete column and then click the Delete button. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

14.1.5 Connected Port

Use this screen to select the RMirror VLAN and specify the port(s) that helps forward mirrored traffic to other connected switches and/or receive mirrored traffic from other connected port in the same RMirror VLAN.

Click the **Connected Port** link in the **RMirror** screen. The following screen opens.

Figure 115 Advanced Application > Mirroring > RMirror > Connected Port (Standalone mode)

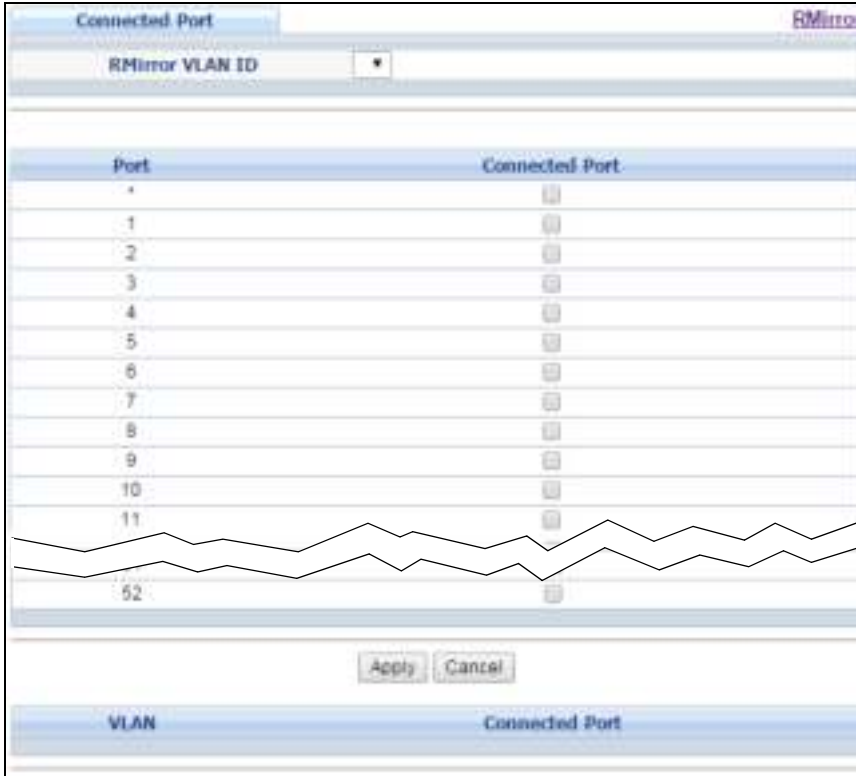


Figure 116 Advanced Application > Mirroring > RMirror > Connected Port (Stacking mode)

The screenshot shows the 'Connected Port' configuration interface. At the top, there is a 'RMirror VLAN ID' dropdown menu. Below it is a 'SLOT 1' dropdown menu. The main area is a table with two columns: 'Port' and 'Connected Port'. The 'Port' column lists ports from 1/1 to 1/13, followed by a gap, and then 1/45 to 1/50. The 'Connected Port' column contains icons for each port. At the bottom of the screen, there are 'Apply' and 'Cancel' buttons, and a summary table with 'VLAN' and 'Connected Port' columns.

The following table describes the labels in this screen.

Table 73 Advanced Application > Mirroring > RMirror > Connected Port

| LABEL | DESCRIPTION |
|------------------------------------|--|
| RMirror VLAN ID | Select the RMirror VLAN over which the mirrored traffic is forwarded. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |

Table 73 Advanced Application > Mirroring > RMirror > Connected Port (continued)

| LABEL | DESCRIPTION |
|----------------|---|
| Connected Port | <p>When the Switch is a source device in remote port mirroring, select this option to have the port help forward mirrored traffic to the connected port of the intermediate or destination device in the same RMirror VLAN.</p> <p>When the Switch is an intermediate device in remote port mirroring, select this option to have the port receive mirrored traffic from the connected source or another intermediate device or forward mirrored traffic to the connected destination or another intermediate device in the same RMirror VLAN.</p> <p>When the Switch is a destination device in remote port mirroring, select this option to have the port receive mirrored traffic from the connected source or intermediate device in the same RMirror VLAN.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the nonvolatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | This field displays the ID number of port mirroring VLAN over which the mirrored traffic is forwarded. |
| Connected Port | This field displays the number of port(s) that helps forward mirrored traffic to other connected switches. |

Link Aggregation

This chapter shows you how to logically aggregate physical links to form one logical, higher-bandwidth link.

15.1 Link Aggregation Overview

Link aggregation (trunking) is the grouping of physical ports into one logical higher-capacity link. You may want to trunk ports if for example, it is cheaper to use multiple lower-speed links than to under-utilize a high-speed, but more costly, single-port link.

However, the more ports you aggregate then the fewer available ports you have. A trunk group is one logical link containing multiple ports.

The beginning port of each trunk group must be physically connected to form a trunk group.

The Switch supports both static and dynamic link aggregation.

Note: In a properly planned network, it is recommended to implement static link aggregation only. This ensures increased network stability and control over the trunk groups on your Switch.

See [Section 15.6 on page 183](#) for a static port trunking example.

15.2 Dynamic Link Aggregation

The Switch adheres to the IEEE 802.3ad standard for static and dynamic (LACP) port trunking.

The Switch supports the link aggregation IEEE802.3ad standard. This standard describes the Link Aggregation Control Protocol (LACP), which is a protocol that dynamically creates and manages trunk groups.

When you enable LACP link aggregation on a port, the port can automatically negotiate with the ports at the remote end of a link to establish trunk groups. LACP also allows port redundancy, that is, if an operational port fails, then one of the “standby” ports become operational without user intervention. Please note that:

- You must connect all ports point-to-point to the same Ethernet switch and configure the ports for LACP trunking.
- LACP only works on full-duplex links.
- All ports in the same trunk group must have the same media type, speed, duplex mode and flow control settings.

Configure trunk groups or LACP before you connect the Ethernet switch to avoid causing network topology loops.

15.2.1 Link Aggregation ID

LACP aggregation ID consists of the following information. Port Priority and Port Number are 0 as it is the aggregator ID for the trunk group, not the individual port.

Table 74 Link Aggregation ID: Local Switch

| SYSTEM PRIORITY | MAC ADDRESS | KEY | PORT PRIORITY | PORT NUMBER |
|-----------------|-------------------|------|---------------|-------------|
| 0000 | 00-00-00-00-00-00 | 0000 | 00 | 0000 |

Table 75 Link Aggregation ID: Peer Switch

| SYSTEM PRIORITY | MAC ADDRESS | KEY | PORT PRIORITY | PORT NUMBER |
|-----------------|-------------------|------|---------------|-------------|
| 0000 | 00-00-00-00-00-00 | 0000 | 00 | 0000 |

15.3 Link Aggregation Status

Click **Advanced Application** > **Link Aggregation** in the navigation panel. The **Link Aggregation Status** screen displays by default. See [Section 15.1 on page 175](#) for more information.

Figure 117 Advanced Application > Link Aggregation Status

| Link Aggregation Status | | | Link Aggregation Setting | | |
|-------------------------|---------------|--------------------|--------------------------|-------------|--------|
| Group ID | Enabled Ports | Synchronized Ports | Aggregator ID | Criteria | Status |
| T1 | - | - | - | src-dst-mac | - |
| T2 | - | - | - | src-dst-mac | - |
| T3 | - | - | - | src-dst-mac | - |
| T4 | - | - | - | src-dst-mac | - |
| T5 | - | - | - | src-dst-mac | - |
| T6 | - | - | - | src-dst-mac | - |
| T7 | - | - | - | src-dst-mac | - |
| T8 | - | - | - | src-dst-mac | - |
| T9 | - | - | - | src-dst-mac | - |
| T10 | - | - | - | src-dst-mac | - |
| T11 | - | - | - | src-dst-mac | - |
| T12 | - | - | - | src-dst-mac | - |
| T13 | - | - | - | src-dst-mac | - |
| T14 | - | - | - | src-dst-mac | - |
| T15 | - | - | - | src-dst-mac | - |

The following table describes the labels in this screen.

Table 76 Advanced Application > Link Aggregation Status

| LABEL | DESCRIPTION |
|--------------------|---|
| Group ID | This field displays the group ID to identify a trunk group, that is, one logical link containing multiple ports. |
| Enabled Port | <p>These are the ports you have configured in the Link Aggregation screen to be in the trunk group.</p> <p>The port number(s) displays only when this trunk group is activated and there is a port belonging to this group.</p> |
| Synchronized Ports | These are the ports that are currently transmitting data as one logical link in this trunk group. |
| Aggregator ID | <p>Link Aggregator ID consists of the following: system priority, MAC address, key, port priority and port number. Refer to Section 15.2.1 on page 176 for more information on this field.</p> <p>The ID displays only when there is a port belonging to this trunk group and LACP is also enabled for this group.</p> |
| Criteria | <p>This shows the outgoing traffic distribution algorithm used in this trunk group. Packets from the same source and/or to the same destination are sent over the same link within the trunk.</p> <p>src-mac means the Switch distributes traffic based on the packet's source MAC address.</p> <p>dst-mac means the Switch distributes traffic based on the packet's destination MAC address.</p> <p>src-dst-mac means the Switch distributes traffic based on a combination of the packet's source and destination MAC addresses.</p> <p>src-ip means the Switch distributes traffic based on the packet's source IP address.</p> <p>dst-ip means the Switch distributes traffic based on the packet's destination IP address.</p> <p>src-dst-ip means the Switch distributes traffic based on a combination of the packet's source and destination IP addresses.</p> |
| Status | <p>This field displays how these ports were added to the trunk group. It displays:</p> <ul style="list-style-type: none"> • Static - if the ports are configured as static members of a trunk group. • LACP - if the ports are configured to join a trunk group via LACP. |

15.4 Link Aggregation Setting

Click **Advanced Application > Link Aggregation > Link Aggregation Setting** to display the screen shown next. See [Section 15.1 on page 175](#) for more information on link aggregation.

Figure 118 Advanced Application > Link Aggregation > Link Aggregation Setting (Standalone mode)

| Link Aggregation Setting | | | Status | LACP |
|--------------------------|--------------------------|---------------|--------|------|
| Group ID | Active | Criteria | | |
| T1 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T2 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T3 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T4 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T5 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T6 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T7 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T8 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T9 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T10 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T11 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T12 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T13 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T14 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T15 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T16 | <input type="checkbox"/> | src-dst-mac ▼ | | |

| Port | Group |
|------|--------|
| 1 | None ▼ |
| 2 | None ▼ |
| 3 | None ▼ |
| 4 | None ▼ |
| 5 | None ▼ |
| 6 | None ▼ |
| 7 | None ▼ |
| 8 | None ▼ |
| 9 | None ▼ |
| 10 | None ▼ |
| 11 | None ▼ |
| 12 | None ▼ |
| 13 | None ▼ |
| 14 | None ▼ |
| 15 | None ▼ |
| 16 | None ▼ |
| 17 | None ▼ |
| 18 | None ▼ |
| 19 | None ▼ |
| 20 | None ▼ |
| 21 | None ▼ |
| 22 | None ▼ |
| 23 | None ▼ |
| 24 | None ▼ |
| 25 | None ▼ |
| 26 | None ▼ |
| 27 | None ▼ |
| 28 | None ▼ |
| 29 | None ▼ |
| 30 | None ▼ |
| 31 | None ▼ |
| 32 | None ▼ |

Figure 119 Advanced Application > Link Aggregation > Link Aggregation Setting (Stacking mode)

| Link Aggregation Setting | | Status | LACP |
|--------------------------|--------------------------|---------------|------|
| Group ID | Active | Criteria | |
| T1 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T2 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T3 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T4 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T5 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T6 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T7 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T8 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T9 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T10 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T11 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T12 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T13 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T14 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T15 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T16 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T17 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T18 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T19 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T20 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T21 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T22 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T23 | <input type="checkbox"/> | src-dst-mac ▼ | |
| T24 | <input type="checkbox"/> | src-dst-mac ▼ | |

| SLOT 1 ▼ | |
|----------|--------|
| Port | Group |
| 1/1 | None ▼ |
| 1/2 | None ▼ |
| 1/3 | None ▼ |
| 1/4 | None ▼ |
| 1/5 | None ▼ |
| 1/6 | None ▼ |
| 1/7 | None ▼ |
| 1/8 | None ▼ |
| 1/9 | None ▼ |
| 1/10 | None ▼ |
| 1/11 | None ▼ |
| 1/12 | None ▼ |
| 1/13 | None ▼ |
| 1/14 | None ▼ |
| 1/15 | None ▼ |
| 1/16 | None ▼ |
| 1/17 | None ▼ |
| 1/18 | None ▼ |
| 1/19 | None ▼ |
| 1/20 | None ▼ |
| 1/21 | None ▼ |
| 1/22 | None ▼ |
| 1/23 | None ▼ |
| 1/24 | None ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 77 Advanced Application > Link Aggregation > Link Aggregation Setting

| LABEL | DESCRIPTION |
|--------------------------|---|
| Link Aggregation Setting | This is the only screen you need to configure to enable static link aggregation. |
| Group ID | The field identifies the link aggregation group, that is, one logical link containing multiple ports. |

Table 77 Advanced Application > Link Aggregation > Link Aggregation Setting (continued)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this option to activate a trunk group. |
| Criteria | <p>Select the outgoing traffic distribution type. Packets from the same source and/or to the same destination are sent over the same link within the trunk. By default, the Switch uses the src-dst-mac distribution type. If the Switch is behind a router, the packet's destination or source MAC address will be changed. In this case, set the Switch to distribute traffic based on its IP address to make sure port trunking can work properly.</p> <p>Select src-mac to distribute traffic based on the packet's source MAC address.</p> <p>Select dst-mac to distribute traffic based on the packet's destination MAC address.</p> <p>Select src-dst-mac to distribute traffic based on a combination of the packet's source and destination MAC addresses.</p> <p>Select src-ip to distribute traffic based on the packet's source IP address.</p> <p>Select dst-ip to distribute traffic based on the packet's destination IP address.</p> <p>Select src-dst-ip to distribute traffic based on a combination of the packet's source and destination IP addresses.</p> |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| Group | <p>Select the trunk group to which a port belongs.</p> <p>Note: When you enable the port security feature on the Switch and configure port security settings for a port, you cannot include the port in an active trunk group.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

15.5 Link Aggregation Control Protocol

Click in the **Advanced Application > Link Aggregation > Link Aggregation Setting > LACP** to display the screen shown next. See [Section 15.2 on page 175](#) for more information on dynamic link aggregation.

Figure 120 Advanced Application > Link Aggregation > Link Aggregation Setting > LACP (Standalone mode)

| Link Aggregation Control Protocol | | Link Aggregation Setting |
|-----------------------------------|--------------------------|--------------------------|
| Active | <input type="checkbox"/> | |
| System Priority | 65535 | |
| <hr/> | | |
| Group ID | LACP Active | |
| T1 | <input type="checkbox"/> | |
| T2 | <input type="checkbox"/> | |
| T3 | <input type="checkbox"/> | |
| T4 | <input type="checkbox"/> | |
| T5 | <input type="checkbox"/> | |
| T6 | <input type="checkbox"/> | |
| T7 | <input type="checkbox"/> | |
| T8 | <input type="checkbox"/> | |
| T9 | <input type="checkbox"/> | |
| T10 | <input type="checkbox"/> | |
| T11 | <input type="checkbox"/> | |
| T12 | <input type="checkbox"/> | |
| T13 | <input type="checkbox"/> | |
| T14 | <input type="checkbox"/> | |
| T15 | <input type="checkbox"/> | |
| T16 | <input type="checkbox"/> | |
| T17 | <input type="checkbox"/> | |
| T18 | <input type="checkbox"/> | |
| T19 | <input type="checkbox"/> | |
| T20 | <input type="checkbox"/> | |
| T21 | <input type="checkbox"/> | |
| T22 | <input type="checkbox"/> | |
| T23 | <input type="checkbox"/> | |
| T24 | <input type="checkbox"/> | |
| T25 | <input type="checkbox"/> | |
| T26 | <input type="checkbox"/> | |
| T27 | <input type="checkbox"/> | |
| T28 | <input type="checkbox"/> | |
| T29 | <input type="checkbox"/> | |
| T30 | <input type="checkbox"/> | |
| T31 | <input type="checkbox"/> | |
| T32 | <input type="checkbox"/> | |
| T33 | <input type="checkbox"/> | |
| T34 | <input type="checkbox"/> | |
| T35 | <input type="checkbox"/> | |
| T36 | <input type="checkbox"/> | |
| T37 | <input type="checkbox"/> | |
| T38 | <input type="checkbox"/> | |
| T39 | <input type="checkbox"/> | |
| T40 | <input type="checkbox"/> | |
| T41 | <input type="checkbox"/> | |
| T42 | <input type="checkbox"/> | |
| T43 | <input type="checkbox"/> | |
| T44 | <input type="checkbox"/> | |
| T45 | <input type="checkbox"/> | |
| T46 | <input type="checkbox"/> | |
| T47 | <input type="checkbox"/> | |
| T48 | <input type="checkbox"/> | |
| T49 | <input type="checkbox"/> | |
| T50 | <input type="checkbox"/> | |
| T51 | <input type="checkbox"/> | |
| T52 | <input type="checkbox"/> | |
| T53 | <input type="checkbox"/> | |
| T54 | <input type="checkbox"/> | |
| T55 | <input type="checkbox"/> | |
| T56 | <input type="checkbox"/> | |
| T57 | <input type="checkbox"/> | |
| T58 | <input type="checkbox"/> | |
| T59 | <input type="checkbox"/> | |
| T60 | <input type="checkbox"/> | |
| T61 | <input type="checkbox"/> | |
| T62 | <input type="checkbox"/> | |
| T63 | <input type="checkbox"/> | |
| T64 | <input type="checkbox"/> | |
| T65 | <input type="checkbox"/> | |
| T66 | <input type="checkbox"/> | |
| T67 | <input type="checkbox"/> | |
| T68 | <input type="checkbox"/> | |
| T69 | <input type="checkbox"/> | |
| T70 | <input type="checkbox"/> | |
| T71 | <input type="checkbox"/> | |
| T72 | <input type="checkbox"/> | |
| T73 | <input type="checkbox"/> | |
| T74 | <input type="checkbox"/> | |
| T75 | <input type="checkbox"/> | |
| T76 | <input type="checkbox"/> | |
| T77 | <input type="checkbox"/> | |
| T78 | <input type="checkbox"/> | |
| T79 | <input type="checkbox"/> | |
| T80 | <input type="checkbox"/> | |
| T81 | <input type="checkbox"/> | |
| T82 | <input type="checkbox"/> | |
| T83 | <input type="checkbox"/> | |
| T84 | <input type="checkbox"/> | |
| T85 | <input type="checkbox"/> | |
| T86 | <input type="checkbox"/> | |
| T87 | <input type="checkbox"/> | |
| T88 | <input type="checkbox"/> | |
| T89 | <input type="checkbox"/> | |
| T90 | <input type="checkbox"/> | |
| T91 | <input type="checkbox"/> | |
| T92 | <input type="checkbox"/> | |
| T93 | <input type="checkbox"/> | |
| T94 | <input type="checkbox"/> | |
| T95 | <input type="checkbox"/> | |
| T96 | <input type="checkbox"/> | |
| T97 | <input type="checkbox"/> | |
| T98 | <input type="checkbox"/> | |
| T99 | <input type="checkbox"/> | |
| T100 | <input type="checkbox"/> | |
| T101 | <input type="checkbox"/> | |
| T102 | <input type="checkbox"/> | |
| T103 | <input type="checkbox"/> | |
| T104 | <input type="checkbox"/> | |
| T105 | <input type="checkbox"/> | |
| T106 | <input type="checkbox"/> | |
| T107 | <input type="checkbox"/> | |
| T108 | <input type="checkbox"/> | |
| T109 | <input type="checkbox"/> | |
| T110 | <input type="checkbox"/> | |
| T111 | <input type="checkbox"/> | |
| T112 | <input type="checkbox"/> | |
| T113 | <input type="checkbox"/> | |
| T114 | <input type="checkbox"/> | |
| T115 | <input type="checkbox"/> | |
| T116 | <input type="checkbox"/> | |
| T117 | <input type="checkbox"/> | |
| T118 | <input type="checkbox"/> | |
| T119 | <input type="checkbox"/> | |
| T120 | <input type="checkbox"/> | |
| T121 | <input type="checkbox"/> | |
| T122 | <input type="checkbox"/> | |
| T123 | <input type="checkbox"/> | |
| T124 | <input type="checkbox"/> | |
| T125 | <input type="checkbox"/> | |
| T126 | <input type="checkbox"/> | |
| T127 | <input type="checkbox"/> | |
| T128 | <input type="checkbox"/> | |
| T129 | <input type="checkbox"/> | |
| T130 | <input type="checkbox"/> | |
| T131 | <input type="checkbox"/> | |
| T132 | <input type="checkbox"/> | |
| T133 | <input type="checkbox"/> | |
| T134 | <input type="checkbox"/> | |
| T135 | <input type="checkbox"/> | |
| T136 | <input type="checkbox"/> | |
| T137 | <input type="checkbox"/> | |
| T138 | <input type="checkbox"/> | |
| T139 | <input type="checkbox"/> | |
| T140 | <input type="checkbox"/> | |
| T141 | <input type="checkbox"/> | |
| T142 | <input type="checkbox"/> | |
| T143 | <input type="checkbox"/> | |
| T144 | <input type="checkbox"/> | |
| T145 | <input type="checkbox"/> | |
| T146 | <input type="checkbox"/> | |
| T147 | <input type="checkbox"/> | |
| T148 | <input type="checkbox"/> | |
| T149 | <input type="checkbox"/> | |
| T150 | <input type="checkbox"/> | |
| T151 | <input type="checkbox"/> | |
| T152 | <input type="checkbox"/> | |
| T153 | <input type="checkbox"/> | |
| T154 | <input type="checkbox"/> | |
| T155 | <input type="checkbox"/> | |
| T156 | <input type="checkbox"/> | |
| T157 | <input type="checkbox"/> | |
| T158 | <input type="checkbox"/> | |
| T159 | <input type="checkbox"/> | |
| T160 | <input type="checkbox"/> | |
| T161 | <input type="checkbox"/> | |
| T162 | <input type="checkbox"/> | |
| T163 | <input type="checkbox"/> | |
| T164 | <input type="checkbox"/> | |
| T165 | <input type="checkbox"/> | |
| T166 | <input type="checkbox"/> | |
| T167 | <input type="checkbox"/> | |
| T168 | <input type="checkbox"/> | |
| T169 | <input type="checkbox"/> | |
| T170 | <input type="checkbox"/> | |
| T171 | <input type="checkbox"/> | |
| T172 | <input type="checkbox"/> | |
| T173 | <input type="checkbox"/> | |
| T174 | <input type="checkbox"/> | |
| T175 | <input type="checkbox"/> | |
| T176 | <input type="checkbox"/> | |
| T177 | <input type="checkbox"/> | |
| T178 | <input type="checkbox"/> | |
| T179 | <input type="checkbox"/> | |
| T180 | <input type="checkbox"/> | |
| T181 | <input type="checkbox"/> | |
| T182 | <input type="checkbox"/> | |
| T183 | <input type="checkbox"/> | |
| T184 | <input type="checkbox"/> | |
| T185 | <input type="checkbox"/> | |
| T186 | <input type="checkbox"/> | |
| T187 | <input type="checkbox"/> | |
| T188 | <input type="checkbox"/> | |
| T189 | <input type="checkbox"/> | |
| T190 | <input type="checkbox"/> | |
| T191 | <input type="checkbox"/> | |
| T192 | <input type="checkbox"/> | |
| T193 | <input type="checkbox"/> | |
| T194 | <input type="checkbox"/> | |
| T195 | <input type="checkbox"/> | |
| T196 | <input type="checkbox"/> | |
| T197 | <input type="checkbox"/> | |
| T198 | <input type="checkbox"/> | |
| T199 | <input type="checkbox"/> | |
| T200 | <input type="checkbox"/> | |
| T201 | <input type="checkbox"/> | |
| T202 | <input type="checkbox"/> | |
| T203 | <input type="checkbox"/> | |
| T204 | <input type="checkbox"/> | |
| T205 | <input type="checkbox"/> | |
| T206 | <input type="checkbox"/> | |
| T207 | <input type="checkbox"/> | |
| T208 | <input type="checkbox"/> | |
| T209 | <input type="checkbox"/> | |
| T210 | <input type="checkbox"/> | |
| T211 | <input type="checkbox"/> | |
| T212 | <input type="checkbox"/> | |
| T213 | <input type="checkbox"/> | |
| T214 | <input type="checkbox"/> | |
| T215 | <input type="checkbox"/> | |
| T216 | <input type="checkbox"/> | |
| T217 | <input type="checkbox"/> | |
| T218 | <input type="checkbox"/> | |
| T219 | <input type="checkbox"/> | |
| T220 | <input type="checkbox"/> | |
| T221 | <input type="checkbox"/> | |
| T222 | <input type="checkbox"/> | |
| T223 | <input type="checkbox"/> | |
| T224 | <input type="checkbox"/> | |
| T225 | <input type="checkbox"/> | |
| T226 | <input type="checkbox"/> | |
| T227 | <input type="checkbox"/> | |
| T228 | <input type="checkbox"/> | |
| T229 | <input type="checkbox"/> | |
| T230 | <input type="checkbox"/> | |
| T231 | <input type="checkbox"/> | |
| T232 | <input type="checkbox"/> | |
| T233 | <input type="checkbox"/> | |
| T234 | <input type="checkbox"/> | |
| T235 | <input type="checkbox"/> | |
| T236 | <input type="checkbox"/> | |
| T237 | <input type="checkbox"/> | |
| T238 | <input type="checkbox"/> | |
| T239 | <input type="checkbox"/> | |
| T240 | <input type="checkbox"/> | |
| T241 | <input type="checkbox"/> | |
| T242 | <input type="checkbox"/> | |
| T243 | <input type="checkbox"/> | |
| T244 | <input type="checkbox"/> | |
| T245 | <input type="checkbox"/> | |
| T246 | <input type="checkbox"/> | |
| T247 | <input type="checkbox"/> | |
| T248 | <input type="checkbox"/> | |
| T249 | <input type="checkbox"/> | |
| T250 | <input type="checkbox"/> | |
| T251 | <input type="checkbox"/> | |
| T252 | <input type="checkbox"/> | |
| T253 | <input type="checkbox"/> | |
| T254 | <input type="checkbox"/> | |
| T255 | <input type="checkbox"/> | |
| T256 | <input type="checkbox"/> | |
| T257 | <input type="checkbox"/> | |
| T258 | <input type="checkbox"/> | |
| T259 | <input type="checkbox"/> | |
| T260 | <input type="checkbox"/> | |
| T261 | <input type="checkbox"/> | |
| T262 | <input type="checkbox"/> | |
| T263 | <input type="checkbox"/> | |
| T264 | <input type="checkbox"/> | |
| T265 | <input type="checkbox"/> | |
| T266 | <input type="checkbox"/> | |
| T267 | <input type="checkbox"/> | |
| T268 | <input type="checkbox"/> | |
| T269 | <input type="checkbox"/> | |
| T270 | <input type="checkbox"/> | |
| T271 | <input type="checkbox"/> | |
| T272 | <input type="checkbox"/> | |
| T273 | <input type="checkbox"/> | |
| T274 | <input type="checkbox"/> | |
| T275 | <input type="checkbox"/> | |
| T276 | <input type="checkbox"/> | |
| T277 | <input type="checkbox"/> | |
| T278 | <input type="checkbox"/> | |
| T279 | <input type="checkbox"/> | |
| T280 | <input type="checkbox"/> | |
| T281 | <input type="checkbox"/> | |
| T282 | <input type="checkbox"/> | |
| T283 | <input type="checkbox"/> | |
| T284 | <input type="checkbox"/> | |
| T285 | <input type="checkbox"/> | |
| T286 | <input type="checkbox"/> | |
| T287 | <input type="checkbox"/> | |
| T288 | <input type="checkbox"/> | |
| T289 | <input type="checkbox"/> | |
| T290 | <input type="checkbox"/> | |
| T291 | <input type="checkbox"/> | |
| T292 | <input type="checkbox"/> | |
| T293 | <input type="checkbox"/> | |
| T294 | <input type="checkbox"/> | |
| T295 | <input type="checkbox"/> | |
| T296 | <input type="checkbox"/> | |
| T297 | <input type="checkbox"/> | |
| T298 | <input type="checkbox"/> | |
| T299 | <input type="checkbox"/> | |
| T300 | <input type="checkbox"/> | |
| T301 | <input type="checkbox"/> | |
| T302 | <input type="checkbox"/> | |
| T303 | <input type="checkbox"/> | |
| T304 | <input type="checkbox"/> | |
| T305 | <input type="checkbox"/> | |
| T306 | <input type="checkbox"/> | |
| T307 | <input type="checkbox"/> | |
| T308 | <input type="checkbox"/> | |
| T309 | <input type="checkbox"/> | |
| T310 | <input type="checkbox"/> | |
| T311 | <input type="checkbox"/> | |
| T312 | <input type="checkbox"/> | |
| T313 | <input type="checkbox"/> | |
| T314 | <input type="checkbox"/> | |
| T315 | <input type="checkbox"/> | |
| T316 | <input type="checkbox"/> | |
| T317 | <input type="checkbox"/> | |
| T318 | <input type="checkbox"/> | |
| T319 | <input type="checkbox"/> | |
| T320 | <input type="checkbox"/> | |
| T321 | <input type="checkbox"/> | |
| T322 | <input type="checkbox"/> | |
| T323 | <input type="checkbox"/> | |
| T324 | <input type="checkbox"/> | |
| T325 | <input type="checkbox"/> | |
| T326 | <input type="checkbox"/> | |
| T327 | <input type="checkbox"/> | |
| T328 | <input type="checkbox"/> | |
| T329 | <input type="checkbox"/> | |
| T330 | <input type="checkbox"/> | |
| T331 | <input type="checkbox"/> | |
| T332 | <input type="checkbox"/> | |
| T333 | <input type="checkbox"/> | |
| T334 | <input type="checkbox"/> | |
| T335 | <input type="checkbox"/> | |
| T336 | <input type="checkbox"/> | |
| T337 | <input type="checkbox"/> | |
| T338 | <input type="checkbox"/> | |
| T339 | <input type="checkbox"/> | |
| T340 | <input type="checkbox"/> | |
| T341 | <input type="checkbox"/> | |
| T342 | <input type="checkbox"/> | |
| T343 | <input type="checkbox"/> | |
| T344 | <input type="checkbox"/> | |
| T345 | <input type="checkbox"/> | |
| T346 | <input type="checkbox"/> | |
| T347 | <input type="checkbox"/> | |
| T348 | <input type="checkbox"/> | |
| T349 | <input type="checkbox"/> | |
| T350 | <input type="checkbox"/> | |
| T351 | <input type="checkbox"/> | |
| T352 | <input type="checkbox"/> | |
| T353 | <input type="checkbox"/> | |
| T354 | <input type="checkbox"/> | |
| T355 | <input type="checkbox"/> | |
| T356 | <input type="checkbox"/> | |
| T357 | <input type="checkbox"/> | |
| T358 | <input type="checkbox"/> | |
| T359 | <input type="checkbox"/> | |
| T360 | <input type="checkbox"/> | |
| T361 | <input type="checkbox"/> | |
| T362 | <input type="checkbox"/> | |
| T363 | <input type="checkbox"/> | |
| T364 | <input type="checkbox"/> | |
| T365 | <input type="checkbox"/> | |
| T366 | <input type="checkbox"/> | |
| T367 | <input type="checkbox"/> | |
| T368 | <input type="checkbox"/> | |
| T369 | <input type="checkbox"/> | |
| T370 | <input type="checkbox"/> | |
| T371 | <input type="checkbox"/> | |
| T372 | <input type="checkbox"/> | |
| T373 | <input type="checkbox"/> | |
| T374 | <input type="checkbox"/> | |
| T375 | <input type="checkbox"/> | |
| T376 | <input type="checkbox"/> | |
| T377 | <input type="checkbox"/> | |
| T378 | <input type="checkbox"/> | |
| T379 | <input type="checkbox"/> | |
| T380 | <input type="checkbox"/> | |
| T381 | <input type="checkbox"/> | |
| T382 | <input type="checkbox"/> | |
| T383 | <input type="checkbox"/> | |
| T384 | <input type="checkbox"/> | |
| T385 | <input type="checkbox"/> | |
| T386 | <input type="checkbox"/> | |
| T387 | <input type="checkbox"/> | |
| T388 | <input type="checkbox"/> | |
| T389 | <input type="checkbox"/> | |
| T390 | <input type="checkbox"/> | |
| T391 | <input type="checkbox"/> | |
| T392 | <input type="checkbox"/> | |
| T393 | <input type="checkbox"/> | |
| T394 | <input type="checkbox"/> | |
| T395 | <input type="checkbox"/> | |
| T396 | <input type="checkbox"/> | |
| T397 | <input type="checkbox"/> | |
| T398 | <input type="checkbox"/> | |
| T399 | <input type="checkbox"/> | |
| T400 | <input type="checkbox"/> | |
| T401 | <input type="checkbox"/> | |
| T402 | <input type="checkbox"/> | |
| T403 | <input type="checkbox"/> | |
| T404 | <input type="checkbox"/> | |
| T405 | <input type="checkbox"/> | |
| T406 | <input type="checkbox"/> | |
| T407 | <input type="checkbox"/> | |
| T408 | <input type="checkbox"/> | |
| T409 | <input type="checkbox"/> | |
| T410 | <input type="checkbox"/> | |
| T411 | <input type="checkbox"/> | |
| T412 | <input type="checkbox"/> | |
| T413 | <input type="checkbox"/> | |
| T414 | <input type="checkbox"/> | |
| T415 | <input type="checkbox"/> | |
| T416 | <input type="checkbox"/> | |
| T417 | <input type="checkbox"/> | |
| T418 | <input type="checkbox"/> | |
| T419 | <input type="checkbox"/> | |
| T420 | <input type="checkbox"/> | |
| T421 | <input type="checkbox"/> | |
| T422 | <input type="checkbox"/> | |
| T423 | <input type="checkbox"/> | |
| T424 | <input type="checkbox"/> | |
| T425 | <input type="checkbox"/> | |
| T426 | <input type="checkbox"/> | |
| T427 | <input type="checkbox"/> | |
| T428 | <input type="checkbox"/> | |
| T429 | <input type="checkbox"/> | |
| T430 | <input type="checkbox"/> | |
| T431 | <input type="checkbox"/> | |
| T432 | <input type="checkbox"/> | |
| T433 | <input type="checkbox"/> | |
| T434 | <input type="checkbox"/> | |
| T435 | <input type="checkbox"/> | |
| T436 | <input type="checkbox"/> | |
| T437 | <input type="checkbox"/> | |
| T438 | <input type="checkbox"/> | |
| T439 | <input type="checkbox"/> | |
| T440 | <input type="checkbox"/> | |
| T441 | <input type="checkbox"/> | |
| T442 | <input type="checkbox"/> | |
| T443 | <input type="checkbox"/> | |
| T444 | <input type="checkbox"/> | |
| T445 | <input type="checkbox"/> | |
| T446 | <input type="checkbox"/> | |
| T447 | <input type="checkbox"/> | |
| T448 | <input type="checkbox"/> | |
| T449 | <input type="checkbox"/> | |
| T450 | <input type="checkbox"/> | |
| T451 | <input type="checkbox"/> | |
| T452 | <input type="checkbox"/> | |
| T453 | <input type="checkbox"/> | |
| T454 | <input type="checkbox"/> | |
| T455 | <input type="checkbox"/> | |
| T456 | <input type="checkbox"/> | |
| T457 | <input type="checkbox"/> | |
| T458 | <input type="checkbox"/> | |
| T459 | <input type="checkbox"/> | |
| T460 | <input type="checkbox"/> | |
| T461 | <input type="checkbox"/> | |
| T462 | <input type="checkbox"/> | |
| T463 | <input type="checkbox"/> | |
| T464 | <input type="checkbox"/> | |
| T465 | <input type="checkbox"/> | |
| T466 | <input type="checkbox"/> | |
| T467 | <input type="checkbox"/> | |
| T468 | <input type="checkbox"/> | |
| T469 | <input type="checkbox"/> | |
| T470 | <input type="checkbox"/> | |
| T471 | <input type="checkbox"/> | |
| T472 | <input type="checkbox"/> | |
| T473 | <input type="checkbox"/> | |
| T474 | <input type="checkbox"/> | |
| T475 | <input type="checkbox"/> | |
| T476 | <input type="checkbox"/> | |
| T477 | <input type="checkbox"/> | |
| T478 | <input type="checkbox"/> | |
| T479 | <input type="checkbox"/> | |
| T480 | <input type="checkbox"/> | |
| T481 | <input type="checkbox"/> | |
| T482 | <input type="checkbox"/> | |
| T483 | <input type="checkbox"/> | |
| T484 | <input type="checkbox"/> | |
| T485 | <input type="checkbox"/> | |
| T486 | <input type="checkbox"/> | |
| T487 | <input type="checkbox"/> | |
| T488 | <input type="checkbox"/> | |
| T489 | | |

Figure 121 Advanced Application > Link Aggregation > Link Aggregation Setting > LACP (Stacking mode)

| Group ID | LACP Active |
|----------|--------------------------|
| T1 | <input type="checkbox"/> |
| T2 | <input type="checkbox"/> |
| T3 | <input type="checkbox"/> |
| T4 | <input type="checkbox"/> |
| T5 | <input type="checkbox"/> |
| T6 | <input type="checkbox"/> |
| T7 | <input type="checkbox"/> |
| T8 | <input type="checkbox"/> |
| T9 | <input type="checkbox"/> |
| T10 | <input type="checkbox"/> |
| T11 | <input type="checkbox"/> |
| T12 | <input type="checkbox"/> |
| T13 | <input type="checkbox"/> |
| T14 | <input type="checkbox"/> |
| T15 | <input type="checkbox"/> |
| T16 | <input type="checkbox"/> |
| T17 | <input type="checkbox"/> |
| T18 | <input type="checkbox"/> |
| T19 | <input type="checkbox"/> |
| T20 | <input type="checkbox"/> |
| T21 | <input type="checkbox"/> |
| T22 | <input type="checkbox"/> |
| T23 | <input type="checkbox"/> |
| T24 | <input type="checkbox"/> |

| Port | LACP Timeout |
|------|--------------|
| 1/1 | 30 seconds |
| 1/11 | 30 seconds |
| 1/2 | 30 seconds |
| 1/3 | 30 seconds |
| 1/4 | 30 seconds |
| 1/5 | 30 seconds |
| 1/6 | 30 seconds |
| 1/7 | 30 seconds |
| 1/8 | 30 seconds |
| 1/9 | 30 seconds |
| 1/10 | 30 seconds |
| 1/11 | 30 seconds |
| 1/12 | 30 seconds |
| 1/13 | 30 seconds |
| 1/14 | 30 seconds |
| 1/15 | 30 seconds |
| 1/16 | 30 seconds |
| 1/17 | 30 seconds |
| 1/18 | 30 seconds |
| 1/19 | 30 seconds |
| 1/20 | 30 seconds |
| 1/21 | 30 seconds |
| 1/22 | 30 seconds |
| 1/23 | 30 seconds |
| 1/24 | 30 seconds |
| 1/25 | 30 seconds |
| 1/26 | 30 seconds |
| 1/27 | 30 seconds |
| 1/28 | 30 seconds |
| 1/29 | 30 seconds |
| 1/30 | 30 seconds |
| 1/31 | 30 seconds |
| 1/32 | 30 seconds |
| 1/33 | 30 seconds |
| 1/34 | 30 seconds |
| 1/35 | 30 seconds |
| 1/36 | 30 seconds |
| 1/37 | 30 seconds |
| 1/38 | 30 seconds |
| 1/39 | 30 seconds |
| 1/40 | 30 seconds |
| 1/41 | 30 seconds |
| 1/42 | 30 seconds |
| 1/43 | 30 seconds |
| 1/44 | 30 seconds |
| 1/45 | 30 seconds |
| 1/46 | 30 seconds |
| 1/47 | 30 seconds |
| 1/48 | 30 seconds |
| 1/49 | 30 seconds |
| 1/50 | 30 seconds |

The following table describes the labels in this screen.

Table 78 Advanced Application > Link Aggregation > Link Aggregation Setting > LACP

| LABEL | DESCRIPTION |
|-----------------------------------|--|
| Link Aggregation Control Protocol | Note: Do not configure this screen unless you want to enable dynamic link aggregation. |
| Active | Select this checkbox to enable Link Aggregation Control Protocol (LACP). |
| System Priority | LACP system priority is a number between 1 and 65,535. The switch with the lowest system priority (and lowest port number if system priority is the same) becomes the LACP “server”. The LACP “server” controls the operation of LACP setup. Enter a number to set the priority of an active port using Link Aggregation Control Protocol (LACP). The smaller the number, the higher the priority level. |
| Group ID | The field identifies the link aggregation group, that is, one logical link containing multiple ports. |
| LACP Active | Select this option to enable LACP for a trunk. |

Table 78 Advanced Application > Link Aggregation > Link Aggregation Setting > LACP (continued)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| LACP Timeout | Timeout is the time interval between the individual port exchanges of LACP packets in order to check that the peer port in the trunk group is still up. If a port does not respond after three tries, then it is deemed to be “down” and is removed from the trunk. Set a short timeout (one second) for busy trunked links to ensure that disabled ports are removed from the trunk group as soon as possible. Select either 1 second or 30 seconds. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

15.6 Static Trunking Example

This example shows you how to create a static port trunk group for ports 2-5.

- 1 Make your physical connections** - make sure that the ports that you want to belong to the trunk group are connected to the same destination. The following figure shows ports 2-5 on switch **A** connected to switch **B**.

Figure 122 Trunking Example - Physical Connections



- 2 Configure static trunking** - Click **Advanced Application > Link Aggregation > Link Aggregation Setting**. In this screen activate trunk group **T1**, select the traffic distribution algorithm used by this group and select the ports that should belong to this group as shown in the figure below. Click **Apply** when you are done.

Figure 123 Trunking Example - Configuration Screen

| Link Aggregation Setting | | | Status | LACP |
|--------------------------|-------------------------------------|---------------|--------|------|
| Group ID | Active | Criteria | | |
| T1 | <input checked="" type="checkbox"/> | src-dst-mac ▼ | | |
| T2 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T3 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T4 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T5 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T6 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T7 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T8 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T9 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T10 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T11 | <input type="checkbox"/> | src-dst-mac ▼ | | |
| T12 | <input type="checkbox"/> | src-dst-mac ▼ | | |

| Port | Group |
|------|--------|
| 1 | None ▼ |
| 2 | T1 ▼ |
| 3 | T1 ▼ |
| 4 | T1 ▼ |
| 5 | T1 ▼ |
| 6 | None ▼ |
| 7 | None ▼ |
| 8 | None ▼ |
| ... | ... |
| 49 | None ▼ |
| 50 | None ▼ |
| 51 | None ▼ |
| 52 | None ▼ |

EXAMPLE

Your trunk group 1 (T1) configuration is now complete.

Port Authentication

This chapter describes the IEEE 802.1x and MAC authentication methods.

16.1 Port Authentication Overview

Port authentication is a way to validate access to ports on the Switch to clients based on an external server (authentication server). The Switch supports the following methods for port authentication:

IEEE 802.1x - An authentication server validates access to a port based on a username and password provided by the user. At the time of writing, IEEE 802.1x is not supported by all operating systems. See your operating system documentation. If your operating system does not support 802.1x, then you may need to install 802.1x client software.

- **MAC** - An authentication server validates access to a port based on the MAC address and password of the client.


Both types of authentication use the RADIUS (Remote Authentication Dial In User Service, RFC 2138, 2139) protocol to validate users. See [Section 24.1.2 on page 254](#) for more information on configuring your RADIUS server settings.

Note: If you enable IEEE 802.1x authentication and MAC authentication on the same port, the Switch performs IEEE 802.1x authentication first. If a user fails to authenticate via the IEEE 802.1x method, then access to the port is denied.

16.1.1 IEEE 802.1x Authentication

The following figure illustrates how a client connecting to an IEEE 802.1x authentication enabled port goes through a validation process. The Switch prompts the client for login information in the form of a user name and password after the client responds to its identity request. When the client provides the login credentials, the Switch sends an authentication request to a RADIUS server. The RADIUS server validates whether this client is allowed access to the port.


Figure 124 IEEE 802.1x Authentication Process

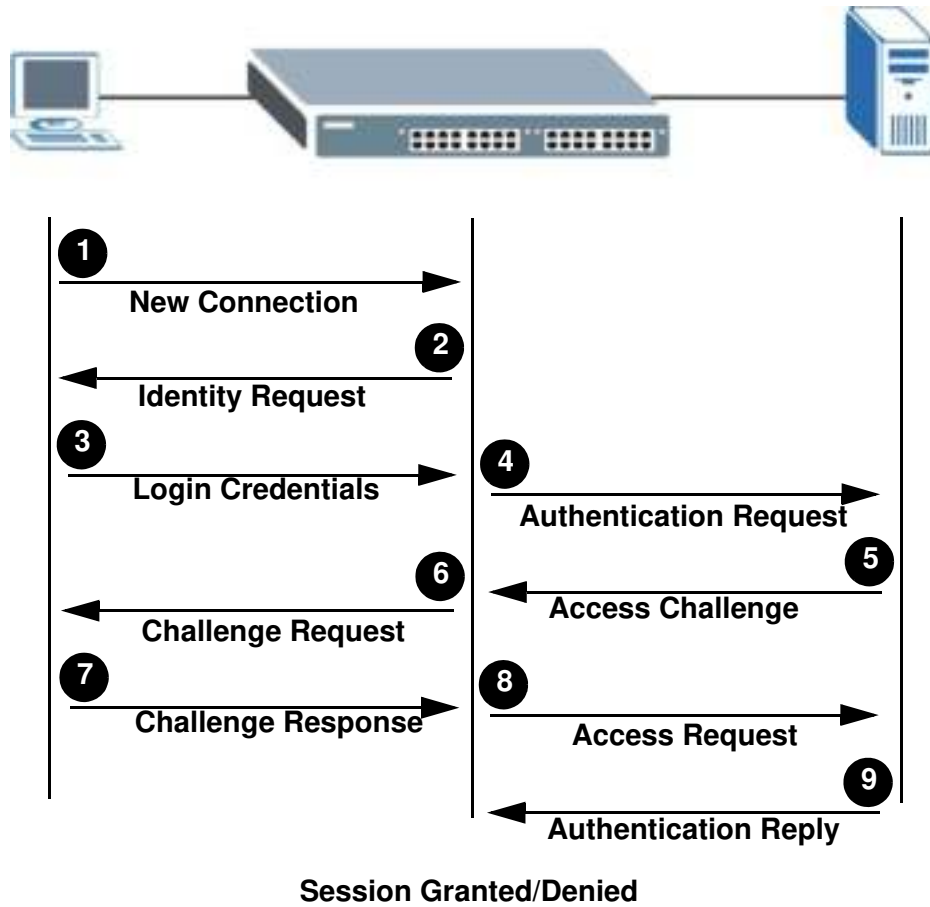

16.1.2 MAC Authentication

MAC authentication works in a very similar way to IEEE 802.1x authentication. The main difference is that the Switch does not prompt the client for login credentials. The login credentials are based on the source MAC address of the client connecting to a port on the Switch along with a password configured specifically for MAC authentication on the Switch.

Figure 125 MAC Authentication Process

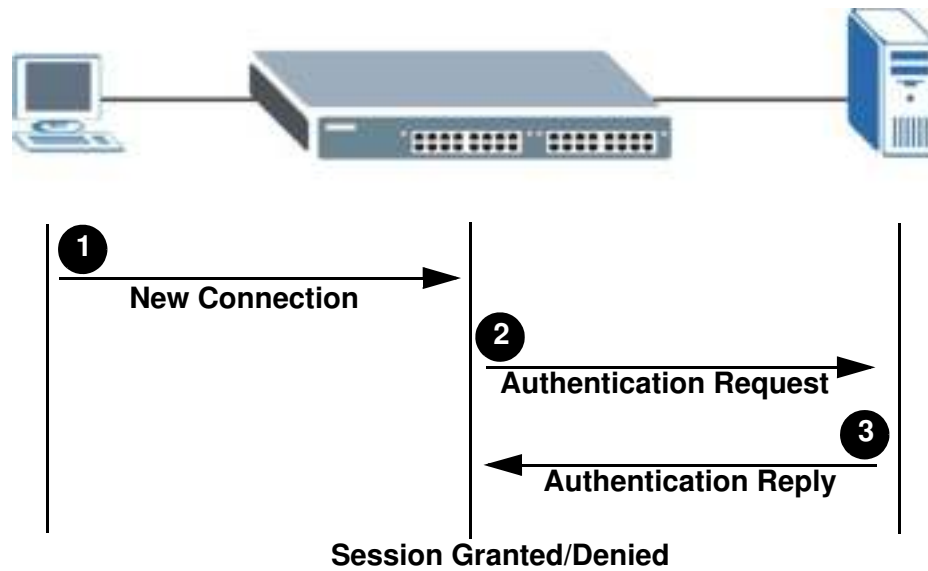

16.2 Port Authentication Configuration

To enable port authentication, first activate the port authentication method(s) you want to use (both on the Switch and the port(s)), then configure the RADIUS server settings in the **AAA > RADIUS Server Setup** screen.

To activate a port authentication method, click **Advanced Application > Port Authentication** in the navigation panel. Select a port authentication method in the screen that appears.

Figure 126 Advanced Application > Port Authentication



16.2.1 Activate IEEE 802.1x Security

Use this screen to activate IEEE 802.1x security. In the **Port Authentication** screen click **802.1x** to display the configuration screen as shown.

Figure 127 Advanced Application > Port Authentication > 802.1x (Standalone mode)

| Port | Active | Max-Req | Reauth | Reauth-period secs | Quiet-period secs | Tx-period secs | Supp-Timeout secs |
|------|--------------------------|---------|--------|-----------------------|----------------------|-------------------|----------------------|
| * | <input type="checkbox"/> | | On ▼ | | | | |
| 1 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 2 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 3 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 4 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 5 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 6 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 7 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| ... | | | | | | | |
| 50 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 51 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 52 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |

Figure 128 Advanced Application > Port Authentication > 802.1x (Stacking mode)

| Port | Active | Max-Req | Reauth | Reauth-period secs | Quiet-period secs | Tx-period secs | Supp-Timeout secs |
|------|--------------------------|---------|--------|-----------------------|----------------------|-------------------|----------------------|
| 1* | <input type="checkbox"/> | | On ▼ | | | | |
| 1/1 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/2 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/3 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/4 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/5 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| ... | | | | | | | |
| 1/48 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/49 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |
| 1/50 | <input type="checkbox"/> | 2 | On ▼ | 3600 | 60 | 30 | 30 |

The following table describes the labels in this screen.


Table 79 Advanced Application > Port Authentication > 802.1x

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Active | Select this check box to permit 802.1x authentication on the Switch. Note: You must first enable 802.1x authentication on the Switch before configuring it on each port. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this checkbox to permit 802.1x authentication on this port. You must first allow 802.1x authentication on the Switch before configuring it on each port. |
| Max-Req | Specify the number of times the Switch tries to authenticate client(s) before sending unresponsive ports to the Guest VLAN. This is set to 2 by default. That is, the Switch attempts to authenticate a client twice. If the client does not respond to the first authentication request, the Switch tries again. If the client still does not respond to the second request, the Switch sends the client to the Guest VLAN. The client needs to send a new request to be authenticated by the Switch again. |
| Reauth | Specify if a subscriber has to periodically re-enter his or her username and password to stay connected to the port. |
| Reauth-period | Specify the length of time required to pass before a client has to re-enter his or her username and password to stay connected to the port. |
| Quiet-period | Specify the number of seconds the port remains in the HELD state and rejects further authentication requests from the connected client after a failed authentication exchange. |
| Tx-period | Specify the number of seconds the Switch waits for client's response before re-sending an identity request to the client. |
| Supp-Timeout | Specify the number of seconds the Switch waits for client's response to a challenge request before sending another request. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

16.2.2 Guest VLAN

When 802.1x port authentication is enabled on the Switch and its ports, clients that do not have the correct credentials are blocked from using the port(s). You can configure your Switch to have one VLAN that acts as a guest VLAN. If you enable the guest VLAN (**102** in the example) on a port (**2** in the example), the user (**A** in the example) that is not IEEE 802.1x capable or fails to enter the correct username and password can still access the port, but traffic from the user is forwarded to the guest VLAN. That is, unauthenticated users can have access to limited network resources in the same guest VLAN, such as the Internet. The rights granted to the Guest VLAN depends on how the network administrator configures switches or routers with the guest network feature.

Figure 129 Guest VLAN Example

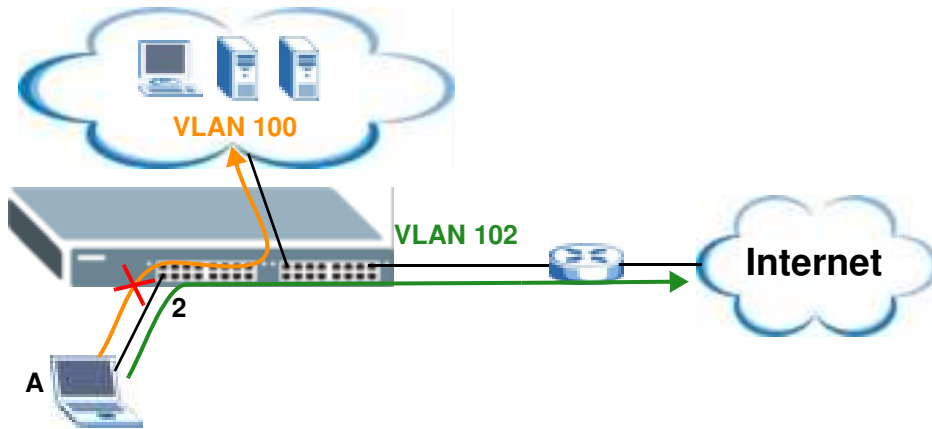

Use this screen to enable and assign a guest VLAN to a port. In the **Port Authentication > 802.1x** screen click **Guest Vlan** to display the configuration screen as shown.

Figure 130 Advanced Application > Port Authentication > 802.1x > Guest VLAN (Standalone mode)

| Guest Vlan | | | | | 802.1x |
|------------|--------------------------|------------|--------------|------------------|--------|
| Port | Active | Guest Vlan | Host-mode | Multi-Secure Num | |
| * | <input type="checkbox"/> | | Multi-Host ▼ | | |
| 1 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 2 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 3 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 4 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 5 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 6 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 7 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 8 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 9 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 10 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 11 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 12 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 13 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| ... | ... | ... | ... | ... | ... |
| 51 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |
| 52 | <input type="checkbox"/> | 1 | Multi-Host ▼ | 1 | |

Apply Cancel

Figure 131 Advanced Application > Port Authentication > 802.1x > Guest VLAN (Stacking mode)

| Port | Active | Guest Vlan | Host-mode | Multi-Secure Num |
|------|--------------------------|------------|------------|------------------|
| 1/* | <input type="checkbox"/> | | Multi-Host | |
| 1/1 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/2 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/3 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/4 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/5 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/6 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/7 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/48 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/49 | <input type="checkbox"/> | 1 | Multi-Host | 1 |
| 1/50 | <input type="checkbox"/> | 1 | Multi-Host | 1 |

The following table describes the labels in this screen.

Table 80 Advanced Application > Port Authentication > 802.1x > Guest VLAN

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Active | <p>Select this checkbox to enable the guest VLAN feature on this port.</p> <p>Clients that fail authentication are placed in the guest VLAN and can receive limited services.</p> |
| Guest Vlan | <p>A guest VLAN is a pre-configured VLAN on the Switch that allows non-authenticated users to access limited network resources through the Switch. You must also enable IEEE 802.1x authentication on the Switch and the associated ports. Enter the number that identifies the guest VLAN.</p> <p>Make sure this is a VLAN recognized in your network.</p> |
| Host-mode | <p>Specify how the Switch authenticates users when more than one user connect to the port (using a hub).</p> <p>Select Multi-Host to authenticate only the first user that connects to this port. If the first user enters the correct credential, any other users are allowed to access the port without authentication. If the first user fails to enter the correct credential, they are all put in the guest VLAN. Once the first user who did authentication logs out or disconnects from the port, rest of the users are blocked until a user does the authentication process again.</p> <p>Select Multi-Secure to authenticate each user that connects to this port.</p> |
| Multi-Secure Num | If you set Host-mode to Multi-Secure , specify the maximum number of users (between 1 and 24) that the Switch will authenticate on this port. |

Table 80 Advanced Application > Port Authentication > 802.1x > Guest VLAN (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

16.2.3 Activate MAC Authentication

Use this screen to activate MAC authentication. In the **Port Authentication** screen click **MAC Authentication** to display the configuration screen as shown.

Figure 132 Advanced Application > Port Authentication > MAC Authentication (Standalone mode)

The screenshot displays the MAC Authentication configuration interface. At the top, there are two tabs: "MAC Authentication" (selected) and "Port Authentication". Below the tabs is a configuration form with the following fields:

- Active:** A checkbox that is currently checked.
- Name Prefix:** An empty text input field.
- Password:** A text input field containing the value "zyxel".
- Timeout:** A text input field containing the value "0".

Below the configuration form is a table with three columns: "Port", "Active", and "Trusted-VLAN List". The table lists ports from 1 to 52. The "Active" column contains checkboxes for each port, all of which are currently checked. The "Trusted-VLAN List" column is empty for all ports. At the bottom of the screen, there are two buttons: "Apply" and "Cancel".

Figure 133 Advanced Application > Port Authentication > MAC Authentication (Stacking mode)

The following table describes the labels in this screen.

Table 81 Advanced Application > Port Authentication > MAC Authentication

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this check box to permit MAC authentication on the Switch. Note: You must first enable MAC authentication on the Switch before configuring it on each port. |
| Name Prefix | Type the prefix that is appended to all MAC addresses sent to the RADIUS server for authentication. You can enter up to 32 printable ASCII characters. If you leave this field blank, then only the MAC address of the client is forwarded to the RADIUS server. |
| Password | Type the password the Switch sends along with the MAC address of a client for authentication with the RADIUS server. You can enter up to 32 printable ASCII characters. |
| Timeout | Specify the amount of time before the Switch allows a client MAC address that fails authentication to try and authenticate again. Maximum time is 3000 seconds. When a client fails MAC authentication, its MAC address is learned by the MAC address table with a status of denied. The timeout period you specify here is the time the MAC address entry stays in the MAC address table until it is cleared. If you specify 0 for the timeout value, the Switch uses the Aging Time configured in the Switch Setup screen. Note: If the Aging Time in the Switch Setup screen is set to a lower value, then it supersedes this setting. See Section 6.4 on page 63 . |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |

Table 81 Advanced Application > Port Authentication > MAC Authentication (continued)

| LABEL | DESCRIPTION |
|-------------------------------------|--|
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to permit MAC authentication on this port. You must first allow MAC authentication on the Switch before configuring it on each port. |
| Trusted-VLAN List (Standalone mode) | Enter the ID number(s) of the trusted VLAN(s) (separated by a comma). If a client's VLAN ID is specified here, the client can access the port and the connected networks without MAC authentication. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Port Security

This chapter shows you how to set up port security.

17.1 About Port Security

Port security allows only packets with dynamically learned MAC addresses and/or configured static MAC addresses to pass through a port on the Switch. The Switch can learn up to 32K MAC addresses in total with no limit on individual ports other than the sum cannot exceed 32K.

For maximum port security, enable this feature, disable MAC address learning and configure static MAC address(es) for a port. It is not recommended you disable port security together with MAC address learning as this will result in many broadcasts. By default, MAC address learning is still enabled even though the port security is not activated.

17.2 Port Security Setup

Click **Advanced Application > Port Security** in the navigation panel to display the screen as shown.

Figure 134 Advanced Application > Port Security (Standalone mode)

Port Security VLAN MAC Address Limit

MAC Freeze :

Port List MAC Freeze

Port Security :

Active

| Port | Active | Address Learning | Limited Number of Learned MAC Address |
|------|--------------------------|-------------------------------------|---------------------------------------|
| 1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | |
| 1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 2 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 3 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 4 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 5 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 6 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 7 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| ... | ... | ... | ... |
| 50 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 51 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 52 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |

Apply Cancel

Figure 135 Advanced Application > Port Security (Stacking mode)

Port Security VLAN MAC Address Limit

MAC Freeze :

Port List MAC Freeze

Port Security :

Active

SLOT 1 ▾

| Port | Active | Address Learning | Limited Number of Learned MAC Address |
|------|--------------------------|-------------------------------------|---------------------------------------|
| 1/1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | |
| 1/1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/2 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/3 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/4 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/5 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/6 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| ... | ... | ... | ... |
| 1/49 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |
| 1/50 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | 0 |

Apply Cancel

The following table describes the labels in this screen.

Table 82 Advanced Application > Port Security

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| Port List | Enter the number of the port(s) (separated by a comma) on which you want to enable port security and disable MAC address learning. In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example. After you click MAC freeze , all previously learned MAC addresses on the specified port(s) will become static MAC addresses and display in the Static MAC Forwarding screen. |
| MAC freeze | Click MAC freeze to have the Switch automatically select the Active check boxes and clear the Address Learning check boxes only for the ports specified in the Port list . |
| Active | Select this option to enable port security on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some of the settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable the port security feature on this port. The Switch forwards packets whose MAC address(es) is in the MAC address table on this port. Packets with no matching MAC address(es) are dropped. Clear this check box to disable the port security feature. The Switch forwards all packets on this port. |
| Address Learning | MAC address learning reduces outgoing broadcast traffic. For MAC address learning to occur on a port, the port itself must be active with address learning enabled. |
| Limited Number of Learned MAC Address | Use this field to limit the number of (dynamic) MAC addresses that may be learned on a port. For example, if you set this field to "5" on port 2, then only the devices with these five learned MAC addresses may access port 2 at any one time. A sixth device must wait until one of the five learned MAC addresses ages out. MAC address aging out time can be set in the Switch Setup screen. The valid range is from "0" to "16K". "0" means this feature is disabled. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

17.3 VLAN MAC Address Limit

Use this screen to set the MAC address learning limit on per-port and per-VLAN basis. Click **VLAN MAC Address Limit** in the **Advanced Application > Port Security** screen to display the screen as shown.

Figure 136 Advanced Application > Port Security > VLAN MAC Address Limit

The following table describes the labels in this screen.

Table 83 Advanced Application > Port Security > VLAN MAC Address Limit

| LABEL | DESCRIPTION |
|--------------|---|
| Active | Select this option to activate this rule. |
| Port | Enter the number of the port to which this rule is applied. In stacking mode, the first number represents the slot and the second the port number. |
| VID | Enter the VLAN identification number. |
| Limit Number | Use this field to limit the number of (dynamic) MAC addresses that may be learned on a port in a specified VLAN. For example, if you set this field to "5" on port 2, then only the devices with these five learned MAC addresses may access port 2 at any one time. A sixth device would have to wait until one of the five learned MAC addresses aged out. MAC address aging out time can be set in the Switch Setup screen. The valid range is from "0" to "16K". "0" means this feature is disabled. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays the index number of the rule. Click an index number to change the settings. |
| Active | This field displays Yes when the rule is activated and No when is it deactivated. |
| Port | This field displays the number of the port to which this rule is applied. |
| VID | This is the VLAN ID number to which the port belongs. |
| Limit Number | This is the maximum number of MAC addresses which a port can learn in a VLAN. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the rule(s) that you want to remove in the Delete column and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es) in the Delete column. |

Time Range

This chapter shows you how to set up a time range for time-oriented features on the Switch.

18.1 About Time Range

You can set a time range for time-oriented features such as Classifier ACL (Access Control List) rule which categorizes data packets into different network traffic flow. The advantage of the time range feature is that it allows you to schedule the active time of configurations. For example, see [Section 19.2 on page 201](#) to configure the classifier rule with time range.

The time range can be configured in two ways - Absolute and Periodic. Absolute is a fixed time range with a start and end time. Periodic is recurrence of a time range and doesn't have an end time.

18.2 Time Range Setup

Click **Advanced Application > Time Range** in the navigation panel to display the screen as shown.

Figure 137 Advanced Application > Time Range

| Index | Name | Type | Range |
|-------|------|------|-------|
| | | | |

The following table describes the labels in this screen.

Table 84 Advanced Application > Time Range

| LABEL | DESCRIPTION |
|----------|--|
| Name | Type a name for this time range rule. |
| Type | Select a time range type. Absolute is a fixed time range that has a set start and end date. Periodic is recurrence of a time range. |
| Absolute | This sets a fixed time range. |
| Start | Specify the year, month, day, hour and minute when the schedule begins. |
| End | Specify the year, month, day, hour and minute when the schedule ends. |
| Periodic | <p>This section is available only when you set Type to Periodic.</p> <p>Select the first option if you want to define a recurring schedule for a consecutive time period. You then select the day of the week, hour and minute when the schedule begins and ends respectively.</p> <p>Select the second option if you want to define a recurring schedule for multiple non-consecutive time periods. You need to select each day of the week the recurring schedule is effective. You also need to specify the hour and minute when the schedule begins and ends each day. The schedule begins and ends in the same day.</p> |
| Add | Click Add to save the time range you entered. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays the index number of the rule. Click an index number to change the settings. |
| Name | This field displays the name of the time range rule. |
| Type | This field displays the type of the schedule. |
| Range | This field displays the time period(s) to which this schedule applies. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the rule(s) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

Classifier

This chapter introduces and shows you how to configure the packet classifier on the Switch.

19.1 About the Classifier and QoS

Quality of Service (QoS) refers to both a network's ability to deliver data with minimum delay, and the networking methods used to control the use of bandwidth. Without QoS, all traffic data is equally likely to be dropped when the network is congested. This can cause a reduction in network performance and make the network inadequate for time-critical application such as video-on-demand.

A classifier groups traffic into data flows according to specific criteria such as the source address, destination address, source port number, destination port number or incoming port number. For example, you can configure a classifier to select traffic from the same protocol port (such as Telnet) to form a flow.

Configure QoS on the Switch to group and prioritize application traffic and fine-tune network performance. Setting up QoS involves two separate steps:

- 1 Configure classifiers to sort traffic into different flows.
- 2 Configure policy rules to define actions to be performed for a classified traffic flow (refer to [Chapter 20 on page 210](#) to configure policy rules).

You can also configure policy routing to forward a classified traffic flow to a different gateway for cost savings and load sharing. See [Chapter 41 on page 400](#) for how to configure policy routing.

19.2 Classifier Status

Use this screen to to view the classifiers configured on the Switch and how many times the traffic matches the rules.

Click **Advanced Application > Classifier** in the navigation panel to display the configuration screen as shown.

Figure 138 Advanced Application > Classifier > Classifier Status

| Index | Active | Weight | Name | Match Count | Rule |
|-------|--------|--------|--------|-------------|--------|
| 1 | Yes | 32767 | Class1 | - | vlan 1 |

Any
 Classifier

The following table describes the labels in this screen.

Table 85 Advanced Application > Classifier > Classifier Status

| LABEL | DESCRIPTION |
|-------------|---|
| Index | This field displays the index number of the Classifier rule. |
| Active | This field displays Yes when the rule is activated and No when it is deactivated. |
| Weight | This field displays the rule's weight. This is to indicate a rule's priority when the match order is set to manual in the Classifier > Classifier Global Setting screen. The higher the number, the higher the rule's priority. |
| Name | This field displays the name of the Classifier rule. |
| Match Count | This field displays the number of times a rule is applied. It displays '-' if the rule does not have count enabled. |
| Rule | This field displays a summary of the classifier rule's settings. |
| Any | Select Any , then click Clear to clear the matched count for all classifiers. |
| Clear | Select Classifier , enter a classifier rule name and then click Clear to erase the recorded statistical information for that classifier, or select Any to clear statistics for all classifiers. |

19.3 Classifier Configuration

Use the **Classifier Configuration** screen to define the classifiers. After you define the classifier, you can specify actions (or policy) to act upon the traffic that matches the rules. In the **Classifier Status** screen click **Classifier Configuration** to display the configuration screen as shown.

Figure 139 Advanced Application > Classifier > Classifier Configuration

| Classifier Configuration | | Classifier Global Setting | Classifier Status |
|--------------------------|--|---|---|
| Active | <input type="checkbox"/> | | |
| Name | <input type="text"/> | | |
| Weight | 32767 | | |
| Log | <input type="checkbox"/> | | |
| Count | <input type="checkbox"/> | | |
| Time Range | None ▼ | | |
| Port | <input type="radio"/> Any | | |
| Ingress Port | <input type="text"/> | | |
| Trunk | <input type="radio"/> Any | | |
| | <input type="text"/> | | |
| Packet Format | All ▼ | | |
| Layer 2 | VLAN | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | <input type="text"/> |
| | Inner VLAN | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | <input type="text"/> |
| | Priority | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | 0 ▼ |
| | Inner Priority | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | 0 ▼ |
| | Ethernet Type | <input checked="" type="radio"/> All ▼ | <input type="text"/> |
| | | <input type="radio"/> Others | (Hex) |
| Source | MAC Address | <input type="radio"/> Any | |
| | | <input type="radio"/> MAC | |
| | | /Mask | |
| | | <input type="text"/> | |
| Destination | MAC Address | <input type="radio"/> Any | |
| | | <input type="radio"/> MAC | |
| | | /Mask | |
| | | <input type="text"/> | |
| Layer 3 | IP Packet Length | <input type="radio"/> Any | <input type="text"/> To: <input type="text"/> Bytes |
| | | <input type="radio"/> | |
| | DSCP | IPv4 | <input type="radio"/> Any |
| | | | <input type="radio"/> |
| | | IPv6 | <input type="radio"/> Any |
| | | | <input type="radio"/> |
| | Precedence | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | |
| | ToS | <input type="radio"/> Any | <input type="text"/> |
| | | <input type="radio"/> | |
| IP Protocol | <input checked="" type="radio"/> All ▼ | <input type="checkbox"/> Establish Only | |
| | <input type="radio"/> Others | (Dec) | |
| IPv6 Next Header | <input checked="" type="radio"/> All ▼ | <input type="checkbox"/> Establish Only | |
| | <input type="radio"/> Others | (Dec) | |
| Source | IP Address / Address Prefix | <input type="text"/> / | |
| Destination | IP Address / Address Prefix | <input type="text"/> / | |
| Layer 4 | Source | Socket Number | <input type="radio"/> Any |
| | | | <input type="radio"/> |
| | | | To: <input type="text"/> |
| Destination | Socket Number | <input type="radio"/> Any | |
| | | <input type="radio"/> | |
| | | | To: <input type="text"/> |

Add Cancel Clear

The following table describes the labels in this screen.

Table 86 Advanced Application > Classifier > Classifier Configuration

| LABEL | DESCRIPTION |
|--------|--|
| Active | Select this option to enable this rule. |
| Name | Enter a descriptive name for this rule for identifying purposes. |

Table 86 Advanced Application > Classifier > Classifier Configuration (continued)

| LABEL | DESCRIPTION |
|---|--|
| Weight | Enter a number between 0 and 65535 to specify the rule's weight. When the match order is in manual mode in the Classifier Global Setting screen, a higher weight means a higher priority. |
| Log | Select this option to have the Switch create a log message when the rule is applied and record the number of matched packets in a particular time interval. Note: Make sure you also enable logging in the Classifier Global Setting screen. |
| Count | Select this option to have the Switch count how many times the rule is applied. |
| Time Range | Select the name of the pre-configured schedule that you want to apply to the rule. The rule will be active only at the scheduled date and/or time. If you select None , the rule will be active all the time. |
| Ingress Port | |
| Port | Type the port number to which the rule should be applied. You may choose one port only or all ports (Any). |
| Trunk | Select Any to apply the rule to all trunk groups. To specify a trunk group, select the second choice and type a trunk group ID. |
| Packet Format | Specify the format of the packet. Choices are All , 802.3 tagged , 802.3 untagged , Ethernet II tagged and Ethernet II untagged . A value of 802.3 indicates that the packets are formatted according to the IEEE 802.3 standards. A value of Ethernet II indicates that the packets are formatted according to RFC 894, Ethernet II encapsulation. |
| Layer 2 | |
| Specify the fields below to configure a layer-2 classifier. | |
| VLAN | |
| VLAN | Select Any to classify traffic from any VLAN or select the second option and specify the source VLAN ID in the field provided. |
| Inner VLAN | Select Any to classify traffic from any inner VLAN (the customer's VLAN) or select the second option and specify the source VLAN ID in the field provided. |
| Priority | |
| Priority | Select Any to classify traffic from any priority level or select the second option and specify a priority level in the field provided. |
| Inner Priority | Select Any to classify traffic from any inner priority level or select the second option and specify a priority level in the field provided. |
| Ethernet Type | Select an Ethernet type or select Others and enter the Ethernet type number in hexadecimal value. Refer to Table 88 on page 206 for information. |
| Source | |
| MAC Address | Select Any to apply the rule to all MAC addresses. To specify a source, select MAC/ Mask to enter the source MAC address of the packet in valid MAC address format (six hexadecimal character pairs) and type the mask for the specified MAC address to determine which bits a packet's MAC address should match. Enter "f" for each bit of the specified MAC address that the traffic's MAC address should match. Enter "0" for the bit(s) of the matched traffic's MAC address, which can be of any hexadecimal character(s). For example, if you set the MAC address to 00:13:49:00:00:00 and the mask to ff:ff:ff:00:00:00, a packet with a MAC address of 00:13:49:12:34:56 matches this criteria. If you leave the Mask field blank, the Switch automatically sets the mask to ff:ff:ff:ff:ff:ff. |
| Destination | |

Table 86 Advanced Application > Classifier > Classifier Configuration (continued)

| LABEL | DESCRIPTION |
|---|---|
| MAC Address | <p>Select Any to apply the rule to all MAC addresses.</p> <p>To specify a source, select MAC/ Mask to enter the source MAC address of the packet in valid MAC address format (six hexadecimal character pairs) and type the mask for the specified MAC address to determine which bits a packet's MAC address should match.</p> <p>Enter "f" for each bit of the specified MAC address that the traffic's MAC address should match. Enter "0" for the bit(s) of the matched traffic's MAC address, which can be of any hexadecimal character(s). For example, if you set the MAC address to 00:13:49:00:00:00 and the mask to ff:ff:ff:00:00:00, a packet with a MAC address of 00:13:49:12:34:56 matches this criteria. If you leave the Mask field blank, the Switch automatically sets the mask to ff:ff:ff:ff:ff:ff.</p> |
| <p>Layer 3</p> <p>Specify the fields below to configure a layer-3 classifier.</p> | |
| IP Packet Length | Click Any to classify any size of packet length or manually enter a range of number (from/to) of packet size in the field provided. |
| DSCP IPv4/ IPv6 | Select Any to classify traffic from any DSCP or select the second option and specify a DSCP (DiffServ Code Point) number between 0 and 63 in the field provided. |
| Precedence | Select Any to classify traffic from any precedence or select the second option and specify an IP Precedence (the first 3 bits of the 8-bit ToS field) value between 0 and 7 in the field provided. |
| ToS | Select Any to classify traffic from any ToS or select the second option and specify Type of Service (the last 5 bits of the 8-bit ToS field) value between 0 and 255 in the field provided. |
| IP Protocol | <p>Select an IPv4 protocol type or select Other and enter the protocol number in decimal value. Refer to Table 89 on page 207 for more information.</p> <p>You may select Establish Only for TCP protocol type. This means that the Switch will identify packets that initiate or acknowledge (establish) TCP connections.</p> |
| IPv6 Next Header | <p>Select an IPv6 protocol type or select Other and enter an 8-bit next header in the IPv6 packet. The Next Header field is similar to the IPv4 Protocol field. The IPv6 protocol number ranges from 1 to 255.</p> <p>You may select Establish Only for TCP protocol type. This means that the Switch will identify packets that initiate or acknowledge (establish) TCP connections.</p> |
| Source | |
| IP Address/ Address Prefix | <p>Enter a source IP address in dotted decimal notation.</p> <p>Specify the address prefix by entering the number of ones in the subnet mask.</p> |
| Destination | |
| IP Address/ Address Prefix | <p>Enter a destination IP address in dotted decimal notation.</p> <p>Specify the address prefix by entering the number of ones in the subnet mask.</p> |
| <p>Layer 4</p> <p>Specify the fields below to configure a layer-3 classifier.</p> | |
| Source/ Destination Socket Number | <p>Note: You must select either UDP or TCP in the IP Protocol field before you configure the socket numbers.</p> <p>Select Any to apply the rule to all TCP/UDP protocol port numbers or select the second option and enter a TCP/UDP protocol port number.</p> |

Table 86 Advanced Application > Classifier > Classifier Configuration (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to set the above fields back to the factory defaults. |

19.3.1 Viewing and Editing Classifier Configuration

To view a summary of the classifier configuration, scroll down to the summary table at the bottom of the **Classifier** screen. To change the settings of a rule, click a number in the **Index** field.

Note: When two rules conflict with each other, a higher layer rule has priority over a lower layer rule.

Figure 140 Advanced Application > Classifier > Classifier Configuration: Summary Table

| Index | Active | Weight | Name | Rule |
|-------|--------|--------|--------|--------|
| 1 | Yes | 32767 | Class1 | vlan 1 |

Delete Cancel

The following table describes the labels in this screen.

Table 87 Advanced Application > Classifier > Classifier Configuration: Summary Table

| LABEL | DESCRIPTION |
|--------|---|
| Index | This field displays the index number of the rule. Click an index number to edit the rule. |
| Active | This field displays Yes when the rule is activated and No when it is deactivated. |
| Weight | The field displays the priority of the rule when the match order is in manual mode. A higher weight means a higher priority. |
| Name | This field displays the descriptive name for this rule. This is for identification purposes only. |
| Rule | This field displays a summary of the classifier rule's settings. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

The following table shows some other common Ethernet types and the corresponding protocol number.

Table 88 Common Ethernet Types and Protocol Number

| ETHERNET TYPE | PROTOCOL NUMBER |
|---------------|-----------------|
| IP ETHII | 0800 |
| X.75 Internet | 0801 |
| NBS Internet | 0802 |
| ECMA Internet | 0803 |
| Chaosnet | 0804 |

Table 88 Common Ethernet Types and Protocol Number

| ETHERNET TYPE | PROTOCOL NUMBER |
|----------------|-----------------|
| X.25 Level 3 | 0805 |
| XNS Compat | 0807 |
| Banyan Systems | 0BAD |
| BBN Simnet | 5208 |
| IBM SNA | 80D5 |
| AppleTalk AARP | 80F3 |

Some of the most common IP ports are:

Table 89 Common IP Ports

| PORT NUMBER | PORT NAME |
|-------------|-----------|
| 21 | FTP |
| 23 | Telnet |
| 25 | SMTP |
| 53 | DNS |
| 80 | HTTP |
| 110 | POP3 |

19.4 Classifier Global Setting Configuration

Use this screen to configure the match order and enable logging on the Switch. In the **Classifier Configuration** screen click **Classifier Global Setting** to display the configuration screen as shown.

Figure 141 Advanced Application > Classifier > Classifier Configuration > Classifier Global Setting

The following table describes the labels in this screen.

Table 90 Advanced Application > Classifier > Classifier Configuration > Classifier Global Setting

| LABEL | DESCRIPTION |
|-------------|---|
| Match Order | Select manual to have classifier rules applied according to the weight of each rule you configured in Advanced Application > Classifier > Classifier Configuration . Alternatively, select auto to have classifier rules applied according to the layer of the item configured in the rule. Layer-4 items have the highest priority, and layer-2 items has the lowest priority. For example, you configure a layer-2 item (VLAN ID) in classifier A and configure a layer-3 item (source IP address) in classifier B. When an incoming packet matches both classifier rules, classifier B has priority over classifier A. |
| Logging | |

Table 90 Advanced Application > Classifier > Classifier Configuration > Classifier Global Setting

| LABEL | DESCRIPTION |
|----------|--|
| Active | Select this to allow the Switch to create a log when packets match a classifier rule during a defined time interval. |
| Interval | Select the length of the time period (in seconds) to count matched packets for a classifier rule. Enter an integer from 0-65535. 0 means that no logging is done. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

19.5 Classifier Example

The following screen shows an example of configuring a classifier that identifies all traffic from MAC address 00:50:ba:ad:4f:81 on port 2.

Figure 142 Classifier: Example

| Classifier Configuration | | Classifier Global Settings | Classifier Status |
|--------------------------|-------------------------------------|--|--|
| Active | <input checked="" type="checkbox"/> | | |
| Name | EXAMPLE | | |
| Weight | 32767 | | |
| Log | <input type="checkbox"/> | | |
| Count | <input type="checkbox"/> | | |
| Time Range | None ▼ | | |
| Ingress Port | Port | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| | Trunk | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| Packet Format | All ▼ | | |
| Layer 2 | VLAN | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| | Inner VLAN | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| | Priority | <input checked="" type="radio"/> Any | <input type="radio"/> [0] ▼ |
| | Inner Priority | <input checked="" type="radio"/> Any | <input type="radio"/> [0] ▼ |
| Layer 3 | Ethernet Type | <input checked="" type="radio"/> All | <input type="radio"/> Others [] (Hex) |
| | Source | MAC Address | <input checked="" type="radio"/> MAC 00:EO:8A:AD:4F:81 <input type="radio"/> Mask [] |
| | Destination | MAC Address | <input checked="" type="radio"/> MAC [] <input type="radio"/> Mask [] |
| | IP Packet Length | <input checked="" type="radio"/> Any | <input type="radio"/> [] To [] Bytes |
| Layer 4 | DSCP | IPv4 | <input checked="" type="radio"/> Any |
| | | IPv6 | <input checked="" type="radio"/> Any |
| | Precedence | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| | TaS | <input checked="" type="radio"/> Any | <input type="radio"/> [] |
| Layer 4 | IP Protocol | <input checked="" type="radio"/> All | <input type="radio"/> Establish Only |
| | | <input type="radio"/> Others [] (Dec) | |
| | IPv6 Next Header | <input checked="" type="radio"/> All | <input type="radio"/> Establish Only |
| | | <input type="radio"/> Others [] (Dec) | |
| Layer 4 | Source | IP Address / Address Prefix | [] / [] |
| | Destination | IP Address / Address Prefix | [] / [] |
| Layer 4 | Source | Socket Number | <input checked="" type="radio"/> Any |
| | Destination | Socket Number | <input checked="" type="radio"/> Any |

EXAMPLE

[Add] [Cancel] [Clear]

After you have configured a classifier, you can configure a policy to define action(s) on the classified traffic flow. See [Chapter 20 on page 210](#) for information on configuring a policy rule.

Policy Rule

This chapter shows you how to configure policy rules.

20.1 Policy Rules Overview

A classifier distinguishes traffic into flows based on the configured criteria (refer to [Chapter 19 on page 201](#) for more information). A policy rule ensures that a traffic flow gets the requested treatment in the network.

 
20.1.1 DiffServ

DiffServ (Differentiated Services) is a class of service (CoS) model that marks packets so that they receive specific per-hop treatment at DiffServ-compliant network devices along the route based on the application types and traffic flow. Packets are marked with DiffServ Code Points (DSCPs) indicating the level of service desired. This allows the intermediary DiffServ-compliant network devices to handle the packets differently depending on the code points without the need to negotiate paths or remember state information for every flow. In addition, applications do not have to request a particular service or give advanced notice of where the traffic is going.

20.1.2 DSCP and Per-Hop Behavior

DiffServ defines a new DS (Differentiated Services) field to replace the Type of Service (TOS) field in the IP header. The DS field contains a 2-bit unused field and a 6-bit DSCP field which can define up to 64 service levels. The following figure illustrates the DS field.

DSCP is backward compatible with the three precedence bits in the ToS octet so that non-DiffServ compliant, ToS-enabled network device will not conflict with the DSCP mapping.



The DSCP value determines the forwarding behavior, the PHB (Per-Hop Behavior), that each packet gets across the DiffServ network. Based on the marking rule, different kinds of traffic can be marked for different kinds of forwarding. Resources can then be allocated according to the DSCP values and the configured policies.

20.2 Configuring Policy Rules

You must first configure a classifier in the **Classifier** screen. Refer to [Section 19.2 on page 201](#) for more information.

Click **Advanced Application > Policy Rule** in the navigation panel to display the screen as shown.

Figure 143 Advanced Application > Policy Rule

The following table describes the labels in this screen.

Table 91 Advanced Application > Policy Rule

| LABEL | DESCRIPTION |
|---------------|---|
| Active | Select this option to enable the policy. |
| Name | Enter a descriptive name for identification purposes. |
| Classifier(s) | This field displays the active classifier(s) you configure in the Classifier screen. Select the classifier(s) to which this policy rule applies. To select more than one classifier, press [SHIFT] and select the choices at the same time. |

Table 91 Advanced Application > Policy Rule (continued)

| LABEL | DESCRIPTION |
|--|---|
| Parameters Set the fields below for this policy. You only have to set the field(s) that is related to the action(s) you configure in the Action field. | |
| General | |
| Egress Port | Type the number of an outgoing port. In stacking mode, the first number represents the slot and the second the port number. |
| Priority | Specify a priority level. |
| DSCP | Specify a DSCP (DiffServ Code Point) number between 0 and 63. |
| TOS | Specify the type of service (TOS) priority level. |
| Metering | You can configure the desired bandwidth available to a traffic flow. Traffic that exceeds the maximum bandwidth allocated (in cases where the network is congested) is called out-of-profile traffic. |
| Bandwidth | Specify the bandwidth in kilobit per second (Kbps). Enter a number between 1 and 1000000. |
| Out-of-Profile DSCP | Specify a new DSCP number (between 0 and 63) if you want to replace or remark the DSCP number for out-of-profile traffic. |
| Action Specify the action(s) the Switch takes on the associated classified traffic flow. | |
| Forwarding | <p>Select No change to forward the packets.</p> <p>Select Discard the packet to drop the packets.</p> <p>Select Do not drop the matching frame previously marked for dropping to retain the frames that were marked to be dropped before.</p> |
| Priority | <p>Select No change to keep the priority setting of the frames.</p> <p>Select Set the packet's 802.1p priority to replace the packet's 802.1p priority field with the value you set in the Priority field.</p> <p>Select Replace the 802.1p priority field with the IP TOS value to replace the packet's 802.1p priority field with the value you set in the TOS field.</p> <p>Select Replace the 802.1p priority field with the inner 802.1p priority value to replace the packet's 802.1p priority field with the existing customer priority level carried in the frames.</p> |
| Queue | <p>Select No change to keep the priority setting of the frames.</p> <p>Select Send the packet to priority queue to replace the packet's 802.1p priority field with the value you set in the Priority field.</p> <p>Note: If you select Send the packet to priority queue, the system will automatically select other options except for the No change in the Priority field.</p> |
| Diffserv | <p>Select No change to keep the TOS and/or DSCP fields in the packets.</p> <p>Select Set the packet's TOS field to set the TOS field with the value you configure in the TOS field.</p> <p>Select Replace the IP TOS with the 802.1p priority value to replace the TOS field with the value you configure in the Priority field.</p> <p>Select Set the Diffserv Codepoint field in the frame to set the DSCP field with the value you configure in the DSCP field.</p> |
| Outgoing | <p>Select Send the packet to the mirror port to send the packet to the mirror port.</p> <p>Select Send the packet to the egress port to send the packet to the egress port.</p> |

Table 91 Advanced Application > Policy Rule (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| Metering | Select Enable to activate bandwidth limitation on the traffic flow(s) then set the actions to be taken on out-of-profile packets. |
| Out-of-profile action | Select the action(s) to be performed for out-of-profile traffic. Select Drop the packet to discard the out-of-profile traffic. Select Change the DSCP value to replace the DSCP field with the value specified in the Out of profile DSCP field. Select Set Out-Drop Precedence to mark out-of-profile traffic and drop it when network is congested. Select Do not drop the matching frame previously marked for dropping to queue the frames that are marked to be dropped. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to set the above fields back to the factory defaults. |
| Index | This field displays the policy index number. Click an index number to edit the policy. |
| Active | This field displays Yes when policy is activated and No when is it deactivated. |
| Name | This field displays the name you have assigned to this policy. |
| Classifier(s) | This field displays the name(s) of the classifier to which this policy applies. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

20.3 Policy Example

The figure below shows an example **Policy** screen where you configure a policy to limit bandwidth and discard out-of-profile traffic on a traffic flow classified using the **Example** classifier (refer to [Section 19.5 on page 208](#)).

Figure 144 Policy Example

Policy

Active: **Test**

Name: **Test**

Classifier(s): **Class1**

Parameters

General

Egress Port:

Priority:

DSCP:

TOS:

Metering

Bandwidth: Kbps

Out-of-Profile DSCP:

Action

Forwarding

- No change
- Discard the packet
- Do not drop the matching frame previously marked for dropping

Priority

- No change
- Set the packet's 802.1p priority
- Replace the 802.1p priority field with the IP TOS value
- Replace the 802.1p priority field with the inner 802.1p priority value

Queue

- No change
- Send the packet to priority queue

Diffserv

- No change
- Set the packet's TOS field
- Replace the IP TOS field with the 802.1p priority value
- Set the Diffserv Codepoint field in the frame

Outgoing

- Send the packet to the mirror port
- Send the packet to the egress port

Metering

- Enable

Out-of-profile action

- Drop the packet
- Change the DSCP value
- Set Out-Drop Precedence
- Do not drop the matching frame previously marked for dropping

EXAMPLE

Queuing Method

This chapter introduces the queuing methods supported.

21.1 Queuing Method Overview

Queuing is used to help solve performance degradation when there is network congestion. Use the **Queuing Method** screen to configure queuing algorithms for outgoing traffic. See also **Priority Queue Assignment** in **Switch Setup** and **802.1p Priority** in **Port Setup** for related information.

Queuing algorithms allow switches to maintain separate queues for packets from each individual source or flow and prevent a source from monopolizing the bandwidth.

21.1.1 Strictly Priority

Strictly Priority (SP) services queues based on priority only. As traffic comes into the Switch, traffic on the highest priority queue, Q7 is transmitted first. When that queue empties, traffic on the next highest-priority queue, Q6 is transmitted until Q6 empties, and then traffic is transmitted on Q5 and so on. If higher priority queues never empty, then traffic on lower priority queues never gets sent. SP does not automatically adapt to changing network requirements.

21.1.2 Weighted Fair Queuing

Weighted Fair Queuing is used to guarantee each queue's minimum bandwidth based on its bandwidth weight (the number you configure in the **Weight** field) when there is traffic congestion. WFQ is activated only when a port has more traffic than it can handle. Queues with larger weights get more guaranteed bandwidth than queues with smaller weights. By default, the weight for Q0 is 1, for Q1 is 2, for Q2 is 3, and so on.

The weights range from 1 to 15 and the actual guaranteed bandwidth is calculated as follows:

Weight x 2 KB

If the weight setting is 5, the actual quantum guaranteed to the associated queue would be as follows:

5 x 2KB = 10 KB

21.1.3 Weighted Round Robin Scheduling (WRR)

Round Robin Scheduling services queues on a rotating basis and is activated only when a port has more traffic than it can handle. A queue is given an amount of bandwidth irrespective of the incoming traffic on that port. This queue then moves to the back of the list. The next queue is given an equal amount of bandwidth, and then moves to the end of the list; and so on, depending on the number of queues being used. This works in a looping fashion until a queue is empty.

Weighted Round Robin Scheduling (WRR) uses the same algorithm as round robin scheduling, but services queues based on their priority and queue weight (the number you configure in the queue **Weight** field) rather than a fixed amount of bandwidth. WRR is activated only when a port has more traffic than it can handle. Queues with larger weights get more service than queues with smaller weights. This queuing mechanism is highly efficient in that it divides any available bandwidth across the different traffic queues and returns to queues that have not yet emptied.

21.2 Configuring Queuing

Click **Advanced Application > Queuing Method** in the navigation panel.

Figure 145 Advanced Application > Queuing Method (Standalone mode)

| Queuing Method | | | | | | | | | | |
|----------------|---|--------|----|----|----|----|----|----|----|----------------------------|
| Port | Method | Weight | | | | | | | | Hybrid-SPQ Lowest-Queue |
| | | Q0 | Q1 | Q2 | Q3 | Q4 | Q5 | Q6 | Q7 | |
| * | <input checked="" type="radio"/> SPQ | | | | | | | | | None ▼ |
| 1 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 2 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 3 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 4 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 5 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 6 | <input type="radio"/> SPQ <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |
| 52 | <input type="radio"/> WFG <input type="radio"/> WRR | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None ▼ |

Apply Cancel

Figure 146 Advanced Application > Queuing Method (Stacking mode)

| Port | Method | Q0 | Q1 | Q2 | Q3 | Q4 | Q5 | Q6 | Q7 | Hybrid-SPQ Lowest-Queue |
|------|--------|----|----|----|----|----|----|----|----|----------------------------|
| 1/* | SPQ | | | | | | | | | None |
| 1/1 | WFQ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None |
| 1/2 | WFQ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None |
| 1/3 | WFQ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None |
| 1/4 | WFQ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None |
| 1/50 | WFQ | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | None |

The following table describes the labels in this screen.

Table 92 Advanced Application > Queuing Method

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Method | Select SPQ (Strictly Priority Queuing), WFQ (Weighted Fair Queuing) or WRR (Weighted Round Robin). Strictly Priority services queues based on priority only. When the highest priority queue empties, traffic on the next highest-priority queue begins. Q7 has the highest priority and Q0 the lowest. Weighted Fair Queuing is used to guarantee each queue's minimum bandwidth based on their bandwidth weight (the number you configure in the Weight field). Queues with larger weights get more guaranteed bandwidth than queues with smaller weights. Weighted Round Robin Scheduling services queues on a rotating basis based on their queue weight (the number you configure in the queue Weight field). Queues with larger weights get more service than queues with smaller weights. |
| Weight Q0-Q7 | When you select WFQ or WRR enter the queue weight here. Bandwidth is divided across the different traffic queues according to their weights. |

Table 92 Advanced Application > Queuing Method (continued)

| LABEL | DESCRIPTION |
|----------------------------|--|
| Hybrid-SPQ Lowest-Queue | <p>This field is applicable only when you select WFQ or WRR.</p> <p>Select a queue (Q0 to Q7) to have the Switch use SPQ to service the subsequent queue(s) after and including the specified queue for the 1000Base-T, 1000Base-X and 10 Gigabit Ethernet ports. For example, if you select Q5, the Switch services traffic on Q5, Q6 and Q7 using SPQ.</p> <p>Select None to always use WFQ or WRR.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

VLAN Stacking

This chapter shows you how to configure VLAN stacking on your Switch. See the chapter on VLANs for more background information on Virtual LAN

22.1 VLAN Stacking Overview

A service provider can use VLAN stacking to allow it to distinguish multiple customers VLANs, even those with the same (customer-assigned) VLAN ID, within its network.


Use VLAN stacking to add an outer VLAN tag to the inner IEEE 802.1Q tagged frames that enter the network. By tagging the tagged frames (“double-tagged” frames), the service provider can manage up to 4,094 VLAN groups with each group containing up to 4,094 customer VLANs. This allows a service provider to provide different service, based on specific VLANs, for many different customers.

A service provider’s customers may require a range of VLANs to handle multiple applications. A service provider’s customers can assign their own inner VLAN tags on ports for these applications. The service provider can assign an outer VLAN tag for each customer. Therefore, there is no VLAN tag overlap among customers, so traffic from different customers is kept separate.

22.1.1 VLAN Stacking Example

In the following example figure, both **A** and **B** are Service Provider’s Network (SPN) customers with VPN tunnels between their head offices and branch offices respectively. Both have an identical VLAN tag for their VLAN group. The service provider can separate these two VLANs within its network by adding tag 37 to distinguish customer **A** and tag 48 to distinguish customer **B** at edge device **1** and then stripping those tags at edge device **2** as the data frames leave the network.

Figure 147 VLAN Stacking Example

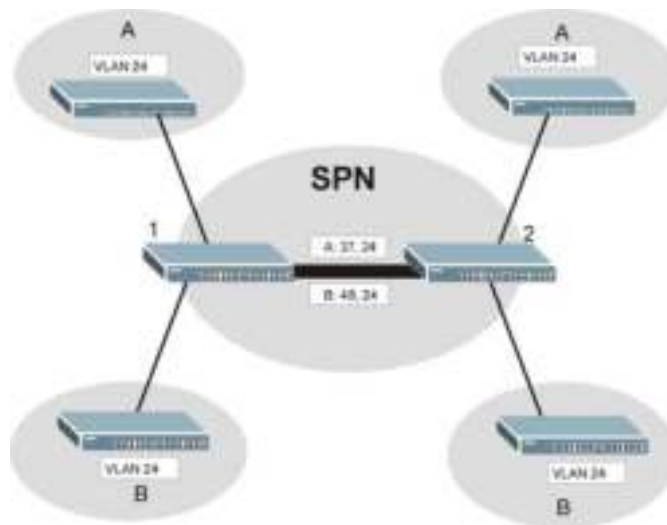

22.2 VLAN Stacking Port Roles

Each port can have three VLAN stacking “roles”, **Normal**, **Access Port** and **Tunnel Port** (the latter is for Gigabit ports only).

- Select **Normal** for “regular” (non-VLAN stacking) IEEE 802.1Q frame switching.
- Select **Access Port** for ingress ports on the service provider's edge devices (1 and 2 in the VLAN stacking example figure). The incoming frame is treated as “untagged”, so a second VLAN tag (outer VLAN tag) can be added.

Note: Static VLAN Tx Tagging MUST be disabled on a port where you choose **Normal** or **Access Port**.

- Select **Tunnel Port** (available for Gigabit ports only) for egress ports at the edge of the service provider's network. All VLANs belonging to a customer can be aggregated into a single service provider's VLAN (using the outer VLAN tag defined by the Service Provider's (SP) VLAN ID (VID)).

Note: Static VLAN Tx Tagging MUST be enabled on a port where you choose **Tunnel Port**.

22.3 VLAN Tag Format

A VLAN tag (service provider VLAN stacking or customer IEEE 802.1Q) consists of the following three fields.

Table 93 VLAN Tag Format

| Type | Priority | VID |
|------|----------|-----|
|------|----------|-----|

Type is a standard Ethernet type code identifying the frame and indicates that whether the frame carries IEEE 802.1Q tag information. **SP TPI D** (Service Provider Tag Protocol Identifier) is the service provider VLAN stacking tag type. Many vendors use 0x8100 or 0x9100.

TPI D (Tag Protocol Identifier) is the customer IEEE 802.1Q tag.

- If the VLAN stacking port role is **Access Port**, then the Switch adds the **SP TPI D** tag to all incoming frames on the service provider's edge devices (1 and 2 in the VLAN stacking example figure).
- If the VLAN stacking port role is **Tunnel Port**, then the Switch only adds the **SP TPI D** tag to all incoming frames on the service provider's edge devices (1 and 2 in the VLAN stacking example figure) that have an **SP TPI D** different to the one configured on the Switch. (If an incoming frame's **SP TPI D** is the same as the one configured on the Switch, then the Switch will not add the tag.)

Priority refers to the IEEE 802.1p standard that allows the service provider to prioritize traffic based on the class of service (CoS) the customer has paid for.

- On the Switch, configure priority level of the inner IEEE 802.1Q tag in the **Port Setup** screen.
- "0" is the lowest priority level and "7" is the highest.

VID is the VLAN ID. **SP VID** is the VID for the second (service provider's) VLAN tag.

22.3.1 Frame Format

The frame format for an untagged Ethernet frame, a single-tagged 802.1Q frame (customer) and a "double-tagged" 802.1Q frame (service provider) is shown next.

Configure the fields as highlighted in the Switch **VLAN Stacking** screen.

Table 94 Single and Double Tagged 802.1Q Frame Format

| | | | | | | | | | | | |
|----|----|---------------|-----------------|------------|--------------|-----------------|------------|-----------|------|-----|-----------------------------------|
| | | | | | | DA | SA | Len/Etype | Data | FCS | Untagged Ethernet frame |
| | | | DA | SA | TPI D | Priority | VID | Len/Etype | Data | FCS | IEEE 802.1Q customer tagged frame |
| DA | SA | SPTPID | Priority | VID | TPI D | Priority | VID | Len/Etype | Data | FCS | Double-tagged frame |

Table 95 802.1Q Frame

| | | | |
|-----------|--|-----------|-----------------------------------|
| DA | Destination Address | Priority | 802.1p Priority |
| SA | Source Address | Len/Etype | Length and type of Ethernet frame |
| (SP)TPI D | (Service Provider) Tag Protocol Identifier | Data | Frame data |
| VID | VLAN ID | FCS | Frame Check Sequence |

22.4 Configuring VLAN Stacking

Click **Advanced Application > VLAN Stacking** to display the screen as shown.

Figure 148 Advanced Application > VLAN Stacking (Standalone mode)

VLAN Stacking Port-based QinQ Selective QinQ

Active

| Port | Role | Tunnel TPID |
|------|----------|-------------|
| * | Normal ▼ | |
| 1 | Normal ▼ | 8100 |
| 2 | Normal ▼ | 8100 |
| 3 | Normal ▼ | 8100 |
| 4 | Normal ▼ | 8100 |
| 5 | Normal ▼ | 8100 |
| 6 | Normal ▼ | 8100 |
| 7 | Normal ▼ | 8100 |
| 8 | Normal ▼ | 8100 |
| 9 | Normal ▼ | 8100 |
| ... | Normal ▼ | 8100 |
| 52 | Normal ▼ | 8100 |

Apply Cancel

Figure 149 Advanced Application > VLAN Stacking (Stacking mode)

VLAN Stacking Port-based QinQ Selective QinQ

Active

SLOT 1 ▼

| Port | Role | Tunnel TPID |
|------|----------|-------------|
| 1/1 | Normal ▼ | 8100 |
| 1/2 | Normal ▼ | 8100 |
| 1/3 | Normal ▼ | 8100 |
| 1/4 | Normal ▼ | 8100 |
| 1/5 | Normal ▼ | 8100 |
| 1/6 | Normal ▼ | 8100 |
| 1/7 | Normal ▼ | 8100 |
| 1/8 | Normal ▼ | 8100 |
| ... | Normal ▼ | 8100 |
| 1/47 | Normal ▼ | 8100 |
| 1/48 | Normal ▼ | 8100 |
| 1/49 | Normal ▼ | 8100 |
| 1/50 | Normal ▼ | 8100 |

Apply Cancel

The following table describes the labels in this screen.

Table 96 Advanced Application > VLAN Stacking

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Active | Select this checkbox to enable VLAN stacking on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Role | <p>Select Normal to have the Switch ignore frames received (or transmitted) on this port with VLAN stacking tags. Anything you configure in SPVID and Priority of the Port-based QinQ or the Selective QinQ screen are ignored.</p> <p>Select Access Port to have the Switch add the SP TPID tag to all incoming frames received on this port. Select Access Port for ingress ports at the edge of the service provider's network.</p> <p>Select Tunnel Port (available for Gigabit ports only) for egress ports at the edge of the service provider's network. Select Tunnel Port to have the Switch add the Tunnel TPID tag to all outgoing frames sent on this port.</p> <p>In order to support VLAN stacking on a port, the port must be able to allow frames of 1526 Bytes (1522 Bytes + 4 Bytes for the second tag) to pass through it.</p> |
| Tunnel TPID | <p>TPID is a standard Ethernet type code identifying the frame and indicates whether the frame carries IEEE 802.1Q tag information. Enter a four-digit hexadecimal number from 0000 to FFFF that the Switch adds in the outer VLAN tag of the frames sent on the tunnel port(s). The Switch also uses this to check if the received frames are double-tagged.</p> <p>The value of this field is 0x8100 as defined in IEEE 802.1Q. If the Switch needs to communicate with other vendors' devices, they should use the same TPID.</p> <p>Note: You can define up to four different tunnel TPIDs (including 8100) in this screen at a time.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

22.4.1 Port-based Q-in-Q

Port-based Q-in-Q lets the Switch treat all frames received on the same port as the same VLAN flows and add the same outer VLAN tag to them, even they have different customer VLAN IDs.

Click **Port-based QinQ** in the **Advanced Application > VLAN Stacking** screen to display the screen as shown.

Figure 150 Advanced Application > VLAN Stacking > Port-based QinQ (Standalone mode)

| Port-based QinQ | | VLAN Stacking |
|-----------------|-------|---------------|
| Port | SPVID | Priority |
| * | | 0 ▼ |
| 1 | 1 | 0 ▼ |
| 2 | 1 | 0 ▼ |
| 3 | 1 | 0 ▼ |
| 4 | 1 | 0 ▼ |
| 5 | 1 | 0 ▼ |
| 6 | 1 | 0 ▼ |
| 7 | 1 | 0 ▼ |
| 8 | 1 | 0 ▼ |
| 9 | 1 | 0 ▼ |
| 10 | 1 | 0 ▼ |
| 11 | 1 | 0 ▼ |
| 12 | 1 | 0 ▼ |
| ~~~~~ | | |
| 49 | 1 | 0 ▼ |
| 50 | 1 | 0 ▼ |
| 51 | 1 | 0 ▼ |
| 52 | 1 | 0 ▼ |

Apply Cancel

Figure 151 Advanced Application > VLAN Stacking > Port-based QinQ (Stacking mode)

| Port-based QinQ | | VLAN Stacking |
|-----------------|-------|---------------|
| SLOT 1 ▼ | | |
| Port | SPVID | Priority |
| 1/1 | 1 | 0 ▼ |
| 1/2 | 1 | 0 ▼ |
| 1/3 | 1 | 0 ▼ |
| 1/4 | 1 | 0 ▼ |
| 1/5 | 1 | 0 ▼ |
| 1/6 | 1 | 0 ▼ |
| 1/7 | 1 | 0 ▼ |
| 1/8 | 1 | 0 ▼ |
| 1/9 | 1 | 0 ▼ |
| 1/10 | 1 | 0 ▼ |
| ~~~~~ | | |
| 1/49 | 1 | 0 ▼ |
| 1/50 | 1 | 0 ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 97 Advanced Application > VLAN Stacking > Port-based QinQ

| LABEL | DESCRIPTION |
|---------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| SPVID | SPVID is the service provider's VLAN ID (the outer VLAN tag). Enter the service provider ID (from 1 to 4094) for frames received on this port. See Chapter 7 on page 101 for more background information on VLAN ID. |
| Priority | Select a priority level (from 0 to 7). This is the service provider's priority level that adds to the frames received on this port. "0" is the lowest priority level and "7" is the highest. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

22.4.2 Selective Q-in-Q

Selective Q-in-Q is VLAN-based. It allows the Switch to add different outer VLAN tags to the incoming frames received on one port according to their inner VLAN tags.

Note: Selective Q-in-Q rules are only applied to single-tagged frames received on the access ports. If the incoming frames are untagged or single-tagged but received on a tunnel port or cannot match any selective Q-in-Q rules, the Switch applies the port-based Q-in-Q rules to them.

Click **Selective QinQ** in the **Advanced Application > VLAN Stacking** screen to display the screen as shown.

Figure 152 Advanced Application > VLAN Stacking > Selective QinQ

The screenshot displays the 'Selective QinQ' configuration interface. At the top, there are tabs for 'Selective QinQ' and 'VLAN Stacking'. The main area contains a form with the following fields: 'Active' (checkbox), 'Name' (text input), 'Port' (text input), 'CVID' (text input), 'SPVID' (text input), and 'Priority' (dropdown menu showing '0'). Below the form are 'Add' and 'Cancel' buttons. At the bottom of the screen, there is a table with columns: 'Index', 'Active', 'Name', 'Port', 'CVID', 'SPVID', 'Priority', and a search icon. Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 98 Advanced Application > VLAN Stacking > Selective QinQ

| LABEL | DESCRIPTION |
|----------|--|
| Active | Check this box to activate this rule. |
| Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. |
| Port | The port number identifies the port you are configuring. In stacking mode, the first field is the slot ID and the second field is the port number. |
| CVID | Enter a customer VLAN ID (the inner VLAN tag) from 1 to 4094. This is the VLAN tag carried in the packets from the subscribers. |
| SPVID | SPVID is the service provider's VLAN ID (the outer VLAN tag). Enter the service provider ID (from 1 to 4094) for frames received on this port. See Chapter 7 on page 101 for more background information on VLAN ID. |
| Priority | Select a priority level (from 0 to 7). This is the service provider's priority level that adds to the frames received on this port. "0" is the lowest priority level and "7" is the highest. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Index | This is the number of the selective VLAN stacking rule. Click on an index number to change the settings. |
| Active | This shows whether this rule is activated or not. |
| Name | This is the descriptive name for this rule. |
| Port | This is the port number to which this rule is applied. In stacking mode, the first number represents the slot and the second the port number. |
| CVID | This is the customer VLAN ID in the incoming packets. |
| SPVID | This is the service provider's VLAN ID that adds to the packets from the subscribers. |
| Priority | This is the service provider's priority level in the packets. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the rule(s) that you want to remove in the Delete column and then click the Delete button. |
| Cancel | Click Cancel to clear the Delete check boxes. |

This chapter shows you how to configure various multicast features.

23.1 Multicast Overview

Traditionally, IP packets are transmitted in one of either two ways - Unicast (1 sender to 1 recipient) or Broadcast (1 sender to everybody on the network). Multicast delivers IP packets to just a group of hosts on the network.

IGMP (Internet Group Management Protocol) is a network-layer protocol used to establish membership in an IPv4 multicast group - it is not used to carry user data. Refer to RFC 1112, RFC 2236 and RFC 3376 for information on IGMP versions 1, 2 and 3 respectively.

The Multicast Listener Discovery (MLD) protocol (defined in RFC 2710) is derived from IPv4's Internet Group Management Protocol version 2 (IGMPv2). MLD uses ICMPv6 message types, rather than IGMP message types. MLDv1 is similar to IGMPv2 and MLDv2 is similar to IGMPv3. MLD allows an IPv6 switch or router to discover the presence of MLD listeners who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network.

MLD snooping and MLD proxy are analogous to IGMP snooping and IGMP proxy in IPv4. MLD filtering controls which multicast groups a port can join.

23.1.1 IP Multicast Addresses

In IPv4, a multicast address allows a device to send packets to a specific group of hosts (multicast group) in a different subnet. A multicast IP address represents a traffic receiving group, not individual receiving devices. IP addresses in the Class D range (224.0.0.0 to 239.255.255.255) are used for IP multicasting. Certain IP multicast numbers are reserved by IANA for special purposes (see the IANA website for more information).

In IPv6, multicast addresses provide the same functionality as IPv4 broadcast addresses. Broadcasting is not supported in IPv6. A multicast address allows a host to send packets to all hosts in a multicast group. Multicast scope allows you to determine the size of the multicast group. A multicast address has a predefined prefix of ff00::/8.

23.1.2 IGMP Filtering

With the IGMP filtering feature, you can control which IGMP groups a subscriber on a port can join. This allows you to control the distribution of multicast services (such as content information distribution) based on service plans and types of subscription.

You can set the Switch to filter the multicast group join reports on a per-port basis by configuring an IGMP filtering profile and associating the profile to a port.

23.1.3 IGMP Snooping

The Switch can passively snoop on IGMP packets transferred between IP multicast routers/switches and IP multicast hosts to learn the IP multicast group membership. It checks IGMP packets passing through it, picks out the group registration information, and configures multicasting accordingly. IGMP snooping allows the Switch to learn multicast groups without you having to manually configure them.

The Switch forwards multicast traffic destined for multicast groups (that it has learned from IGMP snooping or that you have manually configured) to ports that are members of that group. IGMP snooping generates no additional network traffic, allowing you to significantly reduce multicast traffic passing through your Switch.

23.1.4 IGMP Snooping and VLANs

The Switch can perform IGMP snooping on up to 16 VLANs. You can configure the Switch to automatically learn multicast group membership of any VLANs. The Switch then performs IGMP snooping on the first 16 VLANs that send IGMP packets. This is referred to as auto mode. Alternatively, you can specify the VLANs that IGMP snooping should be performed on. This is referred to as fixed mode. In fixed mode the Switch does not learn multicast group membership of any VLANs other than those explicitly added as an IGMP snooping VLAN.


23.1.5 MLD Snooping-Proxy

MLD snooping-proxy is a ZyXEL-proprietary feature. IPv6 MLD proxy allows only one upstream interface on a switch, while MLD snooping-proxy supports more than one upstream port on a switch. The upstream port in MLD snooping-proxy can report group changes to a connected multicast router and forward MLD messages to other upstream ports. This helps especially when you want to have a network that uses STP to provide backup links between switches and also performs MLD snooping and proxy functions. MLD snooping-proxy, like MLD proxy, can minimize MLD control messages and allow better network performance.

In MLD snooping-proxy, if one upstream port is learned via snooping, all other upstream ports on the same device will be added to the same group. If one upstream port requests to leave a group, all other upstream ports on the same device will also be removed from the group.

In the following MLD snooping-proxy example, all connected upstream ports (1 ~ 7) are treated as one interface. The connection between ports 8 and 9 is blocked by STP to break the loop. If there is

one query from a router (X) or MLD Done or Report message from any upstream port, it will be broadcast to all connected upstream ports.

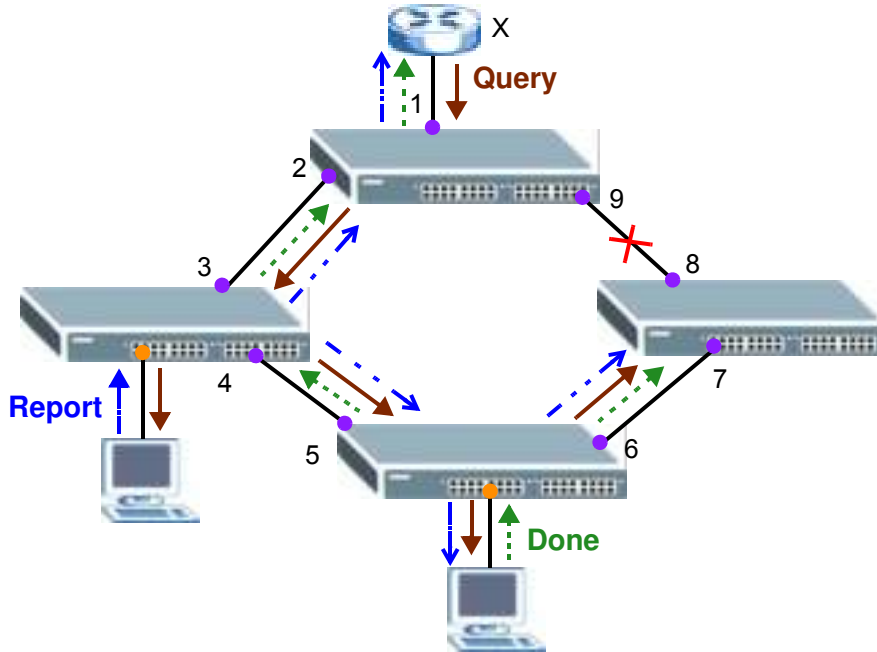

23.1.6 MLD Messages


A multicast router or switch periodically sends general queries to MLD hosts to update the multicast forwarding table. When an MLD host wants to join a multicast group, it sends an MLD Report message for that address.

An MLD Done message is similar to an IGMP Leave message. When an MLD host wants to leave a multicast group, it can send a Done message to the router or switch. If the leave mode is not set to **Immediate**, the router or switch sends a group-specific query to the port on which the Done message is received to determine if other devices connected to this port should remain in the group.

23.2 Multicast Setup

Use this screen to configure IGMP for IPv4 or MLD for IPv6 and set up multicast VLANs. Click **Advanced Application > Multicast** in the navigation panel.

Figure 153 Advanced Application > Multicast Setup

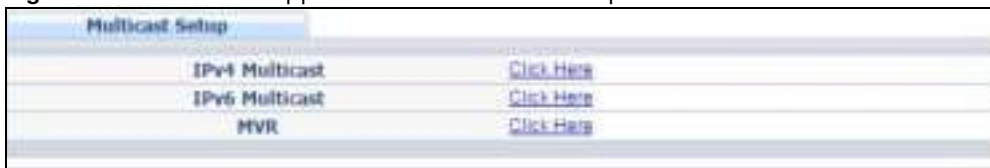

The following table describes the labels in this screen.

Table 99 Advanced Application > Multicast Setup

| LABEL | DESCRIPTION |
|----------------|---|
| IPv4 Multicast | Click the link to open screens where you can configure IGMP snooping and IGMP filtering for IPv4. |
| IPv6 Multicast | Click the link to open screens where you can configure MLD snooping and MLD filtering for IPv6. |
| MVR | Click the link to open screens where you can create multicast VLANs. |

23.3 IPv4 Multicast Status

Click **Advanced Application > Multicast > IPv4 Multicast** to display the screen as shown. This screen shows the IPv4 multicast group information. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 154 Advanced Application > Multicast > IPv4 Multicast



| Index | VID | Port | Multicast Group |
|-------|-----|------|-----------------|
| | | | |

The following table describes the labels in this screen.

Table 100 Advanced Application > Multicast > IPv4 Multicast

| LABEL | DESCRIPTION |
|-----------------|---|
| Index | This is the index number of the entry. |
| VID | This field displays the multicast VLAN ID. |
| Port | This field displays the port number that belongs to the multicast group. In stacking mode, the first number represents the slot and the second the port number. |
| Multicast Group | This field displays IP multicast group addresses. |

23.3.1 IGMP Snooping

Click the **IGMP Snooping** link in the **Advanced Application > Multicast > IPv4 Multicast** screen to display the screen as shown. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 155 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping (Standalone mode)

IGMP Snooping IPv4 Multicast Status IGMP Snooping VLAN IGMP Filtering Profile

IGMP Snooping: Active
 Querier
 Host Timeout: 250
 802.1p Priority: No-Change ▼

IGMP Filtering: Active
 Unknown Multicast Frame: Flooding Drop
 Reserved Multicast Group: Flooding Drop

| Port | Immed. Leave | Normal Leave | Fast Leave | Group Limited | Max Group Num. | Throttling | IGMP Filtering Profile | IGMP Querier Mode |
|------|----------------------------------|--------------|-----------------------|-------------------------------------|----------------|------------|------------------------|-------------------|
| * | <input checked="" type="radio"/> | | <input type="radio"/> | <input checked="" type="checkbox"/> | | Deny ▼ | Default ▼ | Auto ▼ |
| 1 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 2 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 3 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 4 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 5 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 6 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| ... | | | | | | | | |
| 49 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 50 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 51 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 52 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |

Apply Cancel

Figure 156 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping (Stacking mode)

IGMP Snooping IPv4 Multicast Status IGMP Snooping VLAN IGMP Filtering Profile

IGMP Snooping: Active
 Querier
 Host Timeout: 250
 802.1p Priority: No-Change ▼

IGMP Filtering: Active
 Unknown Multicast Frame: Flooding Drop
 Reserved Multicast Group: Flooding Drop

SLOT 1 ▼

| Port | Immed. Leave | Normal Leave | Fast Leave | Group Limited | Max Group Num. | Throttling | IGMP Filtering Profile | IGMP Querier Mode |
|------|----------------------------------|--------------|-----------------------|-------------------------------------|----------------|------------|------------------------|-------------------|
| 11 | <input checked="" type="radio"/> | | <input type="radio"/> | <input checked="" type="checkbox"/> | | Deny ▼ | Default ▼ | Auto ▼ |
| 11 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 12 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 13 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 14 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 15 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 16 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 17 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 18 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| ... | | | | | | | | |
| 149 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |
| 150 | <input checked="" type="radio"/> | 4000 | 200 | <input checked="" type="checkbox"/> | 0 | Deny ▼ | Default ▼ | Auto ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 101 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping

| LABEL | DESCRIPTION |
|------------------------------------|---|
| IGMP Snooping | Use these settings to configure IGMP snooping. |
| Active | Select Active to enable IGMP Snooping to forward group multicast traffic only to ports that are members of that group. |
| Querier | Select this option to allow the Switch to send IGMP General Query messages to the VLANs with the multicast hosts attached. |
| Host Timeout | Specify the time (from 1 to 16 711 450) in seconds that elapses before the Switch removes an IGMP group membership entry if it does not receive report messages from the port. |
| 802.1p Priority | Select a priority level (0-7) to which the Switch changes the priority in outgoing IGMP control packets. Otherwise, select No-Change to not replace the priority. |
| IGMP Filtering | <p>Select Active to enable IGMP filtering to control which IGMP groups a subscriber on a port can join.</p> <p>Note: If you enable IGMP filtering, you must create and assign IGMP filtering profiles for the ports that you want to allow to join multicast groups.</p> |
| Unknown Multicast Frame | Specify the action to perform when the Switch receives an unknown multicast frame. Select Drop to discard the frame(s). Select Flooding to send the frame(s) to all ports. |
| Reserved Multicast Group | <p>The IP address range of 224.0.0.0 to 224.0.0.255 are reserved for multicasting on the local network only. For example, 224.0.0.1 is for all hosts on a local network segment and 224.0.0.9 is used to send RIP routing information to all RIP v2 routers on the same network segment. A multicast router will not forward a packet with the destination IP address within this range to other networks. See the IANA web site for more information.</p> <p>The layer-2 multicast MAC addresses used by Cisco layer-2 protocols, 01:00:0C:CC:CC:CC and 01:00:0C:CC:CC:CD, are also included in this group.</p> <p>Specify the action to perform when the Switch receives a frame with a reserved multicast address. Select Drop to discard the frame(s). Select Flooding to send the frame(s) to all ports.</p> |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first field is the slot ID and the second field is the port number. |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Immed. Leave | <p>Select this option to set the Switch to remove this port from the multicast tree when an IGMP version 2 leave message is received on this port.</p> <p>Select this option if there is only one host connected to this port.</p> |

Table 101 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping (continued)

| LABEL | DESCRIPTION |
|------------------------|--|
| Normal Leave | <p>Enter an IGMP normal leave timeout value (from 200 to 6,348,800) in milliseconds. Select this option to have the Switch use this timeout to update the forwarding table for the port.</p> <p>In normal leave mode, when the Switch receives an IGMP leave message from a host on a port, it forwards the message to the multicast router. The multicast router then sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. The Switch forwards the query message to all hosts connected to the port and waits for IGMP reports from hosts to update the forwarding table.</p> <p>This defines how many seconds the Switch waits for an IGMP report before removing an IGMP snooping membership entry when an IGMP leave message is received on this port from a host.</p> |
| Fast Leave | <p>Enter an IGMP fast leave timeout value (from 200 to 6,348,800) in milliseconds. Select this option to have the Switch use this timeout to update the forwarding table for the port.</p> <p>In fast leave mode, right after receiving an IGMP leave message from a host on a port, the Switch itself sends out an IGMP Group-Specific Query (GSQ) message to determine whether other hosts connected to the port should remain in the specific multicast group. This helps speed up the leave process.</p> <p>This defines how many seconds the Switch waits for an IGMP report before removing an IGMP snooping membership entry when an IGMP leave message is received on this port from a host.</p> |
| Group Limited | Select this option to limit the number of multicast groups this port is allowed to join. |
| Max Group Num. | Enter the number of multicast groups this port is allowed to join. Once a port is registered in the specified number of multicast groups, any new IGMP join report frame(s) is dropped on this port. |
| Throttling | <p>IGMP throttling controls how the Switch deals with the IGMP reports when the maximum number of the IGMP groups a port can join is reached.</p> <p>Select Deny to drop any new IGMP join report received on this port until an existing multicast forwarding table entry is aged out.</p> <p>Select Replace to replace an existing entry in the multicast forwarding table with the new IGMP report(s) received on this port.</p> |
| IGMP Filtering Profile | <p>Select the name of the IGMP filtering profile to use for this port. Otherwise, select Default to prohibit the port from joining any multicast group.</p> <p>You can create IGMP filtering profiles in the Multicast > IPv4 Multicast > IGMP Snooping > IGMP Filtering Profile screen.</p> |
| IGMP Querier Mode | <p>The Switch treats an IGMP query port as being connected to an IGMP multicast router (or server). The Switch forwards IGMP join or leave packets to an IGMP query port.</p> <p>Select Auto to have the Switch use the port as an IGMP query port if the port receives IGMP query packets.</p> <p>Select Fixed to have the Switch always use the port as an IGMP query port. Select this when you connect an IGMP multicast server to the port.</p> <p>Select Edge to stop the Switch from using the port as an IGMP query port. The Switch will not keep any record of an IGMP router being connected to this port. The Switch does not forward IGMP join or leave packets to this port.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

23.3.2 IGMP Snooping VLAN

Click **Advanced Application > Multicast > IPv4 Multicast** in the navigation panel. Click the **IGMP Snooping** link and then the **IGMP Snooping VLAN** link to display the screen as shown. See [Section 23.1.4 on page 228](#) for more information on IGMP Snooping VLAN.

Figure 157 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping > IGMP Snooping VLAN

The following table describes the labels in this screen.

Table 102 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping > IGMP Snooping VLAN

| LABEL | DESCRIPTION |
|--------|--|
| Mode | <p>Select auto to have the Switch learn multicast group membership information of any VLANs automatically.</p> <p>Select fixed to have the Switch only learn multicast group membership information of the VLAN(s) that you specify below.</p> <p>In either auto or fixed mode, the Switch can learn up to 16 VLANs (including up to five VLANs you configured in the MVR screen). For example, if you have configured one multicast VLAN in the MVR screen, you can only specify up to 15 VLANs in this screen.</p> <p>The Switch drops any IGMP control messages which do not belong to these 16 VLANs.</p> <p>Note: You must also enable IGMP snooping in the Multicast > IPv4 Multicast > IGMP Snooping screen first.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | Use this section of the screen to add VLANs upon which the Switch is to perform IGMP snooping. |
| Name | Enter the descriptive name of the VLAN for identification purposes. |
| VID | <p>Enter the ID of a static VLAN; the valid range is between 1 and 4094.</p> <p>Note: You cannot configure the same VLAN ID as in the MVR screen.</p> |

Table 102 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping > IGMP Snooping VLAN (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the index number of the IGMP snooping VLAN entry in the table. |
| Name | This field displays the descriptive name for this VLAN group. |
| VID | This field displays the ID number of the VLAN group. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove, then click the Delete button. |
| Cancel | Click Cancel to clear the check boxes. |

23.3.3 IGMP Filtering Profile

An IGMP filtering profile specifies a range of multicast groups that clients connected to the Switch are able to join. A profile contains a range of multicast IP addresses which you want clients to be able to join. Profiles are assigned to ports (in the **IGMP Snooping** screen). Clients connected to those ports are then able to join the multicast groups specified in the profile. Each port can be assigned a single profile. A profile can be assigned to multiple ports.

Click **Advanced Application > Multicast > IPv4 Multicast** in the navigation panel. Click the **IGMP Snooping** link and then the **IGMP Filtering Profile** link to display the screen as shown.

Figure 158 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping > IGMP Filtering Profile

The screenshot shows the 'IGMP Filtering Profile' configuration interface. It features a 'Profile Setup' section with a table containing one entry. The entry has a 'Profile Name' field, a 'Start Address' of 224.0.0.0, and an 'End Address' of 224.0.0.0. Below the table are 'Add' and 'Clear' buttons. At the bottom of the page are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.


Table 103 Advanced Application > Multicast > IPv4 Multicast > IGMP Snooping > IGMP Filtering Profile

| LABEL | DESCRIPTION |
|----------------|---|
| Profile Name | Enter a descriptive name for the profile for identification purposes. To configure additional rule(s) for a profile that you have already added, enter the profile name and specify a different IP multicast address range. |
| Start Address | Type the starting multicast IP address for a range of multicast IP addresses that you want to belong to the IGMP filter profile. |
| End Address | Type the ending multicast IP address for a range of IP addresses that you want to belong to the IGMP filter profile. If you want to add a single multicast IP address, enter it in both the Start Address and End Address fields. |
| Add | Click this to create a new entry. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Profile Name | This field displays the descriptive name of the profile. |
| Start Address | This field displays the start of the multicast address range. |
| End Address | This field displays the end of the multicast address range. |
| Delete Profile | Select a profile's check box to select a specific profile. Otherwise, select the check box in the table heading row to select all profiles. |
| Delete Rule | Select the check box(es) of the rule(s) that you want to remove from a profile. |
| Delete | To delete the profile(s) and all the accompanying rules, select the profile(s) that you want to remove in the Delete Profile column, then click the Delete button. To delete a rule(s) from a profile, select the rule(s) that you want to remove in the Delete Rule column, then click the Delete button. |
| Cancel | Click Cancel to clear the Delete Profile/Delete Rule check boxes. |

23.4 IPv6 Multicast Status

Click **Advanced Application > Multicast > IPv6 Multicast** to display the screen as shown. This screen shows the IPv6 multicast group information. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 159 Advanced Application > Multicast > IPv6 Multicast

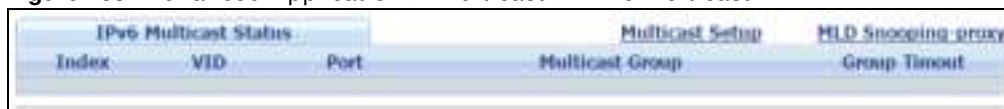

| IPv6 Multicast Status | | | Multicast Setup | MLD Snooping group |
|-----------------------|-----|------|-----------------|--------------------|
| Index | VID | Port | Multicast Group | Group Timeout |
| | | | | |

The following table describes the labels in this screen.

Table 104 Advanced Application > Multicast > IPv6 Multicast

| LABEL | DESCRIPTION |
|-----------------|--|
| Index | This is the index number of the entry. |
| VID | This field displays the multicast VLAN ID. |
| Port | This field displays the port number that belongs to the multicast group. In stacking mode, the first number represents the slot and the second the port number. |
| Multicast Group | This field displays IP multicast group addresses. |
| Group Timeout | This field displays the time (in seconds) that elapses before the Switch removes an MLD group membership entry if it does not receive report messages from the port. |

23.4.1 MLD Snooping-proxy

Click the **MLD Snooping-proxy** link in the **Advanced Application > Multicast > IPv6 Multicast** screen to display the screen as shown. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 160 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy



The following table describes the labels in this screen.

Table 105 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy

| LABEL | DESCRIPTION |
|--------------------|--|
| MLD Snooping-proxy | Use these settings to configure MLD snooping-proxy. |
| Active | Select Active to enable MLD snooping-proxy on the Switch to minimize MLD control messages and allow better network performance. |
| 802.1p Priority | Select a priority level (0-7) to which the Switch changes the priority in outgoing MLD messages. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

23.4.2 MLD Snooping-proxy VLAN

Click the **MLD Snooping-proxy** link and then the **VLAN** link in the **Advanced Application > Multicast > IPv6 Multicast** screen to display the screen as shown. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 161 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN

| VLAN | | MLD Snooping-proxy | | Port Role Setting |
|---|----------------------------|--------------------|--|-------------------|
| VID | | | | |
| Upstream | Query Interval | 125000 | | milliseconds |
| | Maximum Response Delay | 10000 | | milliseconds |
| | Robustness Variable | 2 | | |
| Downstream | Last Member Query Interval | 1000 | | milliseconds |
| | Query Interval | 125000 | | milliseconds |
| | Maximum Response Delay | 10000 | | milliseconds |
| <input type="button" value="Add"/> <input type="button" value="Cancel"/> <input type="button" value="Clear"/> | | | | |
| Index | | VID | | |
| <input type="button" value="Delete"/> <input type="button" value="Cancel"/> | | | | |

The following table describes the labels in this screen.

Table 106 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN

| LABEL | DESCRIPTION |
|------------------------|---|
| VID | Enter the ID number of the VLAN on which you want to enable MLD snooping-proxy and configure related settings. |
| Upstream | |
| Query Interval | <p>Enter the amount of time (in milliseconds) between general query messages sent by the router connected to the upstream port. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p> <p>When an MLD Report message is received, the Switch sets the timeout period of the entry to be $T = (QI * RV) + MRD$, where T = Timeout, QI = Query Interval, RV = Robustness Variable, and MRD = Maximum Response Delay.</p> |
| Maximum Response Delay | <p>Enter the amount of time (in milliseconds) the router connected to the upstream port waits for a response to an MLD general query message. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p> <p>When an MLD Report message is received, the Switch sets the timeout period of the entry to be $T = (QI * RV) + MRD$, where T = Timeout, QI = Query Interval, RV = Robustness Variable, and MRD = Maximum Response Delay.</p> <p>When an MLD Done message is received, the Switch sets the entry's lifetime to be the product of Last Member Query Interval and Robustness Variable</p> |
| Robustness Variable | <p>Enter the number of queries. A multicast address entry (learned only on an upstream port by snooping) is removed from the forwarding table when there is no response to the configured number of queries sent by the router connected to the upstream port. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table.</p> |

Table 106 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN

| LABEL | DESCRIPTION |
|----------------------------|--|
| Last Member Query Interval | <p>Enter the amount of time (in milliseconds) between the MLD group-specific queries sent by an upstream port when an MLD Done message is received. This value should be exactly the same as what's configured in the connected multicast router.</p> <p>This value is used to calculate the amount of time an MLD snooping membership entry (learned only on the upstream port) can remain in the forwarding table after a Done message is received.</p> <p>When an MLD Done message is received, the Switch sets the entry's lifetime to be the product of Last Member Query Interval and Robustness Variable.</p> |
| Downstream | |
| Query Interval | Enter the amount of time (in milliseconds) between general query messages sent by the downstream port. |
| Maximum Response Delay | Enter the maximum time (in milliseconds) that the Switch waits for a response to a general query message sent by the downstream port. |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This is the index number of the MLD snooping-proxy VLAN entry in the table. Click on an index number to view more details or change the settings. |
| VID | This field displays the ID number of the VLAN group. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry(ies) permanently. |
| Cancel | Click Cancel to clear the check boxes. |

23.4.3 MLD Snooping-proxy VLAN Port Role Setting

Click the **Port Role Setting** link in the **Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN** screen to display the screen as shown. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 162 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN > Port Role Setting (Standalone mode)

Port Role Setting VLAN

MLD Snooping-proxy VLAN ID

| Port | Port Role | Leave Mode | Leave Timeout | Fast Leave Timeout |
|------|-----------|------------|---------------|--------------------|
| * | None | Normal | | |
| 1 | None | Normal | 4000 | 4000 |
| 2 | None | Normal | 4000 | 4000 |
| 3 | None | Normal | 4000 | 4000 |
| 4 | None | Normal | 4000 | 4000 |
| 5 | None | Normal | 4000 | 4000 |
| 6 | None | Normal | 4000 | 4000 |
| 7 | None | Normal | 4000 | 4000 |
| 49 | None | Normal | 4000 | 4000 |
| 50 | None | Normal | 4000 | 4000 |
| 51 | None | Normal | 4000 | 4000 |
| 52 | None | Normal | 4000 | 4000 |

Apply Cancel

Figure 163 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN > Port Role Setting (Stacking mode)

Port Role Setting VLAN

MLD Snooping-proxy VLAN ID

SLOT 1

| Port | Port Role | Leave Mode | Leave Timeout | Fast Leave Timeout |
|------|-----------|------------|---------------|--------------------|
| | None | Normal | | |
| 1/1 | None | Normal | 4000 | 4000 |
| 1/2 | None | Normal | 4000 | 4000 |
| 1/3 | None | Normal | 4000 | 4000 |
| 1/4 | None | Normal | 4000 | 4000 |
| 1/5 | None | Normal | 4000 | 4000 |
| 1/6 | None | Normal | 4000 | 4000 |
| 1/7 | None | Normal | 4000 | 4000 |
| 1/8 | None | Normal | 4000 | 4000 |
| 1/9 | None | Normal | 4000 | 4000 |
| 1/10 | None | Normal | 4000 | 4000 |
| 1/11 | None | Normal | 4000 | 4000 |
| 1/12 | None | Normal | 4000 | 4000 |
| 1/13 | None | Normal | 4000 | 4000 |
| 1/14 | None | Normal | 4000 | 4000 |
| 1/15 | None | Normal | 4000 | 4000 |
| 1/16 | None | Normal | 4000 | 4000 |
| 1/17 | None | Normal | 4000 | 4000 |
| 1/18 | None | Normal | 4000 | 4000 |
| 1/19 | None | Normal | 4000 | 4000 |
| 1/20 | None | Normal | 4000 | 4000 |

Apply Cancel

The following table describes the labels in this screen.

Table 107 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > VLAN > Port Role Setting

| LABEL | DESCRIPTION |
|------------------------------------|--|
| MLD Snooping-proxy VLAN ID | Select the VLAN ID for which you want to configure a port's MLD snooping-proxy settings. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Port Role | A port on the Switch can be either a Downstream port or Upstream port in MLD. A downstream port connects to MLD hosts and acts as a multicast router to send MLD queries and listen to the MLD host's Report and Done messages. An upstream port connects to a multicast router and works as a host to send Report or Done messages when receiving queries from a multicast router. Otherwise, select None if the port is not joining a multicast group or does not belong to this VLAN. |
| Leave Mode | Select the leave mode for the specified downstream port(s) in this VLAN. This specifies whether the Switch removes an MLD snooping membership entry (learned on a downstream port) immediately (Immediate) or wait for an MLD report before the leave timeout (Normal) or fast leave timeout (Fast) when an MLD leave message is received on this port from a host. |
| Leave Timeout | Enter the MLD snooping normal leave timeout (in milliseconds) the Switch uses to update the forwarding table for the specified downstream port(s). This defines how many seconds the Switch waits for an MLD report before removing an MLD snooping membership entry (learned on a downstream port) when an MLD Done message is received on this port from a host. |
| Fast Leave Timeout | Enter the fast leave timeout (in milliseconds) for the specified downstream port(s). This defines how many seconds the Switch waits for an MLD report before removing an MLD snooping membership entry (learned on a downstream port) when an MLD Done message is received on this port from a host. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |

23.4.4 MLD Snooping-proxy Filtering

Use this screen to configure the Switch's MLD filtering settings. Click the **MLD Snooping-proxy** link and then the **Filtering** link in the **Advanced Application > Multicast > IPv6 Multicast** screen to display the screen as shown. See [Section 23.1 on page 227](#) for more information on multicasting.

Figure 164 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering (Standalone mode)


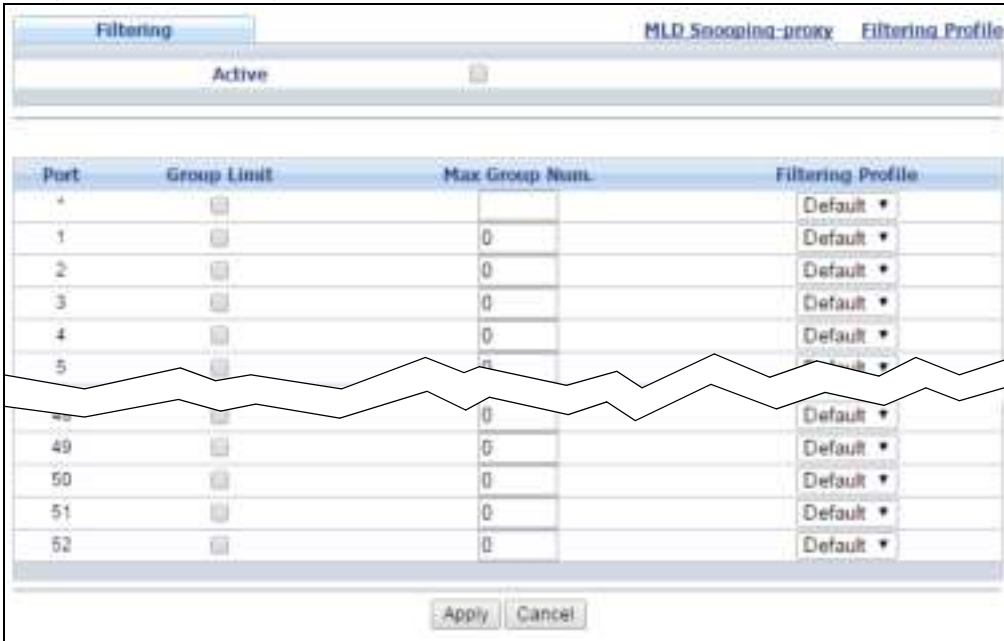


Figure 165 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering (Stacking mode)

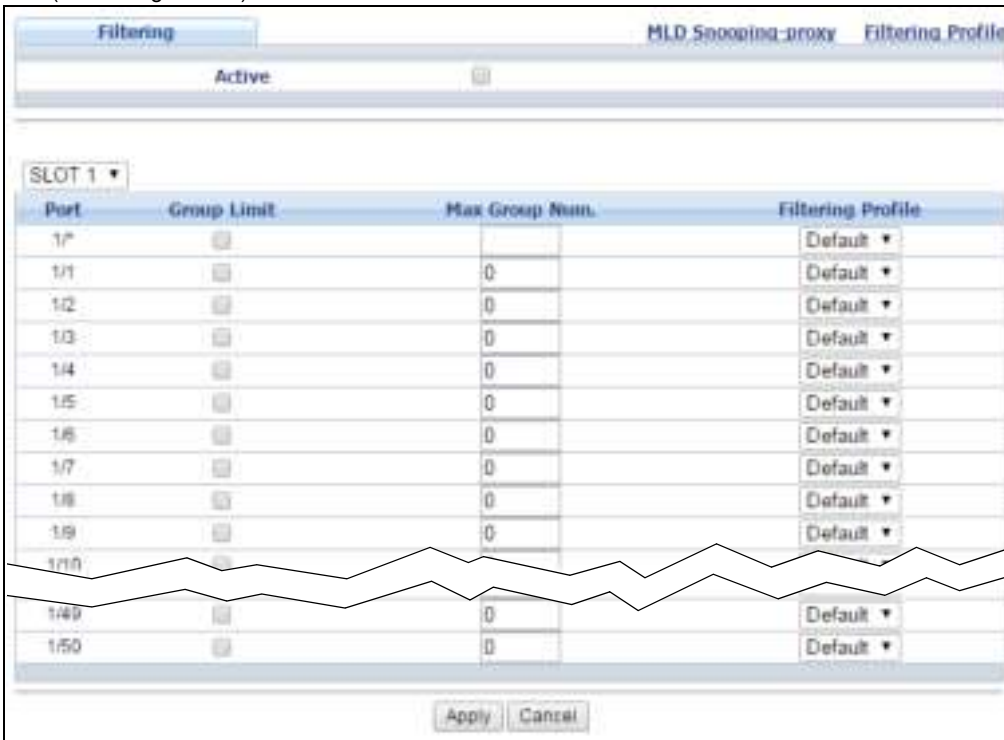

The following table describes the labels in this screen.

Table 108 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Active | Select this option to enable MLD filtering on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Group Limit | Select this option to limit the number of multicast groups this port is allowed to join. |
| Max Group Num. | Enter the number of multicast groups this port is allowed to join. Once a port is registered in the specified number of multicast groups, any new MLD Report message is dropped on this port. |
| Filtering Profile | Select the name of the MLD filtering profile to use for this port. Otherwise, select Default to prohibit the port from joining any multicast group. You can create MLD filtering profiles in the Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering > Filtering Profile screen. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |

23.4.5 MLD Snooping-proxy Filtering Profile

Use this screen to create an MLD filtering profile and set the range of the multicast address(es). Click the **Filtering Profile** link in the **Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering** screen to display the screen as shown.

Figure 166 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering > Filtering Profile

The screenshot shows the 'Filtering Profile' configuration interface. At the top, there is a title bar with 'Filtering Profile' on the left and a 'Filtering' button on the right. Below the title bar is a 'Profile Setup' section containing three input fields: 'Profile Name', 'Start Address', and 'End Address'. Underneath these fields are 'Add' and 'Clear' buttons. Below the 'Profile Setup' section is a table listing existing profiles. The table has three columns: 'Profile Name', 'Start Address', and 'End Address'. There is one row with the profile name 'Default', a 'Start Address' of '0:0:0:0:0:0', and an 'End Address' of '0:0:0:0:0:0'. To the right of the 'End Address' column, there are two small square icons. At the bottom of the screen are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 109 Advanced Application > Multicast > IPv6 Multicast > MLD Snooping-proxy > Filtering > Filtering Profile

| LABEL | DESCRIPTION |
|---------------|--|
| Profile Name | Enter a descriptive name for the profile for identification purposes. To configure additional rule(s) for a profile that you have already added, enter the profile name and specify a different IP multicast address range. |
| Start Address | Type the starting multicast IPv6 address for a range of multicast IPv6 addresses that you want to belong to the MLD filtering profile. |
| End Address | Type the ending multicast IPv6 address for a range of IPv6 addresses that you want to belong to the MLD filtering profile. If you want to add a single multicast IPv6 address, enter it in both the Start Address and End Address fields. |
| Add | Click this to create a new entry. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Profile Name | This field displays the descriptive name of the profile. |
| Start Address | This field displays the start of the multicast IPv6 address range. |
| End Address | This field displays the end of the multicast IPv6 address range. |
| | To delete the profile(s) and all the accompanying rules, select the profile(s) that you want to remove, then click the Delete button. You can select the check box in the table heading row to select all profiles. To delete a rule(s) from a profile, select the rule(s) that you want to remove, then click the Delete button. |
| Delete | Click Delete button to permanently delete the entries you selected. |
| Cancel | Click Cancel to clear the check boxes. |

23.5 MVR Overview


Multicast VLAN Registration (MVR) is designed for applications (such as Media-on-Demand (MoD)) that use multicast traffic across an Ethernet ring-based service provider network.

MVR allows one single multicast VLAN to be shared among different subscriber VLANs on the network. While isolated in different subscriber VLANs, connected devices can subscribe to and unsubscribe from the multicast stream in the multicast VLAN. This improves bandwidth utilization with reduced multicast traffic in the subscriber VLANs and simplifies multicast group management.

MVR only responds to IGMP join and leave control messages from multicast groups that are configured under MVR. Join and leave reports from other multicast groups are managed by IGMP snooping.

The following figure shows a network example. The subscriber VLAN (**1**, **2** and **3**) information is hidden from the streaming media server, **S**. In addition, the multicast VLAN information is only visible to the Switch and **S**.

Figure 167 MVR Network Example

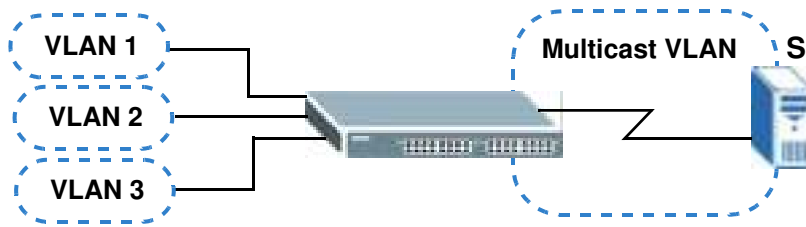

23.5.1 Types of MVR Ports

In MVR, a source port is a port on the Switch that can send and receive multicast traffic in a multicast VLAN while a receiver port can only receive multicast traffic. Once configured, the Switch maintains a forwarding table that matches the multicast stream to the associated multicast group.

23.5.2 MVR Modes

You can set your Switch to operate in either dynamic or compatible mode.

In dynamic mode, the Switch sends IGMP leave and join reports to the other multicast devices (such as multicast routers or servers) in the multicast VLAN. This allows the multicast devices to update the multicast forwarding table to forward or not forward multicast traffic to the receiver ports.

In compatible mode, the Switch does not send any IGMP reports. In this case, you must manually configure the forwarding settings on the multicast devices in the multicast VLAN.

23.5.3 How MVR Works

The following figure shows a multicast television example where a subscriber device (such as a computer) in VLAN 1 receives multicast traffic from the streaming media server, **S**, via the Switch. Multiple subscriber devices can connect through a port configured as the receiver on the Switch.

When the subscriber selects a television channel, computer **A** sends an IGMP report to the Switch to join the appropriate multicast group. If the IGMP report matches one of the configured MVR multicast group addresses on the Switch, an entry is created in the forwarding table on the Switch. This maps the subscriber VLAN to the list of forwarding destinations for the specified multicast traffic.

When the subscriber changes the channel or turns off the computer, an IGMP leave message is sent to the Switch to leave the multicast group. The Switch sends a query to VLAN 1 on the receiver port (in this case, an uplink port on the Switch). If there is another subscriber device connected to this port in the same subscriber VLAN, the receiving port will still be on the list of forwarding destination for the multicast traffic. Otherwise, the Switch removes the receiver port from the forwarding table.

Figure 168 MVR Multicast Television Example



23.6 General MVR Configuration

Use the **MVR** screen to create multicast VLANs and select the receiver port(s) and a source port for each multicast VLAN. Click **Advanced Application > Multicast > MVR** to display the screen as shown next.

Note: You can create up to five multicast VLANs and up to 256 multicast rules on the Switch.

Note: Your Switch automatically creates a static VLAN (with the same VID) when you create a multicast VLAN in this screen.

Figure 169 Advanced Application > Multicast > MVR (Standalone mode)

The screenshot displays the MVR configuration interface. At the top, there are tabs for 'MVR', 'Multicast Setup', and 'Group Configuration'. The 'MVR' tab is active, showing configuration options: 'Active' (checkbox), 'Group Name' (text field), 'Multicast VLAN ID' (text field), '802.1p Priority' (dropdown menu), and 'Mode' (radio buttons for 'Dynamic' and 'Compatible'). Below these fields is a table for configuring ports. The table has five columns: 'Port', 'Source Port', 'Receiver Port', 'None', and 'Tagging'. The 'Port' column lists ports from 1 to 52. The 'Source Port' and 'Receiver Port' columns have radio buttons for each port. The 'None' column has a dropdown menu set to 'None'. The 'Tagging' column has checkboxes. Below the table are 'Add' and 'Cancel' buttons. At the bottom, there is a summary table with columns: 'VLAN', 'Active', 'Name', 'Mode', 'Source Port', 'Receiver Port', and '802.1p'. Below this summary table are 'Delete' and 'Cancel' buttons.

Figure 170 Advanced Application > Multicast > MVR (Stacking mode)

The screenshot displays the MVR configuration page in stacking mode. At the top, there are tabs for 'MVR', 'Multicast Setup', and 'Group Configuration'. The 'MVR' tab is active, showing several configuration fields: 'Active' (checked), 'Group Name' (empty), 'Multicast VLAN ID' (empty), '802.1p Priority' (set to 0), and 'Mode' (radio buttons for 'Dynamic' and 'Compatible', with 'Dynamic' selected). Below these fields is a section for 'SLOT 1' containing a table with the following columns: 'Port', 'Source Port', 'Receiver Port', 'None', and 'Tagging'. The table lists ports from 1/1 to 1/50. Each row has a 'None' dropdown in the 'Receiver Port' column and a 'Tagging' checkbox. At the bottom of the table, there are 'Add' and 'Cancel' buttons. Below the table is a summary table with columns: 'VLAN', 'Active', 'Name', 'Mode', 'Source Port', 'Receiver Port', and '802.1p'. At the very bottom, there are 'Delete' and 'Cancel' buttons.

The following table describes the related labels in this screen.

Table 110 Advanced Application > Multicast > MVR

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Active | Select this check box to enable MVR to allow one single multicast VLAN to be shared among different subscriber VLANs on the network. |
| Group Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. |
| Multicast VLAN ID | Enter the VLAN ID (1 to 4094) of the multicast VLAN. |
| 802.1p Priority | Select a priority level (0-7) with which the Switch replaces the priority in outgoing IGMP or MLD control packets (belonging to this multicast VLAN). |
| Mode | Specify the MVR mode on the Switch. Choices are Dynamic and Compatible . Select Dynamic to send IGMP reports or MLD messages to all MVR source ports in the multicast VLAN. Select Compatible to set the Switch not to send IGMP reports or MLD messages. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |

Table 110 Advanced Application > Multicast > MVR (continued)

| LABEL | DESCRIPTION |
|---------------|--|
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Source Port | Select this option to set this port as the MVR source port that sends and receives multicast traffic. All source ports must belong to a single multicast VLAN. |
| Receiver Port | Select this option to set this port as a receiver port that only receives multicast traffic. |
| None | Select this option to set the port not to participate in MVR. No MVR multicast traffic is sent or received on this port. |
| Tagging | Select this checkbox if you want the port to tag the VLAN ID in all outgoing frames transmitted. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| VLAN | This field displays the multicast VLAN ID. Click on an index number to change the settings. |
| Active | This field displays whether the multicast group is enabled or not. |
| Name | This field displays the descriptive name for this setting. |
| Mode | This field displays the MVR mode. |
| Source Port | This field displays the source port number(s). |
| Receiver Port | This field displays the receiver port number(s). |
| 802.1p | This field displays the priority level. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | To delete a multicast VLAN(s), select the rule(s) that you want to remove, then click the Delete button. |
| Cancel | Click Cancel to clear the check boxes. |

23.6.1 MVR Group Configuration

All source ports and receiver ports belonging to a multicast group can receive multicast data sent to this multicast group.

Use this screen to configure MVR IP multicast group address(es). Click the **Group Configuration** link in the **MVR** screen.

Note: A port can belong to more than one multicast VLAN. However, IP multicast group addresses in different multicast VLANs cannot overlap.

Figure 171 Advanced Application > Multicast > MVR > Group Configuration

The following table describes the labels in this screen.

Table 111 Advanced Application > Multicast > MVR > Group Configuration

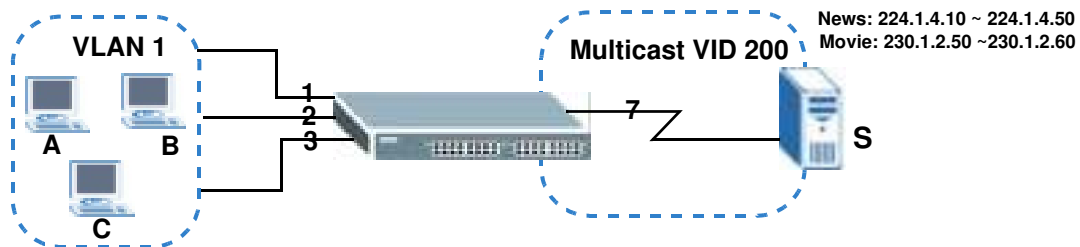
| LABEL | DESCRIPTION |
|-------------------|--|
| Multicast VLAN ID | Select a multicast VLAN ID (that you configured in the MVR screen) from the drop-down list box. |
| Group Name | Enter a descriptive name for identification purposes. |
| Start Address | Enter the starting IP multicast address of the multicast group in dotted decimal notation. Refer to Section 23.1.1 on page 227 for more information on IP multicast addresses. |
| End Address | Enter the ending IP multicast address of the multicast group in dotted decimal notation. Enter the same IP address as the Start Address field if you want to configure only one IP address for a multicast group. Refer to Section 23.1.1 on page 227 for more information on IP multicast addresses. |
| Add | Click this to create a new entry. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| MVLAN | This field displays the multicast VLAN ID. |
| Group Name | This field displays the descriptive name for this setting. |
| Start Address | This field displays the starting IP address of the multicast group. |
| End Address | This field displays the ending IP address of the multicast group. |
| Delete | To delete the profile(s) and all the accompanying rules, select the profile(s) that you want to remove, then click the Delete button. You can select the check box in the table heading row to select all profiles. To delete a rule(s) from a profile, select the rule(s) that you want to remove, then click the Delete button. |

Table 111 Advanced Application > Multicast > MVR > Group Configuration (continued)

| LABEL | DESCRIPTION |
|--------|---|
| Delete | Select the entry(ies) that you want to remove, then click the Delete button to remove the selected entry(ies) from the table. If you delete a multicast VLAN, all multicast groups in this VLAN will also be removed. |
| Cancel | Select Cancel to clear the checkbox(es) in the table. |


23.6.2 MVR Configuration Example

The following figure shows a network example where ports 1, 2 and 3 on the Switch belong to VLAN 1. In addition, port 7 belongs to the multicast group with VID 200 to receive multicast traffic (the **News** and **Movie** channels) from the remote streaming media server, **S**. Computers A, B and C in VLAN 1 are able to receive the traffic.

Figure 172 MVR Configuration Example

To configure the MVR settings on the Switch, create a multicast VLAN in the **MVR** screen and set the receiver and source ports.

Figure 173 MVR Configuration Example

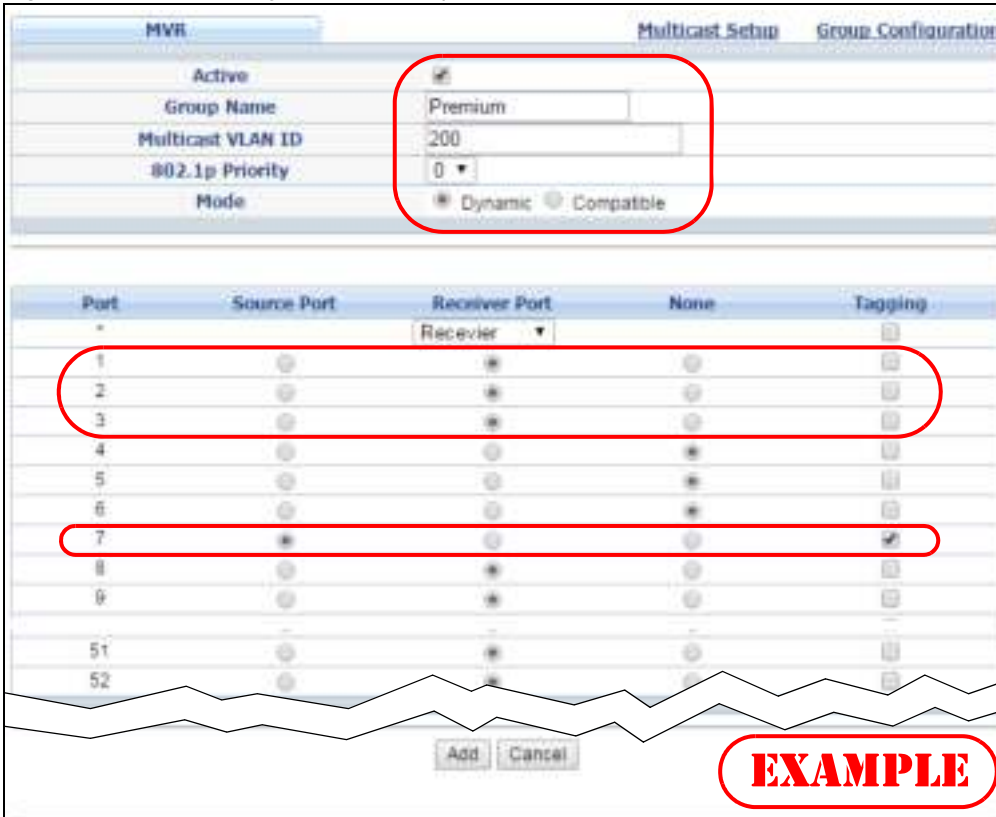

To set the Switch to forward the multicast group traffic to the subscribers, configure multicast group settings in the **Group Configuration** screen. The following figure shows an example where two IPv4 multicast groups (**News** and **Movie**) are configured for the multicast VLAN 200.

Figure 174 MVR Group Configuration Example

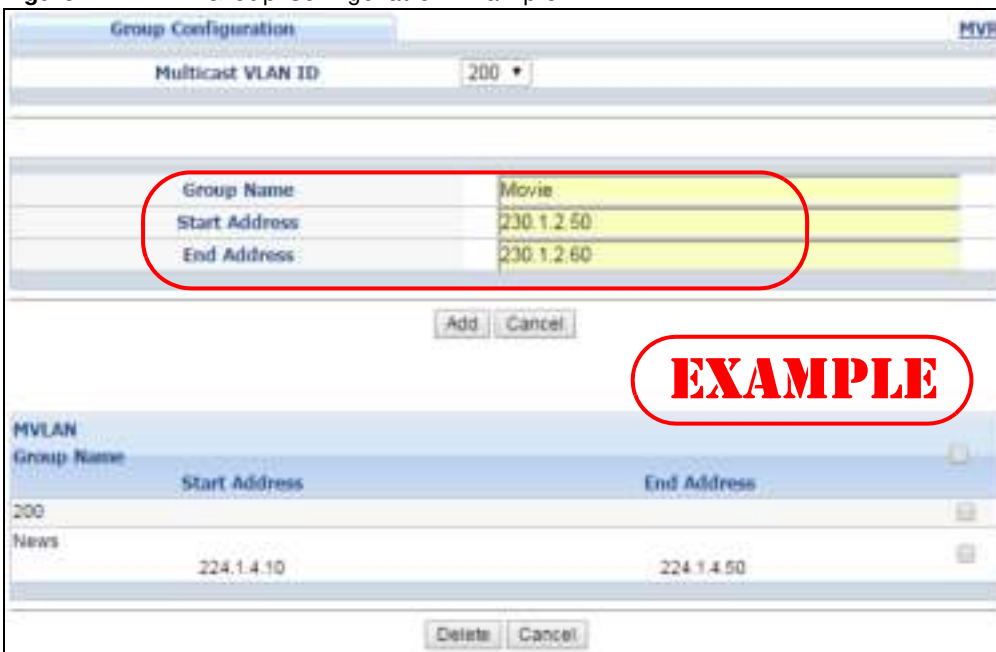


Figure 175 MVR Group Configuration Example

The screenshot displays the MVR Group Configuration interface. At the top, the 'Group Configuration' section includes a 'Multicast VLAN ID' dropdown menu set to '200'. Below this are input fields for 'Group Name', 'Start Address', and 'End Address', with 'Add' and 'Cancel' buttons underneath. A red oval highlights the word 'EXAMPLE' in the center of the interface. The lower section, titled 'MVLAN', contains a table with columns for 'Group Name', 'Start Address', and 'End Address'. The table lists three entries: '200', 'Movie' (with start address 230.1.2.50 and end address 230.1.2.60), and 'News' (with start address 224.1.4.10 and end address 224.1.4.50). A red oval highlights the 'Movie' and 'News' rows. At the bottom of the table are 'Delete' and 'Cancel' buttons.

| Group Name | Start Address | End Address |
|------------|---------------|-------------|
| 200 | | |
| Movie | 230.1.2.50 | 230.1.2.60 |
| News | 224.1.4.10 | 224.1.4.50 |

This chapter describes how to configure authentication, authorization and accounting settings on the Switch.

24.1 Authentication, Authorization and Accounting (AAA)

Authentication is the process of determining who a user is and validating access to the Switch. The Switch can authenticate users who try to log in based on user accounts configured on the Switch itself. The Switch can also use an external authentication server to authenticate a large number of users.

Authorization is the process of determining what a user is allowed to do. Different user accounts may have higher or lower privilege levels associated with them. For example, user A may have the right to create new login accounts on the Switch but user B cannot. The Switch can authorize users based on user accounts configured on the Switch itself or it can use an external server to authorize a large number of users.

Accounting is the process of recording what a user is doing. The Switch can use an external server to track when users log in, log out, execute commands and so on. Accounting can also record system related actions such as boot up and shut down times of the Switch.

The external servers that perform authentication, authorization and accounting functions are known as AAA servers. The Switch supports RADIUS (Remote Authentication Dial-In User Service, see [Section 24.1.2 on page 254](#)) and TACACS+ (Terminal Access Controller Access-Control System Plus, see [Section 24.1.2 on page 254](#)) as external authentication, authorization and accounting servers.

Figure 176 AAA Server



24.1.1 Local User Accounts

By storing user profiles locally on the Switch, your Switch is able to authenticate and authorize users without interacting with a network AAA server. However, there is a limit on the number of users you may authenticate in this way (See [Chapter 48 on page 458](#)).

24.1.2 RADIUS and TACACS+

RADIUS and TACACS+ are security protocols used to authenticate users by means of an external server instead of (or in addition to) an internal device user database that is limited to the memory capacity of the device. In essence, RADIUS and TACACS+ authentication both allow you to validate an unlimited number of users from a central location.

The following table describes some key differences between RADIUS and TACACS+.

Table 112 RADIUS vs TACACS+


| | RADIUS | TACACS+ |
|--------------------|--|---|
| Transport Protocol | UDP (User Datagram Protocol) | TCP (Transmission Control Protocol) |
| Encryption | Encrypts the password sent for authentication. | All communication between the client (the Switch) and the TACACS server is encrypted. |

24.2 AAA Screens

The **AAA** screens allow you to enable authentication, authorization, accounting or all of them on the Switch. First, configure your authentication and accounting server settings (RADIUS, TACACS+ or both) and then set up the authentication priority, activate authorization and configure accounting settings.

Click **Advanced Application > AAA** in the navigation panel to display the screen as shown.

Figure 177 Advanced Application > AAA

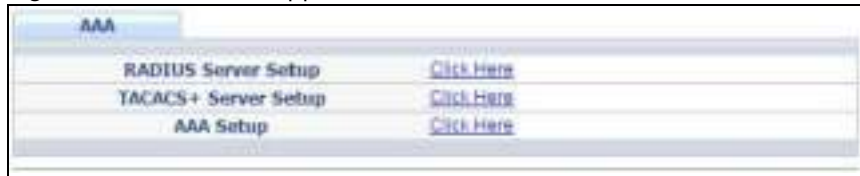

24.2.1 RADIUS Server Setup

Use this screen to configure your RADIUS server settings. See [Section 24.1.2 on page 254](#) for more information on RADIUS servers and [Section 24.3 on page 261](#) for RADIUS attributes utilized by the authentication and accounting features on the Switch. Click on the **RADIUS Server Setup** link in the **AAA** screen to view the screen as shown.

Figure 178 Advanced Application > AAA > RADIUS Server Setup

The following table describes the labels in this screen.

Table 113 Advanced Application > AAA > RADIUS Server Setup

| LABEL | DESCRIPTION |
|-----------------------|--|
| Authentication Server | Use this section to configure your RADIUS authentication settings. |
| Mode | This field only applies if you configure multiple RADIUS servers. Select index-priority and the Switch tries to authenticate with the first configured RADIUS server, if the RADIUS server does not respond then the Switch tries to authenticate with the second RADIUS server. Select round-robin to alternate between the RADIUS servers that it sends authentication requests to. |
| Timeout | Specify the amount of time in seconds that the Switch waits for an authentication request response from the RADIUS server. If you are using index-priority for your authentication and you are using two RADIUS servers then the timeout value is divided between the two RADIUS servers. For example, if you set the timeout value to 30 seconds, then the Switch waits for a response from the first RADIUS server for 15 seconds and then tries the second RADIUS server. |
| Index | This is a read-only number representing a RADIUS server entry. |
| IP Address | Enter the IP address of an external RADIUS server in dotted decimal notation. |
| UDP Port | The default port of a RADIUS server for authentication is 1812 . You need not change this value unless your network administrator instructs you to do so. |
| Shared Secret | Specify a password (up to 32 alphanumeric characters) as the key to be shared between the external RADIUS server and the Switch. This key is not sent over the network. This key must be the same on the external RADIUS server and the Switch. |
| Delete | Check this box if you want to remove an existing RADIUS server entry from the Switch. This entry is deleted when you click Apply . |
| Accounting Server | Use this section to configure your RADIUS accounting server settings. |
| Timeout | Specify the amount of time in seconds that the Switch waits for an accounting request response from the RADIUS accounting server. |
| Index | This is a read-only number representing a RADIUS accounting server entry. |

Table 113 Advanced Application > AAA > RADIUS Server Setup (continued)

| LABEL | DESCRIPTION |
|---------------|--|
| IP Address | Enter the IP address of an external RADIUS accounting server in dotted decimal notation. |
| UDP Port | The default port of a RADIUS accounting server for accounting is 1813 . You need not change this value unless your network administrator instructs you to do so. |
| Shared Secret | Specify a password (up to 32 alphanumeric characters) as the key to be shared between the external RADIUS accounting server and the Switch. This key is not sent over the network. This key must be the same on the external RADIUS accounting server and the Switch. |
| Delete | Check this box if you want to remove an existing RADIUS accounting server entry from the Switch. This entry is deleted when you click Apply . |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

24.2.2 TACACS+ Server Setup

Use this screen to configure your TACACS+ server settings. See [Section 24.1.2 on page 254](#) for more information on TACACS+ servers. Click on the **TACACS+ Server Setup** link in the **Authentication and Accounting** screen to view the screen as shown.

Figure 179 Advanced Application > AAA > TACACS+ Server Setup

The screenshot shows the 'TACACS+ Server Setup' configuration page. It is titled 'TACACS+ Server Setup' and has 'AAA' in the top right corner. The page is divided into two main sections: 'Authentication Server' and 'Accounting Server'. Each section has a 'Mode' dropdown menu set to 'index-priority' and a 'Timeout' field set to '30' seconds. Below each section is a table with columns: 'Index', 'IP Address', 'TCP Port', 'Shared Secret', and 'Delete'. The 'Authentication Server' table has two entries: Index 1 with IP Address 0.0.0.0 and TCP Port 49, and Index 2 with IP Address 0.0.0.0 and TCP Port 49. The 'Accounting Server' table also has two entries: Index 1 with IP Address 0.0.0.0 and TCP Port 49, and Index 2 with IP Address 0.0.0.0 and TCP Port 49. At the bottom of the page, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 114 Advanced Application > AAA > TACACS+ Server Setup

| LABEL | DESCRIPTION |
|-----------------------|---|
| Authentication Server | Use this section to configure your TACACS+ authentication settings. |
| Mode | This field is only valid if you configure multiple TACACS+ servers. Select index-priority and the Switch tries to authenticate with the first configured TACACS+ server, if the TACACS+ server does not respond then the Switch tries to authenticate with the second TACACS+ server. Select round-robin to alternate between the TACACS+ servers that it sends authentication requests to. |
| Timeout | Specify the amount of time in seconds that the Switch waits for an authentication request response from the TACACS+ server. If you are using index-priority for your authentication and you are using two TACACS+ servers then the timeout value is divided between the two TACACS+ servers. For example, if you set the timeout value to 30 seconds, then the Switch waits for a response from the first TACACS+ server for 15 seconds and then tries the second TACACS+ server. |
| Index | This is a read-only number representing a TACACS+ server entry. |
| IP Address | Enter the IP address of an external TACACS+ server in dotted decimal notation. |
| TCP Port | The default port of a TACACS+ server for authentication is 49 . You need not change this value unless your network administrator instructs you to do so. |
| Shared Secret | Specify a password (up to 32 alphanumeric characters) as the key to be shared between the external TACACS+ server and the Switch. This key is not sent over the network. This key must be the same on the external TACACS+ server and the Switch. |
| Delete | Check this box if you want to remove an existing TACACS+ server entry from the Switch. This entry is deleted when you click Apply . |
| Accounting Server | Use this section to configure your TACACS+ accounting settings. |
| Timeout | Specify the amount of time in seconds that the Switch waits for an accounting request response from the TACACS+ server. |
| Index | This is a read-only number representing a TACACS+ accounting server entry. |
| IP Address | Enter the IP address of an external TACACS+ accounting server in dotted decimal notation. |
| TCP Port | The default port of a TACACS+ accounting server is 49 . You need not change this value unless your network administrator instructs you to do so. |
| Shared Secret | Specify a password (up to 32 alphanumeric characters) as the key to be shared between the external TACACS+ accounting server and the Switch. This key is not sent over the network. This key must be the same on the external TACACS+ accounting server and the Switch. |
| Delete | Check this box if you want to remove an existing TACACS+ accounting server entry from the Switch. This entry is deleted when you click Apply . |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

24.2.3 AAA Setup

Use this screen to configure authentication, authorization and accounting settings on the Switch. Click on the **AAA Setup** link in the **AAA** screen to view the screen as shown.

Figure 180 Advanced Application > AAA > AAA Setup

The screenshot shows the AAA Setup configuration page. It is titled 'AAA Setup' and has a 'AAA' link in the top right. The page is divided into three main sections: Authentication, Authorization, and Accounting.

Authentication Section:

| Type | Method 1 | Method 2 | Method 3 |
|------------------|----------|----------|----------|
| Privilege Enable | local | - | - |
| Login | local | - | - |

Authorization Section:

| Type | Active | Console | Method |
|-------|--------------------------|--------------------------|--------|
| Exec | <input type="checkbox"/> | <input type="checkbox"/> | radius |
| Dot1x | <input type="checkbox"/> | - | radius |

Accounting Section:

Update Period: 0 minutes

| Type | Active | Broadcast | Mode | Method | Privilege |
|----------|--------------------------|--------------------------|------------|---------|-----------|
| System | <input type="checkbox"/> | <input type="checkbox"/> | - | radius | - |
| Exec | <input type="checkbox"/> | <input type="checkbox"/> | start-stop | radius | - |
| Dot1x | <input type="checkbox"/> | <input type="checkbox"/> | start-stop | radius | - |
| Commands | <input type="checkbox"/> | <input type="checkbox"/> | stop-only | tacacs+ | 0 |

At the bottom of the page, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 115 Advanced Application > AAA > AAA Setup

| LABEL | DESCRIPTION |
|------------------|---|
| Authentication | Use this section to specify the methods used to authenticate users accessing the Switch. |
| Privilege Enable | <p>These fields specify which database the Switch should use (first, second and third) to authenticate access privilege level for administrator accounts (users for Switch management).</p> <p>Configure the access privilege of accounts via commands (see the Ethernet Switch CLI Reference Guide) for local authentication. The TACACS+ and RADIUS are external servers. Before you specify the priority, make sure you have set up the corresponding database correctly first.</p> <p>You can specify up to three methods for the Switch to authenticate the access privilege level of administrators. The Switch checks the methods in the order you configure them (first Method 1, then Method 2 and finally Method 3). You must configure the settings in the Method 1 field. If you want the Switch to check other sources for access privilege level specify them in Method 2 and Method 3 fields.</p> <p>Select local to have the Switch check the access privilege configured for local authentication.</p> <p>Select radius or tacacs+ to have the Switch check the access privilege via the external servers.</p> |

Table 115 Advanced Application > AAA > AAA Setup (continued)

| LABEL | DESCRIPTION |
|---------------|--|
| Login | <p>These fields specify which database the Switch should use (first, second and third) to authenticate administrator accounts (users for Switch management).</p> <p>Configure the local user accounts in the Access Control > Logins screen. The TACACS+ and RADIUS are external servers. Before you specify the priority, make sure you have set up the corresponding database correctly first.</p> <p>You can specify up to three methods for the Switch to authenticate administrator accounts. The Switch checks the methods in the order you configure them (first Method 1, then Method 2 and finally Method 3). You must configure the settings in the Method 1 field. If you want the Switch to check other sources for administrator accounts, specify them in Method 2 and Method 3 fields.</p> <p>Select local to have the Switch check the administrator accounts configured in the Access Control > Logins screen.</p> <p>Select radius to have the Switch check the administrator accounts configured via the RADIUS Server.</p> <p>Select tacacs+ to have the Switch check the administrator accounts configured via the TACACS+ Server.</p> |
| Authorization | Use this section to configure authorization settings on the Switch. |
| Type | <p>Set whether the Switch provides the following services to a user.</p> <ul style="list-style-type: none"> • Exec: Allow an administrator which logs in the Switch through Telnet or SSH to have different access privilege level assigned via the external server. • Dot1x: Allow an IEEE 802.1x client to have different bandwidth limit or VLAN ID assigned via the external server. |
| Active | Select this to activate authorization for a specified event types. |
| Console | Select this to allow an administrator which logs in the Switch through the console port to have different access privilege level assigned via the external server. |
| Method | <p>Select whether you want to use RADIUS or TACACS+ for authorization of specific types of events.</p> <p>RADIUS is the only method for IEEE 802.1x authorization.</p> |
| Accounting | Use this section to configure accounting settings on the Switch. |
| Update Period | This is the amount of time in minutes before the Switch sends an update to the accounting server. This is only valid if you select the start-stop option for the Exec or Dot1x entries. |
| Type | <p>The Switch supports the following types of events to be sent to the accounting server(s):</p> <ul style="list-style-type: none"> • System - Configure the Switch to send information when the following system events occur: system boots up, system shuts down, system accounting is enabled, system accounting is disabled • Exec - Configure the Switch to send information when an administrator logs in and logs out via the console port, telnet or SSH. • Dot1x - Configure the Switch to send information when an IEEE 802.1x client begins a session (authenticates via the Switch), ends a session as well as interim updates of a session. • Commands - Configure the Switch to send information when commands of specified privilege level and higher are executed on the Switch. |
| Active | Select this to activate accounting for a specified event types. |
| Broadcast | <p>Select this to have the Switch send accounting information to all configured accounting servers at the same time.</p> <p>If you don't select this and you have two accounting servers set up, then the Switch sends information to the first accounting server and if it doesn't get a response from the accounting server then it tries the second accounting server.</p> |

Table 115 Advanced Application > AAA > AAA Setup (continued)

| LABEL | DESCRIPTION |
|-----------|---|
| Mode | <p>The Switch supports two modes of recording login events. Select:</p> <ul style="list-style-type: none"> • start-stop - to have the Switch send information to the accounting server when a user begins a session, during a user's session (if it lasts past the Update Period), and when a user ends a session. • stop-only - to have the Switch send information to the accounting server only when a user ends a session. |
| Method | <p>Select whether you want to use RADIUS or TACACS+ for accounting of specific types of events.</p> <p>TACACS+ is the only method for recording Commands type of event.</p> |
| Privilege | <p>This field is only configurable for Commands type of event. Select the threshold command privilege level for which the Switch should send accounting information. The Switch will send accounting information when commands at the level you specify and higher are executed on the Switch.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |

24.2.4 Vendor Specific Attribute

RFC 2865 standard specifies a method for sending vendor-specific information between a RADIUS server and a network access device (for example, the Switch). A company can create Vendor Specific Attributes (VSAs) to expand the functionality of a RADIUS server.

The Switch supports VSAs that allow you to perform the following actions based on user authentication:

- Limit bandwidth on incoming or outgoing traffic for the port the user connects to.
- Assign account privilege levels (see the CLI Reference Guide for more information on account privilege levels) for the authenticated user.

The VSAs are composed of the following:

- **Vendor-ID**: An identification number assigned to the company by the IANA (Internet Assigned Numbers Authority). ZyXEL's vendor ID is 890.
- **Vendor-Type**: A vendor specified attribute, identifying the setting you want to modify.
- **Vendor-data**: A value you want to assign to the setting.

Note: Refer to the documentation that comes with your RADIUS server on how to configure VSAs for users authenticating via the RADIUS server.

The following table describes the VSAs supported on the Switch. Note that these attributes only work when you enable authorization (see [Section 24.2.3 on page 257](#)).

Table 116 Supported VSAs

| FUNCTION | ATTRIBUTE |
|------------------------------|--|
| Ingress Bandwidth Assignment | Vendor-Id = 890 Vendor-Type = 1 Vendor-data = ingress rate (Kbps in decimal format) |
| Egress Bandwidth Assignment | Vendor-Id = 890 Vendor-Type = 2 Vendor-data = egress rate (Kbps in decimal format) |
| Privilege Assignment | Vendor-ID = 890 Vendor-Type = 3 Vendor-Data = " shell:priv-lvl=N " or Vendor-ID = 9 (CISCO) Vendor-Type = 1 (CISCO-AVPAIR) Vendor-Data = " shell:priv-lvl=N " where N is a privilege level (from 0 to 14). Note: If you set the privilege level of a login account differently on the RADIUS server(s) and the Switch, the user is assigned a privilege level from the database (RADIUS or local) the Switch uses first for user authentication. |

24.2.5 Tunnel Protocol Attribute

You can configure tunnel protocol attributes on the RADIUS server (refer to your RADIUS server documentation) to assign a port on the Switch to a VLAN based on IEEE 802.1x authentication. The port VLAN settings are fixed and untagged. This will also set the port's VID. The following table describes the values you need to configure. Note that these attributes only work when you enable authorization (see [Section 24.2.3 on page 257](#)).

Table 117 Supported Tunnel Protocol Attribute

| FUNCTION | ATTRIBUTE |
|-----------------|---|
| VLAN Assignment | Tunnel-Type = VLAN (13) Tunnel-Medium-Type = 802 (6) Tunnel-Private-Group-ID = VLAN ID Note: You must also create a VLAN with the specified VID on the Switch. Note: The bolded values in this table are fixed values as defined in RFC 3580. |

24.3 Supported RADIUS Attributes

Remote Authentication Dial-In User Service (RADIUS) attributes are data used to define specific authentication, and accounting elements in a user profile, which is stored on the RADIUS server. This section lists the RADIUS attributes supported by the Switch.

Refer to RFC 2865 for more information about RADIUS attributes used for authentication. Refer to RFC 2866 and RFC 2869 for RADIUS attributes used for accounting.

This section lists the attributes used by authentication and accounting functions on the Switch. In cases where the attribute has a specific format associated with it, the format is specified.

24.3.1 Attributes Used for Authentication

The following sections list the attributes sent from the Switch to the RADIUS server when performing authentication.

24.3.1.1 Attributes Used for Authenticating Privilege Access

User-Name

- the format of the User-Name attribute is **\$enab#\$**, where # is the privilege level (1-14)

User-Password

NAS-Identifier

NAS-IP-Address

24.3.1.2 Attributes Used to Login Users

User-Name

User-Password

NAS-Identifier

NAS-IP-Address

24.3.1.3 Attributes Used by the IEEE 802.1x Authentication

User-Name

NAS-Identifier

NAS-IP-Address

NAS-Port

NAS-Port-Type

- This value is set to **Ethernet(15)** on the Switch.

Calling-Station-Id

Frame-MTU

EAP-Message

State

Message-Authenticator

24.3.2 Attributes Used for Accounting

The following sections list the attributes sent from the Switch to the RADIUS server when performing authentication.

24.3.2.1 Attributes Used for Accounting System Events

NAS-IP-Address

NAS-Identifier

Acct-Status-Type

Acct-Session-ID

- The format of Acct-Session-Id is **date+ time+ 8-digit sequential number**, for example, 2007041917210300000001. (date: 2007/04/19, time: 17:21:03, serial number: 00000001)

Acct-Delay-Time

24.3.2.2 Attributes Used for Accounting Exec Events

The attributes are listed in the following table along with the time that they are sent (the difference between Console and Telnet/SSH Exec events is that the Telnet/SSH events utilize the Calling-Station-Id attribute):

Table 118 RADIUS Attributes - Exec Events via Console

| ATTRIBUTE | START | INTERIM-UPDATE | STOP |
|----------------------|-------|----------------|------|
| User-Name | ✓ | ✓ | ✓ |
| NAS-Identifier | ✓ | ✓ | ✓ |
| NAS-IP-Address | ✓ | ✓ | ✓ |
| Service-Type | ✓ | ✓ | ✓ |
| Acct-Status-Type | ✓ | ✓ | ✓ |
| Acct-Delay-Time | ✓ | ✓ | ✓ |
| Acct-Session-Id | ✓ | ✓ | ✓ |
| Acct-Authentic | ✓ | ✓ | ✓ |
| Acct-Session-Time | | ✓ | ✓ |
| Acct-Terminate-Cause | | | ✓ |

Table 119 RADIUS Attributes - Exec Events via Telnet/SSH

| ATTRIBUTE | START | INTERIM-UPDATE | STOP |
|----------------------|-------|----------------|------|
| User-Name | ✓ | ✓ | ✓ |
| NAS-Identifier | ✓ | ✓ | ✓ |
| NAS-IP-Address | ✓ | ✓ | ✓ |
| Service-Type | ✓ | ✓ | ✓ |
| Calling-Station-Id | ✓ | ✓ | ✓ |
| Acct-Status-Type | ✓ | ✓ | ✓ |
| Acct-Delay-Time | ✓ | ✓ | ✓ |
| Acct-Session-Id | ✓ | ✓ | ✓ |
| Acct-Authentic | ✓ | ✓ | ✓ |
| Acct-Session-Time | | ✓ | ✓ |
| Acct-Terminate-Cause | | | ✓ |

24.3.2.3 Attributes Used for Accounting IEEE 802.1x Events

The attributes are listed in the following table along with the time of the session they are sent:

Table 120 RADIUS Attributes - Exec Events via Console

| ATTRIBUTE | START | INTERIM-UPDATE | STOP |
|-----------------------|-------|----------------|------|
| User-Name | ✓ | ✓ | ✓ |
| NAS-IP-Address | ✓ | ✓ | ✓ |
| NAS-Port | ✓ | ✓ | ✓ |
| Class | ✓ | ✓ | ✓ |
| Called-Station-Id | ✓ | ✓ | ✓ |
| Calling-Station-Id | ✓ | ✓ | ✓ |
| NAS-Identifier | ✓ | ✓ | ✓ |
| NAS-Port-Type | ✓ | ✓ | ✓ |
| Acct-Status-Type | ✓ | ✓ | ✓ |
| Acct-Delay-Time | ✓ | ✓ | ✓ |
| Acct-Session-Id | ✓ | ✓ | ✓ |
| Acct-Authentic | ✓ | ✓ | ✓ |
| Acct-Input-Octets | | ✓ | ✓ |
| Acct-Output-Octets | | ✓ | ✓ |
| Acct-Session-Time | | ✓ | ✓ |
| Acct-Input-Packets | | ✓ | ✓ |
| Acct-Output-Packets | | ✓ | ✓ |
| Acct-Terminate-Cause | | | ✓ |
| Acct-Input-Gigawords | | ✓ | ✓ |
| Acct-Output-Gigawords | | ✓ | ✓ |

IP Source Guard

25.1 IP Source Guard Overview

IP source guard uses a binding table to distinguish between authorized and unauthorized DHCP and ARP packets in your network. A binding contains these key attributes:

- MAC address
- VLAN ID
- IP address
- Port number

When the Switch receives a DHCP or ARP packet, it looks up the appropriate MAC address, VLAN ID, IP address, and port number in the binding table. If there is a binding, the Switch forwards the packet. If there is not a binding, the Switch discards the packet.

The Switch builds the binding table by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings).

IP source guard consists of the following features:

- Static bindings. Use this to create static bindings in the binding table.
- DHCP snooping. Use this to filter unauthorized DHCP packets on the network and to build the binding table dynamically.
- ARP inspection. Use this to filter unauthorized ARP packets on the network.

If you want to use dynamic bindings to filter unauthorized ARP packets (typical implementation), you have to enable DHCP snooping before you enable ARP inspection.

25.1.1 What You Can Do

- Use the **IP Source Guard** screen ([Section 25.2 on page 267](#)) to look at the current bindings for DHCP snooping and ARP inspection.
- Use the **IP Source Guard Static Binding** screen ([Section 25.4 on page 269](#)) to manage static bindings for DHCP snooping and ARP inspection.
- Use the **DHCP Snooping** screen ([Section 25.5 on page 271](#)) to look at various statistics about the DHCP snooping database.
- Use this **DHCP Snooping Configure** screen ([Section 25.6 on page 273](#)) to enable DHCP snooping on the Switch (not on specific VLAN), specify the VLAN where the default DHCP server is located, and configure the DHCP snooping database.
- Use the **DHCP Snooping Port Configure** screen ([Section 25.6.1 on page 275](#)) to specify whether ports are trusted or untrusted ports for DHCP snooping.

- Use the **DHCP Snooping VLAN Configure** screen ([Section 25.6.2 on page 277](#)) to enable DHCP snooping on each VLAN and to specify whether or not the Switch adds DHCP relay agent option 82 information to DHCP requests that the Switch relays to a DHCP server for each VLAN.
- Use the **DHCP Snooping VLAN Port Configure** screen ([Section 25.6.3 on page 278](#)) to apply a different DHCP option 82 profile to certain ports in a VLAN.
- Use the **ARP Inspection Status** screen ([Section 25.7 on page 279](#)) to look at the current list of MAC address filters that were created because the Switch identified an unauthorized ARP packet.
- Use the **ARP Inspection VLAN Status** screen ([Section 25.7.1 on page 280](#)) to look at various statistics about ARP packets in each VLAN.
- Use the **ARP Inspection Log Status** screen ([Section 25.7.2 on page 281](#)) to look at log messages that were generated by ARP packets and that have not been sent to the syslog server yet.
- Use the **ARP Inspection Configure** screen ([Section 25.8 on page 282](#)) to enable ARP inspection on the Switch. You can also configure the length of time the Switch stores records of discarded ARP packets and global settings for the ARP inspection log.
- Use the **ARP Inspection Port Configure** screen ([Section 25.8.1 on page 284](#)) to specify whether ports are trusted or untrusted ports for ARP inspection.
- Use the **ARP Inspection VLAN Configure** screen ([Section 25.8.2 on page 286](#)) to enable ARP inspection on each VLAN and to specify when the Switch generates log messages for receiving ARP packets from each VLAN.
- Use the **Advanced Application > IP Source Guard > IPv6 Source Binding Status** screen ([Section 25.10 on page 287](#)) to look at the current IPv6 dynamic and static bindings and to remove dynamic bindings based on IPv6 address and/or IPv6 prefix.
- Use the **Advanced Application > IP Source Guard > IPv6 Static Binding Setup** screen ([Section 25.11 on page 288](#)) to manually create an IPv6 source guard binding table and manage IPv6 static bindings.
- Use the **Advanced Application > IP Source Guard > IPv6 Source Guard Policy Setup** screen ([Section 25.12 on page 290](#)) to have IPv6 source guard forward valid IPv6 addresses and/or IPv6 prefixes that are stored in the binding table and allow or block data traffic from all link-local addresses.
- Use the **Advanced Application > IP Source Guard > IPv6 Source Guard Port Setup** screen ([Section 25.13 on page 291](#)) to apply configured IPv6 source guard policies to the ports you specify.
- Use the **Advanced Application > IP Source Guard > IPv6 Snooping Policy Setup** screen ([Section 25.14 on page 292](#)) to dynamically create an IPv6 source guard binding table using a DHCPv6 snooping policy. A DHCPv6 snooping policy lets the Switch sniff DHCPv6 packets sent from a DHCPv6 server to a DHCPv6 client when it is assigning an IPv6 address.
- Use the **Advanced Application > IP Source Guard > IPv6 Snooping VLAN Setup** screen ([Section 25.15 on page 293](#)) to enable a DHCPv6 snooping policy on a specific VLAN interface.
- Use the **Advanced Application > IP Source Guard > IPv6 DHCP Trust Setup** screen ([Section 25.16 on page 294](#)) to specify which ports are trusted and untrusted for DHCP snooping.

25.1.2 What You Need to Know

The Switch builds the binding table by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings).

IP source guard consists of the following features:

- Static bindings. Use this to create static bindings in the binding table.

- DHCP snooping. Use this to filter unauthorized DHCP packets on the network and to build the binding table dynamically.
- ARP inspection. Use this to filter unauthorized ARP packets on the network.

If you want to use dynamic bindings to filter unauthorized ARP packets (typical implementation), you have to enable DHCP snooping before you enable ARP inspection.

25.2 IP Source Guard

Use this screen to look at the current bindings for DHCP snooping and ARP inspection. Bindings are used by DHCP snooping and ARP inspection to distinguish between authorized and unauthorized packets in the network. The Switch learns the bindings by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings). To open this screen, click **Advanced Application > IP Source Guard**.

Figure 181 IP Source Guard (Standalone mode)



Figure 182 IP Source Guard (Stacking mode)



The following table describes the labels in this screen.

Table 121 IP Source Guard

| LABEL | DESCRIPTION |
|--|--|
| IPv4 Source Guard Setup | Click the link to open screens where you can view and manage static bindings, configure DHCP snooping or ARP inspection and look at various statistics. |
| IPv6 Source Binding Status (Standalone mode) | Click the link to open a screen where you can view the current IPv6 dynamic and static bindings or remove dynamic bindings based on IPv6 address and/or IPv6 prefix. |
| IPv6 Static Binding Setup (Standalone mode) | Click the link to open a screen where you can manually create IPv6 source guard static binding entries. |
| IPv6 Source Guard Policy Setup (Standalone mode) | Click the link to open a screen where you can define policies to have IPv6 source guard forward valid addresses and/or prefixes and allow or block data traffic from all link-local addresses. |

Table 121 IP Source Guard (continued)

| LABEL | DESCRIPTION |
|--|---|
| IPv6 Source Guard Port Setup (Standalone mode) | Click the link to open a screen where you can apply the configured IPv6 source guard policy to a port. |
| IPv6 Snooping Policy Setup (Standalone mode) | Click the link to open a screen where you can set up DHCPv6 snooping policies for the binding table. |
| IPv6 Snooping VLAN Setup (Standalone mode) | Click the link to open a screen where you can enable a DHCPv6 snooping policy on a specific VLAN interface. |
| IPv6 DHCP Trust Setup (Standalone mode) | Click the link to open a screen where you can specify which ports are trusted for DHCPv6 snooping. |

25.3 IPv4 Source Guard Setup

Use this screen to look at the current bindings for DHCP snooping and ARP inspection. Bindings are used by DHCP snooping and ARP inspection to distinguish between authorized and unauthorized packets in the network. The Switch learns the bindings by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings). To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup**.

Figure 183 Advanced Application > IP Source Guard > IPv4 Source Guard Setup

| Index | MAC Address | IP Address | Lease | Type | VID | Port |
|-------|-------------|------------|-------|------|-----|------|
|-------|-------------|------------|-------|------|-----|------|

The following table describes the labels in this screen.

Table 122 Advanced Application > IP Source Guard > IPv4 Source Guard Setup

| LABEL | DESCRIPTION |
|-------------|---|
| Index | This field displays a sequential number for each binding. |
| MAC Address | This field displays the source MAC address in the binding. |
| IP Address | This field displays the IP address assigned to the MAC address in the binding. |
| Lease | This field displays how many days, hours, minutes, and seconds the binding is valid; for example, 2d3h4m5s means the binding is still valid for 2 days, 3 hours, 4 minutes, and 5 seconds. This field displays infinity if the binding is always valid (for example, a static binding). |
| Type | This field displays how the Switch learned the binding. static: This binding was learned from information provided manually by an administrator. dhcp-snooping: This binding was learned by snooping DHCP packets. |
| VID | This field displays the source VLAN ID in the binding. |
| Port | This field displays the port number in the binding. If this field is blank, the binding applies to all ports. |

25.4 IPv4 Source Guard Static Binding

Use this screen to manage static bindings for DHCP snooping and ARP inspection. Static bindings are uniquely identified by the MAC address and VLAN ID. Each MAC address and VLAN ID can only be in one static binding. If you try to create a static binding with the same MAC address and VLAN ID as an existing static binding, the new static binding replaces the original one. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > Static Binding**.

Figure 184 IP Source Guard > IPv4 Source Guard Setup > Static Binding (Standalone mode)

The screenshot shows the configuration interface for IPv4 Source Guard Static Binding in Standalone mode. The title bar reads "IP Source Guard Static Binding" and "IPv4 SG".

ARP Freeze :

Condition: All, Port List, VLAN List. There is an "ARP Freeze" button.

Static Binding :

MAC Address: [Text Field]
 IP Address: [Text Field]
 VLAN: [Text Field]
 Port: [Text Field], Any

Buttons: Add, Cancel, Clear

| Index | MAC Address | IP Address | Lease | Type | VLAN | Port |
|---------------|-------------|------------|-------|------|------|------|
| Delete Cancel | | | | | | |

Figure 185 IP Source Guard > IPv4 Source Guard Setup > Static Binding (Stacking mode)

The screenshot shows the configuration interface for IPv4 Source Guard Static Binding in Stacking mode. The title bar reads "IP Source Guard Static Binding" and "IPv4 SG".

ARP Freeze :

Condition: All, Port List, VLAN List. There is an "ARP Freeze" button.

Static Binding :

MAC Address: [Text Field]
 IP Address: [Text Field]
 VLAN: [Text Field]
 Port: SLOT 1 / [Text Field], Any

Buttons: Add, Cancel, Clear

| Index | MAC Address | IP Address | Lease | Type | VLAN | Port |
|---------------|-------------|------------|-------|------|------|------|
| Delete Cancel | | | | | | |

The following table describes the labels in this screen.

Table 123 IP Source Guard > IPv4 Source Guard Setup > Static Binding

| LABEL | DESCRIPTION |
|------------------------------------|--|
| ARP Freeze | <p>ARP Freeze allows you to automatically create static bindings from the current ARP entries (either dynamically learned or static ARP entries) until the Switch's binding table is full.</p> <p>Note: The ARP learning mode should be set to ARP-Request in the IP Application > ARP Setup > ARP Learning screen before you use the ARP Freeze feature.</p> |
| Condition | <p>All - Select this and click ARP Freeze to have the Switch automatically add all the current ARP entries to the static bindings table.</p> <p>Port List - Select this and enter the number of the port(s) (separated by a comma). In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example.</p> <p>ARP entries learned on the specified port(s) are added to the static bindings table after you click ARP Freeze.</p> <p>VLAN List - Select this and enter the ID number of the VLAN(s) (separated by a comma). ARP entries for the specified VLAN(s) are added to the static bindings table after you click ARP Freeze.</p> |
| Static Binding | |
| MAC Address | Enter the source MAC address in the binding. |
| IP Address | Enter the IP address assigned to the MAC address in the binding. |
| VLAN | Enter the source VLAN ID in the binding. |
| Port | Specify the port(s) in the binding. If this binding has one port, select the first radio button and enter the port number in the field to the right. In stacking mode, the first field is the slot ID and the second field is the port number. If this binding applies to all ports, select Any . |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | Click this to reset the values above based on the last selected static binding or, if not applicable, to clear the fields above. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each binding. Click on an index number to view more details or change the settings. |
| MAC Address | This field displays the source MAC address in the binding. |
| IP Address | This field displays the IP address assigned to the MAC address in the binding. |
| Lease | This field displays how long the binding is valid. |
| Type | <p>This field displays how the Switch learned the binding.</p> <p>static: This binding was learned from information provided manually by an administrator.</p> |
| VLAN | This field displays the source VLAN ID in the binding. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |

Table 123 IP Source Guard > IPv4 Source Guard Setup > Static Binding (continued)

| LABEL | DESCRIPTION |
|--------|---|
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Select the entry(ies) that you want to remove, then click the Delete button to remove the selected entry(ies) from the table. |
| Cancel | Click this to clear the check boxes above. |

25.5 DHCP Snooping

Use this screen to look at various statistics about the DHCP snooping database. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping**.

Figure 186 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping

| DHCP Snooping | | Configure | IPv4 SG |
|---------------------------------|---------------------|-----------|---------|
| Database Status | | | |
| Description | Status | | |
| Agent URL | | | |
| Write delay timer | 300 | seconds | |
| Abort timer | 300 | seconds | |
| Agent running | None | | |
| Delay timer expiry | Not Running | | |
| Abort timer expiry | Not Running | | |
| Last succeeded time | None | | |
| Last failed time | None | | |
| Last failed reason | No failure recorded | | |
| | Times | | |
| Total attempts | 0 | | |
| Startup failures | 0 | | |
| Successful transfers | 0 | | |
| Failed transfers | 0 | | |
| Successful reads | 0 | | |
| Failed reads | 0 | | |
| Successful writes | 0 | | |
| Failed writes | 0 | | |
| Database detail | | | |
| Description | Status | | |
| First successful access | None | | |
| Last ignored bindings counters | | | |
| Binding collisions | 0 | | |
| Invalid interfaces | 0 | | |
| Parse failures | 0 | | |
| Expired leases | 0 | | |
| Unsupported vlns | 0 | | |
| Last ignored time | None | | |
| Total ignored bindings counters | | | |
| Binding collisions | 0 | | |
| Invalid interfaces | 0 | | |
| Parse failures | 0 | | |
| Expired leases | 0 | | |
| Unsupported vlns | 0 | | |

The following table describes the labels in this screen.

Table 124 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping

| LABEL | DESCRIPTION |
|----------------------|--|
| Database Status | |
| | This section displays the current settings for the DHCP snooping database. You can configure them in the DHCP Snooping Configure screen. See Section 25.6 on page 273 . |
| Agent URL | This field displays the location of the DHCP snooping database. |
| Write delay timer | This field displays how long (in seconds) the Switch tries to complete a specific update in the DHCP snooping database before it gives up. |
| Abort timer | This field displays how long (in seconds) the Switch waits to update the DHCP snooping database after the current bindings change. |
| | This section displays information about the current update and the next update of the DHCP snooping database. |
| Agent running | This field displays the status of the current update or access of the DHCP snooping database. none : The Switch is not accessing the DHCP snooping database. read : The Switch is loading dynamic bindings from the DHCP snooping database. write : The Switch is updating the DHCP snooping database. |
| Delay timer expiry | This field displays how much longer (in seconds) the Switch tries to complete the current update before it gives up. It displays Not Running if the Switch is not updating the DHCP snooping database right now. |
| Abort timer expiry | This field displays when (in seconds) the Switch is going to update the DHCP snooping database again. It displays Not Running if the current bindings have not changed since the last update. |
| | This section displays information about the last time the Switch updated the DHCP snooping database. |
| Last succeeded time | This field displays the last time the Switch updated the DHCP snooping database successfully. |
| Last failed time | This field displays the last time the Switch updated the DHCP snooping database unsuccessfully. |
| Last failed reason | This field displays the reason the Switch updated the DHCP snooping database unsuccessfully. |
| | This section displays historical information about the number of times the Switch successfully or unsuccessfully read or updated the DHCP snooping database. |
| Total attempts | This field displays the number of times the Switch has tried to access the DHCP snooping database for any reason. |
| Startup failures | This field displays the number of times the Switch could not create or read the DHCP snooping database when the Switch started up or a new URL is configured for the DHCP snooping database. |
| Successful transfers | This field displays the number of times the Switch read bindings from or updated the bindings in the DHCP snooping database successfully. |
| Failed transfers | This field displays the number of times the Switch was unable to read bindings from or update the bindings in the DHCP snooping database. |
| Successful reads | This field displays the number of times the Switch read bindings from the DHCP snooping database successfully. |
| Failed reads | This field displays the number of times the Switch was unable to read bindings from the DHCP snooping database. |
| Successful writes | This field displays the number of times the Switch updated the bindings in the DHCP snooping database successfully. |

Table 124 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping (continued)

| LABEL | DESCRIPTION |
|---------------------------------|--|
| Failed writes | This field displays the number of times the Switch was unable to update the bindings in the DHCP snooping database. |
| Database detail | |
| First successful access | This field displays the first time the Switch accessed the DHCP snooping database for any reason. |
| Last ignored bindings counters | This section displays the number of times and the reasons the Switch ignored bindings the last time it read bindings from the DHCP binding database. You can clear these counters by restarting the Switch or using CLI commands. See the Ethernet Switch CLI Reference Guide. |
| Binding collisions | This field displays the number of bindings the Switch ignored because the Switch already had a binding with the same MAC address and VLAN ID. |
| Invalid interfaces | This field displays the number of bindings the Switch ignored because the port number was a trusted interface or does not exist anymore. |
| Parse failures | This field displays the number of bindings the Switch ignored because the Switch was unable to understand the binding in the DHCP binding database. |
| Expired leases | This field displays the number of bindings the Switch ignored because the lease time had already expired. |
| Unsupported vlans | This field displays the number of bindings the Switch ignored because the VLAN ID does not exist anymore. |
| Last ignored time | This field displays the last time the Switch ignored any bindings for any reason from the DHCP binding database. |
| Total ignored bindings counters | This section displays the reasons the Switch has ignored bindings any time it read bindings from the DHCP binding database. You can clear these counters by restarting the Switch or using CLI commands. See the Ethernet Switch CLI Reference Guide. |
| Binding collisions | This field displays the number of bindings the Switch has ignored because the Switch already had a binding with the same MAC address and VLAN ID. |
| Invalid interfaces | This field displays the number of bindings the Switch has ignored because the port number was a trusted interface or does not exist anymore. |
| Parse failures | This field displays the number of bindings the Switch has ignored because the Switch was unable to understand the binding in the DHCP binding database. |
| Expired leases | This field displays the number of bindings the Switch has ignored because the lease time had already expired. |
| Unsupported vlans | This field displays the number of bindings the Switch has ignored because the VLAN ID does not exist anymore. |

25.6 DHCP Snooping Configure

Use this screen to enable DHCP snooping on the Switch (not on specific VLAN), specify the VLAN where the default DHCP server is located, and configure the DHCP snooping database. The DHCP snooping database stores the current bindings on a secure, external TFTP server so that they are still available after a restart. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure**.

Figure 187 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure

The following table describes the labels in this screen.

Table 125 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select this to enable DHCP snooping on the Switch. You still have to enable DHCP snooping on specific VLAN and specify trusted ports. Note: The Switch will drop all DHCP requests if you enable DHCP snooping and there are no trusted ports. |
| DHCP Vlan | Select a VLAN ID if you want the Switch to forward DHCP packets to DHCP servers on a specific VLAN. Note: You have to enable DHCP snooping on the DHCP VLAN too. You can select an option 82 profile in the DHCP Snooping VLAN Configure screen (Section 25.6.2 on page 277) to help the DHCP servers distinguish between DHCP requests from different VLAN. Select Disable if you do not want the Switch to forward DHCP packets to a specific VLAN. |
| Database | If Timeout interval is greater than Write delay interval , it is possible that the next update is scheduled to occur before the current update has finished successfully or timed out. In this case, the Switch waits to start the next update until it completes the current one. |
| Agent URL | Enter the location of the DHCP snooping database. The location should be expressed like this: tftp:// { domain name or IP address } / directory, if applicable/ file name ; for example, tftp:// 192.168.10.1/ database.txt . |
| Timeout interval | Enter how long (10-65535 seconds) the Switch tries to complete a specific update in the DHCP snooping database before it gives up. |
| Write delay interval | Enter how long (10-65535 seconds) the Switch waits to update the DHCP snooping database the first time the current bindings change after an update. Once the next update is scheduled, additional changes in current bindings are automatically included in the next update. |

Table 125 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure (continued)

| LABEL | DESCRIPTION |
|-------------------------|--|
| Renew DHCP Snooping URL | <p>Enter the location of a DHCP snooping database, and click Renew if you want the Switch to load it. You can use this to load dynamic bindings from a different DHCP snooping database than the one specified in Agent URL.</p> <p>When the Switch loads dynamic bindings from a DHCP snooping database, it does not discard the current dynamic bindings first. If there is a conflict, the Switch keeps the dynamic binding in volatile memory and updates the Binding collisions counter in the DHCP Snooping screen (Section 25.5 on page 271).</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.6.1 DHCP Snooping Port Configure

Use this screen to specify whether ports are trusted or untrusted ports for DHCP snooping.

Note: The Switch will drop all DHCP requests if you enable DHCP snooping and there are no trusted ports.

You can also specify the maximum number for DHCP packets that each port (trusted or untrusted) can receive each second. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > Port**.

Figure 188 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure> Port (Standalone mode)_

| DHCP Snooping Port Configure | | | Configure |
|------------------------------|----------------------|------------|-----------|
| Port | Server Trusted state | Rate (pps) | |
| * | Untrusted ▼ | | |
| 1 | Untrusted ▼ | 0 | |
| 2 | Untrusted ▼ | 0 | |
| 3 | Untrusted ▼ | 0 | |
| 4 | Untrusted ▼ | 0 | |
| 5 | Untrusted ▼ | 0 | |
| 6 | Untrusted ▼ | 0 | |
| 7 | Untrusted ▼ | 0 | |
| 8 | Untrusted ▼ | 0 | |
| 9 | Untrusted ▼ | 0 | |
| 10 | Untrusted ▼ | 0 | |
| 11 | Untrusted ▼ | 0 | |
| 12 | Untrusted ▼ | 0 | |
| 13 | Untrusted ▼ | 0 | |
| 14 | Untrusted ▼ | 0 | |
| 15 | Untrusted ▼ | 0 | |
| 16 | Untrusted ▼ | 0 | |
| 17 | Untrusted ▼ | 0 | |
| 18 | Untrusted ▼ | 0 | |
| 19 | Untrusted ▼ | 0 | |
| 20 | Untrusted ▼ | 0 | |
| 21 | Untrusted ▼ | 0 | |
| 22 | Untrusted ▼ | 0 | |
| 23 | Untrusted ▼ | 0 | |
| 24 | Untrusted ▼ | 0 | |
| 25 | Untrusted ▼ | 0 | |
| 26 | Untrusted ▼ | 0 | |
| 27 | Untrusted ▼ | 0 | |
| 28 | Untrusted ▼ | 0 | |
| 29 | Untrusted ▼ | 0 | |
| 30 | Untrusted ▼ | 0 | |
| 31 | Untrusted ▼ | 0 | |
| 32 | Untrusted ▼ | 0 | |

Apply Cancel

Figure 189 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure> Port (Stacking mode)

| DHCP Snooping Port Configure | | | Configure |
|------------------------------|----------------------|------------|-----------|
| SLOT 1 ▼ | | | |
| Port | Server Trusted state | Rate (pps) | |
| 1/1 | Untrusted ▼ | | |
| 1/11 | Untrusted ▼ | 0 | |
| 1/12 | Untrusted ▼ | 0 | |
| 1/13 | Untrusted ▼ | 0 | |
| 1/14 | Untrusted ▼ | 0 | |
| 1/15 | Untrusted ▼ | 0 | |
| 1/16 | Untrusted ▼ | 0 | |
| 1/17 | Untrusted ▼ | 0 | |
| 1/18 | Untrusted ▼ | 0 | |
| 1/19 | Untrusted ▼ | 0 | |
| 1/20 | Untrusted ▼ | 0 | |
| 1/21 | Untrusted ▼ | 0 | |
| 1/22 | Untrusted ▼ | 0 | |
| 1/23 | Untrusted ▼ | 0 | |
| 1/24 | Untrusted ▼ | 0 | |
| 1/25 | Untrusted ▼ | 0 | |
| 1/26 | Untrusted ▼ | 0 | |
| 1/27 | Untrusted ▼ | 0 | |
| 1/28 | Untrusted ▼ | 0 | |
| 1/29 | Untrusted ▼ | 0 | |
| 1/30 | Untrusted ▼ | 0 | |
| 1/31 | Untrusted ▼ | 0 | |
| 1/32 | Untrusted ▼ | 0 | |

Apply Cancel

The following table describes the labels in this screen.

Table 126 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > Port

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| Server Trusted state | Select whether this port is a trusted port (Trusted) or an untrusted port (Untrusted). Trusted ports are connected to DHCP servers or other switches, and the Switch discards DHCP packets from trusted ports only if the rate at which DHCP packets arrive is too high. Untrusted ports are connected to subscribers, and the Switch discards DHCP packets from untrusted ports in the following situations: <ul style="list-style-type: none"> • The packet is a DHCP server packet (for example, OFFER, ACK, or NACK). • The source MAC address and source IP address in the packet do not match any of the current bindings. • The packet is a RELEASE or DECLINE packet, and the source MAC address and source port do not match any of the current bindings. • The rate at which DHCP packets arrive is too high. |
| Rate (pps) | Specify the maximum number for DHCP packets (1-2048) that the Switch receives from each port each second. The Switch discards any additional DHCP packets. Enter 0 to disable this limit, which is recommended for trusted ports. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.6.2 DHCP Snooping VLAN Configure

Use this screen to enable DHCP snooping on each VLAN and to specify whether or not the Switch adds DHCP relay agent option 82 information ([Chapter 43 on page 413](#)) to DHCP requests that the Switch relays to a DHCP server for each VLAN. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN**.

Figure 190 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN

| VID | Enabled | Option 82 Profile |
|-----|---------|-------------------|
| * | No | |

The following table describes the labels in this screen.

Table 127 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN

| LABEL | DESCRIPTION |
|-------------------|---|
| Show VLAN | Use this section to specify the VLANs you want to manage in the section below. |
| Start VID | Enter the lowest VLAN ID you want to manage in the section below. |
| End VID | Enter the highest VLAN ID you want to manage in the section below. |
| Apply | Click this to display the specified range of VLANs in the section below. |
| VID | This field displays the VLAN ID of each VLAN in the range specified above. If you configure the * VLAN, the settings are applied to all VLANs. |
| Enabled | Select Yes to enable DHCP snooping on the VLAN. You still have to enable DHCP snooping on the Switch and specify trusted ports. Note: The Switch will drop all DHCP requests if you enable DHCP snooping and there are no trusted ports. |
| Option 82 Profile | Select a pre-defined DHCP option 82 profile that the Switch applies to all ports in the specified VLAN(s). The Switch adds the information (such as slot number, port number, VLAN ID and/or system name) specified in the profile to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN. You can specify the DHCP VLAN in the DHCP Snooping Configure screen (see Section 25.6 on page 273). |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.6.3 DHCP Snooping VLAN Port Configure

Use this screen to apply a different DHCP option 82 profile to certain ports in a VLAN. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN > Port**.

Figure 191 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN > Port

The screenshot shows the 'DHCP Snooping VLAN Configure' interface. At the top, there are input fields for 'VID' and 'Port', and a dropdown menu for 'Option 82 Profile'. Below these fields are three buttons: 'Add', 'Cancel', and 'Clear'. At the bottom of the screen, there is a table with the following columns: 'Index', 'VID', 'Port', 'Profile Name', and 'Delete'. Below the table are two buttons: 'Delete' and 'Cancel'.

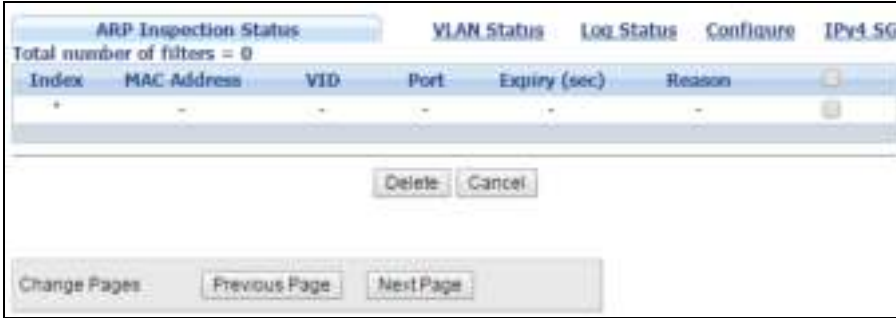
The following table describes the labels in this screen.

Table 128 IP Source Guard > IPv4 Source Guard Setup > DHCP Snooping > Configure > VLAN > Port

| LABEL | DESCRIPTION |
|-------------------|---|
| VID | Enter the ID number of the VLAN you want to configure here. |
| Port | Enter the number of port(s) to which you want to apply the specified DHCP option 82 profile. You can enter multiple ports separated by (no space) comma (,) or hyphen (-) for a range. For example, enter "3-5" for ports 3, 4, and 5. Enter "3,5,7" for ports 3, 5, and 7. In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example. |
| Option 82 Profile | Select a pre-defined DHCP option 82 profile that the Switch applies to the specified port(s) in this VLAN. The Switch adds the information (such as slot number, port number, VLAN ID and/or system name) specified in the profile to DHCP requests that it broadcasts to the DHCP VLAN, if specified, or VLAN. You can specify the DHCP VLAN in the DHCP Snooping Configure screen (see Section 25.6 on page 273). Note: The profile you select here has priority over the one you select in the DHCP Snooping > Configure > VLAN screen. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values above based on the last selected entry or, if not applicable, to clear the fields above. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each entry. Click an index number to change the settings. |
| VID | This field displays the VLAN to which the port(s) belongs. |
| Port | This field displays the port(s) to which the Switch applies the settings. In stacking mode, the first number represents the slot and the second the port number. |
| Profile Name | This field displays the DHCP option 82 profile that the Switch applies to the port(s). |
| Delete | Select the entry(ies) that you want to remove in the Delete column, then click the Delete button to remove the selected entry(ies) from the table. |
| Cancel | Click this to clear the Delete check boxes above. |

25.7 ARP Inspection Status

Use this screen to look at the current list of MAC address filters that were created because the Switch identified an unauthorized ARP packet. When the Switch identifies an unauthorized ARP packet, it automatically creates a MAC address filter to block traffic from the source MAC address and source VLAN ID of the unauthorized ARP packet. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection**.

Figure 192 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection Status

The following table describes the labels in this screen.

Table 129 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection Status

| LABEL | DESCRIPTION |
|-------------------------|--|
| Total number of filters | This field displays the current number of MAC address filters that were created because the Switch identified unauthorized ARP packets. |
| Index | This field displays a sequential number for each MAC address filter. |
| MAC Address | This field displays the source MAC address in the MAC address filter. |
| VID | This field displays the source VLAN ID in the MAC address filter. |
| Port | This field displays the source port of the discarded ARP packet. In stacking mode, the first field is the slot ID and the second field is the port number. |
| Expiry (sec) | This field displays how long (in seconds) the MAC address filter remains in the Switch. You can also delete the record manually (Delete). |
| Reason | This field displays the reason the ARP packet was discarded. MAC+ VLAN: The MAC address and VLAN ID were not in the binding table. IP: The MAC address and VLAN ID were in the binding table, but the IP address was not valid. Port: The MAC address, VLAN ID, and IP address were in the binding table, but the port number was not valid. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click this to remove the selected entries. |
| Cancel | Click this to clear the Delete check boxes above. |
| Change Pages | Click Previous or Next to show the previous/next screen if all status information cannot be seen in one screen. |

25.7.1 ARP Inspection VLAN Status

Use this screen to look at various statistics about ARP packets in each VLAN. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > VLAN Status**.

Figure 193 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > VLAN Status

The following table describes the labels in this screen.

Table 130 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > VLAN Status

| LABEL | DESCRIPTION |
|-----------------|--|
| Show VLAN range | Use this section to specify the VLANs you want to look at in the section below. |
| Enabled VLAN | Select this to look at all the VLANs on which ARP inspection is enabled in the section below. |
| Selected VLAN | Select this to look at all the VLANs in a specific range in the section below. Then, enter the lowest VLAN ID (Start VID) and the highest VLAN ID (End VID) you want to look at. |
| Apply | Click this to display the specified range of VLANs in the section below. |
| VID | This field displays the VLAN ID of each VLAN in the range specified above. |
| Received | This field displays the total number of ARP packets received from the VLAN since the Switch last restarted. |
| Request | This field displays the total number of ARP Request packets received from the VLAN since the Switch last restarted. |
| Reply | This field displays the total number of ARP Reply packets received from the VLAN since the Switch last restarted. |
| Forwarded | This field displays the total number of ARP packets the Switch forwarded for the VLAN since the Switch last restarted. |
| Dropped | This field displays the total number of ARP packets the Switch discarded for the VLAN since the Switch last restarted. |

25.7.2 ARP Inspection Log Status

Use this screen to look at log messages that were generated by ARP packets and that have not been sent to the syslog server yet. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Log Status**.

Figure 194 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Log Status

The following table describes the labels in this screen.

Table 131 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Log Status

| LABEL | DESCRIPTION |
|---------------------------|--|
| Clearing log status table | Click Apply to remove all the log messages that were generated by ARP packets and that have not been sent to the syslog server yet. |
| Total number of logs | This field displays the number of log messages that were generated by ARP packets and that have not been sent to the syslog server yet. If one or more log messages are dropped due to unavailable buffer, there is an entry called overflow with the current number of dropped log messages. |
| Index | This field displays a sequential number for each log message. |
| Port | This field displays the source port of the ARP packet. In stacking mode, the first field is the slot ID and the second field is the port number. |
| VID | This field displays the source VLAN ID of the ARP packet. |
| Sender Mac | This field displays the source MAC address of the ARP packet. |
| Sender IP | This field displays the source IP address of the ARP packet. |
| Num Pkts | This field displays the number of ARP packets that were consolidated into this log message. The Switch consolidates identical log messages generated by ARP packets in the log consolidation interval into one log message. You can configure this interval in the ARP Inspection Configure screen. See Section 25.8 on page 282 . |
| Reason | This field displays the reason the log message was generated. dhcp deny : An ARP packet was discarded because it violated a dynamic binding with the same MAC address and VLAN ID. static deny : An ARP packet was discarded because it violated a static binding with the same MAC address and VLAN ID. deny : An ARP packet was discarded because there were no bindings with the same MAC address and VLAN ID. dhcp permit : An ARP packet was forwarded because it matched a dynamic binding. static permit : An ARP packet was forwarded because it matched a static binding. In the ARP Inspection VLAN Configure screen, you can configure the Switch to generate log messages when ARP packets are discarded or forwarded based on the VLAN ID of the ARP packet. See Section 25.8.2 on page 286 . |
| Time | This field displays when the log message was generated. |

25.8 ARP Inspection Configure

Use this screen to enable ARP inspection on the Switch. You can also configure the length of time the Switch stores records of discarded ARP packets and global settings for the ARP inspection log. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure**.

Figure 195 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure

The following table describes the labels in this screen.

Table 132 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure

| LABEL | DESCRIPTION |
|-------------------|---|
| Active | Select this to enable ARP inspection on the Switch. You still have to enable ARP inspection on specific VLAN and specify trusted ports. |
| Filter Aging Time | |
| Filter aging time | This setting has no effect on existing MAC address filters. Enter how long (1-2147483647 seconds) the MAC address filter remains in the Switch after the Switch identifies an unauthorized ARP packet. The Switch automatically deletes the MAC address filter afterwards. Type 0 if you want the MAC address filter to be permanent. |
| Log Profile | |
| Log buffer size | Enter the maximum number (1-1024) of log messages that were generated by ARP packets and have not been sent to the syslog server yet. Make sure this number is appropriate for the specified Syslog rate and Log interval . If the number of log messages in the Switch exceeds this number, the Switch stops recording log messages and simply starts counting the number of entries that were dropped due to unavailable buffer. Click Clearing log status table in the ARP Inspection Log Status screen to clear the log and reset this counter. See Section 25.7.2 on page 281 . |
| Syslog rate | Type the maximum number of syslog messages the Switch can send to the syslog server in one batch. This number is expressed as a rate because the batch frequency is determined by the Log Interval . You must configure the syslog server (Chapter 50 on page 485) to use this. Enter 0 if you do not want the Switch to send log messages generated by ARP packets to the syslog server. The relationship between Syslog rate and Log interval is illustrated in the following examples: <ul style="list-style-type: none"> 4 invalid ARP packets per second, Syslog rate is 5, Log interval is 1: the Switch sends 4 syslog messages every second. 6 invalid ARP packets per second, Syslog rate is 5, Log interval is 2: the Switch sends 5 syslog messages every 2 seconds. |
| Log interval | Type how often (1-86400 seconds) the Switch sends a batch of syslog messages to the syslog server. Enter 0 if you want the Switch to send syslog messages immediately. See Syslog rate for an example of the relationship between Syslog rate and Log interval . |

Table 132 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.8.1 ARP Inspection Port Configure

Use this screen to specify whether ports are trusted or untrusted ports for ARP inspection. You can also specify the maximum rate at which the Switch receives ARP packets on each untrusted port. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > Port**.

Figure 196 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > Port (Standalone mode)

The screenshot shows the 'ARP Inspection Port Configure' screen. At the top right is a 'Configure' button. Below the title bar is a table with the following columns: 'Port', 'Trusted State', 'Rate (pps)', and 'Limit Burst interval (seconds)'. The table contains 16 rows, with ports 1 through 8 and 49 through 52. All 'Trusted State' values are 'Untrusted'. The 'Rate (pps)' is 15 for all ports, and the 'Limit Burst interval (seconds)' is 1 for all ports. At the bottom of the screen are 'Apply' and 'Cancel' buttons.

| Port | Trusted State | Rate (pps) | Limit Burst interval (seconds) |
|------|---------------|------------|--------------------------------|
| * | Untrusted ▼ | | |
| 1 | Untrusted ▼ | 15 | 1 |
| 2 | Untrusted ▼ | 15 | 1 |
| 3 | Untrusted ▼ | 15 | 1 |
| 4 | Untrusted ▼ | 15 | 1 |
| 5 | Untrusted ▼ | 15 | 1 |
| 6 | Untrusted ▼ | 15 | 1 |
| 7 | Untrusted ▼ | 15 | 1 |
| 8 | Untrusted ▼ | 15 | 1 |
| 49 | Untrusted ▼ | 15 | 1 |
| 50 | Untrusted ▼ | 15 | 1 |
| 51 | Untrusted ▼ | 15 | 1 |
| 52 | Untrusted ▼ | 15 | 1 |

Figure 197 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > Port (Stacking mode)

| ARP Inspection Port Configure | | | |
|-------------------------------|---------------|------------|-----------------------------------|
| SLOT 1 | | | |
| Port | Trusted State | Rate (pps) | Limit Burst interval (seconds) |
| 1/* | Untrusted | | |
| 1/1 | Untrusted | 15 | 1 |
| 1/2 | Untrusted | 15 | 1 |
| 1/3 | Untrusted | 15 | 1 |
| 1/4 | Untrusted | 15 | 1 |
| 1/5 | Untrusted | 15 | 1 |
| 1/49 | Untrusted | 15 | 1 |
| 1/50 | Untrusted | 15 | 1 |

The following table describes the labels in this screen.

Table 133 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > Port

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| Trusted State | Select whether this port is a trusted port (Trusted) or an untrusted port (Untrusted). The Switch does not discard ARP packets on trusted ports for any reason. The Switch discards ARP packets on untrusted ports in the following situations: <ul style="list-style-type: none"> The sender's information in the ARP packet does not match any of the current bindings. The rate at which ARP packets arrive is too high. You can specify the maximum rate at which ARP packets can arrive on untrusted ports. |
| Limit | Rate and Burst Interval settings have no effect on trusted ports. |
| Rate (pps) | Specify the maximum rate (1-2048 packets per second) at which the Switch receives ARP packets from each port. The Switch discards any additional ARP packets. Enter 0 to disable this limit. |
| Burst interval (seconds) | The burst interval is the length of time over which the rate of ARP packets is monitored for each port. For example, if the Rate is 15 pps and the burst interval is 1 second, then the Switch accepts a maximum of 15 ARP packets in every one-second interval. If the burst interval is 5 seconds, then the Switch accepts a maximum of 75 ARP packets in every five-second interval. Enter the length (1-15 seconds) of the burst interval. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.8.2 ARP Inspection VLAN Configure

Use this screen to enable ARP inspection on each VLAN and to specify when the Switch generates log messages for receiving ARP packets from each VLAN. To open this screen, click **Advanced Application > IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > VLAN**.

Figure 198 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > VLAN

The following table describes the labels in this screen.

Table 134 IP Source Guard > IPv4 Source Guard Setup > ARP Inspection > Configure > VLAN

| LABEL | DESCRIPTION |
|-----------|--|
| VLAN | Use this section to specify the VLANs you want to manage in the section below. |
| Start VID | Enter the lowest VLAN ID you want to manage in the section below. |
| End VID | Enter the highest VLAN ID you want to manage in the section below. |
| Apply | Click this to display the specified range of VLANs in the section below. |
| VID | This field displays the VLAN ID of each VLAN in the range specified above. If you configure the * VLAN, the settings are applied to all VLANs. |
| Enabled | Select Yes to enable ARP inspection on the VLAN. Select No to disable ARP inspection on the VLAN. |
| Log | Specify when the Switch generates log messages for receiving ARP packets from the VLAN. None: The Switch does not generate any log messages when it receives an ARP packet from the VLAN. Deny: The Switch generates log messages when it discards an ARP packet from the VLAN. Permit: The Switch generates log messages when it forwards an ARP packet from the VLAN. All: The Switch generates log messages every time it receives an ARP packet from the VLAN. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.9 IPv6 Source Guard Overview

The purpose of IPv6 source guard is to distinguish between authorized and unauthorized users by using a binding table that validates the source of IPv6 traffic. The binding table can be manually created or be learned through Dynamic Host Configuration Protocol version 6 snooping (DHCPv6 snooping). IPv6 source guard can deny IPv6 traffic from an unknown source. The IPv6 source guard binding table includes:

- IPv6 address
- IPv6 prefix
- VLAN ID
- Port number
- MAC address

Enable IPv6 source guard on a port for the Switch to check incoming IPv6 packets on that port. A packet is allowed when it matches any entry in the IPSG binding table. If a user tries to send IPv6 packets to the Switch that do not match an entry in the IPSG binding table, the Switch will drop these packets. The Switch forwards matching traffic normally. The IPv6 source guard related screens are available in standalone mode.

25.10 IPv6 Source Binding Status

Use this screen to look at the current IPv6 dynamic and static bindings and to remove dynamic bindings based on IPv6 address and/or IPv6 prefix. Bindings are used to distinguish between authorized and unauthorized packets in the network. The Switch learns the bindings by snooping DHCP packets (dynamic bindings) and from information provided manually by administrators (static bindings). To open this screen, click **Advanced Application > IP Source Guard > IPv6 Source Binding Status**.

Figure 199 Advanced Application > IP Source Guard > IPv6 Source Binding Status (Standalone mode)



The following table describes the labels in this screen.

Table 135 Advanced Application > IP Source Guard > IPv6 Source Binding Status (Standalone mode)

| LABEL | DESCRIPTION |
|------------------------------|--|
| Clear Dynamic Source Binding | Specify how you want the Switch to remove dynamic IPv6 source binding entries when you click Flush . <ul style="list-style-type: none"> Select All to remove all of the dynamic entries from the IPv6 source binding table. Select IPv6 Address and enter an IPv6 address to remove the dynamic entries snooped with the specified IPv6 address. Select IPv6 Prefix and enter a Prefix address to remove the dynamic entries snooped with the specified Prefix address. |
| Flush | Click this to remove dynamic IPv6 source binding entries according to your selections. |
| Cancel | Click this to reset the values above based or if not applicable, to clear the fields above. |
| Index | This field displays a sequential number for each binding. |
| Source Address | This field displays the source IP address in the binding. If the entry is blank, this field will not be checked in the binding. |
| MAC Address | This field displays the source MAC address in the binding. If the entry is blank, this field will not be checked in the binding. |
| VLAN | This field displays the source VLAN ID in the binding. If the entry is blank, this field will not be checked in the binding. |
| Port | This field displays the port number in the binding. If this field is blank, the binding applies to all ports. |
| Lease | This field displays how many days, hours, minutes, and seconds the binding is valid; for example, 2d3h4m5s means the binding is still valid for 2 days, 3 hours, 4 minutes, and 5 seconds. This field displays infinity if the binding is always valid (for example, a static binding). |
| Type | This field displays how the Switch learned the binding. <p>S: This static binding was learned from information provided manually by an administrator.</p> <p>DH: This dhcp-snooping binding was learned by snooping DHCP packets.</p> |

25.11 IPv6 Static Binding Setup

Use this screen to manually create an IPv6 source guard binding table entry and manage IPv6 static bindings. Static bindings are uniquely identified by the source IPv6 address / prefix. Each source IPv6 address / prefix can only be in one static binding. If you try to create a static binding with the same source IPv6 address / prefix as an existing static binding, the new static binding replaces the original one. To open this screen, click **Advanced Application > IP Source Guard > IPv6 Static Binding Setup**.

Figure 200 Advanced Application > IP Source Guard > IPv6 Static Binding Setup (Standalone mode)

The following table describes the labels in this screen.

Table 136 Advanced Application > IP Source Guard > IPv6 Static Binding Setup (Standalone mode)

| LABEL | DESCRIPTION |
|---------------------|---|
| IPv6 Static Binding | |
| Source Address | Enter the IPv6 address or IPv6 prefix and prefix length in the binding. |
| MAC Address | Enter the source MAC address in the binding. If this binding doesn't check this field, select Any . Note: You cannot choose Any for all three of MAC Address , VLAN and Port . You must fill in at least one. |
| VLAN | Enter the source VLAN ID in the binding. If this binding doesn't check this field, select Any . |
| Port | Specify the port(s) in the binding. If this binding has one port, select the first radio button and enter the port number in the field to the right. If this binding applies to all ports, select Any . |
| Add | Click this to create the specified static binding or to update an existing one. |
| Cancel | Click this to reset the values above based or if not applicable, to clear the fields above. |
| Clear | Click this to clear the fields above. |
| Index | This field displays a sequential number for each binding. |
| Source Address | This field displays the IPv6 address or IPv6 prefix and prefix length in the binding. |
| MAC Address | This field displays the source MAC address in the binding. If the entry is blank, this field will not be checked in the binding. |
| VLAN | This field displays the source VLAN ID in the binding. If the entry is blank, this field will not be checked in the binding. |
| Port | This field displays the port number in the binding. If this field is blank, the binding applies to all ports. |
| Delete | Select an entry checkbox and click Delete to remove the specified entry. |
| Cancel | Click this to clear the Delete check boxes above. |

25.12 IPv6 Source Guard Policy Setup

Use this screen to have IPv6 source guard forward valid IPv6 addresses and/or IPv6 prefixes that are stored in the binding table and allow or block data traffic from all link-local addresses. To open this screen, click **Advanced Application > IP Source Guard > IPv6 Source Guard Policy Setup**.

- If you select **Validate Address** and not **Validate Prefix**, traffic for a binding entry that matches a IPv6 address and VLAN ID, port number, and MAC address will be forwarded. If this binding entry is a IPv6 prefix, the traffic will be denied.
- If you select **Validate Prefix** and not **Validate Address**, traffic for a binding entry that matches a IPv6 prefix and VLAN ID, port number, and MAC address will be forwarded. If this binding entry is a IPv6 address, the traffic will be denied.
- If you select both **Validate Prefix** and **Validate Address** then traffic matching either IPv6 address or prefix will be forwarded.

Figure 201 Advanced Application > IP Source Guard > IPv6 Source Guard Policy Setup (Standalone mode)

The following table describes the labels in this screen.

Table 137 Advanced Application > IP Source Guard > IPv6 Source Guard Policy Setup (Standalone mode)

| LABEL | DESCRIPTION |
|------------------|--|
| Name | Enter a descriptive name for identification purposes for this IPv6 source guard policy. |
| Validate Address | Select Validate Address to have IPv6 source guard forward valid addresses that are stored in the binding table. |
| Validate Prefix | Select Validate Prefix to have IPv6 source guard forward valid prefixes that are stored in the binding table. |
| Link Local | Select Permit to allow data traffic from all link-local addresses; otherwise leave the setting at Deny . A link-local address is an IPv6 unicast address that can be automatically configured on any interface using the link-local prefix FE80::/10 and the interface identifier in the modified EUI-64 format. |
| Add | Click this to create the IPv6 source guard policy or to update an existing one. |
| Cancel | Click this to reset the values above or if not applicable, to clear the fields above. |
| Clear | Click this to clear the fields above. |
| Index | This field displays a sequential number for each policy. |
| Name | This field displays the descriptive name for identification purposes for this IPv6 source guard policy. |
| Validate Address | This field displays the Validate Address status for this IPv6 source guard policy. |

Table 137 Advanced Application > IP Source Guard > IPv6 Source Guard Policy Setup (Standalone mode)

| LABEL | DESCRIPTION |
|-----------------|---|
| Validate Prefix | This field displays the Validate Prefix status for this IPv6 source guard policy. |
| Link Local | This field displays the Link Local traffic status for this IPv6 source guard policy. |
| Delete | Select an entry checkbox and click Delete to remove the specified entry. |
| Cancel | Click this to clear the Delete check boxes above. |

25.13 IPv6 Source Guard Port Setup

Use this screen to apply configured IPv6 source guard policies to ports you specify. Use port * to apply a policy to all ports. To open this screen, click **Advanced Application > IP Source Guard > IPv6 Source Guard Port Setup**.

Figure 202 Advanced Application > IP Source Guard > IPv6 Source Guard Port Setup (Standalone mode)

| Port | Policy Name |
|------|-------------|
| * | |
| 1 | |
| 2 | |
| 3 | |
| 4 | |
| 5 | |
| 6 | |
| 7 | |
| 8 | |
| 9 | |
| 10 | |
| 11 | |
| 12 | |
| 13 | |
| 14 | |
| 15 | |
| 16 | |
| 17 | |
| 18 | |
| 19 | |
| 20 | |
| 21 | |
| 22 | |
| 23 | |
| 24 | |
| 25 | |
| 26 | |
| 27 | |
| 28 | |
| 29 | |
| 30 | |
| 31 | |
| 32 | |
| 33 | |
| 34 | |
| 35 | |
| 36 | |
| 37 | |
| 38 | |
| 39 | |
| 40 | |
| 41 | |
| 42 | |
| 43 | |
| 44 | |
| 45 | |
| 46 | |
| 47 | |
| 48 | |
| 49 | |
| 50 | |
| 51 | |
| 52 | |

The following table describes the labels in this screen.

Table 138 Advanced Application > IP Source Guard > IPv6 Source Guard Port Setup (Standalone mode)

| LABEL | DESCRIPTION |
|-------------|---|
| Port | This field displays the port number. If you configure the * port, the settings are applied to all of the ports. |
| Policy Name | Select an IPv6 source guard policy that the Switch will apply to this port. |

Table 138 Advanced Application > IP Source Guard > IPv6 Source Guard Port Setup (Standalone mode)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.14 IPv6 Snooping Policy Setup

Use this screen to dynamically create an IPv6 source guard binding table using a DHCPv6 snooping policy. A DHCPv6 snooping policy lets the Switch sniff DHCPv6 packets sent from a DHCPv6 server to a DHCPv6 client when it is assigning an IPv6 address. When a DHCPv6 client successfully gets a valid IPv6 address, DHCPv6 snooping builds the binding table dynamically. To open this screen, click **Advanced Application > IP Source Guard > IPv6 Snooping Policy Setup**.

Note: If you do not select **Protocol** and **Prefix Glean**, then the Switch cannot perform DHCPv6 snooping.

Figure 203 Advanced Application > IP Source Guard > IPv6 Snooping Policy Setup (Standalone mode)

The following table describes the labels in this screen.

Table 139 Advanced Application > IP Source Guard > IPv6 Snooping Policy Setup (Standalone mode)

| LABEL | DESCRIPTION |
|---------------------|--|
| Name | Enter a descriptive name for identification purposes for this IPv6 snooping policy. |
| Protocol | Select DHCP to let the Switch sniff DHCPv6 packets sent from a DHCPv6 server to a DHCPv6 client. |
| Prefix Glean | Select this to learn the IPv6 prefix and length from DHCPv6 sniffed packets. |
| Limit Address Count | This is the number of IPv6 addresses and prefixes learned using the IPv6 snooping policy. Note: The maximum limit address count is the maximum size of the IPv6 source guard binding table. At the time of writing, it is 50 for the GS2210 Switch series. See the product datasheet for the latest specifications. |
| Add | Click this to create the IPv6 source guard policy or to update an existing one. |
| Cancel | Click this to reset the values above or if not applicable, to clear the fields above. |

Table 139 Advanced Application > IP Source Guard > IPv6 Snooping Policy Setup (Standalone mode)

| LABEL | DESCRIPTION |
|---------------------|---|
| Clear | Click this to clear the fields above. |
| Index | This field displays a sequential number for each IPv6 snooping policy. |
| Name | This field displays the descriptive name for identification purposes for this IPv6 source guard policy. |
| Protocol | This field displays the protocols learned from DHCPv6 sniffed packets. |
| Prefix Glean | This field displays the IPv6 prefixes learned from DHCPv6 sniffed packets. |
| Limit Address Count | This field displays the the number of IPv6 addresses and prefixes learned using the IPv6 snooping policy. |
| Delete | Select an entry checkbox and click Delete to remove the specified entry. |
| Cancel | Click this to clear the Delete check boxes above. |

25.15 IPv6 Snooping VLAN Setup

Use this screen to enable a DHCPv6 snooping policy on a specific VLAN interface. To open this screen, click **Advanced Application > IP Source Guard > IPv6 Snooping VLAN Setup**.

Figure 204 Advanced Application > IP Source Guard > IPv6 Snooping VLAN Setup (Standalone mode)

The following table describes the labels in this screen.

Table 140 Advanced Application > IP Source Guard > IPv6 Snooping VLAN Setup (Standalone mode)

| LABEL | DESCRIPTION |
|-----------|---|
| Interface | Select the VLAN interface to apply the selected DHCPv6 snooping policy. |
| Policy | Select the IPv6 snooping policy to apply to this VLAN interface. |
| Add | Click this to create the IPv6 source guard policy or to update an existing one. |
| Cancel | Click this to reset the values above or if not applicable, to clear the fields above. |
| Clear | Click this to clear the fields above. |
| Index | This field displays a sequential number for each binding. |
| Interface | This field displays the VLAN interface. |
| Policy | This field displays the DHCPv6 snooping policy. |

Table 140 Advanced Application > IP Source Guard > IPv6 Snooping VLAN Setup (Standalone mode)

| LABEL | DESCRIPTION |
|--------|---|
| Delete | Select an entry checkbox and click Delete to remove the specified entry. |
| Cancel | Click this to clear the Delete check boxes above. |

25.16 IPv6 DHCP Trust Setup

Use this screen to specify which ports are trusted for DHCPv6 snooping. To open this screen, click **Advanced Application > IP Source Guard > IPv6 DHCP Trust Setup**.

Note: DHCPv6 solicit packets are sent from a DHCPv6 client to a DHCPv6 server. Reply packets from a DHCPv6 server connected to an untrusted port are discarded.

Use port * to have all ports be **Untrusted** or **Trusted**.

Figure 205 Advanced Application > IP Source Guard > IPv6 DHCP Trust Setup (Standalone mode)

The screenshot shows the 'DHCP Trust' configuration window. At the top, there is a 'Trust Setting' section with an 'Active' checkbox. Below it is the 'Port Setting' section, which contains a table with two columns: 'Port' and 'Trusted State'. The table lists ports 1 through 9, 48 through 52, and a '*' entry. All 'Trusted State' entries are set to 'Untrusted'. At the bottom of the window, there are 'Apply' and 'Cancel' buttons.

| Port | Trusted State |
|------|---------------|
| * | Untrusted ▼ |
| 1 | Untrusted ▼ |
| 2 | Untrusted ▼ |
| 3 | Untrusted ▼ |
| 4 | Untrusted ▼ |
| 5 | Untrusted ▼ |
| 6 | Untrusted ▼ |
| 7 | Untrusted ▼ |
| 8 | Untrusted ▼ |
| 9 | Untrusted ▼ |
| 48 | Untrusted ▼ |
| 49 | Untrusted ▼ |
| 50 | Untrusted ▼ |
| 51 | Untrusted ▼ |
| 52 | Untrusted ▼ |

The following table describes the labels in this screen.

Table 141 Advanced Application > IP Source Guard > IPv6 DHCP Trust Setup (Standalone mode)

| LABEL | DESCRIPTION |
|---------------|--|
| Active | Select this to specify whether ports are trusted or untrusted ports for DHCP snooping. If you do not select this then IPv6 DHCP Trust is not used and all ports are automatically trusted. |
| Port | This field displays the port number. If you configure the * port, the settings are applied to all of the ports. |
| Trusted state | Select whether this port is a trusted port (Trusted) or an untrusted port (Untrusted). Trusted ports are connected to DHCPv6 servers or other switches. Untrusted ports are connected to subscribers, and the Switch discards DHCPv6 packets from untrusted ports in the following situations: <ul style="list-style-type: none"> The packet is a DHCPv6 server packet (for example, ADVERTISE, REPLY, or RELAY-REPLY). The source MAC address and source IP address in the packet do not match any of the current bindings. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

25.17 Technical Reference

This section provides technical background information on the topics discussed in this chapter.

25.17.1 DHCP Snooping Overview

Use DHCP snooping to filter unauthorized DHCP packets on the network and to build the binding table dynamically. This can prevent clients from getting IP addresses from unauthorized DHCP servers.

25.17.1.1 Trusted vs. Untrusted Ports

Every port is either a trusted port or an untrusted port for DHCP snooping. This setting is independent of the trusted/untrusted setting for ARP inspection. You can also specify the maximum number for DHCP packets that each port (trusted or untrusted) can receive each second.

Trusted ports are connected to DHCP servers or other switches. The Switch discards DHCP packets from trusted ports only if the rate at which DHCP packets arrive is too high. The Switch learns dynamic bindings from trusted ports.

Note: The Switch will drop all DHCP requests if you enable DHCP snooping and there are no trusted ports.

Untrusted ports are connected to subscribers. The Switch discards DHCP packets from untrusted ports in the following situations:

- The packet is a DHCP server packet (for example, OFFER, ACK, or NACK).

- The source MAC address and source IP address in the packet do not match any of the current bindings.
- The packet is a RELEASE or DECLINE packet, and the source MAC address and source port do not match any of the current bindings.
- The rate at which DHCP packets arrive is too high.

25.17.1.2 DHCP Snooping Database

The Switch stores the binding table in volatile memory. If the Switch restarts, it loads static bindings from permanent memory but loses the dynamic bindings, in which case the devices in the network have to send DHCP requests again. As a result, it is recommended you configure the DHCP snooping database.

The DHCP snooping database maintains the dynamic bindings for DHCP snooping and ARP inspection in a file on an external TFTP server. If you set up the DHCP snooping database, the Switch can reload the dynamic bindings from the DHCP snooping database after the Switch restarts.

You can configure the name and location of the file on the external TFTP server. The file has the following format:

Figure 206 DHCP Snooping Database File Format

```
<initial-checksum>
TYPE DHCP-SNOOPING
VERSION 1
BEGIN
<binding-1> <checksum-1>
<binding-2> <checksum-1-2>
...
...
<binding-n> <checksum-1-2-...-n>
END
```

The <initial-checksum> helps distinguish between the bindings in the latest update and the bindings from previous updates. Each binding consists of 72 bytes, a space, and another checksum that is used to validate the binding when it is read. If the calculated checksum is not equal to the checksum in the file, that binding and all others after it are ignored.

25.17.1.3 DHCP Relay Option 82 Information

The Switch can add information to DHCP requests that it does not discard. This provides the DHCP server more information about the source of the requests. The Switch can add the following information:

- Slot ID (1 byte), port ID (1 byte), and source VLAN ID (2 bytes)
- System name (up to 32 bytes)

This information is stored in an Agent Information field in the option 82 field of the DHCP headers of client DHCP request frames. See [Chapter 43 on page 413](#) for more information about DHCP relay option 82.

When the DHCP server responds, the Switch removes the information in the Agent Information field before forwarding the response to the original source.

You can configure this setting for each source VLAN. This setting is independent of the DHCP relay settings ([Chapter 43 on page 413](#)).

25.17.1.4 Configuring DHCP Snooping


Follow these steps to configure DHCP snooping on the Switch.

- 1 Enable DHCP snooping on the Switch.
- 2 Enable DHCP snooping on each VLAN, and configure DHCP relay option 82.
- 3 Configure trusted and untrusted ports, and specify the maximum number of DHCP packets that each port can receive per second.
- 4 Configure static bindings.

25.17.2 ARP Inspection Overview

Use ARP inspection to filter unauthorized ARP packets on the network. This can prevent many kinds of man-in-the-middle attacks, such as the one in the following example.

Figure 207 Example: Man-in-the-middle Attack

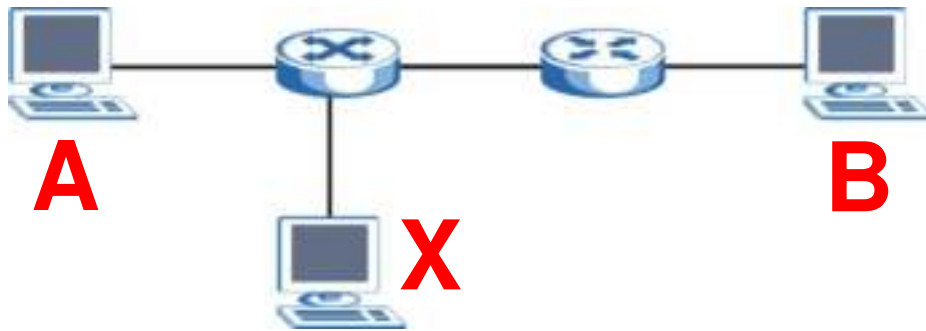

In this example, computer **B** tries to establish a connection with computer **A**. Computer **X** is in the same broadcast domain as computer **A** and intercepts the ARP request for computer **A**. Then, computer **X** does the following things:

- It pretends to be computer **A** and responds to computer **B**.
- It pretends to be computer **B** and sends a message to computer **A**.

As a result, all the communication between computer **A** and computer **B** passes through computer **X**. Computer **X** can read and alter the information passed between them.

25.17.2.1 ARP Inspection and MAC Address Filters

When the Switch identifies an unauthorized ARP packet, it automatically creates a MAC address filter to block traffic from the source MAC address and source VLAN ID of the unauthorized ARP packet. You can configure how long the MAC address filter remains in the Switch.

These MAC address filters are different than regular MAC address filters ([Chapter 10 on page 130](#)).

- They are stored only in volatile memory.

- They do not use the same space in memory that regular MAC address filters use.
- They appear only in the **ARP Inspection** screens and commands, not in the **MAC Address Filter** screens and commands.

25.17.2.2 Trusted vs. Untrusted Ports

Every port is either a trusted port or an untrusted port for ARP inspection. This setting is independent of the trusted/untrusted setting for DHCP snooping. You can also specify the maximum rate at which the Switch receives ARP packets on untrusted ports.

The Switch does not discard ARP packets on trusted ports for any reason.

The Switch discards ARP packets on untrusted ports in the following situations:

- The sender's information in the ARP packet does not match any of the current bindings.
- The rate at which ARP packets arrive is too high.

25.17.2.3 Syslog

The Switch can send syslog messages to the specified syslog server ([Chapter 50 on page 485](#)) when it forwards or discards ARP packets. The Switch can consolidate log messages and send log messages in batches to make this mechanism more efficient.

25.17.2.4 Configuring ARP Inspection

Follow these steps to configure ARP inspection on the Switch.

- 1 Configure DHCP snooping. See [Section 25.17.1.4 on page 297](#).

Note: It is recommended you enable DHCP snooping at least one day before you enable ARP inspection so that the Switch has enough time to build the binding table.

- 2 Enable ARP inspection on each VLAN.
- 3 Configure trusted and untrusted ports, and specify the maximum number of ARP packets that each port can receive per second.


Loop Guard

This chapter shows you how to configure the Switch to guard against loops on the edge of your network.

26.1 Loop Guard Overview

Loop guard allows you to configure the Switch to shut down a port if it detects that packets sent out on that port loop back to the Switch. While you can use Spanning Tree Protocol (STP) to prevent loops in the core of your network. STP cannot prevent loops that occur on the edge of your network.

Figure 208 Loop Guard vs STP

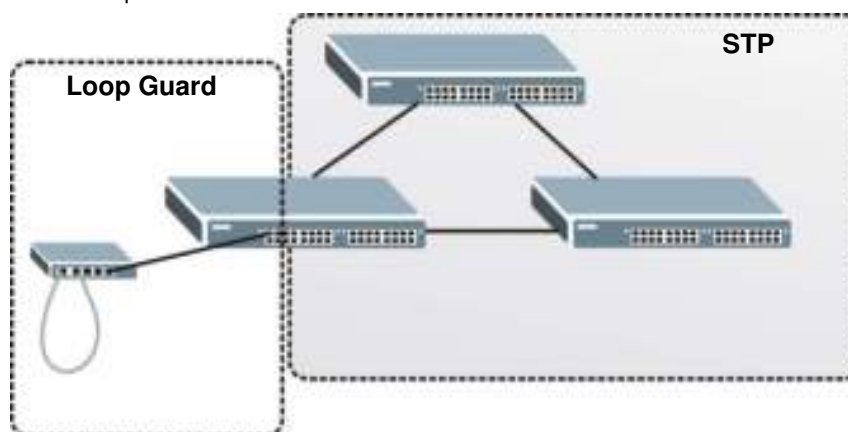


Loop guard is designed to handle loop problems on the edge of your network. This can occur when a port is connected to a Switch that is in a loop state. Loop state occurs as a result of human error. It happens when two ports on a switch are connected with the same cable. When a switch in loop state sends out broadcast messages the messages loop back to the switch and are re-broadcast again and again causing a broadcast storm.

If a switch (not in loop state) connects to a switch in loop state, then it will be affected by the switch in loop state in the following way:


- It will receive broadcast messages sent out from the switch in loop state.
- It will receive its own broadcast messages that it sends out as they loop back. It will then re-broadcast those messages again.

The following figure shows port **N** on switch **A** connected to switch **B**. Switch **B** is in loop state. When broadcast or multicast packets leave port **N** and reach switch **B**, they are sent back to port **N** on **A** as they are rebroadcast from **B**.

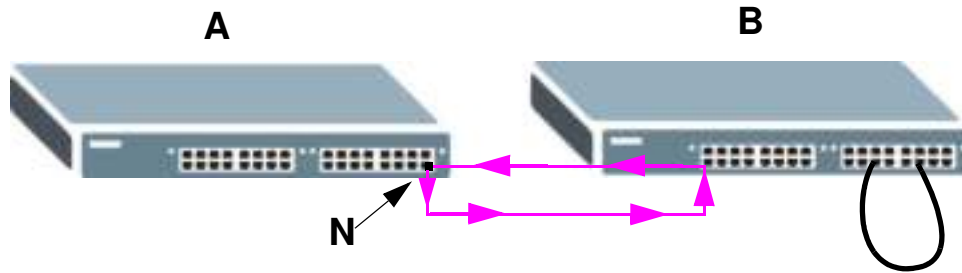
Figure 209 Switch in Loop State

The loop guard feature checks to see if a loop guard enabled port is connected to a switch in loop state. This is accomplished by periodically sending a probe packet and seeing if the packet returns on the same port. If this is the case, the Switch will shut down the port connected to the switch in loop state.

The following figure shows a loop guard enabled port **N** on switch **A** sending a probe packet **P** to switch **B**. Since switch **B** is in loop state, the probe packet **P** returns to port **N** on **A**. The Switch then shuts down port **N** to ensure that the rest of the network is not affected by the switch in loop state.

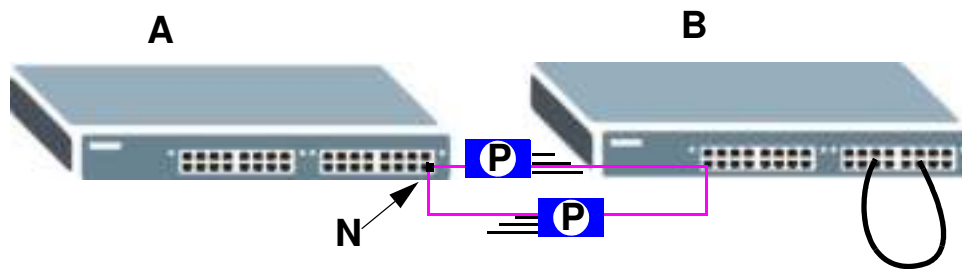Figure 210 Loop Guard - Probe Packet

The Switch also shuts down port **N** if the probe packet returns to switch **A** on any other port. In other words loop guard also protects against standard network loops. The following figure illustrates three switches forming a loop. A sample path of the loop guard probe packet is also shown. In this example, the probe packet is sent from port **N** and returns on another port. As long as loop guard is enabled on port **N**. The Switch will shut down port **N** if it detects that the probe packet has returned to the Switch.

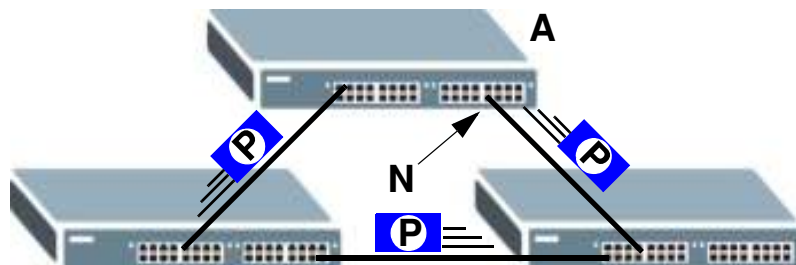Figure 211 Loop Guard - Network Loop

Note: After resolving the loop problem on your network you can re-activate the disabled port via the web configurator (see [Section 6.6 on page 69](#)) or via commands (see the Ethernet Switch CLI Reference Guide).

26.2 Loop Guard Setup

Click **Advanced Application > Loop Guard** in the navigation panel to display the screen as shown.

Note: The loop guard feature can not be enabled on the ports that have Spanning Tree Protocol (RSTP, MRSTP or MSTP) enabled.

Figure 212 Advanced Application > Loop Guard (Standalone mode)

| Port | Active |
|------|--------------------------|
| * | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> |
| ... | ... |
| 48 | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> |

Figure 213 Advanced Application > Loop Guard (Stacking mode)

| Port | Active |
|------|--------------------------|
| 1/1 | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> |
| ... | ... |
| 1/48 | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> |

The following table describes the labels in this screen.

Table 142 Advanced Application > Loop Guard

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | <p>Select this option to enable loop guard on the Switch.</p> <p>The Switch generates syslog, internal log messages as well as SNMP traps when it shuts down a port via the loop guard feature.</p> |
| Slot (Stacking mode) | <p>This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack.</p> |
| Port (Standalone or stacking mode) | <p>This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number.</p> |
| * | <p>Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Active | <p>Select this check box to enable the loop guard feature on this port. The Switch sends probe packets from this port to check if the Switch it is connected to is in loop state. If the Switch that this port is connected is in loop state the Switch will shut down this port.</p> <p>Clear this check box to disable the loop guard feature.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |

VLAN Mapping

This chapter shows you how to configure VLAN mapping on the Switch.

27.1 VLAN Mapping Overview

With VLAN mapping enabled, the Switch can map the VLAN ID and priority level of packets received from a private network to those used in the service provider's network.


The Switch checks incoming traffic from the switch ports (non-management ports) against the VLAN mapping table first, the MAC learning table and then the VLAN table before forwarding them through the Gigabit uplink port. When VLAN mapping is enabled, the Switch discards the tagged packets that do not match an entry in the VLAN mapping table. If the incoming packets are untagged, the Switch adds a PVID based on the VLAN setting.

Note: You can not enable VLAN mapping and VLAN stacking at the same time.

27.1.1 VLAN Mapping Example

In the following example figure, packets that carry VLAN ID 12 and are received on port 3 match a pre-configured VLAN mapping rule. The Switch translates the VLAN ID from 12 into 123 before forwarding the packets. Any packets carrying a VLAN tag other than 12 (such as 10) and received on port 3 will be dropped.

Figure 214 VLAN mapping example

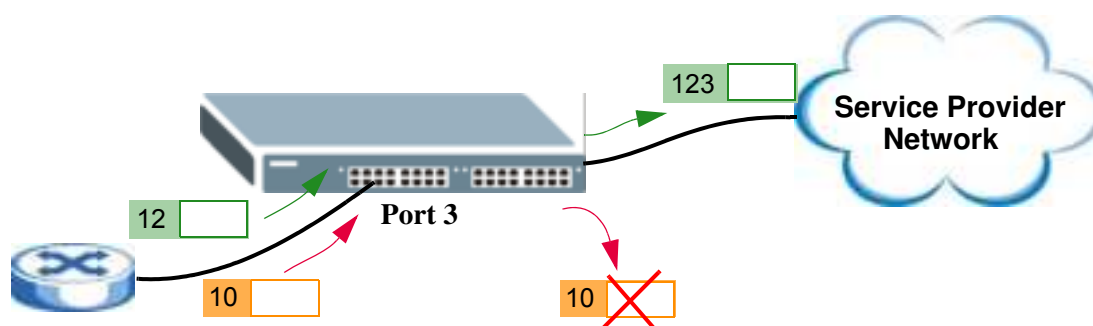

27.2 Enabling VLAN Mapping

Click **Advanced Application** and then **VLAN Mapping** in the navigation panel to display the screen as shown.

Figure 215 VLAN Mapping (Standalone mode)

The screenshot shows the 'VLAN Mapping' configuration window. At the top, there is a title bar with 'VLAN Mapping' and 'VLAN Mapping Configure'. Below the title bar, there is an 'Active' checkbox which is checked. A table follows with two columns: 'Port' and 'Active'. The 'Port' column contains a row with an asterisk (*) followed by ports 1 through 9, and then a break in the table followed by ports 51 and 52. The 'Active' column contains checkboxes for each row. At the bottom of the window, there are 'Apply' and 'Cancel' buttons.

Figure 216 VLAN Mapping (Stacking mode)

The screenshot shows the 'VLAN Mapping' configuration window in stacking mode. At the top, there is a title bar with 'VLAN Mapping' and 'VLAN Mapping Configure'. Below the title bar, there is an 'Active' checkbox which is checked. A dropdown menu labeled 'SLOT 1' is visible. Below the dropdown, there is a table with two columns: 'Port' and 'Active'. The 'Port' column contains a row with an asterisk (*) followed by ports 1/1 through 1/50. The 'Active' column contains checkboxes for each row. At the bottom of the window, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 143 VLAN Mapping

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Active | Select this option to enable VLAN mapping on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Changes in this row are copied to all the ports as soon as you make them. |

Table 143 VLAN Mapping (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Active | Select this check box to enable the VLAN mapping feature on this port. Clear this check box to disable the VLAN mapping feature. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

27.3 Configuring VLAN Mapping

Click the **VLAN Mapping Configure** link in the **VLAN Mapping** screen to display the screen as shown. Use this screen to enable and edit the VLAN mapping rule(s).

Figure 217 VLAN Mapping Configuration (Standalone mode)

The screenshot shows the 'VLAN Mapping Configure' web page in standalone mode. It features a configuration form with the following fields: 'Active' (checkbox), 'Name' (text input), 'Port' (text input), 'VID' (text input), 'Translated VID' (text input), and 'Priority' (dropdown menu set to '0'). Below the form are 'Add' and 'Cancel' buttons. Underneath is a table with columns: Index, Active, Name, Port, VID, Translated VID, and Priority. Below the table are 'Delete' and 'Cancel' buttons.

Figure 218 VLAN Mapping Configuration (Stacking mode)

The screenshot shows the 'VLAN Mapping Configure' web page in stacking mode. It features a configuration form with the following fields: 'Active' (checkbox), 'Name' (text input), 'Port' (dropdown menu showing '1'), 'VID' (text input), 'Translated VID' (text input), and 'Priority' (dropdown menu set to '0'). Below the form are 'Add' and 'Cancel' buttons. Underneath is a table with columns: Index, Active, Name, Port, VID, Translated VID, and Priority. Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 144 VLAN Mapping Configuration

| LABEL | DESCRIPTION |
|----------------|--|
| Active | Check this box to activate this rule. |
| Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. |
| Port | Type a port to be included in this rule. For stacking mode, the first field is the slot ID, the second field is the port number. |
| VID | Enter a VLAN ID from 1 to 4094. This is the VLAN tag carried in the packets and will be translated into the VID you specified in the Translated VID field. |
| Translated VID | Enter a VLAN ID (from 1 to 4094) into which the customer VID carried in the packets will be translated. |
| Priority | Select a priority level (from 0 to 7). This is the priority level that replaces the customer priority level in the tagged packets or adds to the untagged packets. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Index | This is the number of the VLAN mapping entry in the table. Click on an index number to change the settings. |
| Active | This shows whether this entry is activated or not. |
| Name | This is the descriptive name for this rule. |
| Port | This is the port number to which this rule is applied. In stacking mode, the first number represents the slot and the second the port number. |
| VID | This is the customer VLAN ID in the incoming packets. |
| Translated VID | This is the VLAN ID that replaces the customer VLAN ID in the tagged packets. |
| Priority | This is the priority level that replaces the customer priority level in the tagged packets. |
| Delete | Check the rule(s) that you want to remove in the Delete column and then click the Delete button. |
| Cancel | Click Cancel to clear the Delete check boxes. |


Layer 2 Protocol Tunneling

This chapter shows you how to configure layer-2 protocol tunneling on the Switch.

28.1 Layer 2 Protocol Tunneling Overview

Layer-2 protocol tunneling (L2PT) is used on the service provider's edge devices. L2PT allows edge switches (**1** and **2** in the following figure) to tunnel layer-2 STP (Spanning Tree Protocol), CDP (Cisco Discovery Protocol) and VTP (VLAN Trunking Protocol) packets between customer switches (**A**, **B** and **C** in the following figure) connected through the service provider's network. The edge switch encapsulates layer-2 protocol packets with a specific MAC address before sending them across the service provider's network to other edge switches.


Figure 219 Layer-2 Protocol Tunneling Network Scenario

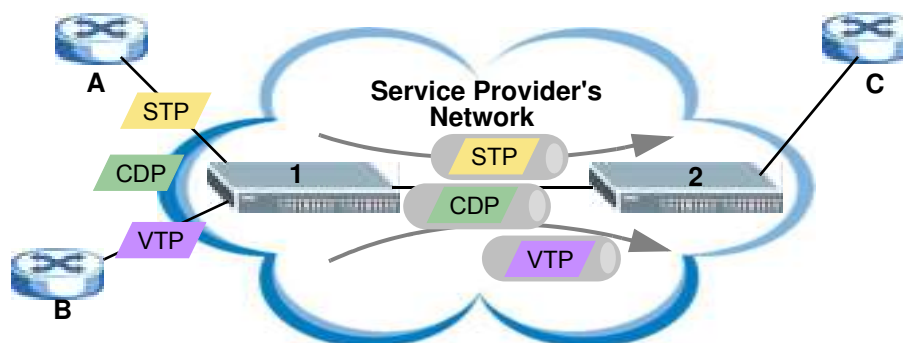

In the following example, if you enable L2PT for STP, you can have switches **A**, **B**, **C** and **D** in the same spanning tree, even though switch **A** is not directly connected to switches **B**, **C** and **D**. Topology change information can be propagated throughout the service provider's network.

To emulate a point-to-point topology between two customer switches at different sites, such as **A** and **B**, you can enable protocol tunneling on edge switches **1** and **2** for PAgP (Port Aggregation Protocol), LACP or UDLD (UniDirectional Link Detection).

Figure 220 L2PT Network Example

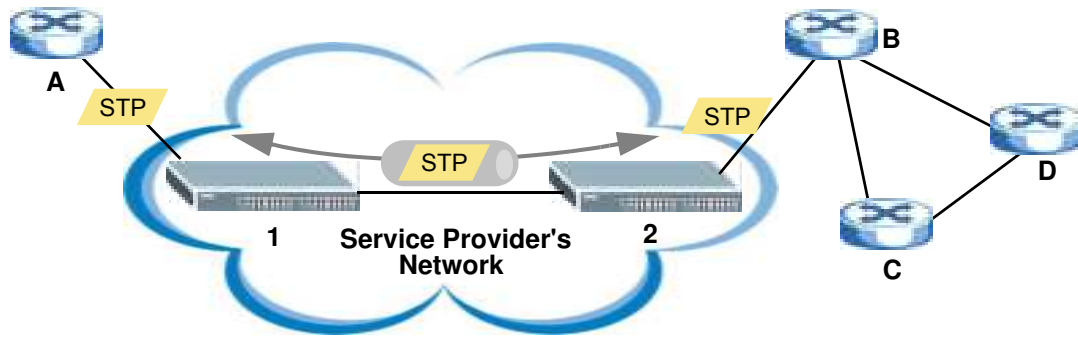

28.1.1 Layer-2 Protocol Tunneling Mode

Each port can have two layer-2 protocol tunneling modes, **Access** and **Tunnel**.

- The **Access** port is an ingress port on the service provider's edge device (1 or 2 in [Figure 220 on page 308](#)) and connected to a customer switch (A or B). Incoming layer-2 protocol packets received on an access port are encapsulated and forwarded to the tunnel ports.
- The **Tunnel** port is an egress port at the edge of the service provider's network and connected to another service provider's switch. Incoming encapsulated layer-2 protocol packets received on a tunnel port are decapsulated and sent to an access port.

28.2 Configuring Layer 2 Protocol Tunneling

Click **Advanced Application** > **Layer 2 Protocol Tunneling** in the navigation panel to display the screen as shown.

Figure 221 Advanced Application > Layer 2 Protocol Tunneling (Standalone mode)

| Port | CDP | STP | VTP | Point to Point | | | Mode |
|------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|----------|
| | | | | PAGP | LACP | UDLD | |
| * | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| ... | | | | | | | |
| 46 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 47 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 48 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 51 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 52 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |

Figure 222 Advanced Application > Layer 2 Protocol Tunneling (Stacking mode)

| Port | CDP | STP | VTP | Point to Point | | | Mode |
|------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|----------|
| | | | | PAGP | LACP | UDLD | |
| * | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| ... | | | | | | | |
| 1/49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |
| 1/50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | Access ▼ |

The following table describes the labels in this screen.

Table 145 Advanced Application > Layer 2 Protocol Tunneling

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this to enable layer-2 protocol tunneling on the Switch. |
| Destination MAC Address | <p>Specify an MAC address with which the Switch uses to encapsulate the layer-2 protocol packets by replacing the destination MAC address in the packets.</p> <p>Note: The MAC address can be either a unicast MAC address or multicast MAC address. If you use a unicast MAC address, make sure the MAC address does not exist in the address table of a switch on the service provider's network.</p> <p>Note: All the edge switches in the service provider's network should be set to use the same MAC address for encapsulation.</p> |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | <p>Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| CDP | Select this option to have the Switch tunnel CDP (Cisco Discovery Protocol) packets so that other Cisco devices can be discovered through the service provider's network. |
| STP | Select this option to have the Switch tunnel STP (Spanning Tree Protocol) packets so that STP can run properly across the service provider's network and spanning trees can be set up based on bridge information from all (local and remote) networks. |
| VTP | Select this option to have the Switch tunnel VTP (VLAN Trunking Protocol) packets so that all customer switches can use consistent VLAN configuration through the service provider's network. |
| Point to Point | <p>The Switch supports PAgP (Port Aggregation Protocol), LACP (Link Aggregation Control Protocol) and UDLD (UniDirectional Link Detection) tunneling for a point-to-point topology.</p> <p>Both PAgP and UDLD are Cisco's proprietary data link layer protocols. PAgP is similar to LACP and used to set up a logical aggregation of Ethernet ports automatically. UDLD is to determine the link's physical status and detect a unidirectional link.</p> |
| PAGP | Select this option to have the Switch send PAgP packets to a peer to automatically negotiate and build a logical port aggregation. |
| LACP | Select this option to have the Switch send LACP packets to a peer to dynamically creates and manages trunk groups. |
| UDLD | Select this option to have the Switch send UDLD packets to a peer's port it connected to monitor the physical status of a link. |
| Mode | <p>Select Access to have the Switch encapsulate the incoming layer-2 protocol packets and forward them to the tunnel port(s). Select Access for ingress ports at the edge of the service provider's network.</p> <p>Note: You can enable L2PT services for STP, LACP, VTP, CDP, UDLD, and PAGP on the access port(s) only.</p> <p>Select Tunnel for egress ports at the edge of the service provider's network. The Switch decapsulates the encapsulated layer-2 protocol packets received on a tunnel port by changing the destination MAC address to the original one, and then forward them to an access port. If the service(s) is not enabled on an access port, the protocol packets are dropped.</p> |

Table 145 Advanced Application > Layer 2 Protocol Tunneling (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |


This chapter shows you how to configure sFlow to have the Switch monitor traffic in a network and send information to an sFlow collector for analysis.

29.1 sFlow Overview

sFlow (RFC 3176) is a standard technology for monitoring switched networks. An sFlow agent embedded on a switch or router gets sample data and packet statistics from traffic forwarded through its ports. The sFlow agent then creates sFlow data and sends it to an sFlow collector. The sFlow collector is a server that collects and analyzes sFlow datagram. An sFlow datagram includes packet header, input and output interface, sampling process parameters and forwarding information.

sFlow minimizes impact on CPU load of the Switch as it analyzes sample data only. sFlow can continuously monitor network traffic and create reports for network performance analysis and troubleshooting. For example, you can use it to know which IP address or which type of traffic caused network congestion.

Figure 223 sFlow Application

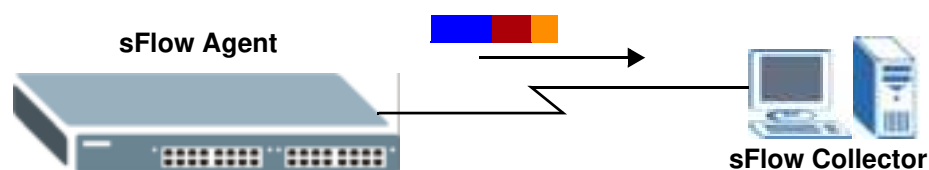

29.2 sFlow Port Configuration

Click **Advanced Application** > **sFlow** in the navigation panel to display the screen as shown.

Figure 224 Advanced Application > sFlow (Standalone mode)

The screenshot shows the sFlow configuration page in Standalone mode. At the top, there is a section for the overall sFlow status, including an 'Active' checkbox and 'Apply' and 'Cancel' buttons. Below this is a table with the following columns: Port, Active, Sample-rate, poll-interval, and Collector Address. The table contains 52 rows, with the first 8 rows and the last 5 rows visible. The 'Active' column has checkboxes, and the 'Sample-rate' and 'poll-interval' columns have values of 32768 and 120 respectively. The 'Collector Address' column is empty. At the bottom, there are 'Apply' and 'Cancel' buttons.

| Port | Active | Sample-rate | poll-interval | Collector Address |
|------|--------------------------|-------------|---------------|-------------------|
| * | <input type="checkbox"/> | | | |
| 1 | <input type="checkbox"/> | 32768 | 120 | |
| 2 | <input type="checkbox"/> | 32768 | 120 | |
| 3 | <input type="checkbox"/> | 32768 | 120 | |
| 4 | <input type="checkbox"/> | 32768 | 120 | |
| 5 | <input type="checkbox"/> | 32768 | 120 | |
| 6 | <input type="checkbox"/> | 32768 | 120 | |
| 7 | <input type="checkbox"/> | 32768 | 120 | |
| 8 | <input type="checkbox"/> | 32768 | 120 | |
| ... | | | | |
| 46 | <input type="checkbox"/> | 32768 | 120 | |
| 47 | <input type="checkbox"/> | 32768 | 120 | |
| 48 | <input type="checkbox"/> | 32768 | 120 | |
| 49 | <input type="checkbox"/> | 32768 | 120 | |
| 50 | <input type="checkbox"/> | 32768 | 120 | |
| 51 | <input type="checkbox"/> | 32768 | 120 | |
| 52 | <input type="checkbox"/> | 32768 | 120 | |

Figure 225 Advanced Application > sFlow (Stacking mode)

The screenshot shows the sFlow configuration page in Stacking mode. At the top, there is a section for the overall sFlow status, including an 'Active' checkbox and 'Apply' and 'Cancel' buttons. Below this is a dropdown menu labeled 'SLOT 1' with a downward arrow. Underneath is a table with the following columns: Port, Active, Sample-rate, poll-interval, and Collector Address. The table contains 150 rows, with the first 6 rows and the last 3 rows visible. The 'Active' column has checkboxes, and the 'Sample-rate' and 'poll-interval' columns have values of 32768 and 120 respectively. The 'Collector Address' column is empty. At the bottom, there are 'Apply' and 'Cancel' buttons.

| Port | Active | Sample-rate | poll-interval | Collector Address |
|------|--------------------------|-------------|---------------|-------------------|
| 1* | <input type="checkbox"/> | | | |
| 1/1 | <input type="checkbox"/> | 32768 | 120 | |
| 1/2 | <input type="checkbox"/> | 32768 | 120 | |
| 1/3 | <input type="checkbox"/> | 32768 | 120 | |
| 1/4 | <input type="checkbox"/> | 32768 | 120 | |
| 1/5 | <input type="checkbox"/> | 32768 | 120 | |
| 1/6 | <input type="checkbox"/> | 32768 | 120 | |
| ... | | | | |
| 1/48 | <input type="checkbox"/> | 32768 | 120 | |
| 1/49 | <input type="checkbox"/> | 32768 | 120 | |
| 1/50 | <input type="checkbox"/> | 32768 | 120 | |

The following table describes the labels in this screen.

Table 146 Advanced Application > sFlow

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this to enable the sFlow agent on the Switch. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this to allow the Switch to monitor traffic on this port and generate and send sFlow datagram to the specified collector. |
| Sample-rate | Enter a number (N) from 256 to 65535. The Switch captures every one out of N packets for this port and creates sFlow datagram. |
| poll-interval | Specify a time interval (from 20 to 120 in seconds) the Switch waits before sending the sFlow datagram and packet counters for this port to the collector. |
| Collector Address | Enter the IP address of the sFlow collector. Note: You must have the sFlow collector already configured in the sFlow > Collector screen. The sFlow collector does not need to be in the same subnet as the Switch, but it must be accessible from the Switch. Note: Configure UDP port 6343 (the default) on a NAT router to allow port forwarding if the collector is behind a NAT router. Configure a firewall rule for UDP port 6343 (the default) to allow incoming traffic if the collector is behind a firewall. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

29.2.1 sFlow Collector Configuration

Click the **Collector** link in the **sFlow** screen to display the screen as shown. You can configure up to four sFlow collectors in this screen. You may want to configure more than one collector if the traffic load to be monitored is more than one collector can manage.

Figure 226 Advanced Application > sFlow > Collector

The following table describes the labels in this screen.

Table 147 Advanced Application > sFlow > Collector

| LABEL | DESCRIPTION |
|-------------------|--|
| Collector Address | Enter the IP address of the sFlow collector. |
| UDP Port | Enter a UDP port number the Switch uses to send sFlow datagram to the collector. If you change the port here, make sure you change it on the collector, too. The default port is 6343. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays the index number of this entry. Click on an index number to change the settings. |
| Collector Address | This field displays IP address of the sFlow collector. |
| UDP Port | This field displays port number the Switch uses to send sFlow datagram to the collector. |
| Delete | Check the rule(s) that you want to remove in the Delete column and then click the Delete button. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

This chapter describes how the Switch gives a PPPoE termination server additional information that the server can use to identify and authenticate a PPPoE client.

30.1 PPPoE Intermediate Agent Overview

A PPPoE Intermediate Agent (PPPoE IA) is deployed between a PPPoE server and PPPoE clients. It helps the PPPoE server identify and authenticate clients by adding subscriber line specific information to PPPoE discovery packets from clients on a per-port or per-port-per-VLAN basis before forwarding them to the PPPoE server.



30.1.1 PPPoE Intermediate Agent Tag Format

If the PPPoE Intermediate Agent is enabled, the Switch adds a vendor-specific tag to PADI (PPPoE Active Discovery Initialization) and PADR (PPPoE Active Discovery Request) packets from PPPoE clients. This tag is defined in RFC 2516 and has the following format for this feature.

Table 148 PPPoE Intermediate Agent Vendor-specific Tag Format

| | | | | |
|----------------------|---------|-------|----|----|
| Tag_Type (0x0105) | Tag_Len | Value | i1 | i2 |
|----------------------|---------|-------|----|----|

The Tag_Type is 0x0105 for vendor-specific tags, as defined in RFC 2516. The Tag_Len indicates the length of Value, i1 and i2. The Value is the 32-bit number 0x00000DE9, which stands for the “ADSL Forum” IANA entry. i1 and i2 are PPPoE intermediate agent sub-options, which contain additional information about the PPPoE client.

30.1.2 Sub-Option Format

There are two types of sub-option: “Agent Circuit ID Sub-option” and “Agent Remote ID Sub-option”. They have the following formats.

Table 149 PPPoE IA Circuit ID Sub-option Format: User-defined String

| SubOpt | Length | Value |
|------------------|---------------|----------------------|
| 0x01 (1 byte) | N (1 byte) | String (63 bytes) |

Table 150 PPPoE IA Remote ID Sub-option Format

| SubOpt | Length | Value |
|------------------|---------------|-------------------------------------|
| 0x02 (1 byte) | N (1 byte) | MAC Address or String (63 bytes) |

The 1 in the first field identifies this as an Agent Circuit ID sub-option and 2 identifies this as an Agent Remote ID sub-option. The next field specifies the length of the field. The Switch takes the Circuit ID string you manually configure for a VLAN on a port as the highest priority and the Circuit ID string for a port as the second priority. In addition, the Switch puts the PPPoE client's MAC address into the Agent Remote ID Sub-option if you do not specify any user-defined string.

30.1.2.1 Flexible Circuit ID Syntax with Identifier String and Variables

If you do not configure a Circuit ID string for a VLAN on a specific port or for a specific port, the Switch adds the user-defined identifier string and variables into the Agent Circuit ID Sub-option. The variables can be the slot ID of the PPPoE client, the port number of the PPPoE client and/or the VLAN ID on the PPPoE packet.

The identifier-string, slot ID, port number and VLAN ID are separated from each other by a pound key (#), semi-colon (;), period (.), comma (,), forward slash (/) or space. An Agent Circuit ID Sub-option example is "Switch/07/0123" and indicates the PPPoE packets come from a PPPoE client which is connected to the Switch's port 7 and belong to VLAN 123.

Table 151 PPPoE IA Circuit ID Sub-option Format: Using Identifier String and Variables

| SubOpt | Length | Value | | | | | | |
|------------------|---------------|--------------------------------|-----------------------|---------------------|-----------------------|---------------------|-----------------------|----------------------|
| 0x01 (1 byte) | N (1 byte) | Identifier String (53 byte) | delimiter (1 byte) | Slot ID (1 byte) | delimiter (1 byte) | Port No (2 byte) | delimiter (1 byte) | VLAN ID (4 bytes) |

30.1.2.2 WT-101 Default Circuit ID Syntax

If you do not configure a Circuit ID string for a specific VLAN on a port or for a specific port, and disable the flexible Circuit ID syntax in the **PPPoE > Intermediate Agent** screen, the Switch automatically generates a Circuit ID string according to the default Circuit ID syntax which is defined in the DSL Forum Working Text (WT)-101. The default access node identifier is the host name of the PPPoE intermediate agent and the eth indicates "Ethernet".

Table 152 PPPoE IA Circuit ID Sub-option Format: Defined in WT-101

| SubOpt | Length | Value | | | | | | | | |
|------------------|---------------|-------------------------------------|-------------------|-----------------|-------------------|---------------------|---------------|---------------------|---------------|----------------------|
| 0x01 (1 byte) | N (1 byte) | Access Node Identifier (20 byte) | Space (1 byte) | eth (3 byte) | Space (1 byte) | Slot ID (1 byte) | / (1 byte) | Port No (2 byte) | : (1 byte) | VLAN ID (4 bytes) |

30.1.3 Port State

Every port is either a trusted port or an untrusted port for the PPPoE intermediate agent. This setting is independent of the trusted/untrusted setting for DHCP snooping or ARP inspection. You can also specify the agent sub-options (circuit ID and remote ID) that the Switch adds to PADI and PADR packets from PPPoE clients.

Trusted ports are connected to PPPoE servers.

- If a PADO (PPPoE Active Discovery Offer), PADS (PPPoE Active Discovery Session-confirmation), or PADT (PPPoE Active Discovery Terminate) packet is sent from a PPPoE server and received on a trusted port, the Switch forwards it to all other ports.
- If a PADI or PADR packet is sent from a PPPoE client but received on a trusted port, the Switch forwards it to other trusted port(s).

Note: The Switch will drop all PPPoE discovery packets if you enable the PPPoE intermediate agent and there are no trusted ports.

Untrusted ports are connected to subscribers.

- If a PADI, PADR, or PADT packet is sent from a PPPoE client and received on an untrusted port, the Switch adds a vendor-specific tag to the packet and then forwards it to the trusted port(s).
- The Switch discards PADO and PADS packets which are sent from a PPPoE server but received on an untrusted port.

30.2 The PPPoE Screen

Use this screen to configure the PPPoE Intermediate Agent on the Switch.

Click **Advanced Application** > **PPPoE** in the navigation panel to display the screen as shown. Click **Click Here** to go to the **Intermediate Agent** screen.

Figure 227 Advanced Application > PPPoE Intermediate Agent



30.3 PPPoE Intermediate Agent

Use this screen to configure the Switch to give a PPPoE termination server additional subscriber information that the server can use to identify and authenticate a PPPoE client.

Click **Advanced Application** > **PPPoE** > **Intermediate Agent** in the navigation panel to display the screen as shown.

Figure 228 Advanced Application > PPPoE > Intermediate Agent

The following table describes the labels in this screen.

Table 153 Advanced Application > PPPoE > Intermediate Agent

| LABEL | DESCRIPTION |
|------------------------|--|
| Active | Select this option to enable the PPPoE intermediate agent globally on the Switch. |
| access-node-identifier | Enter up to 20 ASCII characters to identify the PPPoE intermediate agent. Hyphens (-) and spaces are also allowed. The default is the Switch's host name. |
| circuit-id | Use this section to configure the Circuit ID field in the PADI and PADR packets. The Circuit ID you configure for a specific port or for a specific VLAN on a port has priority over this. The Circuit ID you configure for a specific port (in the Advanced Application > PPPoE > Intermediate Agent > Port screen) or for a specific VLAN on a port (in the Advanced Application > PPPoE > Intermediate Agent > Port > VLAN screen) has priority over this. That means, if you also want to configure PPPoE IA Per-Port or Per-Port Per-VLAN setting, leave the fields here empty and configure circuit-id and remote-id in the Per-Port or Per-Port Per-VLAN screen. |
| Active | Select this option to have the Switch add the user-defined identifier string and variables (specified in the option field) to PADI or PADR packets from PPPoE clients. If you leave this option unselected and do not configure any Circuit ID string (using CLI commands) on the Switch, the Switch will use the string specified in the access-node-identifier field. |
| identifier-string | Specify a string that the Switch adds in the Agent Circuit ID sub-option. You can enter up to 53 ASCII characters. Spaces are allowed. |
| option | Select the variables that you want the Switch to generate and add in the Agent Circuit ID sub-option. The variable options include sp , sv , pv and spv which indicate combinations of slot-port, slot-VLAN, port-VLAN and slot-port-VLAN respectively. The Switch enters a zero into the PADI and PADR packets for the slot value. |
| delimiter | Select a delimiter to separate the identifier-string, slot ID, port number and/or VLAN ID from each other. You can use a pound key (#), semi-colon (;), period (.), comma (,), forward slash (/) or space. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

30.3.1 PPPoE IA Per-Port

Use this screen to specify whether individual ports are trusted or untrusted ports and have the Switch add extra information to PPPoE discovery packets from PPPoE clients on a per-port basis.

Note: The Switch will drop all PPPoE packets if you enable the PPPoE Intermediate Agent on the Switch and there are no trusted ports.

Click the **Port** link in the **Intermediate Agent** screen to display the screen as shown.

Figure 229 Advanced Application > PPPoE > Intermediate Agent > Port (Standalone mode)

| Port | Server Trusted State | Circuit-id | VLAN | Intermediate Agent Remote-id |
|------|----------------------|------------|------|------------------------------|
| * | Untrusted ▼ | | | |
| 1 | Untrusted ▼ | | | |
| 2 | Untrusted ▼ | | | |
| 3 | Untrusted ▼ | | | |
| 4 | Untrusted ▼ | | | |
| 5 | Untrusted ▼ | | | |
| 6 | Untrusted ▼ | | | |
| 7 | Untrusted ▼ | | | |
| 8 | Untrusted ▼ | | | |
| 9 | Untrusted ▼ | | | |
| 10 | Untrusted ▼ | | | |
| 11 | Untrusted ▼ | | | |
| 12 | Untrusted ▼ | | | |
| 13 | Untrusted ▼ | | | |
| 14 | Untrusted ▼ | | | |
| 15 | Untrusted ▼ | | | |
| 48 | Untrusted ▼ | | | |
| 49 | Untrusted ▼ | | | |
| 50 | Untrusted ▼ | | | |
| 51 | Untrusted ▼ | | | |
| 52 | Untrusted ▼ | | | |

Apply Cancel

Figure 230 Advanced Application > PPPoE > Intermediate Agent > Port (Stacking mode)

| Port | Server Trusted State | Circuit id | Remote id |
|------|----------------------|------------|-----------|
| 1/1 | Untrusted ▼ | | |
| 1/2 | Untrusted ▼ | | |
| 1/3 | Untrusted ▼ | | |
| 1/4 | Untrusted ▼ | | |
| 1/5 | Untrusted ▼ | | |
| 1/6 | Untrusted ▼ | | |
| 1/7 | Untrusted ▼ | | |
| 1/8 | Untrusted ▼ | | |
| 1/9 | Untrusted ▼ | | |
| 1/10 | Untrusted ▼ | | |
| 1/11 | Untrusted ▼ | | |
| 1/12 | Untrusted ▼ | | |
| 1/13 | Untrusted ▼ | | |
| 1/14 | Untrusted ▼ | | |
| 1/15 | Untrusted ▼ | | |
| 1/16 | Untrusted ▼ | | |
| 1/17 | Untrusted ▼ | | |
| 1/18 | Untrusted ▼ | | |
| 1/19 | Untrusted ▼ | | |
| 1/20 | Untrusted ▼ | | |
| 1/21 | Untrusted ▼ | | |
| 1/22 | Untrusted ▼ | | |
| 1/23 | Untrusted ▼ | | |
| 1/24 | Untrusted ▼ | | |
| 1/25 | Untrusted ▼ | | |
| 1/26 | Untrusted ▼ | | |
| 1/27 | Untrusted ▼ | | |
| 1/28 | Untrusted ▼ | | |
| 1/29 | Untrusted ▼ | | |
| 1/30 | Untrusted ▼ | | |
| 1/31 | Untrusted ▼ | | |
| 1/32 | Untrusted ▼ | | |
| 1/33 | Untrusted ▼ | | |
| 1/34 | Untrusted ▼ | | |
| 1/35 | Untrusted ▼ | | |
| 1/36 | Untrusted ▼ | | |
| 1/37 | Untrusted ▼ | | |
| 1/38 | Untrusted ▼ | | |
| 1/39 | Untrusted ▼ | | |
| 1/40 | Untrusted ▼ | | |
| 1/41 | Untrusted ▼ | | |
| 1/42 | Untrusted ▼ | | |
| 1/43 | Untrusted ▼ | | |
| 1/44 | Untrusted ▼ | | |
| 1/45 | Untrusted ▼ | | |
| 1/46 | Untrusted ▼ | | |
| 1/47 | Untrusted ▼ | | |
| 1/48 | Untrusted ▼ | | |
| 1/49 | Untrusted ▼ | | |
| 1/50 | Untrusted ▼ | | |

The following table describes the labels in this screen.

Table 154 Advanced Application > PPPoE > Intermediate Agent > Port

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Server Trusted State | Select whether this port is a trusted port (Trusted) or an untrusted port (Untrusted). Trusted ports are uplink ports connected to PPPoE servers. <ul style="list-style-type: none"> If a PADO (PPPoE Active Discovery Offer), PADS (PPPoE Active Discovery Session-confirmation), or PADT (PPPoE Active Discovery Terminate) packet is sent from a PPPoE server and received on a trusted port, the Switch forwards it to all other ports. If a PADI or PADR packet is sent from a PPPoE client but received on a trusted port, the Switch forwards it to other trusted port(s). Untrusted ports are downlink ports connected to subscribers. <ul style="list-style-type: none"> If a PADI, PADR, or PADT packet is sent from a PPPoE client and received on an untrusted port, the Switch adds a vendor-specific tag to the packet and then forwards it to the trusted port(s). The Switch discards PADO and PADS packets which are sent from a PPPoE server but received on an untrusted port. |
| Circuit-id | Enter a string of up to 63 ASCII characters that the Switch adds into the Agent Circuit ID sub-option for PPPoE discovery packets received on this port. Spaces are allowed. The Circuit ID you configure for a specific VLAN on a port (in the Advanced Application > PPPoE > Intermediate Agent > Port > VLAN screen) has the highest priority. |

Table 154 Advanced Application > PPPoE > Intermediate Agent > Port (continued)

| LABEL | DESCRIPTION |
|-----------|--|
| Remote-id | <p>Enter a string of up to 63 ASCII characters that the Switch adds into the Agent Remote ID sub-option for PPPoE discovery packets received on this port. Spaces are allowed.</p> <p>If you do not specify a string here or in the Remote-id field for a VLAN on a port, the Switch automatically uses the PPPoE client's MAC address.</p> <p>The Remote ID you configure for a specific VLAN on a port (in the Advanced Application > PPPoE > Intermediate Agent > Port > VLAN screen) has the highest priority.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

30.3.2 PPPoE IA Per-Port Per-VLAN

Use this screen to configure PPPoE IA settings that apply to a specific VLAN on a port.

Click the **VLAN** link in the **Intermediate Agent > Port** screen to display the screen as shown.

Figure 231 Advanced Application > PPPoE > Intermediate Agent > Port > VLAN (Standalone mode)

Figure 232 Advanced Application > PPPoE > Intermediate Agent > Port > VLAN (Stacking mode)

The following table describes the labels in this screen.

Table 155 Advanced Application > PPPoE > Intermediate Agent > Port > VLAN

| LABEL | DESCRIPTION |
|-------------|--|
| Show Port | Enter a port number to show the PPPoE Intermediate Agent settings for the specified VLAN(s) on the port. For Stacking mode, the first field box is the Slot ID, the second field box is the port. |
| Show VLAN | Use this section to specify the VLANs you want to configure in the section below. |
| Start VID | Enter the lowest VLAN ID you want to configure in the section below. |
| End VID | Enter the highest VLAN ID you want to configure in the section below. |
| Slot / Port | For Stacking mode, the first field box displays a the Slot ID, the second field box displays the port number. |
| Apply | Click Apply to display the specified range of VLANs in the section below. |
| Port | This field displays the port number specified above. |
| VID | This field displays the VLAN ID of each VLAN in the range specified above. If you configure the * VLAN, the settings are applied to all VLANs. |
| * | Use this row to make the setting the same for all VLANs. Use this row first and then make adjustments on a VLAN-by-VLAN basis. Note: Changes in this row are copied to all the VLANs as soon as you make them. |
| Circuit-id | Enter a string of up to 63 ASCII characters that the Switch adds into the Agent Circuit ID sub-option for this VLAN on the specified port. Spaces are allowed. The Circuit ID you configure here has the highest priority. |
| Remote-id | Enter a string of up to 63 ASCII characters that the Switch adds into the Agent Remote ID sub-option for this VLAN on the specified port. Spaces are allowed. If you do not specify a string here or in the Remote-id field for a specific port, the Switch automatically uses the PPPoE client's MAC address. The Remote ID you configure here has the highest priority. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

30.3.3 PPPoE IA for VLAN

Use this screen to set whether the PPPoE Intermediate Agent is enabled on a VLAN and whether the Switch appends the Circuit ID and/or Remote ID to PPPoE discovery packets from a specific VLAN.

Click the **VLAN** link in the **Intermediate Agent** screen to display the screen as shown.

Figure 233 Advanced Application > PPPoE > Intermediate Agent > VLAN

The following table describes the labels in this screen.

Table 156 Advanced Application > PPPoE > Intermediate Agent > VLAN

| LABEL | DESCRIPTION |
|------------|--|
| Show VLAN | Use this section to specify the VLANs you want to configure in the section below. |
| Start VID | Enter the lowest VLAN ID you want to configure in the section below. |
| End VID | Enter the highest VLAN ID you want to configure in the section below. |
| Apply | Click Apply to display the specified range of VLANs in the section below. |
| VID | This field displays the VLAN ID of each VLAN in the range specified above. If you configure the * VLAN, the settings are applied to all VLANs. |
| * | Use this row to make the setting the same for all VLANs. Use this row first and then make adjustments on a VLAN-by-VLAN basis. Note: Changes in this row are copied to all the VLANs as soon as you make them. |
| Enabled | Select this option to turn on the PPPoE Intermediate Agent on a VLAN. |
| Circuit-id | Select this option to make the Circuit ID settings for a specific VLAN take effect. |
| Remote-id | Select this option to make the Remote ID settings for a specific VLAN take effect. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Error Disable

31.1 Error Disable Overview

This chapter shows you how to configure the rate limit for control packets on a port, and set the Switch to take an action (such as to shut down a port or stop sending packets) on a port when the Switch detects a pre-configured error. It also shows you how to configure the Switch to automatically undo the action after the error is gone.

31.1.1 CPU Protection Overview

Switches exchange protocol control packets in a network to get the latest networking information. If a switch receives large numbers of control packets, such as ARP, BPDU or IGMP packets, which are to be processed by the CPU, the CPU may become overloaded and be unable to handle regular tasks properly.

The CPU protection feature allows you to limit the rate of ARP, BPDU and IGMP packets to be delivered to the CPU on a port. This enhances the CPU efficiency and protects against potential DoS attacks or errors from other network(s). You then can choose to drop control packets that exceed the specified rate limit or disable a port on which the packets are received.

31.1.2 Error-Disable Recovery Overview

Some features, such as loop guard or CPU protection, allow the Switch to shut down a port or discard specific packets on a port when an error is detected on the port. For example, if the Switch detects that packets sent out the port(s) loop back to the Switch, the Switch can shut down the port(s) automatically. After that, you need to enable the port(s) or allow the packets on a port manually via the web configurator or the commands. With error-disable recovery, you can set the disabled port(s) to become active or start receiving the packets again after the time interval you specify.


31.1.3 What You Can Do

- Use the **Errdisable Status** screen ([Section 31.3 on page 326](#)) to view whether the Switch detected that control packets exceeded the rate limit configured for a port or a port is disabled according to the feature requirements and what action you configure, and related information.
- Use the **CPU Protection** screen ([Section 31.4 on page 328](#)) to limit the maximum number of control packets (ARP, BPDU and/or IGMP) that the Switch can receive or transmit on a port.
- Use the **Errdisable Detect** screen ([Section 31.5 on page 330](#)) to have the Switch detect whether the control packets exceed the rate limit configured for a port and configure the action to take once the limit is exceeded.
- Use the **Errdisable Recovery** screen ([Section 31.6 on page 331](#)) to set the Switch to automatically undo an action after the error is gone.

31.2 The Error Disable Screen

Use this screen to configure error disable related settings. Click **Advanced Application > Errdisable** in the navigation panel to open the following screen.

Figure 234 Advanced Application > Errdisable

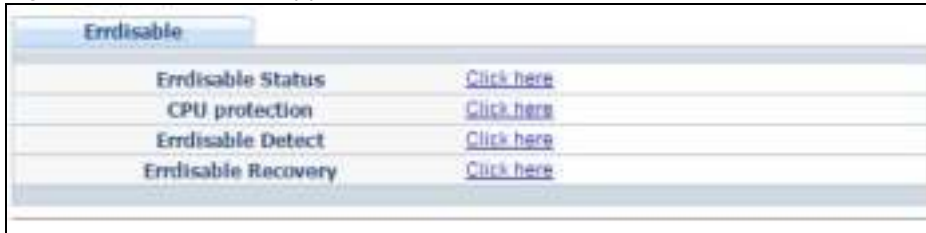

The following table describes the labels in this screen.

Table 157 Advanced Application > Errdisable

| LABEL | DESCRIPTION |
|---------------------|--|
| Errdisable Status | Click this link to view whether the Switch detected that control packets exceeded the rate limit configured for a port or a port is disabled according to the feature requirements and what action you configure, and related information. |
| CPU protection | Click this link to limit the maximum number of control packets (ARP, BPDU and/or IGMP) that the Switch can receive or transmit on a port. |
| Errdisable Detect | Click this link to have the Switch detect whether the control packets exceed the rate limit configured for a port and configure the action to take once the limit is exceeded. |
| Errdisable Recovery | Click this link to set the Switch to automatically undo an action after the error is gone. |

31.3 Error-Disable Status

Use this screen to view whether the Switch detected that control packets exceeded the rate limit configured for a port or a port is disabled according to the feature requirements and what action you configure, and related information. Click the **Click here** link next to **Errdisable Status** in the **Advanced Application > Errdisable** screen to display the screen as shown.

Figure 235 Advanced Application > Errdisable > Errdisable Status (Standalone mode)

Errdisable Status Errdisable

Inactive reason mode reset :

Port List Cause

Errdisable Status :

| Port | Cause | Active | Mode | Rate | Status | Recovery Time Left (secs) | Total Dropped |
|------|--------------|--------|---------------|------|------------|---------------------------|---------------|
| 1 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| | IGMP | NO | inactive-port | 0 | Forwarding | - | - |
| | Anti-arpscan | NO | inactive-port | - | Forwarding | - | - |
| | BPDU Guard | NO | inactive-port | - | Forwarding | - | - |
| | ZUID | NO | inactive-port | - | Forwarding | - | - |
| 2 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| | IGMP | NO | inactive-port | 0 | Forwarding | - | - |
| | Anti-arpscan | NO | inactive-port | - | Forwarding | - | - |
| | BPDU Guard | NO | inactive-port | - | Forwarding | - | - |
| | ZUID | NO | inactive-port | - | Forwarding | - | - |
| | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU Guard | NO | inactive-port | - | Forwarding | - | - |
| | ZUID | NO | inactive-port | - | Forwarding | - | - |

Figure 236 Advanced Application > Errdisable > Errdisable Status (Stacking mode)

Errdisable Status Errdisable

Inactive reason mode reset :

Port List Cause

Errdisable Status :
SLOT 1 *

| Port | Cause | Active | Mode | Rate | Status | Recovery Time Left (secs) | Total Dropped |
|------|------------|--------|---------------|------|------------|---------------------------|---------------|
| 11 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| | IGMP | NO | inactive-port | 0 | Forwarding | - | - |
| 12 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| 13 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| 14 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| 15 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |
| 16 | Loop Guard | NO | inactive-port | - | Forwarding | - | - |
| | ARP | NO | inactive-port | 0 | Forwarding | - | - |
| | BPDU | NO | inactive-port | 0 | Forwarding | - | - |

The following table describes the labels in this screen.

Table 158 Advanced Application > Errdisable > Errdisable Status

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Inactive-reason mode reset | |
| Port List | Enter the number of the port(s) (separated by a comma) on which you want to reset inactive-reason status. In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example. |
| Cause | Select the cause of inactive-reason mode you want to reset here. |
| Reset | Press to reset the specified port(s) to handle ARP, BPDU or IGMP packets instead of ignoring them, if the port(s) is in inactive-reason mode. |
| Errdisable Status | |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. |
| Cause | This displays the type of the control packet received on the port or the feature enabled on the port and cause the Switch to take the specified action. |
| Active | This field displays whether the control packets (ARP, BPDU, and/or IGMP), on the port is being detected or not. It also shows whether loop guard, anti-arp scanning, BPDU guard or ZULD is enabled on the port. |
| Mode | This field shows the action that the Switch takes for the cause. <ul style="list-style-type: none"> • inactive-port - The Switch disables the port. • inactive-reason - The Switch drops all the specified control packets (such as BPDU) on the port. • rate-limitation - The Switch drops the additional control packets the port(s) has to handle in every one second. |
| Rate | This field displays how many control packets this port can receive or transmit per second. It can be adjusted in CPU Protection. 0 means no rate limit. |
| Status | This field displays the errdisable status <ul style="list-style-type: none"> • Forwarding: The Switch is forwarding packets. Rate-limitation mode is always in Forwarding status. • Err-disable: The Switch disables the port on which the control packets are received (inactive-port) or drops specified control packets on the port (inactive-reason) |
| Recovery Time Left (secs) | This field displays the time (seconds) left before the port(s) becomes active of Errdisable Recovery. |
| Total Dropped | This field displays the total packet number dropped by this port where the packet rate exceeds the rate of mode rate-limitation. |

31.4 CPU Protection Configuration

Use this screen to limit the maximum number of control packets (ARP, BPDU and/or IGMP) that the Switch can receive or transmit on a port. Click the **Click Here** link next to **CPU protection** in the **Advanced Application > Errdisable** screen to display the screen as shown.

Note: After you configure this screen, make sure you also enable error detection for the specific control packets in the **Advanced Application > Errdisable > Errdisable Detect** screen.

Figure 237 Advanced Application > Errdisable > CPU protection (Standalone mode)

| Port | Rate Limit (pkt/s) |
|------|--------------------|
| 1 | 0 |
| 2 | 0 |
| 3 | 0 |
| 4 | 0 |
| 5 | 0 |
| 6 | 0 |
| 7 | 0 |
| 8 | 0 |
| 9 | 0 |
| 10 | 0 |
| 11 | 0 |
| 12 | 0 |
| 49 | 0 |
| 50 | 0 |
| 51 | 0 |
| 52 | 0 |

Figure 238 Advanced Application > Errdisable > CPU protection (Stacking mode)

| Port | Rate Limit (pkt/s) |
|------|--------------------|
| 1/1 | 0 |
| 1/2 | 0 |
| 1/3 | 0 |
| 1/4 | 0 |
| 1/5 | 0 |
| 1/6 | 0 |
| 1/7 | 0 |
| 1/8 | 0 |
| 1/9 | 0 |
| 1/10 | 0 |
| 1/11 | 0 |
| 1/12 | 0 |
| 1/13 | 0 |
| 1/14 | 0 |
| 1/15 | 0 |
| 1/16 | 0 |
| 1/17 | 0 |
| 1/18 | 0 |
| 1/19 | 0 |
| 1/20 | 0 |
| 1/21 | 0 |
| 1/22 | 0 |
| 1/23 | 0 |
| 1/24 | 0 |
| 1/25 | 0 |
| 1/26 | 0 |
| 1/27 | 0 |
| 1/28 | 0 |
| 1/29 | 0 |
| 1/30 | 0 |
| 1/31 | 0 |
| 1/32 | 0 |
| 1/33 | 0 |
| 1/34 | 0 |
| 1/35 | 0 |
| 1/36 | 0 |
| 1/37 | 0 |
| 1/38 | 0 |
| 1/39 | 0 |
| 1/40 | 0 |
| 1/41 | 0 |
| 1/42 | 0 |
| 1/43 | 0 |
| 1/44 | 0 |
| 1/45 | 0 |
| 1/46 | 0 |
| 1/47 | 0 |
| 1/48 | 0 |
| 1/49 | 0 |
| 1/50 | 0 |

The following table describes the labels in this screen.


Table 159 Advanced Application > Errdisable > CPU protection

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Reason | Select the type of control packet you want to configure here. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| 1/* | Use this row to make the setting the same for all ports. Use this row first and then make adjustments to each port if necessary. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Rate Limit (pkt/s) | Enter a number from 0 to 256 to specify how many control packets this port can receive or transmit per second. 0 means no rate limit. You can configure the action that the Switch takes when the limit is exceeded. See Section 31.5 on page 330 for detailed information. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

31.5 Error-Disable Detect Configuration

Use this screen to have the Switch detect whether the control packets exceed the rate limit configured for a port and configure the action to take once the limit is exceeded. Click the **Click Here** link next to **Errdisable Detect** link in the **Advanced Application > Errdisable** screen to display the screen as shown.

Figure 239 Advanced Application > Errdisable > Errdisable Detect

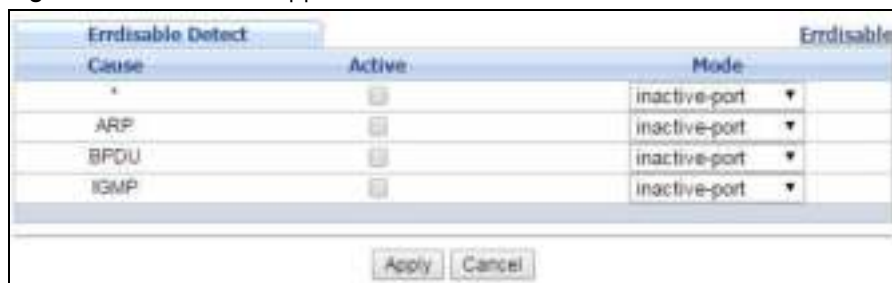

The following table describes the labels in this screen.

Table 160 Advanced Application > Errdisable > Errdisable Detect

| LABEL | DESCRIPTION |
|--------|---|
| Cause | This field displays the types of control packet that may cause CPU overload. |
| * | Use this row to make the setting the same for all entries. Use this row first and then make adjustments to each entry if necessary. Note: Changes in this row are copied to all the entries as soon as you make them. |
| Active | Select this option to have the Switch detect if the configured rate limit for a specific control packet is exceeded and take the action selected below. |
| Mode | Select the action that the Switch takes when the number of control packets exceed the rate limit on a port, set in the Advanced Application > Errdisable > CPU protection screen. <ul style="list-style-type: none"> inactive-port - The Switch disables the port on which the control packets are received. inactive-reason - The Switch bypasses the processing of the specified control packets (such as ARP or IGMP packets), or drops all the specified control packets (such as BPDU) on the port. rate-limitation - The Switch drops the additional control packets the port has to handle in every one second. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

31.6 Error-Disable Recovery Configuration

Use this screen to configure the Switch to automatically undo an action after the error is gone. Click the **Click Here** link next to **Errdisable Recovery** in the **Advanced Application > Errdisable** screen to display the screen as shown.

Figure 240 Advanced Application > Errdisable > Errdisable Recovery (Standalone Mode)

| Reason | Timer Status | Interval |
|--------------|--------------------------|----------|
| * | <input type="checkbox"/> | |
| loopguard | <input type="checkbox"/> | 300 |
| ARP | <input type="checkbox"/> | 300 |
| BPDU | <input type="checkbox"/> | 300 |
| IGMP | <input type="checkbox"/> | 300 |
| anti-arpscan | <input type="checkbox"/> | 300 |
| bpduguard | <input type="checkbox"/> | 300 |
| zuid | <input type="checkbox"/> | 300 |

Figure 241 Advanced Application > Errdisable > Errdisable Recovery (Stacking Mode)

| Reason | Timer Status | Interval |
|-----------|--------------------------|----------|
| * | <input type="checkbox"/> | |
| loopguard | <input type="checkbox"/> | 300 |
| ARP | <input type="checkbox"/> | 300 |
| BPDU | <input type="checkbox"/> | 300 |
| IGMP | <input type="checkbox"/> | 300 |

The following table describes the labels in this screen.

Table 161 Advanced Application > Errdisable > Errdisable Recovery

| LABEL | DESCRIPTION |
|--------------|--|
| Active | Select this option to turn on the error-disable recovery function on the Switch. |
| Reason | This field displays the supported features that allow the Switch to shut down a port or discard packets on a port according to the feature requirements and what action you configure. |
| * | Use this row to make the setting the same for all entries. Use this row first and then make adjustments to each entry if necessary. Note: Changes in this row are copied to all the entries as soon as you make them. |
| Timer Status | Select this option to allow the Switch to wait for the specified time interval to activate a port or allow specific packets on a port, after the error was gone. Deselect this option to turn off this rule. |
| Interval | Enter the number of seconds (from 30 to 2592000) for the time interval. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

MAC Pinning


This chapter shows you how to configure MAC pinning on the Switch.

32.1 MAC Pinning Overview

When the Switch obtains a connected device's MAC address, it adds an entry in the MAC address forwarding table and uses the table to determine how to forward frames. In addition to the source MAC address of a received frame, the Switch also learns the VLAN to which the device belongs and the port on which the frame is received. If the Switch learns the same MAC address and same VLAN ID on another port, it updates the MAC address table immediately.

MAC pinning allows you to set a port or multiple ports to have priority over other ports in MAC address learning. That means when a MAC address (and VLAN ID) is learned on a MAC-pinning-enabled port, the MAC address will not be learned on any other port until the aging time for the dynamically learned MAC address in the table expires.

This helps enhance security. For example, when an attacker (**A**) sends packets to all connected clients by spoofing the source MAC address of a server (**B**) connected to one of the Switch's ports, on which MAC pinning is enabled, the responses from clients will still be forwarded to the server according to the Switch's MAC forwarding table.

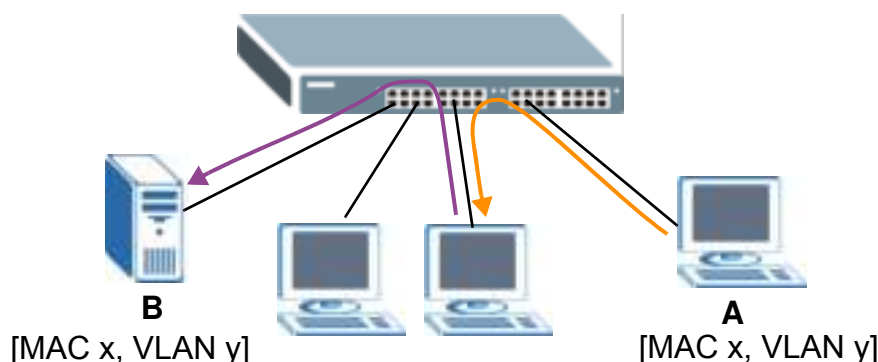

32.2 MAC Pinning Configuration

Use this screen to enable MAC pinning on the Switch and on specific ports. Click **Advanced Application > MAC Pinning** in the navigation panel to open the following screen.

Figure 242 Advanced Application > MAC Pinning (Standalone mode)


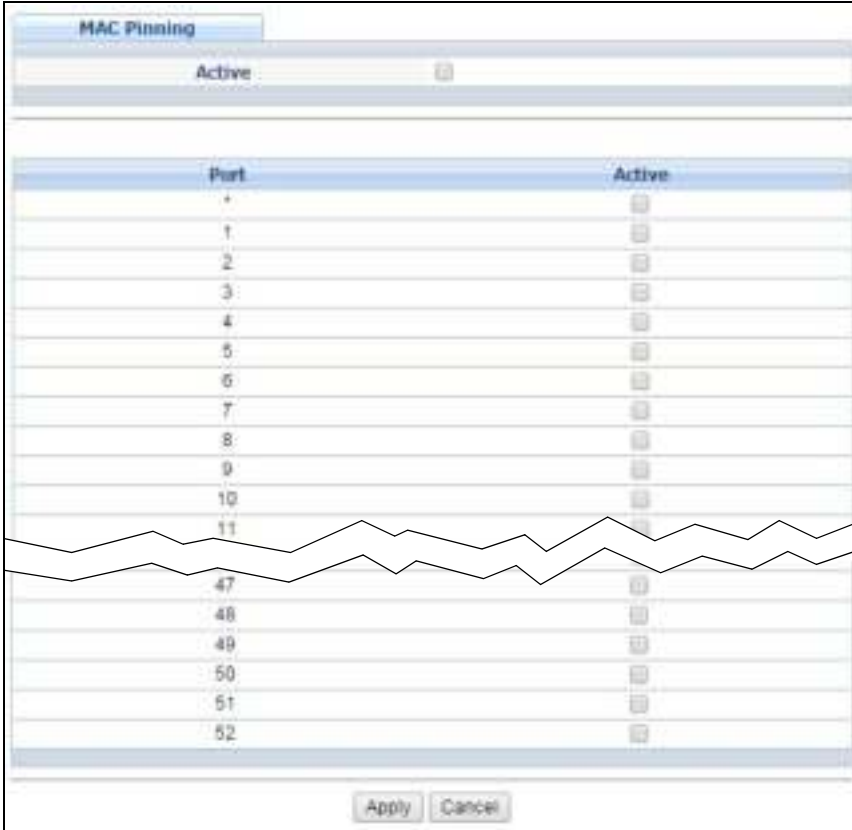


Figure 243 Advanced Application > MAC Pinning (Stacking mode)

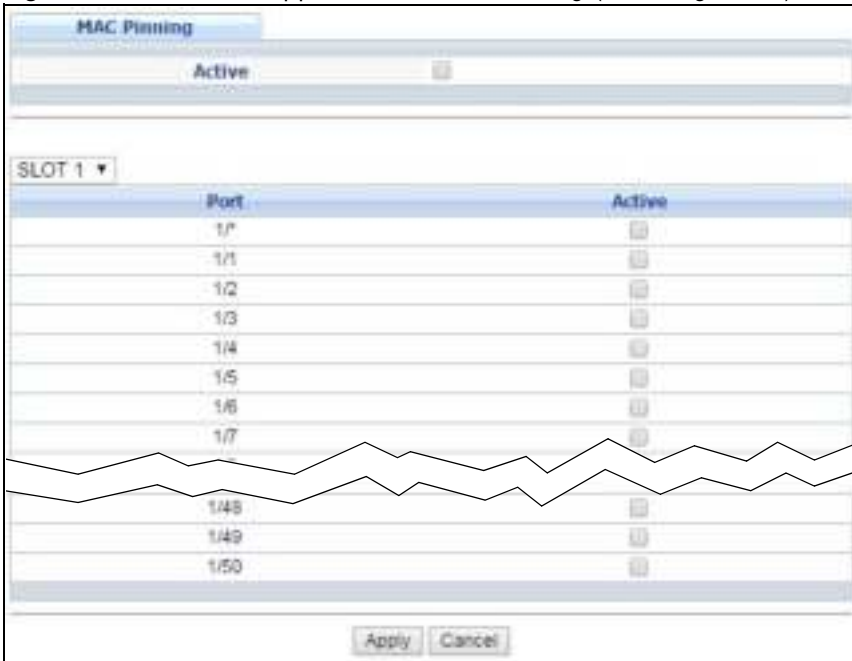

The following table describes the labels in this screen.

Table 162 Advanced Application > MAC Pinning

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Active | Select this option to turn on the MAC pinning function on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments to each port if necessary. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable MAC pinning on this port. The port then has priority over other ports in MAC address learning. Clear this check box to disable MAC pinning. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Private VLAN

33.1 Private VLAN Overview

Use private VLAN if you want you to block traffic between ports in the same VLAN. **Community** and **Isolated** VLANs are secondary private VLANs that must be associated with a **Primary** private VLAN.

- **Primary:** Ports in a **Primary** VLAN are promiscuous and they can communicate with all promiscuous ports in the same primary VLAN, and all ports in associated community and isolated VLANs. They cannot communicate with ports in different primary VLANs.
- **Community:** Ports in a **Community** VLAN can communicate with promiscuous ports in an associated **Primary** VLAN and other community ports in the same **Community** VLAN. They cannot communicate with ports in **Isolated** VLANs, non-associated **Primary** VLAN promiscuous ports nor community ports in different **Community** VLANs.
- **Isolated:** Ports in an **Isolated** VLAN can communicate with promiscuous ports in an associated **Primary** VLAN only. They cannot communicate with other isolated ports in the same **Isolated** VLAN, non-associated **Primary** VLAN promiscuous ports nor any community ports.

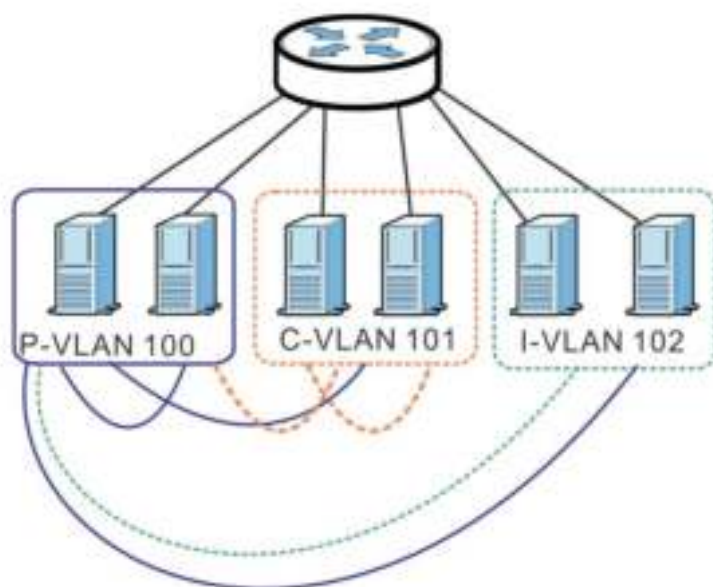


Table 163 PVLAN Graphic Key

| LABEL | DESCRIPTION |
|------------|------------------------|
| P-VLAN 100 | Primary private VLAN |
| C-VLAN 101 | Community private VLAN |
| I-VLAN 102 | Isolated private VLAN |

Tagged Private VLANs can span switches but trunking ports must be VLAN-trunking ports - see **Advanced > VLAN > VLAN Port Setting**.

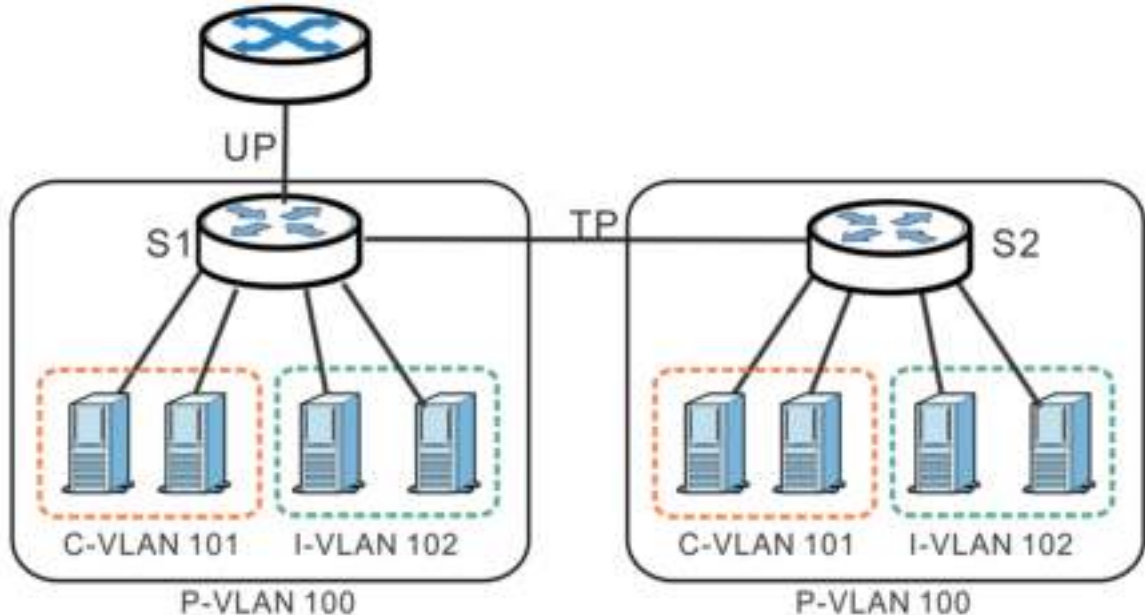


Table 164 Spanning PVLAN Graphic Key

| LABEL | DESCRIPTION |
|------------|--|
| UP | Uplink promiscuous port |
| TP | VLAN-trunking ports |
| S1, S2 | Switch 1, Switch 2 |
| P-VLAN 100 | Primary private VLAN with VLAN ID tag of 100 |
| C-VLAN 101 | Community private VLAN with VLAN ID tag of 101 |
| I-VLAN 102 | Isolated private VLAN with VLAN ID tag of 102 |

This is the communication process if primary VLAN **P-VLAN 100** is associated with community VLAN **C-VLAN 101** and isolated VLAN **I-VLAN 102**.

- Promiscuous ports in **P-VLAN 100** can communicate with all ports in **P-VLAN 100** including community ports in **C-VLAN 101** and isolated ports in **I-VLAN 102**.
- Community ports in **C-VLAN 101** can communicate with promiscuous ports in **P-VLAN 100** and other community ports in **C-VLAN 101**. They cannot communicate with isolated ports in **I-VLAN 102**.
- Isolated ports can communicate with promiscuous ports in **P-VLAN 100**. They cannot communicate with other isolated ports in **I-VLAN 102** nor community ports in **C-VLAN 101**.

Note: **Isolation** in **VLAN > VLAN Port Setting** (see [Section 7.7.2 on page 109](#)) has a higher priority than private VLAN settings, so promiscuous ports with **Isolation** in **VLAN > VLAN Port Setting** enabled will not be able to communicate with each other.

33.1.1 Configuration

You must go to the **Static VLAN** screen first (see [Section 7.7 on page 106](#)) to create VLAN IDs for **Primary**, **Isolated** or **Community** VLANs.

Click **Advanced Application > Private VLAN** to display the following screen.

Figure 244 Advanced Application > Private VLAN (Standalone mode)

| Private VLAN | | | |
|--------------|----------|-----------------|--------------------------|
| Port | Mode | Associated VLAN | Tagged |
| * | Normal ▼ | | <input type="checkbox"/> |
| 1 | Normal ▼ | 0 | <input type="checkbox"/> |
| 2 | Normal ▼ | 0 | <input type="checkbox"/> |
| 3 | Normal ▼ | 0 | <input type="checkbox"/> |
| 4 | Normal ▼ | 0 | <input type="checkbox"/> |
| 5 | Normal ▼ | 0 | <input type="checkbox"/> |
| 6 | Normal ▼ | 0 | <input type="checkbox"/> |
| 7 | Normal ▼ | 0 | <input type="checkbox"/> |
| 8 | Normal ▼ | 0 | <input type="checkbox"/> |
| 9 | Normal ▼ | 0 | <input type="checkbox"/> |
| 10 | Normal ▼ | 0 | <input type="checkbox"/> |
| 11 | Normal ▼ | 0 | <input type="checkbox"/> |
| 12 | Normal ▼ | 0 | <input type="checkbox"/> |
| 13 | Normal ▼ | 0 | <input type="checkbox"/> |
| 14 | Normal ▼ | 0 | <input type="checkbox"/> |
| 15 | Normal ▼ | 0 | <input type="checkbox"/> |
| 48 | Normal ▼ | 0 | <input type="checkbox"/> |
| 49 | Normal ▼ | 0 | <input type="checkbox"/> |
| 50 | Normal ▼ | 0 | <input type="checkbox"/> |
| 51 | Normal ▼ | 0 | <input type="checkbox"/> |
| 52 | Normal ▼ | 0 | <input type="checkbox"/> |

Apply Cancel

Figure 245 Advanced Application > Private VLAN (Stacking mode)

| Private VLAN | | | |
|--------------|----------|-----------------|--------------------------|
| SLOT 1 ▼ | | | |
| Port | Mode | Associated VLAN | Tagged |
| 1/1 | Normal ▼ | | <input type="checkbox"/> |
| 1/11 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/12 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/13 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/14 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/15 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/16 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/17 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/18 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/49 | Normal ▼ | 0 | <input type="checkbox"/> |
| 1/50 | Normal ▼ | 0 | <input type="checkbox"/> |

Apply Cancel

The following table describes the labels in this screen.

Table 165 Advanced Application > Private VLAN

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| Mode | <p>This is the type of VLAN mapped to this port.</p> <ul style="list-style-type: none"> • Normal: These are ports in a static VLAN. This is not a private VLAN. • Promiscuous: Ports in a Primary VLAN are Promiscuous. They can communicate with all ports in the Primary VLAN and associated Community and Isolated VLANs. They cannot communicate with Promiscuous ports in different primary VLANs. • Community: Ports in a Community VLAN can communicate with Promiscuous ports in an associated Primary VLAN and other community ports in the same Community VLAN. They cannot communicate with ports in an Isolated VLAN, non-associated Primary VLAN Promiscuous ports nor Community ports in different Community VLANs. • Isolated: Ports in an Isolated VLAN can communicate with Promiscuous ports in an associated Primary VLAN only. They cannot communicate with other Isolated ports in the same Isolated VLAN, non-associated Primary VLAN Promiscuous ports nor any Community ports. |
| Associated VLAN | <p>Enter the VLAN ID of a previously created VLAN here.</p> <p>Note: The VLAN ID and Mode selected here must be the same as the VLAN ID and VLAN Type created in Advanced Application > VLAN > Static VLAN.</p> |
| Tagged | <p>A VLAN ID tag identifies VLAN membership of a frame across switches.</p> <p>Select this if the VLAN includes ports on multiple switches. The Switch forwards tagged frames through this port; it adds the PVID to untagged frames before sending them out.</p> <p>Clear this if the VLAN includes ports on this Switch only. The Switch forwards untagged frames through this port; it removes the VLAN ID from tagged frames before sending them out.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Green Ethernet

This chapter shows you how to configure the Switch to reduce the power consumed by switch ports.

34.1 Green Ethernet Overview

Green Ethernet reduces switch port power consumption in the following ways.

- IEEE 802.3az Energy Efficient Ethernet (EEE)

If EEE is enabled, both sides of a link support EEE and there is no traffic, the port enters Low Power Idle (LPI) mode. LPI mode turns off some functions of the physical layer (becomes quiet) to save power. Periodically the port transmits a REFRESH signal to allow the link partner to keep the link alive. When there is traffic to be sent, a WAKE signal is sent to the link partner to return the link to active mode.

- Auto Power Down

Auto Power Down turns off almost all functions of the port's physical layer functions when the link is down, so the port only uses power to check for a link up pulse from the link partner. After the link up pulse is detected, the port wakes up from **Auto Power Down** and operates normally.

- Short Reach

Traditional Ethernet transmits all data with enough power to reach the maximum cable length. Shorter cables lose less power, so **Short Reach** saves power by adjusting the transmit power of each port according to the length of cable attached to that port.

34.2 Configuring Green Ethernet

Click **Advanced Application > Green Ethernet** in the navigation panel to display the screen as shown.

Note: EEE, Auto Power Down and Short Reach are not supported on an uplink port.

Figure 246 Advanced Application > Green Ethernet (Standalone mode)

| Green Ethernet | | | |
|-----------------|--------------------------|--|--|
| EEE | <input type="checkbox"/> | | |
| Auto Power Down | <input type="checkbox"/> | | |
| Short Reach | <input type="checkbox"/> | | |

| Port | EEE | Auto Power Down | Short Reach |
|------|--------------------------|--------------------------|--------------------------|
| 0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 48 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

Figure 247 Advanced Application > Green Ethernet (Stacking mode)

| Green Ethernet | | | |
|-----------------|--------------------------|--|--|
| EEE | <input type="checkbox"/> | | |
| Auto Power Down | <input type="checkbox"/> | | |
| Short Reach | <input type="checkbox"/> | | |

SLOT 1 ▾

| Port | EEE | Auto Power Down | Short Reach |
|------|--------------------------|--------------------------|--------------------------|
| 1/1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/7 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/48 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

The following table describes the labels in this screen.

Table 166 Advanced Application > Green Ethernet

| LABEL | DESCRIPTION |
|------------------------------------|--|
| EEE | Select this to activate Energy Efficient Ethernet globally. |
| Auto Power Down | Select this to activate Auto Power Down globally. |
| Short Reach | Select this to activate Short Reach globally. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port (Standalone or stacking mode) | This field displays the port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| 1/* | Use this row to make the setting the same for all ports. Use this row first and then make adjustments to each port if necessary. Note: Changes in this row are copied to all the ports as soon as you make them. |
| EEE | Select this to activate Energy Efficient Ethernet on this port. |
| Auto Power Down | Select this to activate Auto Power Down on this port. |
| Short Reach | Select this to activate Short Reach on this port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Link Layer Discovery Protocol (LLDP)

35.1 LLDP Overview

The LLDP (Link Layer Discovery Protocol) is a layer 2 protocol. It allows a network device to advertise its identity and capabilities on the local network. It also allows the device to maintain and store information from adjacent devices which are directly connected to the network device. This helps an administrator discover network changes and perform necessary network reconfiguration and management. The device information is encapsulated in the LLDPDUs (LLDP data units) in the form of TLV (Type, Length, Value). Device information carried in the received LLDPDUs is stored in the standard MIB.

The Switch supports these basic management TLVs.

- End of LLDPDU (mandatory)
- Chassis ID (mandatory)
- Port ID (mandatory)
- Time to Live (mandatory)
- Port Description (optional)
- System Name (optional)
- System Description (optional)
- System Capabilities (optional)
- Management Address (optional)

The Switch also supports the IEEE 802.1 and IEEE 802.3 organizationally-specific TLVs.

IEEE 802.1 specific TLVs:


- Port VLAN ID TLV (optional)
- Port and Protocol VLAN ID TLV (optional)

IEEE 802.3 specific TLVs:

- MAC/PHY Configuration/Status TLV (optional)
- Power via MDI TLV (optional, For PoE models only)
- Link Aggregation TLV (optional)
- Maximum Frame Size TLV (optional)

The optional TLVs are inserted between the Time To Live TLV and the End of LLDPDU TLV.

The next figure demonstrates that the network devices Switches and Routers (S and R) transmit and receive device information via LLDPDU and the network manager can query the information using Simple Network Management Protocol (SNMP).

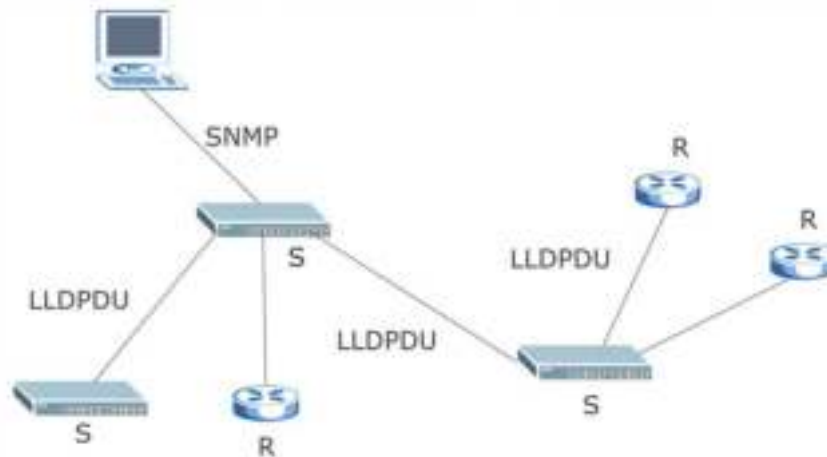Figure 248 LLDP Overview

35.2 LLDP-MED Overview

LLDP-MED (Link Layer Discovery Protocol for Media Endpoint Devices) is an extension to the standard LLDP developed by the Telecommunications Industry Association (TIA) TR-41.4 subcommittee which defines the enhanced discovery capabilities, such as VoIP applications, to enable network administrators manage their network topology application more efficiently. Unlike the traditional LLDP, which has some limitations when handling multiple application devices, the LLDP-MED offers display of accurate physical topology, interoperability of devices, and easy trouble shooting for misconfigured IP addresses. There are three classes of endpoint devices that the LLDP-MED supports:


Class I: IP Communications Controllers or other communication related servers

Class II: Voice Gateways, Conference Bridges or Media Servers

Class III: IP-Phones, PC-based Softphones, End user Communication Appliances supporting IP Media

The following figure shows that with the LLDP-MED, network connectivity devices (NCD) like Switches and Routers will transmit LLDP TLV to endpoint device (ED) like IP Phone first (1), to get its device type and capabilities information, then it will receive that information in LLDP-MED TLV back from endpoint devices (2), after that the network connectivity devices will transmit LLDP-MED TLV (3) to provision the endpoint device to such that the endpoint device's network policy and location identification information is updated. Since LLDPDU updates status and configuration information periodically, network managers may check the result of provision via remote status. The remote status is updated by receiving LLDP-MED TLVs from endpoint devices.

Figure 249 LLDP-MED Overview

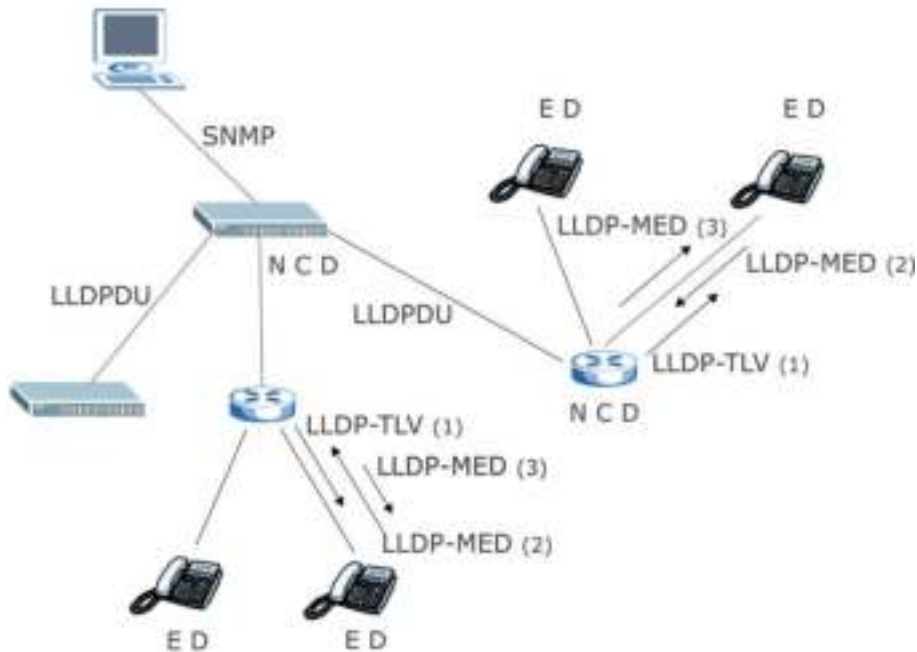

35.3 LLDP Screens

Click **Advanced Application** > **LLDP** in the navigation panel to display the screen as shown next.

Figure 250 Advanced Application > LLDP

| LLDP | | |
|----------|-------------------------|----------------------------|
| | LLDP Local Status | Click here |
| LLDP | LLDP Remote Status | Click here |
| | LLDP Configuration | Click here |
| | LLDP-MED Configuration | Click here |
| LLDP-MED | LLDP-MED Network Policy | Click here |
| | LLDP-MED Location | Click here |

The following table describes the labels in this screen.

Table 167 Advanced Application > LLDP

| LABEL | DESCRIPTION |
|--------------------|---|
| LLDP | |
| LLDP Local Status | Click here to show a screen with the Switch's LLDP information. |
| LLDP Remote Status | Click here to show a screen with LLDP information from the neighboring devices. |
| LLDP Configuration | Click here to show a screen to configure LLDP parameters. |

Table 167 Advanced Application > LLDP (continued)

| LABEL | DESCRIPTION |
|-------------------------|---|
| LLDP-MED | |
| LLDP-MED Configuration | Click here to show a screen to configure LLDP-MED (Link Layer Discovery Protocol for Media Endpoint Devices) parameters. |
| LLDP-MED Network Policy | Click here to show a screen to configure LLDP-MED (Link Layer Discovery Protocol for Media Endpoint Devices) network policy parameters. |
| LLDP-MED Location | Click here to show a screen to configure LLDP-MED (Link Layer Discovery Protocol for Media Endpoint Devices) location parameters. |

35.4 LLDP Local Status

This screen displays a summary of LLDP status on this Switch. Click **Advanced Application > LLDP > LLDP Local Status** to display the screen as shown next.

Figure 251 Advanced Application > LLDP > LLDP Local Status (Standalone mode)

The screenshot displays the LLDP Local Status configuration page. It is divided into two main sections: LLDP System Information and LLDP Port Information.

LLDP System Information

| Basic TLV | | |
|-------------------------|-------------------------------|------------------------------|
| Chassis ID TLV | Chassis ID Subtype | mac-address |
| | Chassis ID | 00:19:eb:00:00:02 |
| System Name TLV | System Name | XGS3700 |
| System Description TLV | System Description | V4.30(AAGF.0:b3 07/17/2015 |
| System Capabilities TLV | System Capabilities Supported | Bridge |
| | System Capabilities Enabled | Bridge |
| Management Address TLV | Management Address Subtype | ipv4 / all-802 |
| | Interface Number Subtype | unknown |
| | Interface Number | 0 |
| | Object Identifier | 0 |

LLDP Port Information

| Local Port | Port ID Subtype | Port ID | Port Description |
|------------|-----------------|---------|------------------|
| 1 | local-assigned | 1 | |
| 2 | local-assigned | 2 | |
| 3 | local-assigned | 3 | |
| 4 | local-assigned | 4 | |
| 5 | local-assigned | 5 | |
| 6 | local-assigned | 6 | |
| 7 | local-assigned | 7 | |
| 8 | local-assigned | 8 | |
| 51 | local-assigned | 51 | |
| 52 | local-assigned | 52 | |

Figure 252 Advanced Application > LLDP > LLDP Local Status (Stacking mode)

| LLDP Local Status | | LLDP | |
|-------------------------|-------------------------------|-----------------------------|------------------|
| LLDP System Information | | | |
| Basic TLV | | | |
| Chassis ID TLV | Chassis ID Subtype | mac-address | |
| | Chassis ID | 00:19:cb:00:00:02 | |
| System Name TLV | System Name | XGS3700 | |
| System Description TLV | System Description | V4.30(AAGF.0)(b3)107/17Q015 | |
| System Capabilities TLV | System Capabilities Supported | Bridge | |
| | System Capabilities Enabled | Bridge | |
| Management Address TLV | Management Address Subtype | ipv4 / all-802 | |
| | Interface Number Subtype | unknown | |
| | Interface Number | 0 | |
| | Object Identifier | 0 | |
| LLDP Port Information | | | |
| SLOT 1 ▾ | | | |
| Local Port | Port ID Subtype | Port ID | Port Description |
| 1/1 | local-assigned | 1/1 | |
| 1/2 | local-assigned | 1/2 | |
| 1/3 | local-assigned | 1/3 | |
| 1/4 | local-assigned | 1/4 | |
| 1/5 | local-assigned | 1/5 | |
| ... | ... | ... | ... |
| 1/48 | local-assigned | 1/48 | |
| 1/49 | local-assigned | 1/49 | |
| 1/50 | local-assigned | 1/50 | |

The following table describes the labels in this screen.

Table 168 Advanced Application > LLDP > LLDP Local Status

| LABEL | DESCRIPTION |
|-------------------------|---|
| Basic TLV | |
| Chassis ID TLV | This displays the chassis ID of the local Switch, that is the Switch you're configuring. The chassis ID is identified by the chassis ID subtype. Chassis ID Subtype - this displays how the chassis of the Switch is identified. Chassis ID - This displays the chassis ID of the local Switch. |
| System Name TLV | This shows the Host Name of the Switch. |
| System Description TLV | This shows the firmware version of the Switch. |
| System Capabilities TLV | This shows the System Capabilities enabled and supported on the local Switch. <ul style="list-style-type: none"> System Capabilities Supported - Bridge System Capabilities Enabled - Bridge |

Table 168 Advanced Application > LLDP > LLDP Local Status

| LABEL | DESCRIPTION |
|------------------------|---|
| Management Address TLV | <p>The Management Address TLV identifies an address associated with the local LLDP agent that may be used to reach higher layer entities to assist discovery by network management. The TLV may also include the system interface number and an object identifier (OID) that are associated with this management address.</p> <p>This field displays the Management Address settings on the specified port(s).</p> <ul style="list-style-type: none"> • Management Address Subtype - ipv4 / all-802 • Interface Number Subtype - unknown • Interface Number - 0 (not supported) • Object Identifier - 0 (not supported) |
| LLDP Port Information | This displays the local port information. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Local Port | This displays the number of the Switch port which receives the LLDPDU from the remote device. Click a port number to view the detailed LLDP status on this port at LLDP Local Port Status Detail screen. For Stacking mode, the first field box is the Slot ID, the second field box is the port. |
| Port ID Subtype | This indicates how the port ID field is identified. |
| Port ID | This is an alpha-numeric string that contains the specific identifier for the port from which this LLDPDU was transmitted. |
| Port Description | This shows the port description that the Switch will advertise from this port. |

35.4.1 LLDP Local Port Status Detail

This screen displays detailed LLDP status for each port on this Switch. Click **Advanced Application > LLDP > LLDP Local Status** and then click a port number, for example 1 in the **Local Port** column to display the screen as shown next.

Figure 253 Advanced Application > LLDP > LLDP Local Status > LLDP Local Port Status Detail (Basic TLV)

| LLDP Local Port Status Detail | | LLDP Local Status |
|------------------------------------|--------------------------|--|
| Local Port: 1 | | |
| Basic TLV | | |
| Port ID TLV | Port ID Subtype | local-assigned |
| | Port ID | 1 |
| Port Description TLV | Port Description | |
| Dot1 TLV | | |
| Port VLAN ID TLV | Port VLAN ID | 1 |
| Port-Protocol VLAN ID TLV | Port-Protocol VLAN ID | |
| Dot3 TLV | | |
| MAC PHY Configuration & Status TLV | AN Supported | Yes |
| | AN Enabled | Yes |
| | AN Advertised Capability | 10baseT 10baseTFD 100baseTX 100baseTXFD 1000baseTFD |
| | Oper MAU Type | 30 |
| Link Aggregation TLV | Aggregation Capability | Yes |
| | Aggregation Status | No |
| | Aggregated Port ID | 1 |
| Max Frame Size TLV | Max Frame Size | 1518 |

Figure 254 Advanced Application > LLDP > LLDP Local Status > LLDP Local Port Status Detail (MED TLV)

| Label | Description |
|-----------------------------|------------------------------------|
| MED TLV | Network Policy: Yes |
| | Location: Yes |
| Capabilities TLV | Extend Power via MDI PSE: No |
| | Extend Power via MDI PD: No |
| | Inventory Management: No |
| Service Type TLV | Service Type: Network Connectivity |
| Network Policy TLV | Voice |
| | Voice-Signaling |
| | Guest-Voice |
| | Guest-Voice-Signaling |
| | Softphone-Voice |
| | Video-Conferencing |
| | Streaming-Video |
| | Video-Signaling |
| Location Identification TLV | Coordinate-Based LCI |
| | Cable LCI |
| | ELIN |

The following table describes the labels in this screen.

Table 169 Advanced Application > LLDP > LLDP Local Status > LLDP Local Port Status Detail

| LABEL | DESCRIPTION |
|----------------------|--|
| Basic TLV | These are the Basic TLV flags |
| Port ID TLV | The port ID TLV identifies the specific port that transmitted the LLDP frame. <ul style="list-style-type: none"> Port ID Subtype: This shows how the port is identified. Port ID: This is the ID of the port. In stacking mode, the first number represents the slot and the second the port number. |
| Port Description TLV | This displays the local port description. |
| Dot1 TLV | |
| Port VLAN ID TLV | This displays the VLAN ID sent by the IEEE 802.1 Port VLAN ID TLV. |

Table 169 Advanced Application > LLDP > LLDP Local Status > LLDP Local Port Status Detail

| LABEL | DESCRIPTION |
|------------------------------------|---|
| Port-Protocol VLAN ID TLV | This displays the IEEE 802.1 Port Protocol VLAN ID TLVs, which indicates whether the VLAN is enabled and supported. |
| Dot3 TLV | |
| MAC PHY Configuration & Status TLV | <p>The MAC/PHY Configuration/Status TLV advertises the bit-rate and duplex capability of the sending 802.3 node. It also advertises the current duplex and bit-rating of the sending node. Lastly, it advertises whether these settings were the result of auto-negotiation during link initiation or manual override.</p> <ul style="list-style-type: none"> • AN Supported - Displays if the port supports or does not support auto-negotiation. • AN Enabled - The current auto-negotiation status of the port. • AN Advertised Capability - The auto-negotiation capabilities of the port. • Oper MAU Type - The current Medium Attachment Unit (MAU) type of the port. |
| Link Aggregation TLV | <p>The Link Aggregation TLV indicates whether the link is capable of being aggregated, whether the link is currently in an aggregation, and if in an aggregation, the port identification of the aggregation.</p> <ul style="list-style-type: none"> • Aggregation Capability — The current aggregation capability of the port. • Aggregation Status — The current aggregation status of the port. • Aggregation Port ID — The aggregation ID of the current port. |
| Max Frame Size TLV | This displays the maximum supported frame size in octets. |
| MED TLV | LLDP Media Endpoint Discovery (MED) is an extension of LLDP that provides additional capabilities to support media endpoint devices. MED enables advertisement and discovery of network policies, device location discovery to allow creation of location databases, and information for troubleshooting. |
| Capabilities TLV | <p>This field displays which LLDP-MED TLV are capable to transmit on the Switch.</p> <ul style="list-style-type: none"> • Network Policy • Location • Extend Power via MDI PSE • Extend Power via MDI PD • Inventory Management |
| Device Type TLV | <p>This is the LLDP-MED device class. The ZyXEL Switch device type is:</p> <ul style="list-style-type: none"> • Network Connectivity |
| Network Policy TLV | <p>This displays a network policy for the specified application.</p> <ul style="list-style-type: none"> • Voice • Voice-Signaling • Guest-Voice • Guest-Voice-Signaling • Softphone-Voice • Video-Conferencing • Streaming-Video • Video-Signaling |
| Location Identification TLV | <p>This shows the location information of a caller by its ELIN (Emergency Location Identifier Number) or the IETF Geopriv Civic Address based Location Configuration Information (Civic Address LCI).</p> <ul style="list-style-type: none"> • Coordinate-base LCI - latitude, longitude and altitude coordinates of the location Configuration Information (LCI) • Civic LCI - IETF Geopriv Civic Address based Location Configuration Information • ELIN - (Emergency Location Identifier Number) |

35.5 LLDP Remote Status

This screen displays a summary of LLDP status for each LLDP connection to a neighboring Switch. Click **Advanced Application > LLDP > LLDP Remote Status** to display the screen as shown next.

Figure 255 Advanced Application > LLDP > LLDP Remote Status (Standalone mode)

| Index | Local Port | Chassis ID | Port ID | Port Description | System Name | Management Address |
|-------|------------|------------|---------|------------------|-------------|--------------------|
|-------|------------|------------|---------|------------------|-------------|--------------------|

Figure 256 Advanced Application > LLDP > LLDP Remote Status (Stacking mode)

| Index | Local Port | Chassis ID | Port ID | Port Description | System Name | Management Address |
|-------|------------|------------|---------|------------------|-------------|--------------------|
|-------|------------|------------|---------|------------------|-------------|--------------------|

The following table describes the labels in this screen.

Table 170 Advanced Application > LLDP > LLDP Remote Status

| LABEL | DESCRIPTION |
|----------------------|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Index | The index number shows the number of remote devices that are connected to the Switch. Click on an index number to view the detailed LLDP status for this remote device in the LLDP Remote Port Status Detail screen. |
| Local Port | This is the number of the Switch's port that received LLDPDU from the remote device. In stacking mode, the first number represents the slot and the second the port number. |
| Chassis ID | This displays the chassis ID of the remote device associated with the transmitting LLDP agent. The chassis ID is identified by the chassis ID subtype. For example, the MAC address of the remote device. |
| Port ID | This is an alpha-numeric string that contains the specific identifier for the port from which this LLDPDU was transmitted. The port ID is identified by the port ID subtype. |
| Port Description | This displays a description for the port from which this LLDPDU was transmitted. |
| System Name | This displays the system name of the remote device. |
| Management Address | This displays the management address of the remote device. It could be the MAC address or IP address. You can click on the IP address hyperlink directly. |

35.5.1 LLDP Remote Port Status Detail

This screen displays detailed LLDP status of the remote device connected to the Switch. Click **Advanced Application > LLDP > LLDP Remote Status** and then click an index number, for example 1, in the **Index** column in the **LLDP Remote Status** screen to display the screen as shown next.

Figure 257 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (Basic TLV)

| TLV Label | Subtype Label | Value |
|-------------------------|-------------------------------|---|
| Chassis ID TLV | Chassis ID Subtype | network-address |
| | Chassis ID | 192.168.0.101 |
| Port ID TLV | Port ID Subtype | local-assigned |
| | Port ID | 00041324BEF2 P1 |
| Time To Live TLV | Time To Live | 180 |
| Port Description TLV | Port Description | NET PORT |
| System Name TLV | System Name | sw03320 |
| System Description TLV | System Description | sw03320sw03320-SIP S 4.18.38.17(7.05-Aug-10 15:57 |
| System Capabilities TLV | System Capabilities Supported | bridgetelephone |
| | System Capabilities Enabled | bridgetelephone |
| Management Address TLV | Management Address Subtype | |
| | Management Address | |
| | Interface Number Subtype | |
| | Interface Number | |
| | Object Identifier | |

The following table describes the labels in Basic TLV part of the screen.

Table 171 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (Basic TLV)

| LABEL | DESCRIPTION |
|----------------------|---|
| Local Port | This displays the number of the Switch's port to which the remote device is connected. |
| Basic TLV | |
| Chassis ID TLV | <ul style="list-style-type: none"> Chassis ID Subtype - this displays how the chassis of the remote device is identified. Chassis ID - this displays the chassis ID of the remote device. The chassis ID is identified by the chassis ID subtype |
| Port ID TLV | <ul style="list-style-type: none"> Port ID Subtype - this displays how the port of the remote device is identified. Port ID - this displays the port ID of the remote device. The port ID is identified by the port ID subtype. |
| Time To Live TLV | This displays the time-to-live (TTL) multiplier of LLDP frames. The device information on the neighboring devices ages out and is discarded when its corresponding TTL expires. The TTL value is to multiply the TTL multiplier by the LLDP frames transmitting interval. |
| Port Description TLV | This displays the remote port description. |

Table 171 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (Basic TLV)

| LABEL | DESCRIPTION |
|-------------------------|---|
| System Name TLV | This displays the system name of the remote device. |
| System Description TLV | This displays the system description of the remote device. |
| System Capabilities TLV | This displays whether the system capabilities are enabled and supported on the remote device. <ul style="list-style-type: none"> System Capabilities Supported System Capabilities Enabled |
| Management Address TLV | This displays the following management address parameters of the remote device. <ul style="list-style-type: none"> Management Address Subtype Management Address Interface Number Subtype Interface Number Object Identifier |

Figure 258 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail> (Dot 1 and Dot3 TLV)

| Dot1 TLV | | |
|---------------------------------------|---------------------------------|--|
| Port VLAN ID TLV | Port VLAN ID | 100 |
| Port-Protocol VLAN ID TLV | Port-Protocol VLAN ID | 200 |
| | Port-Protocol VLAN ID Supported | Yes |
| | Port-Protocol VLAN ID Enabled | Yes |
| Vlan Name TLV | VLAN ID | 1 |
| | VLAN Name | VLAN 1 |
| Protocol Identity TLV | Protocol ID | 1 |
| Dot3 TLV | | |
| MAC Policy Configuration & Status TLV | AM Supported | Yes |
| | AM Enabled | Yes |
| | AM Advertised Capability | 00000001 00000001 00 00000001X 00000001X 00 00000001 00 |
| | Open MDI type | 00 |
| Link Aggregation TLV | Aggregation Capability | Yes |
| | Aggregation Status | Yes |
| | Aggregated Port ID | 1 |
| Power Via MDI TLV | Port Class | 1 20 |
| | MDI Supported | Yes |
| | MDI Enabled | Yes |
| | Port Controllable | No |
| | PSE Power Port | 1 |
| | Power Class | 1 |
| Max Frame Size TLV | Max Frame Size | 1500 |

The following table describes the labels in the Dot1 and Dot3 parts of the screen.

Table 172 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (Dot1 and Dot3 TLV)

| LABEL | DESCRIPTION |
|------------------------------------|--|
| Dot1 TLV | |
| Port VLAN ID TLV | This displays the VLAN ID of this port on the remote device. |
| Port-Protocol VLAN ID TLV | This displays the IEEE 802.1 Port Protocol VLAN ID TLV, which indicates whether the VLAN ID and whether it is enabled and supported on the port of remote Switch which sent the LLDPDU. <ul style="list-style-type: none"> • Port-Protocol VLAN ID • Port-Protocol VLAN ID Supported • Port-Protocol VLAN ID Enabled |
| Vlan Name TLV | This shows the VLAN ID and name for remote device port. <ul style="list-style-type: none"> • VLAN ID • VLAN Name |
| Protocol Identity TLV | The Protocol Identity TLV allows the Switch to advertise the particular protocols that are accessible through its port. |
| Dot3 TLV | |
| MAC PHY Configuration & Status TLV | The MAC/PHY Configuration/Status TLV advertises the bit-rate and duplex capability of the sending 802.3 node. It also advertises the current duplex and bit-rating of the sending node. Lastly, it advertises whether these setting were the result of auto-negotiation during link initiation or manual override. <ul style="list-style-type: none"> • AN Supported - Displays if the port supports or does not support auto-negotiation. • AN Enabled - The current auto-negotiation status of the port. • AN Advertised Capability - The auto-negotiation capabilities of the port. • Oper MAU Type - The current Medium Attachment Unit (MAU) type of the port |
| Link Aggregation TLV | The Link Aggregation TLV indicates whether the link is capable of being aggregated, whether the link is currently in an aggregation, and if in an aggregation, the port identification of the aggregation. <ul style="list-style-type: none"> • Aggregation Capability — The current aggregation capability of the port. • Aggregation Status — The current aggregation status of the port. • Aggregation Port ID — The aggregation ID of the current port. |
| Power Via MDI TLV | The Power Via MDI TLV allows network management to advertise and discover the MDI power support capabilities of the sending port on the remote device. <ul style="list-style-type: none"> • Port Class • MDI Supported • MDI Enabled • Pair Controlable • PSE Power Pairs • Power Class |
| Max Frame Size TLV | This displays the maximum supported frame size in octets. |

Figure 259 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (MED TLV)

| | | |
|-----------------------------|--------------------------|---|
| MED TLV | | |
| Capabilities TLV | Network Policy | Yes |
| | Location | Yes |
| | Extend Power via MDI PSE | No |
| | Extend Power via MDI PD | No |
| | Inventory Management | No |
| Device Type TLV | Device Type | Network Connectivity |
| Network Policy TLV | Voice | VLAN ID 10, tagged, known, L2 priority 7, DSCP 63 |
| | Voice Signaling | VLAN ID 100, tagged, known, L2 priority 2, DSCP 10 |
| | Guest Voice | VLAN ID 20, tagged, known, L2 priority 3, DSCP 12 |
| | Guest Voice Signaling | VLAN ID 0, untagged, known, L2 priority 0, DSCP 0 |
| | Skylphone Voice | VLAN ID 200, tagged, known, L2 priority 1, DSCP 1 |
| | Video Conferencing | VLAN ID 0, untagged, known, L2 priority 0, DSCP 0 |
| | Streaming Video | VLAN ID 300, tagged, known, L2 priority 4, DSCP 20 |
| | Video Signaling | VLAN ID 400, tagged, known, L2 priority 0, DSCP 0 |
| Location Identification TLV | Coordinate Base ECI | latitude north 0.0 longitude east 0.0095 altitude meters 0.0 datum NAD83 MLLW |
| | Coord ECI | country US city FRENCH LAKING NY 11 |
| | EIN | 03456789 |
| Inventory TLV | Hardware Revision | 54101114 10142500 |
| | Software Revision | VR 01A03A 03 10152003 |
| | Firmware Revision | VR 01A03A 03 10152003 |
| | Model Name | GS3700E* |
| | Manufacturer | H3C/H3C |

The following table describes the labels in the MED TLV part of the screen.

Table 173 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (MED TLV)

| LABEL | DESCRIPTION |
|-----------------------------|--|
| MED TLV | LLDP Media Endpoint Discovery (MED) is an extension of LLDP that provides additional capabilities to support media endpoint devices. MED enables advertisement and discovery of network policies, device location discovery to allow creation of location databases, and information for troubleshooting. |
| Capabilities TLV | This displays the MED capabilities the remote port supports. <ul style="list-style-type: none"> • Network Policy • Location • Extend Power via MDI PSE • Extend Power via MDI PD • Inventory Management |
| Device Type TLV | LLDP-MED endpoint device classes: <ul style="list-style-type: none"> • Endpoint Class I • Endpoint Class II • Endpoint Class III • Network Connectivity |
| Network Policy TLV | This displays a network policy for the specified application. <ul style="list-style-type: none"> • Voice • Voice-Signaling • Guest-Voice • Guest-Voice-Signaling • Softphone-Voice • Video-Conferencing • Streaming-Video • Video-Signaling |
| Location Identification TLV | This shows the location information of a caller by its: <ul style="list-style-type: none"> • Coordinate-base LCI - latitude and longitude coordinates of the Location Configuration Information (LCI) • Civic LCI - IETF Geopriv Civic Address based Location Configuration Information • ELIN - (Emergency Location Identifier Number) |

Table 173 Advanced Application > LLDP > LLDP Remote Status > LLDP Remote Port Status Detail (MED TLV) (continued)

| LABEL | DESCRIPTION |
|----------------------------|--|
| Inventory TLV | <p>The majority of IP Phones lack support of management protocols such as SNMP, so LLDP-MED inventory TLVs are used to provide their inventory information to the Network Connectivity Devices such as the Switch. The Inventory TLV may contain the following information.</p> <ul style="list-style-type: none"> • Hardware Revision • Software Revision • Firmware Revision • Model Name • Manufacturer • Serial Number • Asset ID |
| Extended Power via MDI TLV | <p>Extended Power Via MDI Discovery enables detailed power information to be advertised by Media Endpoints, such as IP phones and Network Connectivity Devices such as the Switch.</p> <ul style="list-style-type: none"> • Power Type - whether it is currently operating from primary power or is on backup power (backup power may indicate to the Endpoint Device that it should move to a power conservation mode). • Power Source - whether or not the Endpoint is currently operating from an external power source. • Power Priority - the Endpoint Device's power priority (which the Network Connectivity Device may use to prioritize which devices will remain in service during power shortages) • Power Value - power requirement, in fractions of Watts, in current configuration |

35.6 LLDP Configuration

Use this screen to configure global LLDP settings on the Switch. Click **Advanced Application > LLDP > LLDP Configuration** to display the screen as shown next.

Figure 260 Advanced Application > LLDP > LLDP Configuration (Standalone mode)

LLDP Configuration Basic TLV Setting Org-specific TLV Setting LLDP

Active

Transmit Interval seconds

Transmit Hold times

Transmit Delay seconds

Reinitialize Delay seconds

| Port | Admin Status | Notification |
|------|--------------|--------------------------|
| * | Disable ▼ | <input type="checkbox"/> |
| 1 | Tx-Rx ▼ | <input type="checkbox"/> |
| 2 | Tx-Rx ▼ | <input type="checkbox"/> |
| 3 | Tx-Rx ▼ | <input type="checkbox"/> |
| 4 | Tx-Rx ▼ | <input type="checkbox"/> |
| 5 | Tx-Rx ▼ | <input type="checkbox"/> |
| 6 | Tx-Rx ▼ | <input type="checkbox"/> |
| 7 | Tx-Rx ▼ | <input type="checkbox"/> |
| 8 | Tx-Rx ▼ | <input type="checkbox"/> |
| 9 | Tx-Rx ▼ | <input type="checkbox"/> |
| 10 | Tx-Rx ▼ | <input type="checkbox"/> |
| 11 | Tx-Rx ▼ | <input type="checkbox"/> |
| 12 | Tx-Rx ▼ | <input type="checkbox"/> |
| 13 | Tx-Rx ▼ | <input type="checkbox"/> |
| 14 | Tx-Rx ▼ | <input type="checkbox"/> |
| 15 | Tx-Rx ▼ | <input type="checkbox"/> |
| 16 | Tx-Rx ▼ | <input type="checkbox"/> |
| 17 | Tx-Rx ▼ | <input type="checkbox"/> |
| 18 | Tx-Rx ▼ | <input type="checkbox"/> |
| 19 | Tx-Rx ▼ | <input type="checkbox"/> |
| 20 | Tx-Rx ▼ | <input type="checkbox"/> |
| 21 | Tx-Rx ▼ | <input type="checkbox"/> |
| 22 | Tx-Rx ▼ | <input type="checkbox"/> |
| 23 | Tx-Rx ▼ | <input type="checkbox"/> |
| 24 | Tx-Rx ▼ | <input type="checkbox"/> |
| 25 | Tx-Rx ▼ | <input type="checkbox"/> |
| 26 | Tx-Rx ▼ | <input type="checkbox"/> |
| 27 | Tx-Rx ▼ | <input type="checkbox"/> |
| 28 | Tx-Rx ▼ | <input type="checkbox"/> |
| 29 | Tx-Rx ▼ | <input type="checkbox"/> |
| 30 | Tx-Rx ▼ | <input type="checkbox"/> |
| 31 | Tx-Rx ▼ | <input type="checkbox"/> |
| 32 | Tx-Rx ▼ | <input type="checkbox"/> |
| 33 | Tx-Rx ▼ | <input type="checkbox"/> |
| 34 | Tx-Rx ▼ | <input type="checkbox"/> |
| 35 | Tx-Rx ▼ | <input type="checkbox"/> |
| 36 | Tx-Rx ▼ | <input type="checkbox"/> |
| 37 | Tx-Rx ▼ | <input type="checkbox"/> |
| 38 | Tx-Rx ▼ | <input type="checkbox"/> |
| 39 | Tx-Rx ▼ | <input type="checkbox"/> |
| 40 | Tx-Rx ▼ | <input type="checkbox"/> |
| 41 | Tx-Rx ▼ | <input type="checkbox"/> |
| 42 | Tx-Rx ▼ | <input type="checkbox"/> |
| 43 | Tx-Rx ▼ | <input type="checkbox"/> |
| 44 | Tx-Rx ▼ | <input type="checkbox"/> |
| 45 | Tx-Rx ▼ | <input type="checkbox"/> |
| 46 | Tx-Rx ▼ | <input type="checkbox"/> |
| 47 | Tx-Rx ▼ | <input type="checkbox"/> |
| 48 | Tx-Rx ▼ | <input type="checkbox"/> |
| 49 | Tx-Rx ▼ | <input type="checkbox"/> |
| 50 | Tx-Rx ▼ | <input type="checkbox"/> |
| 51 | Tx-Rx ▼ | <input type="checkbox"/> |
| 52 | Tx-Rx ▼ | <input type="checkbox"/> |

Figure 261 Advanced Application > LLDP > LLDP Configuration (Stacking mode)

The following table describes the labels in this screen.

Table 174 Advanced Application > LLDP > LLDP Configuration

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select to enable LLDP on the Switch. It is enabled by default. |
| Transmit Interval | Enter how many seconds the Switch waits before sending LLDP packets. |
| Transmit Hold | Enter the time-to-live (TTL) multiplier of LLDP frames. The device information on the neighboring devices ages out and is discarded when its corresponding TTL expires. The TTL value is to multiply the TTL multiplier by the LLDP packets transmitting interval. |
| Transmit Delay | Enter the delay (in seconds) between successive LLDPDU transmissions initiated by value or status changes in the Switch MIB. |
| Reinitialize Delay | Enter the number of seconds for LLDP to wait before initializing on a port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This displays the Switch's port number. * means all ports (on the same Switch). In Stacking mode, the first number means Slot ID and the second is the port. |

Table 174 Advanced Application > LLDP > LLDP Configuration

| LABEL | DESCRIPTION |
|--------------|--|
| Admin Status | Select whether LLDP transmission and/or reception is allowed on this port. <ul style="list-style-type: none"> • Disable - not allowed • Tx-Only - transmit only • Rx-Only - receive only • Tx-Rx - transmit and receive |
| Notification | Select whether LLDP notification is enabled on this port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

35.6.1 LLDP Configuration Basic TLV Setting

Use this screen to configure Basic TLV settings. Click **Advanced Application > LLDP > LLDP Configuration > Basic TLV Setting** to display the screen as shown next.

Figure 262 Advanced Application > LLDP > LLDP Configuration > Basic TLV Setting (Standalone mode)

| Basic TLV Setting | | | | | LLDP Configuration |
|-------------------|--------------------------|------------------|---------------------|--------------------|--------------------|
| Port | Management Address | Port Description | System Capabilities | System Description | System Name |
| 1 | <input type="checkbox"/> | | | | |
| 2 | <input type="checkbox"/> | | | | |
| 3 | <input type="checkbox"/> | | | | |
| 4 | <input type="checkbox"/> | | | | |
| 5 | <input type="checkbox"/> | | | | |
| 6 | <input type="checkbox"/> | | | | |
| 7 | <input type="checkbox"/> | | | | |
| 8 | <input type="checkbox"/> | | | | |
| 9 | <input type="checkbox"/> | | | | |
| 10 | <input type="checkbox"/> | | | | |
| 11 | <input type="checkbox"/> | | | | |
| 12 | <input type="checkbox"/> | | | | |
| 13 | <input type="checkbox"/> | | | | |
| 14 | <input type="checkbox"/> | | | | |
| 15 | <input type="checkbox"/> | | | | |
| 16 | <input type="checkbox"/> | | | | |
| 17 | <input type="checkbox"/> | | | | |
| 51 | <input type="checkbox"/> | | | | |
| 52 | <input type="checkbox"/> | | | | |

Apply Cancel

Figure 263 Advanced Application > LLDP > LLDP Configuration > Basic TLV Setting (Stacking mode)

| Port | Management Address | Port Description | System Capabilities | System Description | System Name |
|------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| 17 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 111 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 112 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 113 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 114 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 115 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 116 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 117 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 144 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 145 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 150 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |

The following table describes the labels in this screen.

Table 175 Advanced Application > LLDP > LLDP Configuration > Basic TLV Setting

| LABEL | DESCRIPTION |
|----------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This displays the Switch's port number. |
| Management Address | Select the check box(es) to enable or disable the sending of Management Address TLVs on the port(s). |
| Port Description | Select the check box(es) to enable or disable the sending of Port Description TLVs on the port(s). |
| System Capabilities | Select the check box(es) to enable or disable the sending of System Capabilities TLVs on the port(s). |
| System Description | Select the check box(es) to enable or disable the sending of System Description TLVs on the port(s). |
| System Name | Select the check box(es) to enable or disable the sending of System Name TLVs on the port(s). |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

35.6.2 LLDP Configuration Basic Org-specific TLV Setting

Use this screen to configure organization-specific TLV settings. Click **Advanced Application > LLDP > LLDP Configuration > Org-specific TLV Setting** to display the screen as shown next.

Figure 264 Advanced Application > LLDP > LLDP Configuration> Org-specific TLV Setting (Standalone mode)

| Port | Dot1 TLV | | Link Aggregation | Dot3 TLV | | Power Via MDI |
|------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|
| | Port-Protocol | VLAN ID | | MAC/PHY | Max Frame Size | |
| 1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 17 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 18 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 19 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Figure 265 Advanced Application > LLDP > LLDP Configuration> Org-specific TLV Setting (Stacking mode)

| Port | Dot1 TLV | | Link Aggregation | Dot3 TLV | | Power Via MDI |
|------|--------------------------|-------------------------------------|--------------------------|-------------------------------------|--------------------------|--------------------------|
| | Port-Protocol | VLAN ID | | MAC/PHY | Max Frame Size | |
| 101 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 102 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 103 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 104 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 105 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 106 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 107 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 149 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 150 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

The following table describes the labels in this screen.

Table 176 Advanced Application > LLDP > LLDP Configuration > Org-specific TLV Setting

| LABEL | DESCRIPTION |
|----------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This displays the Switch's port number. |
| Dot1 TLV | |

Table 176 Advanced Application > LLDP > LLDP Configuration > Org-specific TLV Setting

| LABEL | DESCRIPTION |
|-----------------------|--|
| Port-Protocol VLAN ID | Select the check box(es) to enable or disable the sending of IEEE 802.1 Port and Protocol VLAN ID TLVs on the port(s). |
| Port VLAN ID | Select the check box(es) to enable or disable the sending of IEEE 802.1 Port VLAN ID TLVs on the port(s). All check boxes in this column are enabled by default. |
| Dot3 TLV | |
| Link Aggregation | Select the check box(es) to enable or disable the sending of IEEE 802.3 Link Aggregation TLVs on the port(s). |
| MAC/PHY | Select the check box(es) to enable or disable the sending of IEEE 802.3 MAC/PHY Configuration/Status TLVs on the port(s). All check boxes in this column are enabled by default. |
| Max Frame Size | Select the check box(es) to enable or disable the sending of IEEE 802.3 Max Frame Size TLVs on the port(s). |
| Power Via MDI | <p>Note: For PoE models only.</p> <p>The Power Via MDI TLV allows network management to advertise and discover the MDI power support capabilities of the sending port on the remote device.</p> <ul style="list-style-type: none"> • Port Class • MDI Supported • MDI Enabled • Pair Controlable • PSE Power Pairs • Power Class |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

35.7 LLDP-MED Configuration

Click **Advanced Application > LLDP > LLDP-MED Configuration** to display the screen as shown next.

Figure 266 Advanced Application > LLDP > LLDP-MED Configuration (Standalone mode)

| LLDP-MED Configuration | | | LLDP |
|------------------------|--------------------------|--------------------------|--------------------------|
| Port | Notification | MED TLV Setting | |
| | Topology Change | Location | Network Policy |
| * | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 17 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 18 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

Figure 267 Advanced Application > LLDP > LLDP-MED Configuration (Stacking mode)

| LLDP-MED Configuration | | | LLDP |
|------------------------|--------------------------|--------------------------|--------------------------|
| SLOT 1 ▾ | | | |
| Port | Notification | MED TLV Setting | |
| | Topology Change | Location | Network Policy |
| 1/ | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/48 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

The following table describes the labels in this screen.

Table 177 Advanced Application > LLDP > LLDP-MED Configuration

| LABEL | DESCRIPTION |
|----------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This displays the Switch's port number. Select * to configure all ports (in the same Switch) simultaneously. In Stacking mode, the first number means Slot ID and the second is the port. |
| Notification | |
| Topology Change | Select to enable LLDP-MED topology change traps on this port. |
| MED TLV Setting | |
| Location | Select to enable transmitting LLDP-MED location TLV. |
| Network Policy | Select to enable transmitting LLDP-MED Network Policy TLV. |
| Apply | Click Apply to save the changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

35.8 LLDP-MED Network Policy

Click **Advanced Application > LLDP > LLDP-MED Network Policy** to display the screen as shown next.

Figure 268 Advanced Application > LLDP > LLDP-MED Network Policy (Standalone mode)

The screenshot displays the 'LLDP-MED Network Policy' configuration interface. The top section contains a form with the following fields and values:

- Port: (empty)
- Application Type: voice
- Tag: tagged
- VLAN: (empty)
- DSCP: (empty)
- Priority: 0

Below the form are 'Add' and 'Cancel' buttons. The bottom section features a table with the following columns: Index, Port, Application Type, Tag, VLAN, Priority, DSCP, and a checkbox. Below the table are 'Delete' and 'Cancel' buttons.

Figure 269 Advanced Application > LLDP > LLDP-MED Network Policy (Stacking mode)

The screenshot shows the 'LLDP-MED Network Policy' configuration window. The 'Port' field is split into two boxes, with the first containing '1' and the second containing '/'. The 'Application Type' dropdown is set to 'voice'. The 'Tag' dropdown is set to 'tagged'. The 'VLAN' and 'DSCP' fields are empty. The 'Priority' dropdown is set to '0'. Below the form are 'Add' and 'Cancel' buttons. At the bottom, there is a table with columns: Index, Port, Application Type, Tag, VLAN, Priority, DSCP, and a 'Delete' button.

The following table describes the labels in this screen.

Table 178 Advanced Application > LLDP > LLDP-MED Network Policy

| LABEL | DESCRIPTION |
|------------------|--|
| Port | Enter the port number to set up the LLDP-MED network policy. For Stacking mode the first field box is the Slot ID, the second field box is the port. |
| Application Type | Select the type of application used in the network policy. <ul style="list-style-type: none"> • voice • voice-signaling • guest-voice • guest-voice-signaling • softphone-voice • video-conferencing • streaming-video • video-signaling |
| Tag | Select to tag or untag in the network policy. <ul style="list-style-type: none"> • tagged • untagged |
| VLAN | Enter the VLAN ID number. It should be from 1 to 4094. For priority tagged frames, enter "0". |
| DSCP | Enter the DSCP value of the network policy. The value is defined from 0 through 63 with the 0 representing use of the default DSCP value. |
| Priority | Enter the priority value for the network policy. |
| Add | Click Add after finish entering the network policy information. A summary table will list all the Switch you've added. |
| Cancel | Click Cancel to begin entering the information afresh. |
| Index | This field displays the of index number of the network policy. Click an index number to edit the rule. |
| Port | This field displays the port number of the network policy. In stacking mode, the first number represents the slot and the second the port number. |
| Application Type | This field displays the application type of the network policy. |
| Tag | This field displays the Tag Status of the network policy. |
| VLAN | This field displays the VLANID of the network policy. |
| Priority | This field displays the priority value of the network policy. |

Table 178 Advanced Application > LLDP > LLDP-MED Network Policy

| LABEL | DESCRIPTION |
|--------|---|
| DSCP | This field displays the DSCP value of the network policy. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the rules that you want to remove, then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkboxes. |

35.9 LLDP-MED Location

Click **Advanced Application > LLDP > LLDP-MED Location** to display the screen as shown next.

Figure 270 Advanced Application > LLDP > LLDP-MED Location (Standalone mode)

Figure 271 Advanced Application > LLDP > LLDP-MED Location (Stacking mode)

The following table describes the labels in this screen.

Table 179 Advanced Application > LLDP > LLDP-MED Location

| LABEL | DESCRIPTION |
|----------------------|--|
| Port | Enter the port number you want to set up the location within the LLDP-MED network. For Stacking mode the first field box is the Slot ID, the second field box is the port. |
| Location Coordinates | The LLDP-MED uses geographical coordinates and Civic Address to set the location information of the remote device. Geographical based coordinates includes latitude, longitude, altitude and datum. Civic Address includes Country, State, County, City, Street and other related information. |
| Latitude | Enter the latitude information. The value should be from 0° to 90°. <ul style="list-style-type: none"> • north • south |
| Longitude | Enter the longitude information. The value should be from 0° to 180°. <ul style="list-style-type: none"> • west • east |
| Altitude | Enter the altitude information. The value should be from -2097151 to 2097151 in meters or in floors. <ul style="list-style-type: none"> • meters • floor |

Table 179 Advanced Application > LLDP > LLDP-MED Location

| LABEL | DESCRIPTION |
|----------------------|--|
| Datum | Select the appropriate geodetic datum used by GPS. <ul style="list-style-type: none"> • WGS84 • NAD83-NAVD88 • NAD83-MLLW |
| Civic Address | Enter the Civic Address by providing information such as Country, State, County, City, Street, Number, ZIP code and other additional information. Enter at least two field in this configuration including the Country. The valid length of the Country field is 2 characters and all other fields are up to 32 characters. <ul style="list-style-type: none"> • Country • State • County • City • Division • Neighbor • Street • Leading-Street-Direction • Street-Suffix • Trailing-Street-Suffix • House-Number • House-Number-Suffix • Landmark • Additional-Location • Name • Zip-Code • Building • Unit • Floor • Room-Number • Place-Type • Postal-Community-Name • Post-Office-Box • Additional-Code |
| ELIN Number | Enter a numerical digit string, corresponding to the ELIN identifier which is used during emergency call setup to a traditional CAMA or ISDN trunk-based PSAP. The valid length is from 10 characters to 25 characters. |
| Add | Click Add after finish entering the location information. |
| Cancel | Click Cancel to begin entering the location information afresh. |
| Index | This lists the index number of the location configuration. Click an index number to view or edit the location. |
| Port | This lists the port number of the location configuration. In stacking mode, the first number represents the slot and the second the port number. |
| Location Coordinates | This field displays the location configuration information based on geographical coordinates that includes longitude, latitude, altitude and datum. |
| Civic Address | This field displays the Civic Address for the remote device using information such as Country, State, County, City, Street, Number, ZIP code and additional information. |
| ELIN Number | This field shows the Emergency Location Identification Number (ELIN), which is used to identify endpoint devices when they issue emergency call services. The valid length is form 10 characters to 25 characters. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |

Table 179 Advanced Application > LLDP > LLDP-MED Location

| LABEL | DESCRIPTION |
|--------|---|
| Delete | Check the locations that you want to remove, then click the Delete button. |
| Cancel | Click Cancel to clear the selected check boxes. |

Anti-Arpscan

36.1 Anti-Arpscan Overview

Address Resolution Protocol (ARP), RFC 826, is a protocol used to convert a network-layer IP address to a link-layer MAC address. ARP scan is used to scan the network of a certain interface for alive hosts. It shows the IP address and MAC addresses of all hosts found. Hackers could use ARP scan to find targets in your network. **Anti-arpscan** is used to detect unusual ARP scan activity and block suspicious hosts or ports.

Unusual ARP scan activity is determined by port and host thresholds that you set. A port threshold is determined by the number of packets received per second on the port. If the received packet rate is over the threshold, then the port is put into an **Err-Disable** state. You can recover the normal state of the port manually if this happens and after you identify the cause of the problem.

A host threshold is determined by the number of ARP-request packets received per second. There is a global threshold rate for all hosts. If the rate of a host is over the threshold, then that host is blocked by using a MAC address filter. A blocked host is released automatically after the MAC aging time expires.

Note: A port-based threshold must be larger than the host-based threshold or the host-based threshold will not work.

36.1.1 What You Can Do

- Use the **Anti-Arpscan Status** screen ([Section 36.2 on page 373](#)) to see what ports are trusted and are forwarding traffic or are disabled.
- Use the **Anti-Arpscan Host Status** screen ([Section 36.3 on page 374](#)) to view blocked hosts and clear selected ones.
- Use the **Anti-Arpscan Trust Host** screen ([Section 36.4 on page 374](#)) to create or remove trusted hosts identified by IP address and subnet mask. **Anti-arpscan** is not performed on trusted hosts.
- Use this **Anti-Arpscan Configure** screen ([Section 36.5 on page 375](#)) to enable anti-arpscan, set port and host thresholds as well as configure ports to be trusted or untrusted.

36.1.2 What You Need to Know

- You should set an uplink port as a trusted port before enabling **Anti-arpscan** so as to prevent the port from being shutdown due to receiving too many ARP messages.
- When a port is configured as a trusted port, **Anti-arpscan** is not performed on the port. Both host and port thresholds are ignored for trusted ports. If the received ARP packet rate on a port or the received ARP-requests from a host exceed the thresholds, the trusted port will not be closed.
- If a port on the Switch is closed by **Anti-arpscan**, and you want to recover it, then do one of the following:

- Go to **Basic Setting > Port Setup**. Clear **Active** and click **Apply**. Then select **Active** and click **Apply** again.
- Go to **Application > Errdisable > Errdisable Recovery** and set the interval for **Anti-arpscan**. After the interval expires, the closed port(s) will become active and start receiving packets again.
- Use the command `port no inactive`.
- Refer to the port logs to see when a port was closed.

36.2 Anti-Arpscan Status

Use this screen to see what ports are trusted and are forwarding traffic or are disabled. To open this screen, click **Advanced Application > Anti-Arpscan**.

Figure 272 Advanced Application > Anti-Arpscan Status

| Port | Trusted | State |
|------|---------|------------|
| 1 | No | Forwarding |
| 2 | No | Forwarding |
| 3 | No | Forwarding |
| 4 | No | Forwarding |
| 5 | No | Forwarding |
| 6 | No | Forwarding |
| 7 | No | Forwarding |
| 8 | No | Forwarding |
| 9 | No | Forwarding |
| 10 | No | Forwarding |
| 11 | No | Forwarding |
| 12 | No | Forwarding |
| 13 | No | Forwarding |
| 14 | No | Forwarding |
| 15 | No | Forwarding |
| 16 | No | Forwarding |
| 17 | No | Forwarding |

The following table describes the fields in the above screen.

Table 180 Advanced Application > Anti-Arpscan Status

| LABEL | DESCRIPTION |
|---------------------|--|
| Anti-Arpscan is.... | This shows whether Anti-arpscan is enabled or disabled on the Switch. |
| Port | This field displays the port number of the Switch. |
| Trusted | This field displays whether the port is trusted or untrusted. Anti-arpscan is not performed on a trusted port. |
| State | This field displays whether the port can forward traffic normally (Forwarding) or is disabled (Err-Disable). |

36.3 Anti-Arpscan Host Status

Use this screen to view blocked hosts and unblock ones connected to certain ports. To open this screen, click **Advanced Application > Anti-Arpscan > Host Status**.

Figure 273 Advanced Application > Anti-Arpscan > Host Status

The following table describes the fields in the above screen.

Table 181 Advanced Application > Anti-Arpscan > Host Status

| LABEL | DESCRIPTION |
|----------------------|---|
| Clear Filtered host: | A filtered host is a blocked IP address. |
| Port List | Type a port number or a series of port numbers separated by commas and spaces, and then click Clear to unblock all hosts connected to these ports. |
| Filtered host: | This table lists information on blocked hosts. |
| Index | This displays the index number of an IP address (a host) that has been blocked. |
| Host IP | This displays the IP address of the blocked host. |
| MAC | This displays the MAC address of the blocked host. |
| VLAN | This displays the VLAN ID that shows which VLAN the blocked host is in. |
| Port | This displays the port number to which the blocked host is connected. |
| State | This shows Err-Disable if the ARP-request rate from this host is over the threshold. Forwarding hosts are not displayed. |

36.4 Anti-Arpscan Trust Host

Use this screen to create or remove trusted hosts identified by IP address and subnet mask. **Anti-arpscan** is not performed on trusted hosts. To open this screen, click **Advanced Application > Anti-Arpscan > Trust Host**.

Figure 274 Advanced Application > Anti-Arpscan > Trust Host

The following table describes the fields in the above screen.

Table 182 Advanced Application > Anti-Arpscan > Trust Host

| LABEL | DESCRIPTION |
|---------|---|
| Name | Type a descriptive name of up to 32 printable ASCII characters to identify this host. |
| Host IP | Type the IP address of the host. |
| Mask | A trusted host may consist of a subnet of IP addresses. Type a subnet mask to create a single host or a subnet of hosts. |
| Add | Click this to create the trusted host. |
| Cancel | Click this to reset the values above based or, if not applicable, to clear the fields above. |
| Clear | Click this to clear the fields above. |
| Index | This field displays a sequential number for each trusted host. |
| Name | This field displays the name of the trusted host. |
| Host IP | This field displays the IP address of the trusted host. |
| Mask | This field displays the subnet mask of the trusted host. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Select an entry checkbox and click Delete to remove the specified entry. |
| Cancel | Click this to clear the check boxes above. |

36.5 Anti-Arpscan Configure

Use this screen to enable **Anti-Arpscan**, set port and host thresholds as well as configure ports to be trusted or untrusted. To open this screen, click **Advanced Application > Anti-Arpscan > Configure**.

Figure 275 Advanced Application > Anti-Arpscan > Configure

| Port | Trusted State |
|------|---------------|
| * | Untrusted ▼ |
| 1 | Untrusted ▼ |
| 2 | Untrusted ▼ |
| 3 | Untrusted ▼ |
| 4 | Untrusted ▼ |
| 5 | Untrusted ▼ |
| 6 | Untrusted ▼ |
| 7 | Untrusted ▼ |
| 8 | Untrusted ▼ |
| 9 | Untrusted ▼ |
| 10 | Untrusted ▼ |
| 11 | Untrusted ▼ |
| 12 | Untrusted ▼ |
| 13 | Untrusted ▼ |
| 14 | Untrusted ▼ |
| 15 | Untrusted ▼ |
| 16 | Untrusted ▼ |
| 17 | Untrusted ▼ |
| 18 | Untrusted ▼ |
| 19 | Untrusted ▼ |
| 20 | Untrusted ▼ |
| 21 | Untrusted ▼ |
| 22 | Untrusted ▼ |
| 23 | Untrusted ▼ |
| 24 | Untrusted ▼ |
| 25 | Untrusted ▼ |
| 26 | Untrusted ▼ |
| 27 | Untrusted ▼ |
| 28 | Untrusted ▼ |
| 29 | Untrusted ▼ |
| 30 | Untrusted ▼ |
| 31 | Untrusted ▼ |
| 32 | Untrusted ▼ |
| 33 | Untrusted ▼ |
| 34 | Untrusted ▼ |
| 35 | Untrusted ▼ |
| 36 | Untrusted ▼ |
| 37 | Untrusted ▼ |
| 38 | Untrusted ▼ |
| 39 | Untrusted ▼ |
| 40 | Untrusted ▼ |
| 41 | Untrusted ▼ |
| 42 | Untrusted ▼ |
| 43 | Untrusted ▼ |
| 44 | Untrusted ▼ |
| 45 | Untrusted ▼ |
| 46 | Untrusted ▼ |
| 47 | Untrusted ▼ |
| 48 | Untrusted ▼ |
| 49 | Untrusted ▼ |
| 50 | Untrusted ▼ |
| 51 | Untrusted ▼ |
| 52 | Untrusted ▼ |

The following table describes the fields in the above screen.

Table 183 Advanced Application > Anti-Arpscan > Configure

| LABEL | DESCRIPTION |
|----------------|--|
| Active | Select this to enable Anti-arpscan on the Switch. |
| Port Threshold | <p>A port threshold is determined by the number of packets received per second on the port. If the received packet rate is over the threshold, then the port is put into an Err-Disable state. Type the maximum number of packets per second allowed on the port before it is blocked.</p> <p>Note: The allowed range is 2 to 255 packets received per second.</p> |
| Host Threshold | <p>A host threshold is determined by the number of ARP-request packets received per second. This is the global threshold rate for all hosts. If the rate of a host is over the threshold, then that host is blocked by using a MAC address filter. A blocked host is released automatically after the MAC aging time expires.</p> <p>Type the maximum number of ARP-request packets allowed by a host before it is blocked.</p> <p>Note: The allowed range is 2 to 100 ARP-request packets per second.</p> <p>Note: The port-based threshold must be larger than the host-based threshold or the host-based threshold will not be applied.</p> |
| Port | Use port * to have all ports be Untrusted or Trusted . Anti-arpscan is not performed on trusted hosts. |

Table 183 Advanced Application > Anti-Arpscan > Configure

| LABEL | DESCRIPTION |
|---------------|--|
| Trusted State | Select Untrusted or Trusted for the associated port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

BPDU Guard

37.1 BPDU Guard Overview

A BPDU (Bridge Protocol Data Units) is a data frame that contains information about STP. STP-aware switches exchange BPDUs periodically.

The BPDU guard feature allows you to prevent any new STP-aware switch from connecting to an existing network and causing STP topology changes in the network. If there is any BPDU detected on the port(s) on which BPDU guard is enabled, the Switch disables the port(s) automatically. You can then enable the port(s) manually in the **Basic Setting > Port Setup** screen ([Section 6.6 on page 69](#)) or use the **Errdisable Recovery** screen (see [Section 31.6 on page 331](#)) to have the port(s) become active after a certain time interval.

37.1.1 What You Can Do

- Use the **BPDU Guard Status** screen ([Section 37.2 on page 378](#)) to view the BPDU guard status.
- Use the **BPDU Guard Configuration** screen ([Section 37.3 on page 379](#)) to enable BPDU guard on the Switch.

37.2 BPDU Guard Status

Use this screen to view whether BPDU guard is enabled on the Switch and the port status. Click **Advanced Application > BPDU Guard** in the navigation panel.

Figure 276 Advanced Application > BPDU Guard Staus

| BPDU Guard Status | | Configuration | |
|--|--------|---------------|--|
| BPDU guard globally configuration: Disable | | | |
| Port | Active | Status | |
| 1 | No | Forwarding | |
| 2 | No | Forwarding | |
| 3 | No | Forwarding | |
| 4 | No | Forwarding | |
| 5 | No | Forwarding | |
| 6 | No | Forwarding | |
| 7 | No | Forwarding | |
| 8 | No | Forwarding | |
| 9 | No | Forwarding | |
| 10 | No | Forwarding | |
| 11 | No | Forwarding | |
| 12 | No | Forwarding | |
| 13 | No | Forwarding | |
| 14 | No | Forwarding | |
| 15 | No | Forwarding | |
| 16 | No | Forwarding | |
| 17 | No | Forwarding | |
| 18 | No | Forwarding | |
| 51 | No | Forwarding | |
| 52 | No | Forwarding | |

The following table describes the fields in the above screen.

Table 184 Advanced Application > BPDU Guard Staus

| LABEL | DESCRIPTION |
|-----------------------------------|--|
| BPDU guard globally configuration | This field displays whether BPDU guard is activated on the Switch. |
| Port | This is the number of the port on the Switch. |
| Active | This shows whether BPDU guard is activated on the port. |
| Status | This shows whether the port is shut down (Err-disable) or able to transmit packets (Forwarding). |

37.3 BPDU Guard Configuration

Use this screen to turn on the BPDU guard feature on the Switch and port(s).

In the **BPDU Guard Status** screen click **Configuration** to display the configuration screen as shown.

Figure 277 Advanced Application > BPDU Guard > BPDU Guard Configuration

| Port | Active |
|------|--------------------------|
| * | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> |

The following table describes the fields in the above screen.

Table 185 Advanced Application > BPDU Guard > BPDU Guard Configuration

| LABEL | DESCRIPTION |
|--------|--|
| Active | Select this option to enable BPDU guard on the Switch. |
| Port | This field displays the Switch's port number |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable the BPDU guard feature on this port. The Switch shuts down this port if there is any BPDU received on the port. Clear this check box to disable the BPDU guard feature. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

38.1 OAM Overview

Link layer Ethernet OAM (Operations, Administration and Maintenance) as described in IEEE 802.3ah is a link monitoring protocol. It utilizes OAM Protocol Data Units or OAM PDUs to transmit link status information between directly connected Ethernet devices. Both devices must support IEEE 802.3ah. Because link layer Ethernet OAM operates at layer two of the OSI (Open Systems Interconnection Basic Reference) model, neither IP or SNMP are necessary to monitor or troubleshoot network connection problems.

The Switch supports the following IEEE 802.3ah features:

- Discovery - this identifies the devices on each end of the Ethernet link and their OAM configuration.
- Remote Loopback - this can initiate a loopback test between Ethernet devices.

38.1.1 What You Can Do

- Use the **OAM Status** screen ([Section 38.2 on page 381](#)) to view the configuration of ports on which Ethernet OAM is enabled.
- Use the **OAM Configuration** screen ([Section 38.3 on page 387](#)) to enable Ethernet OAM on the Switch.
- Use the **OAM Remote Loopback** screen ([Section 38.4 on page 389](#)) to perform remote-loopback tests.

38.2 OAM Status

Use this screen to view the configuration of ports on which Ethernet OAM is enabled. Click **Advanced Application > OAM** in the navigation panel.

Figure 278 Advanced Application > OAM Status (Standalone mode)

| OAM Status | | | | | | |
|-----------------|------|-------------|-----|--------|--------|--|
| OAM is disabled | | | | | | |
| Local | | | | Remote | | |
| Port | Mode | Mac Address | OUI | Mode | Config | |
| 1 | | | | | | |
| 2 | | | | | | |
| 3 | | | | | | |
| 4 | | | | | | |
| 5 | | | | | | |
| 6 | | | | | | |
| 7 | | | | | | |
| 8 | | | | | | |
| 9 | | | | | | |
| 10 | | | | | | |
| 11 | | | | | | |
| 12 | | | | | | |
| 13 | | | | | | |
| 14 | | | | | | |
| 15 | | | | | | |
| 16 | | | | | | |
| 17 | | | | | | |
| 18 | | | | | | |
| 48 | | | | | | |
| 49 | | | | | | |
| 50 | | | | | | |
| 51 | | | | | | |
| 52 | | | | | | |

Figure 279 Advanced Application > OAM Status (Stacking mode)

| OAM Status | | | | | | |
|-----------------|------|-------------|-----|--------|--------|--|
| OAM is disabled | | | | | | |
| SLOT 1 ▾ | | | | | | |
| Local | | | | Remote | | |
| Port | Mode | Mac Address | OUI | Mode | Config | |
| 1/1 | | | | | | |
| 1/2 | | | | | | |
| 1/3 | | | | | | |
| 1/4 | | | | | | |
| 1/5 | | | | | | |
| 1/6 | | | | | | |
| 1/7 | | | | | | |
| 1/8 | | | | | | |
| 1/9 | | | | | | |
| 1/45 | | | | | | |
| 1/49 | | | | | | |
| 1/50 | | | | | | |

The following table describes the fields in the above screen.

Table 186 Advanced Application > OAM Status

| LABEL | DESCRIPTION |
|---|---|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Local This section displays information about the ports on the Switch. | |
| Port | This field displays the number of the port on the Switch. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| Mode | This field displays the operational state of the port when OAM is enabled on the port. Active - Allows the port to issue and respond to Ethernet OAM commands. Passive - Allows the port to respond to Ethernet OAM commands. |
| Remote This section displays information about the remote device. | |
| Mac Address | This field displays the MAC address of the remote device. |
| OUI | This field displays the OUI (first three bytes of the MAC address) of the remote device. |
| Mode | This field displays the operational state of the port when OAM is enabled on the port. Active - Allows the port to issue and respond to Ethernet OAM commands. Passive - Allows the port to respond to Ethernet OAM commands. |
| Config | This field displays the capabilities of the Switch and remote device. |

38.2.1 OAM Details

Use this screen to view OAM configuration details and operational status of a specific port. Click a number in the **Port** column in the **OAM Status** screen to display the screen as shown next.

Figure 280 Advanced Application > OAM Status > OAM Details

| OAM Details | | OAM Status |
|-------------------|------------------------------|---------------------------|
| Port No: 1 | | |
| Discovery | Local Client | OAM configurations |
| | Mode | |
| | Unidirectional | |
| | Remote loopback | |
| | Link events | |
| | Variable retrieval | |
| | Max OAMPDU size | |
| | Local Client | Operational status |
| | Link status | |
| | Info revision | |
| | Parser state | |
| | Discovery state | |
| | Remote Client | |
| | MAC address | |
| | Vendor(out) | |
| | Remote Client | OAM configurations |
| | Mode | |
| | Unidirectional | |
| | Remote loopback | |
| | Link events | |
| | Variable retrieval | |
| | Max OAMPDU size | |
| | Remote Client | Operational status |
| | Info revision | |
| Statistics | | |
| | Information OAMPDU Tx | |
| | Information OAMPDU Rx | |
| | Event Notification OAMPDU Tx | |
| | Event Notification OAMPDU Rx | |
| | Loopback Control OAMPDU Tx | |
| | Loopback Control OAMPDU Rx | |
| | Variable Request OAMPDU Tx | |
| | Variable Request OAMPDU Rx | |
| | Variable Response OAMPDU Tx | |
| | Variable Response OAMPDU Rx | |
| | Unsupported OAMPDU Tx | |
| | Unsupported OAMPDU Rx | |

The following table describes the fields in the above screen.

Table 187 Advanced Application > OAM Status > OAM Details

| LABEL | DESCRIPTION |
|-----------------------------|--|
| Discovery | This section displays OAM configuration details and operational status of the port on the Switch and/or the remote device. |
| Local Client/ Remote Client | |
| OAM configurations | |

Table 187 Advanced Application > OAM Status > OAM Details

| LABEL | DESCRIPTION |
|--|---|
| Mode | <p>This field displays the OAM mode. The device in active mode (typically the service provider's device) controls the device in passive mode (typically the subscriber's device).</p> <p>Active: The port initiates OAM discovery; sends information PDUs; and may send event notification PDUs, variable request/response PDUs, or loopback control PDUs.</p> <p>Passive: The port waits for the remote device to initiate OAM discovery; sends information PDUs; may send event notification PDUs; and may respond to variable request PDUs or loopback control PDUs.</p> <p>The Switch might not support some types of PDUs, as indicated in the fields below.</p> |
| Unidirectional | This field indicates whether or not the port can send information PDUs to transmit fault information when the receive path is non-operational. |
| Remote loopback | This field indicates whether or not the port can use loopback control PDUs to put the remote device into loopback mode. |
| Link events | This field indicates whether or not the port can interpret link events, such as link fault and dying gasp. Link events are sent in event notification PDUs and indicate when the number of errors in a given interval (time, number of frames, number of symbols, or number of errored frame seconds) exceeds a specified threshold. Organizations may create organization-specific link event TLVs as well. |
| Variable retrieval | This field indicates whether or not the port can respond to requests for more information, such as requests for Ethernet counters and statistics, about link events. |
| Max. OAMPDU size | This field displays the maximum size of PDU for receipt and delivery. |
| Local Client/Remote Client OAM configurations | |
| Link status | This field indicates that the link between the Switch port and a connected IEEE 802.3ah-enabled remote Ethernet device is up or down. |
| Info. revision | This field displays the current version of local state and configuration. This two-octet value starts at zero and increments every time the local state or configuration changes. |
| Parser state | <p>This field indicates the current state of the parser.</p> <p>Forward: The port is forwarding packets normally.</p> <p>Loopback: The port is in loopback mode.</p> <p>Discard: The port is discarding non-OAMPDUs because it is trying to or has put the remote device into loopback mode.</p> |

Table 187 Advanced Application > OAM Status > OAM Details

| LABEL | DESCRIPTION |
|--|---|
| Discovery state | <p>This field indicates the state in the OAM discovery process. OAM-enabled devices use this process to detect each other and to exchange information about their OAM configuration and capabilities. OAM discovery is a handshake protocol.</p> <p>Fault: One of the devices is transmitting OAM PDUs with link fault information, or the interface is not operational.</p> <p>Active Send Local: The port is in active mode and is trying to see if the remote device supports OAM.</p> <p>Passive Wait: The port is in passive mode and is waiting for the remote device to begin OAM discovery.</p> <p>Send Local Remote: This state occurs in the following circumstances.</p> <ul style="list-style-type: none"> • The port has discovered the remote device but has not accepted or rejected the connection yet. • The port has discovered the remote device and rejected the connection. <p>Send Local Remote OK: The port has discovered the remote device and has accepted the connection. In addition, the remote device has not accepted or rejected the connection yet, or the remote device has rejected the connected.</p> <p>Send Any: The port and the remote device have accepted the connection. This is the operating state for OAM links that are fully operational.</p> |
| Statistics | |
| This section displays the number of OAM packets transferred on the port of the Switch. | |
| Information OAMPDU Tx | This field displays the number of OAM PDUs sent on the port. |
| Information OAMPDU Rx | This field displays the number of OAM PDUs received on the port. |
| Event Notification OAMPDU Tx | This field displays the number of unique or duplicate OAM event notification PDUs sent on the port. |
| Event Notification OAMPDU Rx | This field displays the number of unique or duplicate OAM event notification PDUs received on the port. |
| Loopback Control OAMPDU Tx | This field displays the number of loopback control OAM PDUs sent on the port. |
| Loopback Control OAMPDU Rx | This field displays the number of loopback control OAM PDUs received on the port. |
| Variable Request OAMPDU Tx | This field displays the number of OAM PDUs sent to request MIB objects on the remote device. |
| Variable Request OAMPDU Rx | This field displays the number of OAM PDUs received requesting MIB objects on the Switch. |
| Variable Response OAMPDU Tx | This field displays the number of OAM PDUs sent by the Switch in response to requests. |
| Variable Response OAMPDU Rx | This field displays the number of OAM PDUs sent by the remote device in response to requests. |
| Unsupported OAMPDU Tx | This field displays the number of unsupported OAM PDUs sent on the port. |
| Unsupported OAMPDU Rx | This field displays the number of unsupported OAM PDUs received on the port. |

38.3 OAM Configuration

Use this screen to turn on Ethernet OAM on the Switch and port(s) and configure the related settings.

In the **OAM Status** screen click **Configuration** to display the configuration screen as shown.

Figure 281 Advanced Application > OAM > OAM Configuration (Standalone mode)

| Port | Active | Mode | Remote Loopback Supported | Remote Loopback Ignore-Rx |
|------|--------------------------|----------|---------------------------|---------------------------|
| 0 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 17 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 18 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 19 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 20 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 21 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 22 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 23 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 24 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 25 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 26 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 27 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 28 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 29 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 30 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 31 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 32 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 33 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 34 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 35 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 36 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 37 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 38 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 39 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 40 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 41 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 42 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 43 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 44 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 45 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 46 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 47 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 48 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |

Apply Cancel

Figure 282 Advanced Application > OAM > OAM Configuration (Stacking mode)

| Port | Active | Mode | Remote Loopback Supported | Remote Loopback Ignore-Rx |
|------|-------------------------------------|----------|---------------------------|---------------------------|
| 1/* | <input checked="" type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/1 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/7 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/8 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/9 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/10 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/11 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| ... | | | | |
| 1/49 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> | Active ▼ | <input type="checkbox"/> | <input type="checkbox"/> |

The following table describes the fields in the above screen.

Table 188 Advanced Application > OAM > OAM Configuration

| LABEL | DESCRIPTION |
|---------------------------|---|
| Active | Select this option to enable Ethernet OAM on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This field displays the Switch's port number. In stacking mode, the first box field is the slot ID and the second field is the port number. * means all ports (on the same Switch). |
| * | Use this row to make the setting the same for all ports. Use this row first and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable Ethernet OAM on this port. Clear this check box to disable Ethernet OAM on the port. |
| Mode | Specify the OAM mode on the port. Select Active to allow the port to issue and respond to Ethernet OAM commands. Select Passive to allow the port to respond to Ethernet OAM commands. |
| Remote Loopback Supported | Select this check box to enable the remote loopback feature on the port. Otherwise, clear the check box to disable it. |
| Remote Loopback Ignore-Rx | Select this check box to set the Switch to process loopback commands received on the port. Otherwise, clear the check box to have the Switch ignore loopback commands received on the port. |

Table 188 Advanced Application > OAM > OAM Configuration

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

38.4 OAM Remote Loopback

Use this screen to perform a remote-loopback test. In the **OAM Status** screen click **Remote Loopback** to display the screen as shown.

Figure 283 Advanced Application > OAM > OAM Remote Loopback

The following table describes the fields in the above screen.

Table 189 Advanced Application > OAM > OAM Remote Loopback


| LABEL | DESCRIPTION |
|----------------------|--|
| Remote Loopback Test | |
| Port | Enter the number of the port from which the Switch performs a remote-loopback test. |
| Number of Packet | Define the allowable packet number of the loopback test frames. |
| Packet Size | Define the allowable packet size of the loopback test frames. |
| Test | Click Test to begin the test. |
| Remote Loopback Mode | |
| Port | Enter the number of the port from which the Switch sends loopback control PDUs to initiate or terminate a remote-loopback test. |
| Start | Click Start to initiate a remote-loopback test from the specified port by sending Enable Loopback Control PDUs to the remote device. |
| Stop | Click Stop to terminate a remote-loopback test from the specified port by sending Disable Loopback Control PDUs to the remote device. |

39.1 ZULD Overview

A unidirectional link is a connection where the link is up on both ends, but only one end can receive packets. This may happen if OAM was initially enabled but then disabled, there are misconfigured transmitting or receiving lines or the hardware is malfunctioning. ZyXEL Unidirectional Link Detection (**ZULD**) is a layer-2 protocol that can detect and disable these physical one-way links before they cause loops or communication malfunction.

In the figure below, S1 - A is a bidirectional link as both ends can send packets to each other. S1-B is unidirectional as B cannot send packets to S1 (although the S1-B link is up). Similarly, S2-S1 is unidirectional as S1 cannot send packets to S2 (although the S1-S2 link is up).

Figure 284 ZULD Overview

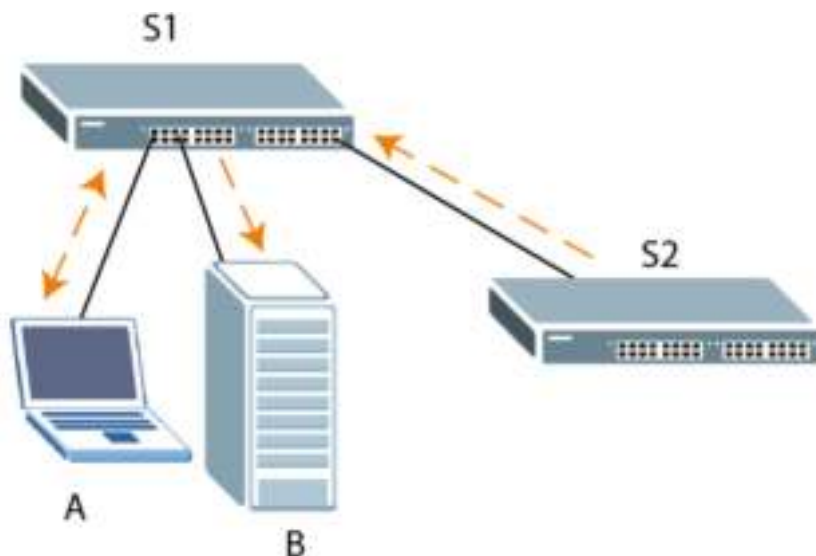

39.1.1 What You Can Do

- Use the **ZULD Status** screen ([Section 39.2 on page 391](#)) to see details on ZULD.
- Use the **ZULD Configuration** screen ([Section 39.3 on page 393](#)) to enable ZULD on a port, configure a mode and set the probe time.

39.1.2 What You Need to Know

- ZULD must be enabled on the Switch and the port(s) in order to detect unidirectional links by monitoring OAMPDUs.

- Ports advertise their unidirectional link detection capability using OAMPDUs, so all connected devices must support **OAM** as well as **ZULD**. You need to enable OAM on the Switch by going to **Advanced Application > OAM > Configuration** and selecting **Active**. OAM must be enabled on other connected devices too. If OAM is not enabled initially, **ZULD** will not work.
- If OAM is enabled initially and later disabled on one end of a link, the link will be unidirectional as that end cannot send OAMPDUs.
- OAM discovery, the sending of OAMPDUs to other ports, is initiated by an active port.
- When **ZULD** detects a unidirectional link, it sends a syslog and SNMP trap and may shut down the affected port (**Aggressive Mode**).
- If a port on the Switch is shut down by **ZULD**, and you want to recover it, then do one of the following:
 - Go to **Basic Setting > Port Setup**. Clear **Active** and click **Apply**. Then select **Active** and click **Apply** again.
 - Go to **Application > Errdisable > Errdisable Recovery** and set the interval for **ZULD**. After the interval expires, the closed port(s) will become active and start receiving packets again.
 - Use the command `port no inactive`.
- Refer to the ZULD logs to see when a unidirectional link is detected and when it is recovered to a bidirectional link.

39.2 ZULD Status

Use this screen to see details of unidirectional and bidirectional links discovered by **ZULD**. To open this screen, click **Advanced Application > ZULD**.

Figure 285 Advanced Application > ZULD Status

| ZULD Status | | | Configuration | | | | |
|------------------|--------|--------|---------------|------------|------------------|-----------------|-------------|
| ZULD is disabled | | | | | | | |
| Port | Active | Mode | Probe Time | Link State | Remote Operation | Remote MAC Addr | Remote Port |
| 1 | No | Normal | | | | | |
| 2 | No | Normal | | | | | |
| 3 | No | Normal | | | | | |
| 4 | No | Normal | | | | | |
| 5 | No | Normal | | | | | |
| 6 | No | Normal | | | | | |
| 7 | No | Normal | | | | | |
| 8 | No | Normal | | | | | |
| 9 | No | Normal | | | | | |
| 10 | No | Normal | | | | | |
| 11 | No | Normal | | | | | |
| 12 | No | Normal | | | | | |
| 13 | No | Normal | | | | | |
| 14 | No | Normal | | | | | |
| 15 | No | Normal | | | | | |
| 16 | No | Normal | | | | | |
| 17 | No | Normal | | | | | |
| 18 | No | Normal | | | | | |
| 19 | No | Normal | | | | | |
| 20 | No | Normal | | | | | |
| 49 | No | Normal | | | | | |
| 50 | No | Normal | | | | | |
| 51 | No | Normal | | | | | |
| 52 | No | Normal | | | | | |

The following table describes the fields in the above screen.

Table 190 Advanced Application > ZULD Status

| LABEL | DESCRIPTION |
|-------------|---|
| ZULD is.... | This shows whether ZULD is enabled or disabled on the Switch. |
| Port | This field displays the port number of the Switch. |
| Active | This field displays whether ZULD is enabled on the port or not. ZULD must be enabled to detect an unidirectional link by monitoring OAMPDUs. |
| Mode | This field indicates what ZULD will do when a unidirectional link is detected. In Normal mode, ZULD only sends a syslog and trap when it detects a unidirectional link. In Aggressive mode, ZULD shuts down the port (puts it into an ErrDisable state) as well as sends a syslog and trap when it detects a unidirectional link. |
| Probe Time | Probe time is the length of time that ZULD waits before declaring that a link is unidirectional. When the probe time expires, and one port (either on the Switch or the connected device) still has not received an OAMPDU, then ZULD declares that the link is unidirectional. |

Table 190 Advanced Application > ZULD Status

| LABEL | DESCRIPTION |
|------------------|--|
| Link State | This field shows the following link states: <ul style="list-style-type: none"> • Linkdown: This is an initialization state, where the port is not yet up. • Probe: This indicates that ZULD is discovering the connected device on this link. • Bidirectional: Traffic sent by the Switch is received by the connected device on this link, and traffic from the connected device on this link is received by the Switch. • Unidirectional: The state of the link between the port and its connected port cannot be determined either because no ZULD message was received, or one port is not capable of sending traffic. • Shutdown: The port has been shut down because its link with the connected device is unidirectional and ZULD is in Aggressive mode. |
| Remote Operation | This field displays whether ZULD is enabled or disabled on the connected device on this link. ZULD must be enabled on the connected device and on the port that's connecting to the Switch. |
| Remote MAC Addr | This is the MAC address of the port on the connected device to which the port of the Switch is connected. |
| Remote Port | This is the port number of the port on the connected device to which the port of the Switch is connected. |

39.3 ZULD Configuration

Use this screen to enable ZULD on a port, configure a mode and set the probe time. To open this screen, click **Advanced Application > ZULD > Configuration**.

Figure 286 Advanced Application > ZULD > Configuration

| Port | Active | Mode | Probe Time |
|------|--------------------------|----------|------------|
| * | <input type="checkbox"/> | Normal ▼ | |
| 1 | <input type="checkbox"/> | Normal ▼ | 5 |
| 2 | <input type="checkbox"/> | Normal ▼ | 5 |
| 3 | <input type="checkbox"/> | Normal ▼ | 5 |
| 4 | <input type="checkbox"/> | Normal ▼ | 5 |
| 5 | <input type="checkbox"/> | Normal ▼ | 5 |
| 6 | <input type="checkbox"/> | Normal ▼ | 5 |
| 7 | <input type="checkbox"/> | Normal ▼ | 5 |
| 8 | <input type="checkbox"/> | Normal ▼ | 5 |
| 9 | <input type="checkbox"/> | Normal ▼ | 5 |
| 10 | <input type="checkbox"/> | Normal ▼ | 5 |
| 11 | <input type="checkbox"/> | Normal ▼ | 5 |
| 12 | <input type="checkbox"/> | Normal ▼ | 5 |
| 13 | <input type="checkbox"/> | Normal ▼ | 5 |
| 14 | <input type="checkbox"/> | Normal ▼ | 5 |
| 48 | <input type="checkbox"/> | Normal ▼ | 5 |
| 49 | <input type="checkbox"/> | Normal ▼ | 5 |
| 50 | <input type="checkbox"/> | Normal ▼ | 5 |
| 51 | <input type="checkbox"/> | Normal ▼ | 5 |
| 52 | <input type="checkbox"/> | Normal ▼ | 5 |

The following table describes the fields in the above screen.

Table 191 Advanced Application > ZULD > Configuration

| LABEL | DESCRIPTION |
|------------|---|
| Active | Select this to enable ZULD on the Switch. |
| Port | Use port * to configure all ports to have the same settings. Alternatively, select individual ports for different settings. |
| Active | Select this to enable ZULD on the port. ZULD must be enabled to detect an unidirectional link by monitoring OAMPDUs. |
| Mode | Select Normal or Aggressive . In Normal mode, ZULD only sends a syslog and trap when it detects a unidirectional link. In Aggressive mode, ZULD shuts down the port (puts it into an ErrDisable state) as well as sends a syslog and trap when it detects a unidirectional link. |
| Probe Time | Type the length of time that ZULD waits before declaring that a link is unidirectional. When the probe time expires, and one port (either on the Switch or the connected device) still has not received an OAMPDU, then ZULD declares that the link is unidirectional. The allowed time range is from 5-65535 seconds. |

Table 191 Advanced Application > ZULD > Configuration

| LABEL | DESCRIPTION |
|--------|--|
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values in this screen to their last-saved values. |

Static Route


This chapter shows you how to configure static routes.

40.1 Static Routing Overview

The Switch usually uses the default gateway to route outbound traffic from computers on the LAN to the Internet. To have the Switch send data to devices not reachable through the default gateway, use static routes.

For example, the next figure shows a computer (**A**) connected to the Switch. The Switch routes most traffic from **A** to the Internet through the Switch's default gateway (**R1**). You create one static route to connect to services offered by your ISP behind router **R2**. You create another static route to communicate with a separate network behind a router **R3** connected to the Switch.

Figure 287 Example of Static Routing Topology

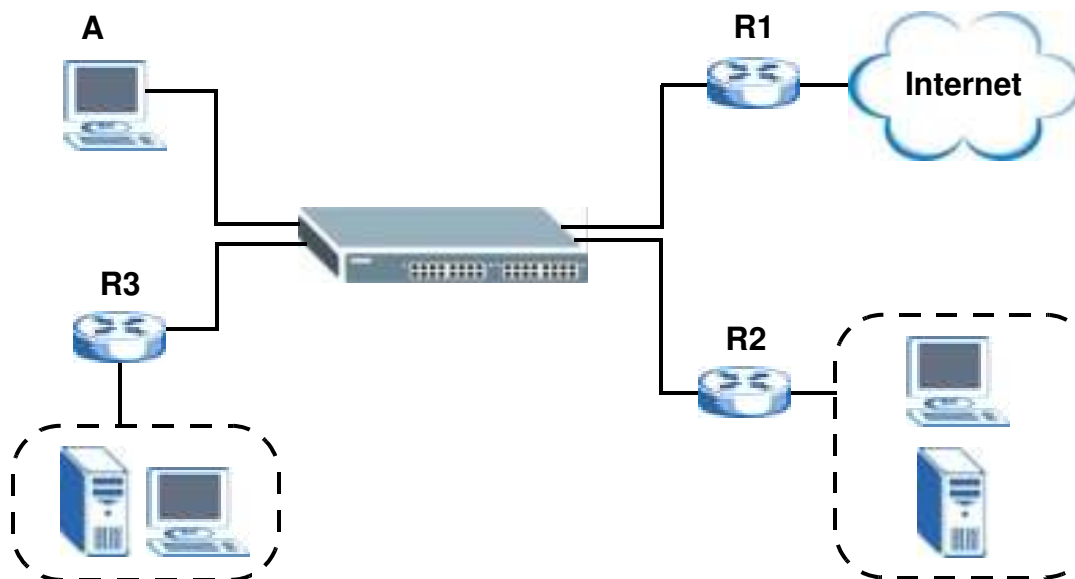

40.2 Static Routing

Click **IP Application** > **Static Routing** in the navigation panel to display the screen as shown. Click the link next to **IPv4 Static Route** to open a screen where you can create IPv4 static routing rules. Click the link next to **IPv6 Static Route** to open a screen where you can create IPv6 static routing rules.

Figure 288 IP Application > Static Routing

40.3 Configuring IPv4 Static Routing

Click the link next to **IPv4 Static Route** in the **IP Application > Static Routing** screen to display the screen as shown.

Figure 289 IP Application > Static Routing > IPv4 Static Route

The following table describes the related labels you use to create a static route.

Table 192 IP Application > Static Routing > IPv4 Static Route

| LABEL | DESCRIPTION |
|------------------------|---|
| Active | This field allows you to activate/deactivate this static route. |
| Name | Enter a descriptive name (up to 10 printable ASCII characters) for identification purposes. |
| Destination IP Address | This parameter specifies the IP network address of the final destination. Routing is always based on network number. If you need to specify a route to a single host, use a subnet mask of 255.255.255.255 in the subnet mask field to force the network number to be identical to the host ID. |
| IP Subnet Mask | Enter the subnet mask for this destination. |
| Gateway IP Address | Enter the IP address of the gateway. The gateway is an immediate neighbor of your Switch that will forward the packet to the destination. The gateway must be a router on the same segment as your Switch. |
| Metric | The metric represents the “cost” of transmission for routing purposes. IP routing uses hop count as the measurement of cost, with a minimum of 1 for directly connected networks. Enter a number that approximates the cost for this link. The number need not be precise, but it must be between 1 and 15. In practice, 2 or 3 is usually a good number. |

Table 192 IP Application > Static Routing > IPv4 Static Route (continued)

| LABEL | DESCRIPTION |
|---------------------|--|
| Add | Click Add to insert a new static route to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to set the above fields back to the factory defaults. |
| Index | This field displays the index number of the route. Click a number to edit the static route entry. |
| Active | This field displays Yes when the static route is activated and NO when it is deactivated. |
| Name | This field displays the descriptive name for this route. This is for identification purposes only. |
| Destination Address | This field displays the IP network address of the final destination. |
| Subnet Mask | This field displays the subnet mask for this destination. |
| Gateway Address | This field displays the IP address of the gateway. The gateway is the immediate neighbor of your Switch that will forward the packet to the destination. |
| Metric | This field displays the cost of transmission for routing purposes. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

40.4 Configuring IPv6 Static Routing

Click the link next to **IPv6 Static Route** in the **IP Application > Static Routing** screen to display the screen as shown.

Figure 290 IP Application > Static Routing > IPv6 Static Route

The screenshot shows the IPv6 Static Route configuration interface. It includes a header 'IPv6 Static Route' and a 'Static Routing' link. The main area contains the following fields and controls:

- Route Destination**: Text input field.
- Prefix Length**: Text input field.
- Next Hop**: Text input field.
- Interface Type**: Dropdown menu with 'VLAN' selected.
- Interface ID**: Text input field.
- Buttons**: 'Add' and 'Cancel' buttons.

Below the configuration fields is a table with the following structure:

| Index | Interface | Route Destination/Prefix Length | Next Hop |
|-------|-----------|---------------------------------|----------|
| | | | |

Below the table are 'Delete' and 'Cancel' buttons.

The following table describes the related labels you use to create a static route.

Table 193 IP Application > Static Routing > IPv6 Static Route

| LABEL | DESCRIPTION |
|-------------------------------------|--|
| Route Destination | Enter the IPv6 address of the final destination. |
| Prefix Length | Enter the prefix length number of up to 64 for this destination. |
| Next Hop | Enter the IPv6 address of the next-hop router. |
| Interface Type | Select the type of the IPv6 interface through which the IPv6 packets are forwarded. The Switch supports only the VLAN interface type at the time of writing. |
| Interface ID | Enter the ID number of the IPv6 interface through which the IPv6 packets are forwarded. |
| Add | Click Add to insert a new static route to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Index | This field displays the index number of the route. Click a number to edit the static route entry. |
| Interface | This field displays the descriptive name of the interface that is used to forward the packets to the destination. |
| Route Destination/ Prefix Length | This field displays the IPv6 subnet prefix and prefix length of the final destination. |
| Next Hop | This field displays the IPv6 address of the gateway that helps forward the packet to the destination. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Policy Routing

This chapter shows you how to configure policy routing rules.

41.1 Policy Route Overview

Traditionally, routing is based on the destination address only and the Switch takes the shortest path to forward a packet. Policy routing provides a mechanism to override the default routing behavior and alter the packet forwarding based on the policy defined by the network administrator. Policy-based routing is applied to incoming packets prior to the normal routing.

Individual routing policies are used as part of the overall policy routing process. A routing policy defines the action to take when a packet meets the criteria in a specified classifier. The action is taken only when all the criteria are met.

41.1.1 Benefits

- Source-Based Routing – Network administrators can use policy-based routing to direct traffic from different users through different connections.
- Cost Savings – Policy routing allows organizations to distribute interactive traffic on high-bandwidth, high-cost paths while using low-cost paths for batch traffic.
- Load Sharing – Network administrators can use policy routing to distribute traffic among multiple paths.

41.2 Configuring Policy Routing Profile

Click **IP Application > Policy Routing** in the navigation panel to display the screen as shown. Use this screen to configure a policy routing profile, which can consist of multiple policy routing rules.

Figure 291 IP Application > Policy Routing

| Index | Active | Profile name |
|-------|--------|--------------|
| | | |

The following table describes the labels in this screen.

Table 194 IP Application > Policy Routing

| LABEL | DESCRIPTION |
|--------------|--|
| Active | This field allows you to activate/deactivate this policy routing profile and rules in the profile. |
| Profile Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. Spaces are allowed. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to set the above fields back to the factory defaults. |
| Index | This field displays the index number of the policy routing profile. Click a number to edit the policy routing profile entry. |
| Active | This field displays Yes when the policy routing profile is activated and No when it is deactivated. |
| Profile Name | This field displays the descriptive name for this profile. This is for identification purposes only. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

41.2.1 Policy Routing Rule Configuration

You must first configure a layer-3 classifier in the **Classifier** screen (see [Section 19.2 on page 201](#)) and a policy routing profile in the **Policy Routing** screen (see [Section 41.2 on page 400](#)).

Use this screen to configure a policy route to override the default (shortest path) routing behavior and forward packets based on the classifier and action you specify. A policy route rule defines the matching classifier and the action to take when a packet meets the criteria in the classifier. The action is taken only when all the criteria are met. Policy-based routing is applied to incoming packets on a per interface basis before normal routing. The Switch does not perform normal routing on packets that match any of the policy routes.

Click **Rule Configuration** in the **IP Application > Policy Routing** screen to display the screen as shown.

Figure 292 IP Application > Policy Routing > Rule Configuration

The following table describes the labels in this screen.

Table 195 IP Application > Policy Routing > Rule Configuration

| LABEL | DESCRIPTION |
|--------------|--|
| Profile Name | This field displays the policy routing profile(s) you configure in the IP Application > Policy Routing screen. Select a profile for which you want to configure a policy routing rule. |
| Sequence | Enter the rule number from 1 to 64. The ordering of your rules is important as rules are applied in turn. You can not specify a number already in use by another rule. |
| Statement | Select Permit to forward traffic that matches this rule to the gateway specified in the rule. Select Deny to disable the rule action and forward traffic that matches this rule according to the routing table on the Switch. |
| Classifier | This field displays the available active classifiers you configure in the Classifier screen (see Chapter 19 on page 201), which are not used by any policy rule or policy routing rule. Select a classifier to which this policy routing rule applies. |
| Action | Enter the IP address of the gateway. The gateway is an immediate neighbor of your Switch that will forward the packet to the destination. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to your previous configuration. |
| Clear | Click Clear to set the above fields back to the factory defaults. |
| Active | This field displays whether the policy route profile is enabled or not. |
| Profile Name | This field displays the name of the policy route profile with which the rule is associated. |

Table 195 IP Application > Policy Routing > Rule Configuration (continued)

| LABEL | DESCRIPTION |
|--------------|--|
| Seq | This field displays the rule index number that you configure in the Sequence field. Click an index number to change the rule's Statement . |
| State | This field displays permit when the rule action is activated and deny when is it deactivated. |
| Classifier | This field displays the name of the classifier to which this policy applies. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry(ies) from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Differentiated Services

This chapter shows you how to configure Differentiated Services (DiffServ) on the Switch.

42.1 DiffServ Overview


Quality of Service (QoS) is used to prioritize source-to-destination traffic flows. All packets in the flow are given the same priority. You can use CoS (class of service) to give different priorities to different packet types.

DiffServ is a class of service (CoS) model that marks packets so that they receive specific per-hop treatment at DiffServ-compliant network devices along the route based on the application types and traffic flow. Packets are marked with DiffServ Code Points (DSCPs) indicating the level of service desired. This allows the intermediary DiffServ-compliant network devices to handle the packets differently depending on the code points without the need to negotiate paths or remember state information for every flow. In addition, applications do not have to request a particular service or give advanced notice of where the traffic is going.

42.1.1 DSCP and Per-Hop Behavior

DiffServ defines a new DS (Differentiated Services) field to replace the Type of Service (ToS) field in the IP header. The DS field contains a 6-bit DSCP field which can define up to 64 service levels and the remaining 2 bits are defined as currently unused (CU). The following figure illustrates the DS field.

 Figure 293 DiffServ: Differentiated Service Field



DSCP is backward compatible with the three precedence bits in the ToS octet so that non-DiffServ compliant, ToS-enabled network device will not conflict with the DSCP mapping.


The DSCP value determines the PHB (Per-Hop Behavior), that each packet gets as it is forwarded across the DiffServ network. Based on the marking rule different kinds of traffic can be marked for different priorities of forwarding. Resources can then be allocated according to the DSCP values and the configured policies.

42.1.2 DiffServ Network Example

The following figure depicts a DiffServ network consisting of a group of directly connected DiffServ-compliant network devices. The boundary node (**A** in [Figure 294](#)) in a DiffServ network classifies (marks with a DSCP value) the incoming packets into different traffic flows (**Platinum**, **Gold**, **Silver**, **Bronze**) based on the configured marking rules. A network administrator can then apply

various traffic policies to the traffic flows. For example, one traffic policy would be to give higher drop precedence to one traffic flow over others. In our example packets in the **Bronze** traffic flow are more likely to be dropped when congestion occurs than the packets in the **Platinum** traffic flow as they move across the DiffServ network.

Figure 294 DiffServ Network

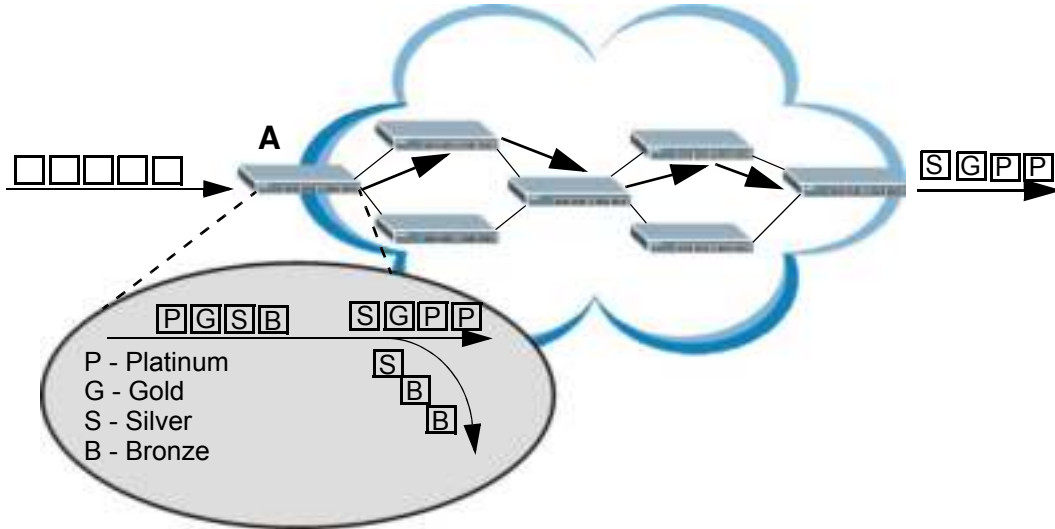

42.2 Two Rate Three Color Marker Traffic Policing

Traffic policing is the limiting of the input or output transmission rate of a class of traffic on the basis of user-defined criteria. Traffic policing methods measure traffic flows against user-defined criteria and identify it as either conforming, exceeding or violating the criteria.

Two Rate Three Color Marker (TRTCM, defined in RFC 2698) is a type of traffic policing that identifies packets by comparing them to two user-defined rates: the Committed Information Rate (CIR) and the Peak Information Rate (PIR). The CIR specifies the average rate at which packets are admitted to the network. The PIR is greater than or equal to the CIR. CIR and PIR values are based on the guaranteed and maximum bandwidth respectively as negotiated between a service provider and client.

Two Rate Three Color Marker evaluates incoming packets and marks them with one of three colors which refer to packet loss priority levels. High packet loss priority level is referred to as red, medium is referred to as yellow and low is referred to as green. After TRTCM is configured and DiffServ is enabled the following actions are performed on the colored packets:


- Red (high loss priority level) packets are dropped.
- Yellow (medium loss priority level) packets are dropped if there is congestion on the network.
- Green (low loss priority level) packets are forwarded.

TRTCM operates in one of two modes: color-blind or color-aware. In color-blind mode, packets are marked based on evaluating against the PIR and CIR regardless of if they have previously been marked or not. In the color-aware mode, packets are marked based on both existing color and evaluation against the PIR and CIR. If the packets do not match any of colors, then the packets proceed unchanged.

42.2.1 TRTCM - Color-blind Mode

All packets are evaluated against the PIR. If a packet exceeds the PIR it is marked red. Otherwise it is evaluated against the CIR. If it exceeds the CIR then it is marked yellow. Finally, if it is below the CIR then it is marked green.

Figure 295 TRTCM - Color-blind Mode

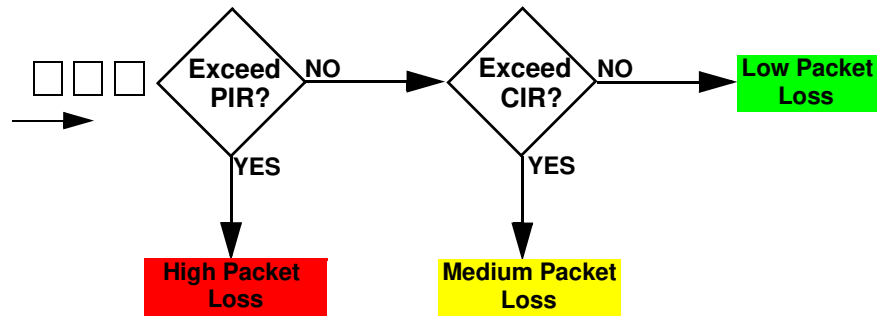


42.2.2 TRTCM - Color-aware Mode

In color-aware mode the evaluation of the packets uses the existing packet loss priority. TRTCM can increase a packet loss priority of a packet but it cannot decrease it. Packets that have been previously marked red or yellow can only be marked with an equal or higher packet loss priority.

Packets marked red (high packet loss priority) continue to be red without evaluation against the PIR or CIR. Packets marked yellow can only be marked red or remain yellow so they are only evaluated against the PIR. Only the packets marked green are first evaluated against the PIR and then if they don't exceed the PIR level are they evaluated against the CIR.

Figure 296 TRTCM - Color-aware Mode

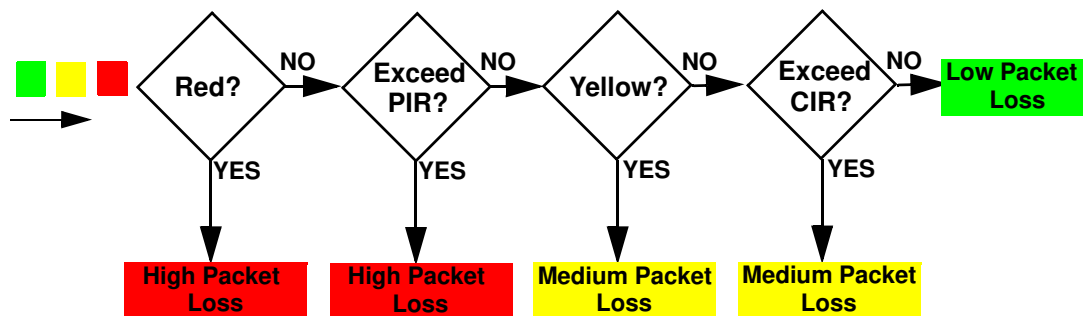

42.3 Activating DiffServ

Activate DiffServ to apply marking rules or IEEE 802.1p priority mapping on the selected port(s).

Click **IP Application** > **DiffServ** in the navigation panel to display the screen as shown.

Figure 297 IP Application > DiffServ (Standalone mode)

Diffserv 2-rate 3 Color Marker DSCP Setting

Active

| Port | Active |
|------|--------------------------|
| 1 | <input type="checkbox"/> |
| 2 | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> |
| 17 | <input type="checkbox"/> |
| 18 | <input type="checkbox"/> |
| 19 | <input type="checkbox"/> |
| 20 | <input type="checkbox"/> |
| 21 | <input type="checkbox"/> |
| 22 | <input type="checkbox"/> |
| 23 | <input type="checkbox"/> |
| 24 | <input type="checkbox"/> |
| 25 | <input type="checkbox"/> |
| 26 | <input type="checkbox"/> |
| 27 | <input type="checkbox"/> |
| 28 | <input type="checkbox"/> |
| 29 | <input type="checkbox"/> |
| 30 | <input type="checkbox"/> |
| 31 | <input type="checkbox"/> |
| 32 | <input type="checkbox"/> |
| 33 | <input type="checkbox"/> |
| 34 | <input type="checkbox"/> |
| 35 | <input type="checkbox"/> |
| 36 | <input type="checkbox"/> |
| 37 | <input type="checkbox"/> |
| 38 | <input type="checkbox"/> |
| 39 | <input type="checkbox"/> |
| 40 | <input type="checkbox"/> |
| 41 | <input type="checkbox"/> |
| 42 | <input type="checkbox"/> |
| 43 | <input type="checkbox"/> |
| 44 | <input type="checkbox"/> |
| 45 | <input type="checkbox"/> |
| 46 | <input type="checkbox"/> |
| 47 | <input type="checkbox"/> |
| 48 | <input type="checkbox"/> |
| 49 | <input type="checkbox"/> |
| 50 | <input type="checkbox"/> |
| 51 | <input type="checkbox"/> |
| 52 | <input type="checkbox"/> |

Apply Cancel

Figure 298 IP Application > DiffServ (Stacking mode)

Diffserv 2-rate 3 Color Marker DSCP Setting

Active

SLOT 1 ▾

| Port | Active |
|------|--------------------------|
| 1/1 | <input type="checkbox"/> |
| 1/2 | <input type="checkbox"/> |
| 1/3 | <input type="checkbox"/> |
| 1/4 | <input type="checkbox"/> |
| 1/5 | <input type="checkbox"/> |
| 1/6 | <input type="checkbox"/> |
| 1/7 | <input type="checkbox"/> |
| 1/8 | <input type="checkbox"/> |
| 1/9 | <input type="checkbox"/> |
| 1/10 | <input type="checkbox"/> |
| 1/11 | <input type="checkbox"/> |
| 1/12 | <input type="checkbox"/> |
| 1/13 | <input type="checkbox"/> |
| 1/14 | <input type="checkbox"/> |
| 1/15 | <input type="checkbox"/> |
| 1/16 | <input type="checkbox"/> |
| 1/17 | <input type="checkbox"/> |
| 1/18 | <input type="checkbox"/> |
| 1/19 | <input type="checkbox"/> |
| 1/20 | <input type="checkbox"/> |
| 1/21 | <input type="checkbox"/> |
| 1/22 | <input type="checkbox"/> |
| 1/23 | <input type="checkbox"/> |
| 1/24 | <input type="checkbox"/> |
| 1/25 | <input type="checkbox"/> |
| 1/26 | <input type="checkbox"/> |
| 1/27 | <input type="checkbox"/> |
| 1/28 | <input type="checkbox"/> |
| 1/29 | <input type="checkbox"/> |
| 1/30 | <input type="checkbox"/> |
| 1/31 | <input type="checkbox"/> |
| 1/32 | <input type="checkbox"/> |
| 1/33 | <input type="checkbox"/> |
| 1/34 | <input type="checkbox"/> |
| 1/35 | <input type="checkbox"/> |
| 1/36 | <input type="checkbox"/> |
| 1/37 | <input type="checkbox"/> |
| 1/38 | <input type="checkbox"/> |
| 1/39 | <input type="checkbox"/> |
| 1/40 | <input type="checkbox"/> |
| 1/41 | <input type="checkbox"/> |
| 1/42 | <input type="checkbox"/> |
| 1/43 | <input type="checkbox"/> |
| 1/44 | <input type="checkbox"/> |
| 1/45 | <input type="checkbox"/> |
| 1/46 | <input type="checkbox"/> |
| 1/47 | <input type="checkbox"/> |
| 1/48 | <input type="checkbox"/> |
| 1/49 | <input type="checkbox"/> |
| 1/50 | <input type="checkbox"/> |

Apply Cancel

The following table describes the labels in this screen.

Table 196 IP Application > DiffServ

| LABEL | DESCRIPTION |
|----------------------|--|
| Active | Select this option to enable DiffServ on the Switch. |
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This field displays the index number of a port on the Switch. In stacking mode, the first number represents the slot and the second the port number. * means all ports (on the same Switch). |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Active | Select Active to enable DiffServ on the port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

42.3.1 Configuring 2-Rate 3 Color Marker Settings

Use this screen to configure TRTCM settings. Click the **2-rate 3 Color Marker** link in the **DiffServ** screen to display the screen as shown next.

Note: You cannot enable both TRTCM and Bandwidth Control at the same time.

Figure 299 IP Application > DiffServ > 2-rate 3 Color Marker (Standalone mode)

2-Rate 3 Color Marker DSCP Profile Diffserv

Active

Mode color-blind color-aware

| Port | Active | Commit Rate | Peak Rate | DSCP |
|------|--------------------------|-------------|-----------|-----------|
| * | <input type="checkbox"/> | | | Default ▼ |
| 1 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 2 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 3 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 4 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 5 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 6 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 7 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 8 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 9 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 49 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 50 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 51 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 52 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |

Apply Cancel

Figure 300 IP Application > DiffServ > 2-rate 3 Color Marker (Stacking mode)

2-Rate 3 Color Marker DSCP Profile Diffserv

Active

Mode color-blind color-aware

SLOT 1 ▼

| Port | Active | Commit Rate | Peak Rate | DSCP |
|------|--------------------------|-------------|-----------|-----------|
| 1/* | <input type="checkbox"/> | | | Default ▼ |
| 1/1 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/2 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/3 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/4 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/5 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/6 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/7 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/8 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/9 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/10 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/11 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/12 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/13 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/14 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/15 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/16 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/17 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/18 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/19 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/20 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/21 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/22 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/23 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/24 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/25 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/26 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/27 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/28 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/29 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/30 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/31 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/32 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/33 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/34 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/35 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/36 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/37 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/38 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/39 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/40 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/41 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/42 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/43 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/44 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/45 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/46 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/47 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/48 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/49 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |
| 1/50 | <input type="checkbox"/> | 1 Kbps | 1 Kbps | Default ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 197 IP Application > DiffServ > 2-rate 3 Color Marker

| LABEL | DESCRIPTION |
|-------------------------|---|
| Active | <p>Select this to activate TRTCM (Two Rate Three Color Marker) on the Switch. The Switch evaluates and marks the packets based on the TRTCM settings.</p> <p>Note: You must also activate DiffServ on the Switch and the individual ports for the Switch to drop red (high loss priority) colored packets.</p> |
| Mode | <p>Select color-blind to have the Switch treat all incoming packets as uncolored. All incoming packets are evaluated against the CIR and PIR.</p> <p>Select color-aware to treat the packets as marked by some preceding entity. Incoming packets are evaluated based on their existing color. Incoming packets that are not marked proceed through the Switch.</p> |
| Slot (Stacking mode) | <p>This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack.</p> |
| Port | <p>This field displays the index number of a port on the Switch. In stacking mode, the first number represents the slot and the second the port number. * means all ports (on the same Switch).</p> |
| * | <p>Settings in this row apply to all ports.</p> <p>Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis.</p> <p>Note: Changes in this row are copied to all the ports as soon as you make them.</p> |
| Active | <p>Select this to activate TRTCM on the port.</p> |
| Commit Rate | <p>Specify the Commit Information Rate (CIR) for this port.</p> |
| Peak Rate | <p>Specify the Peak Information Rate (PIR) for this port.</p> |
| DSCP | <p>Select a pre-defined DSCP profile. The Switch assigns the DSCP values defined in the profile to packets based on the color they are marked via TRTCM.</p> |
| Apply | <p>Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to begin configuring this screen afresh.</p> |

42.3.2 DSCP Profile

Use this screen to create DSCP profiles. To open this screen, click the **DSCP Profile** link in the **IP Application > DiffServ > 2-rate 3 Color Marker** screen.

Figure 301 IP Application > DiffServ > 2-rate 3 Color Marker > DSCP Profile

The following table describes the labels in this screen.

Table 198 IP Application > DiffServ > 2-rate 3 Color Marker > DSCP Profile

| LABEL | DESCRIPTION |
|--------------|--|
| Profile Name | Enter a descriptive name for the profile for identification purposes. |
| DSCP | Use this section to specify the DSCP values that you want to assign to packets based on the color they are marked via TRTCM. |
| Green | Specify the DSCP value to use for packets with low packet loss priority. |
| Yellow | Specify the DSCP value to use for packets with medium packet loss priority. |
| Red | Specify the DSCP value to use for packets with high packet loss priority. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the fields to your previous configuration. |
| Profile Name | This field displays the descriptive name of the profile. Click the profile name to change the settings. |
| Green | This field displays the DSCP value to use for packets with low packet loss priority. |
| Yellow | This field displays the DSCP value to use for packets with medium packet loss priority. |
| Red | This field displays the DSCP value to use for packets with high packet loss priority. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click the Delete button to remove the selected entry(ies) from the table. |
| Cancel | Click this to revert the fields to the previous configuration. |

42.4 DSCP-to-IEEE 802.1p Priority Settings

You can configure the DSCP to IEEE 802.1p mapping to allow the Switch to prioritize all traffic based on the incoming DSCP value according to the DiffServ to IEEE 802.1p mapping table.

The following table shows the default DSCP-to-IEEE802.1p mapping.

Table 199 Default DSCP-IEEE 802.1p Mapping

| DSCP VALUE | 0 – 7 | 8 – 15 | 16 – 23 | 24 – 31 | 32 – 39 | 40 – 47 | 48 – 55 | 56 – 63 |
|-------------|-------|--------|---------|---------|---------|---------|---------|---------|
| IEEE 802.1p | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |

42.4.1 Configuring DSCP Settings

To change the DSCP-IEEE 802.1p mapping, click the **DSCP Setting** link in the **DiffServ** screen to display the screen as shown next.

Figure 302 IP Application > DiffServ > DSCP Setting

| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
|----|----|----|----|----|----|----|----|
| 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 |
| 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 |
| 16 | 17 | 18 | 19 | 20 | 21 | 22 | 23 |
| 24 | 25 | 26 | 27 | 28 | 29 | 30 | 31 |
| 32 | 33 | 34 | 35 | 36 | 37 | 38 | 39 |
| 40 | 41 | 42 | 43 | 44 | 45 | 46 | 47 |
| 48 | 49 | 50 | 51 | 52 | 53 | 54 | 55 |
| 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 |

The following table describes the labels in this screen.

Table 200 IP Application > DiffServ > DSCP Setting

| LABEL | DESCRIPTION |
|----------|--|
| 0 ... 63 | This is the DSCP classification identification number. To set the IEEE 802.1p priority mapping, select the priority level from the drop-down list box. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

This chapter shows you how to configure the DHCP feature.

43.1 DHCP Overview

DHCP (Dynamic Host Configuration Protocol RFC 2131 and RFC 2132) allows individual computers to obtain TCP/IP configuration at start-up from a server. You can configure the Switch as a DHCP server or a DHCP relay agent. When configured as a server, the Switch provides the TCP/IP configuration for the clients. If you configure the Switch as a relay agent, then the Switch forwards DHCP requests to DHCP server on your network. If you don't configure the Switch as a DHCP server or relay agent then you must have a DHCP server in the broadcast domain of the client computers or else the client computers must be configured manually.

43.1.1 DHCP Modes

The Switch can be configured as a DHCP server or DHCP relay agent.

- If you configure the Switch as a DHCP server, it will maintain the pool of IP addresses along with subnet masks, DNS server and default gateway information and distribute them to your LAN computers.
- If there is already a DHCP server on your network, then you can configure the Switch as a DHCP relay agent. When the Switch receives a request from a computer on your network, it contacts the DHCP server for the necessary IP information, and then relays the assigned information back to the computer.

43.1.2 DHCP Configuration Options

The DHCP configuration on the Switch is divided into **Global** and **VLAN** screens. The screen you should use for configuration depends on the DHCP services you want to offer the DHCP clients on your network. Choose the configuration screen based on the following criteria:

- **Global** - The Switch forwards all DHCP requests to the same DHCP server.
- **VLAN** - The Switch is configured on a VLAN by VLAN basis. The Switch can be configured as a DHCP server for one VLAN and at the same time the Switch can be configured to relay DHCP requests for clients in another VLAN.

43.2 DHCP Configuration

Click **IP Application > DHCP** in the navigation panel to display the screen as shown. Click the link next to **DHCPv4** to open screens where you can enable and configure DHCPv4 server/relay settings

and create option 82 profiles. Click the link next to **DHCPv6** to open screens where you can configure DHCPv6 settings.


Figure 303 IP Application > DHCP



43.3 DHCPv4 Status

Click **IP Application > DHCP > DHCPv4** in the navigation panel. The **DHCP Status** screen displays.

Figure 304 IP Application > DHCP > DHCPv4

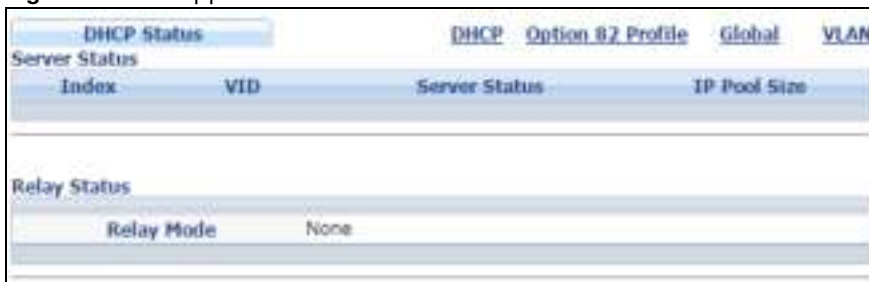

The following table describes the labels in this screen.

Table 201 IP Application > DHCP > DHCPv4

| LABEL | DESCRIPTION |
|---------------|---|
| Server Status | This section displays configuration settings related to the Switch's DHCP server mode. |
| Index | This is the index number. Click an index number to change the settings. |
| VID | This field displays the VLAN ID for which the Switch is a DHCP server. |
| Server Status | This field displays the starting DHCP client IP address. |
| IP Pool Size | This field displays the number of IP addresses that can be assigned to clients. |
| Relay Status | This section displays configuration settings related to the Switch's DHCP relay mode. |
| Relay Mode | This field displays: <ul style="list-style-type: none"> • None - if the Switch is not configured as a DHCP relay agent. • Global - if the Switch is configured as a DHCP relay agent only. • VLAN - followed by a VLAN ID or multiple VLAN IDs if it is configured as a relay agent for specific VLAN(s). |

43.3.1 DHCPv4 Server Status Detail

Click **IP Application > DHCP > DHCPv4** in the navigation panel and then click an existing index number of a DHCP server configuration to view the screen as shown. Use this screen to view details regarding DHCP server settings configured on the Switch.

Figure 305 IP Application > DHCP > DHCPv4 > Server Status Detail

| Server Status Detail | | DHCP Status |
|----------------------|-----------------------|-------------|
| Start IP Address | 192.168.1.50 | |
| End IP Address | 192.168.1.99 | |
| Subnet Mask | 255.255.255.0 | |
| Default Gateway | 0.0.0.0 | |
| Primary DNS Server | 0.0.0.0 | |
| Secondary DNS Server | 0.0.0.0 | |
| Lease Time | 3 day 0 hour 0 minute | |

| Address Leases | | | | |
|----------------|------------|-------|------------------|----------|
| Index | IP Address | Timer | Hardware Address | Hostname |
| | | | | |

The following table describes the labels in this screen.

Table 202 IP Application > DHCP > DHCPv4 > Server Status Detail

| LABEL | DESCRIPTION |
|----------------------|--|
| Start IP Address | This field displays the starting IP address of the IP address pool configured for this DHCP server instance. |
| End IP Address | This field displays the last IP address of the IP address pool configured for this DHCP server instance. |
| Subnet Mask | This field displays the subnet mask value sent to clients from this DHCP server instance. |
| Default Gateway | This field displays the default gateway value sent to clients from this DHCP server instance. |
| Primary DNS Server | This field displays the primary DNS server value sent to clients from this DHCP server instance. |
| Secondary DNS Server | This field displays the secondary DNS server value sent to clients from this DHCP server instance. |
| Lease Time | This field displays the amount of time that the IP address is valid. |
| Address Leases | This section displays information about the IP addresses this DHCP server issued to clients. |
| Index | This field displays a sequential number for each DHCP request handled by the Switch. |
| IP Address | This is the IP address issued to a DHCP client. |
| Timer | This field displays the time remaining before the DHCP client has to renew its IP address. |
| Hardware Address | This field displays the MAC address of the DHCP client. It may also display SELF OCCUPIED ADDRESS if the IP address cannot be used for DHCP because it is already assigned to the Switch itself. |
| Hostname | This field displays the system name of the client. |

43.4 DHCPv4 Relay

Configure DHCP relay on the Switch if the DHCP clients and the DHCP server are not in the same broadcast domain. During the initial IP address leasing, the Switch helps to relay network information (such as the IP address and subnet mask) between a DHCP client and a DHCP server. Once the DHCP client obtains an IP address and can connect to the network, network information renewal is done between the DHCP client and the DHCP server without the help of the Switch.

The Switch can be configured as a global DHCP relay. This means that the Switch forwards all DHCP requests from all domains to the same DHCP server. You can also configure the Switch to relay DHCP information based on the VLAN membership of the DHCP clients.

43.4.1 DHCPv4 Relay Agent Information

The Switch can add information about the source of client DHCP requests that it relays to a DHCP server by adding **Relay Agent Information**. This helps provide authentication about the source of the requests. The DHCP server can then provide an IP address based on this information. Please refer to RFC 3046 for more details.

The DHCP **Relay Agent Information** feature adds an Agent Information field (also known as the **Option 82** field) to DHCP requests. The **Option 82** field is in the DHCP headers of client DHCP request frames that the Switch relays to a DHCP server.

43.4.1.1 DHCPv4 Relay Agent Information Format

A DHCP Relay Agent Information option has the following format.

Table 203 DHCP Relay Agent Information Option Format

| | | | | |
|--------------|---------------|----|----|----|
| Code (82) | Length (N) | i1 | i2 | iN |
|--------------|---------------|----|----|----|

i1, i2 and iN are DHCP relay agent sub-options, which contain additional information about the DHCP client. You need to define at least one sub-option.

43.4.1.2 Sub-Option Format

There are two types of sub-option: “Agent Circuit ID Sub-option” and “Agent Remote ID Sub-option”. They have the following formats.

Table 204 DHCP Relay Agent Circuit ID Sub-option Format

| SubOpt Code | Length | Value |
|---------------|---------------|--|
| 1 (1 byte) | N (1 byte) | Slot ID, Port ID, VLAN ID, System Name or String |

Table 205 DHCP Relay Agent Remote ID Sub-option Format

| SubOpt Code | Length | Value |
|---------------|---------------|-----------------------|
| 2 (1 byte) | N (1 byte) | MAC Address or String |

The 1 in the first field identifies this as an Agent Circuit ID sub-option and 2 identifies this as an Agent Remote ID sub-option. The next field specifies the length of the field.

43.4.2 DHCPv4 Option 82 Profile

Use this screen to create DHCPv4 option 82 profiles. Click **IP Application > DHCP > DHCPv4** in the navigation panel and click the **Option 82 Profile** link to display the screen as shown.

Figure 306 IP Application > DHCP > DHCPv4 > Option 82 Profile

| Profile Name | Enable | Circuit-ID | Field | Remote-ID | Field |
|--------------|--------|---------------------------|-------|-----------|-------|
| default1 | Yes | slot-port, vlan | - | No | - |
| default2 | Yes | slot-port, vlan, hostname | - | No | - |

The following table describes the labels in this screen.

Table 206 IP Application > DHCP > DHCPv4 > Option 82 Profile

| LABEL | DESCRIPTION |
|------------|--|
| Name | Enter a descriptive name for the profile for identification purposes. You can use up to 32 ASCII characters. Spaces are allowed. |
| Circuit-ID | Use this section to configure the Circuit ID sub-option to include information that is specific to the relay agent (the Switch). |
| Enable | Select this option to have the Switch add the Circuit ID sub-option to client DHCP requests that it relays to a DHCP server. |
| slot-port | Select this option to have the Switch add the number of port that the DHCP client is connected to. |
| vlan | Select this option to have the Switch add the ID of VLAN which the port belongs to. |
| hostname | This is the system name you configure in the Basic Setting > General Setup screen. Select this option for the Switch to add the system name to the client DHCP requests that it relays to a DHCP server. |
| string | Enter a string of up to 64 ASCII characters that the Switch adds into the client DHCP requests. Spaces are allowed. |
| Remote-ID | Use this section to configure the Remote ID sub-option to include information that identifies the relay agent (the Switch). |
| Enable | Select this option to have the Switch append the Remote ID sub-option to the option 82 field of DHCP requests. |
| mac | Select this option to have the Switch add its MAC address to the client DHCP requests that it relays to a DHCP server. |
| string | Enter a string of up to 64 ASCII characters for the remote ID information in this field. Spaces are allowed. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to their last saved values. |

Table 206 IP Application > DHCP > DHCPv4 > Option 82 Profile (continued)

| LABEL | DESCRIPTION |
|--------------|---|
| Profile Name | This field displays the descriptive name of the profile. Click the name to change the settings. |
| Circuit-ID | |
| Enable | This field displays whether the Circuit ID sub-option is added to client DHCP requests. |
| Field | This field displays the information that is included in the Circuit ID sub-option. |
| Remote-ID | |
| Enable | This field displays whether the Remote ID sub-option is added to client DHCP requests. |
| Field | This field displays the information that is included in the Remote ID sub-option. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

43.4.3 Configuring DHCPv4 Global Relay

Use this screen to configure global DHCPv4 relay. Click **IP Application > DHCP > DHCPv4** in the navigation panel and click the **Global** link to display the screen as shown.

Figure 307 IP Application > DHCP > DHCPv4 > Global

| Remote DHCP Server | IP Address |
|----------------------|------------|
| Remote DHCP Server 1 | 0.0.0.0 |
| Remote DHCP Server 2 | 0.0.0.0 |
| Remote DHCP Server 3 | 0.0.0.0 |

Option 82 Profile: [Dropdown]

Apply Cancel

The following table describes the labels in this screen.

Table 207 IP Application > DHCP > DHCPv4 > Global

| LABEL | DESCRIPTION |
|---------------------------|--|
| Active | Select this check box to enable DHCPv4 relay. |
| Remote DHCP Server 1 .. 3 | Enter the IP address of a DHCPv4 server in dotted decimal notation. |
| Option 82 Profile | Select a pre-defined DHCPv4 option 82 profile that the Switch applies to all ports. The Switch adds the Circuit ID sub-option and/or Remote ID sub-option specified in the profile to DHCP requests that it relays to a DHCP server. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

43.4.4 DHCPv4 Global Relay Port Configure

Use this screen to apply a different DHCP option 82 profile to certain ports on the Switch. To open this screen, click **IP Application > DHCP > DHCPv4 > Global > Port**.

Figure 308 IP Application > DHCP > DHCPv4 > Global > Port

The following table describes the labels in this screen.


Table 208 IP Application > DHCP > DHCPv4 > Global > Port

| LABEL | DESCRIPTION |
|-------------------|---|
| Port | <p>Enter the number of port(s) to which you want to apply the specified DHCP option 82 profile.</p> <p>You can enter multiple ports separated by (no space) comma (,) or hyphen (-) for a range. For example, enter "3-5" for ports 3, 4, and 5. Enter "3,5,7" for ports 3, 5, and 7.</p> <p>In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example.</p> |
| Option 82 Profile | <p>Select a pre-defined DHCP option 82 profile that the Switch applies to the specified port(s). The Switch adds the Circuit ID sub-option and/or Remote ID sub-option specified in the profile to DHCP requests that it relays to a DHCP server.</p> <p>Note: The profile you select here has priority over the one you select in the DHCP > DHCPv4 > Global screen.</p> |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | Click this to reset the values above based on the last selected entry or, if not applicable, to clear the fields above. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each entry. Click an index number to change the settings. |
| Port | This field displays the port(s) to which the Switch applies the settings. In stacking mode, the first number represents the slot and the second the port number. |
| Profile Name | This field displays the DHCP option 82 profile that the Switch applies to the port(s). |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Select the entry(ies) that you want to remove, then click the Delete button to remove the selected entry(ies) from the table. |
| Cancel | Click this to clear the check boxes above. |

43.4.5 Global DHCP Relay Configuration Example

The following figure shows a network example where the Switch is used to relay DHCP requests for the **VLAN1** and **VLAN2** domains. There is only one DHCP server that services the DHCP clients in both domains.

Figure 309 Global DHCP Relay Network Example

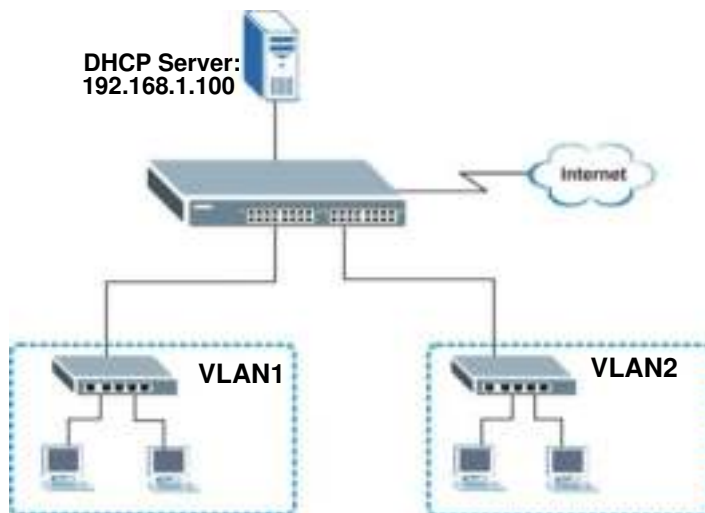

Configure the **DHCP Relay** screen as shown. Make sure you select a DHCP option 82 profile (**default1** in this example) to set the Switch to send additional information (such as the VLAN ID) together with the DHCP requests to the DHCP server. This allows the DHCP server to assign the appropriate IP address according to the VLAN ID.

Figure 310 DHCP Relay Configuration Example

| DHCP Relay | | Port | Status |
|----------------------|-------------------------------------|------|--------|
| Active | <input checked="" type="checkbox"/> | | |
| Remote DHCP Server 1 | 192.168.1.100 | | |
| Remote DHCP Server 2 | 0.0.0.0 | | |
| Remote DHCP Server 3 | 0.0.0.0 | | |
| Option 82 Profile | default1 | | |

EXAMPLE

43.5 Configuring DHCP VLAN Settings

Use this screen to configure your DHCP settings based on the VLAN domain of the DHCP clients. Click **IP Application > DHCP > DHCPv4** in the navigation panel, then click the **VLAN** link in the **DHCP Status** screen that displays.

Note: You must set up a management IP address for each VLAN that you want to configure DHCP settings for on the Switch. See [Section 6.5 on page 65](#) for information on how to do this.

Figure 311 IP Application > DHCP > DHCPv4 > VLAN

The following table describes the labels in this screen.

Table 209 IP Application > DHCP > DHCPv4 > VLAN

| LABEL | DESCRIPTION |
|---------------------------------|---|
| VID | Enter the ID number of the VLAN to which these DHCP settings apply. |
| DHCP Status | Select whether the Switch should function as a DHCP Server or Relay for the specified VID. If you select Server then fields related to DHCP relay configuration are grayed out and vice versa. |
| Server | Use this section if you want to configure the Switch to function as a DHCP server for this VLAN. |
| Client IP Pool Starting Address | Specify the first of the contiguous addresses in the IP address pool. |
| Size of Client IP Pool | Specify the size, or count of the IP address pool. The Switch can issue from 1 to 253 IP addresses to DHCP clients. |
| IP Subnet Mask | Enter the subnet mask for the client IP pool. |
| Default Gateway | Enter the IP address of the default gateway device. |
| Primary/Secondary DNS Server | Enter the IP addresses of the DNS servers. The DNS servers are passed to the DHCP clients along with the IP address and the subnet mask. |
| Lease Time | Select Infinite to have the binding always valid. Select the second radio button to set up the binding's valid days, hours and minutes. |

Table 209 IP Application > DHCP > DHCPv4 > VLAN (continued)

| LABEL | DESCRIPTION |
|------------------------------|--|
| Relay | Use this section if you want to configure the Switch to function as a DHCP relay for this VLAN. |
| Remote DHCP Server 1 .. 3 | Enter the IP address of a DHCP server in dotted decimal notation. |
| Option 82 Profile | Select a pre-defined DHCP option 82 profile that the Switch applies to all ports in this VLAN. The Switch adds the Circuit ID sub-option and/or Remote ID sub-option specified in the profile to DHCP requests that it relays to a DHCP server. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| VID | This field displays the ID number of the VLAN group to which this DHCP settings apply. |
| Type | This field displays Server or Relay for the DHCP mode. |
| DHCP Status | For DHCP server configuration, this field displays the starting IP address and the size of the IP address pool. For DHCP relay configuration, this field displays the first remote DHCP server IP address. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Select the configuration entries you want to remove and click Delete to remove them. |
| Cancel | Click Cancel to clear the check boxes. |

43.5.1 DHCPv4 VLAN Port Configure

Use this screen to apply a different DHCP option 82 profile to certain ports in a VLAN. To open this screen, click **IP Application > DHCP > DHCPv4 > VLAN > Port**.

Figure 312 IP Application > DHCP > DHCPv4 > VLAN > Port

The screenshot shows a web-based configuration interface for DHCPv4 VLAN Port settings. The main area contains a table with three columns: 'VID', 'Port', and 'Option 82 Profile'. Below this table are three buttons: 'Add', 'Cancel', and 'Clear'. At the bottom of the screen, there is a summary table with columns: 'Index', 'VID', 'Port', and 'Profile Name'. Below this summary table are 'Delete' and 'Cancel' buttons.

The following table describes the labels in this screen.


Table 210 IP Application > DHCP > DHCPv4 > VLAN > Port

| LABEL | DESCRIPTION |
|-------------------|--|
| VID | Enter the ID number of the VLAN you want to configure here. |
| Port | Enter the number of port(s) to which you want to apply the specified DHCP option 82 profile. You can enter multiple ports separated by (no space) comma (,) or hyphen (-) for a range. For example, enter "3-5" for ports 3, 4, and 5. Enter "3,5,7" for ports 3, 5, and 7. In stacking mode, the first number represents the slot and the second the port number. Enter 1/1-1/24,2/28 for ports 1 to 24 for the Switch in slot 1 and port 28 for the Switch in slot 2, for example. |
| Option 82 Profile | Select a pre-defined DHCP option 82 profile that the Switch applies to the specified port(s) in this VLAN. The Switch adds the Circuit ID sub-option and/or Remote ID sub-option specified in the profile to DHCP requests that it relays to a DHCP server. Note: The profile you select here has priority over the one you select in the DHCP > DHCPv4 > VLAN screen. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click this to reset the values above based on the last selected entry or, if not applicable, to clear the fields above. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each entry. Click an index number to change the settings. |
| VID | This field displays the VLAN to which the port(s) belongs. |
| Port | This field displays the port(s) to which the Switch applies the settings. |
| Profile Name | This field displays the DHCP option 82 profile that the Switch applies to the port(s) in this VLAN. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Select the configuration entries you want to remove and click Delete to remove them. |
| Cancel | Click Cancel to clear the check boxes. |

43.5.2 Example: DHCP Relay for Two VLANs

The following example displays two VLANs (VIDs 1 and 2) for a campus network. Two DHCP servers are installed to serve each VLAN. The system is set up to forward DHCP requests from the dormitory rooms (VLAN 1) to the DHCP server with an IP address of 192.168.1.100. Requests from the academic buildings (VLAN 2) are sent to the other DHCP server with an IP address of 172.16.10.100.

Figure 313 DHCP Relay for Two VLANs

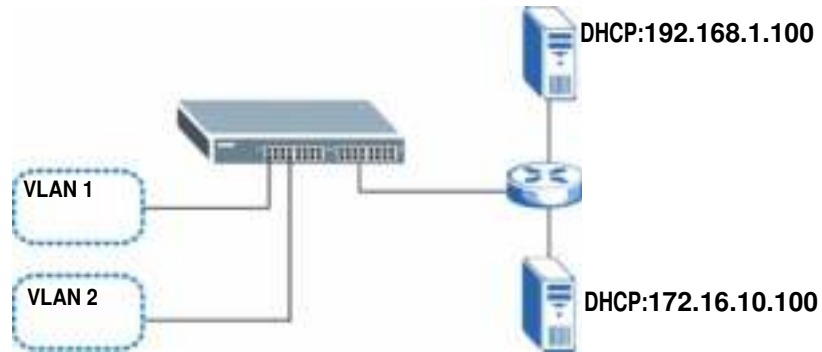

For the example network, configure the **VLAN Setting** screen as shown.

Figure 314 DHCP Relay for Two VLANs Configuration Example

| VLAN Setting | | Port | Status |
|---|--|-------------|--------|
| VID | 2 | | |
| DHCP Status | <input type="radio"/> Server <input checked="" type="radio"/> Relay | | |
| Server | | | |
| Client IP Pool Starting Address | 0.0.0.0 | | |
| Size of Client IP Pool | [Slider] | | |
| IP Subnet Mask | 0.0.0.0 | | |
| Default Gateway | 0.0.0.0 | | |
| Primary DNS Server | 0.0.0.0 | | |
| Secondary DNS Server | 0.0.0.0 | | |
| Lease Time | <input type="radio"/> Infinite <input checked="" type="radio"/> Days [Slider] Hours [Slider] Minutes [Slider] | | |
| Relay | | | |
| Remote DHCP Server 1 | 172.16.10.100 | | |
| Remote DHCP Server 2 | 0.0.0.0 | | |
| Remote DHCP Server 3 | 0.0.0.0 | | |
| Option 82 Profile | [Dropdown] | | |
| <input type="button" value="Add"/> <input type="button" value="Cancel"/> <input type="button" value="Clear"/> | | | |
| VID | Type | DHCP Status | |
| <input type="button" value="Delete"/> <input type="button" value="Cancel"/> | | | |

EXAMPLE

43.6 DHCPv6 Status

Click **IP Application > DHCP > DHCPv6** in the navigation panel to see information on the DHCPv6 server. The **DHCP Status** screen displays.

Figure 315 IP Application > DHCP > DHCPv6

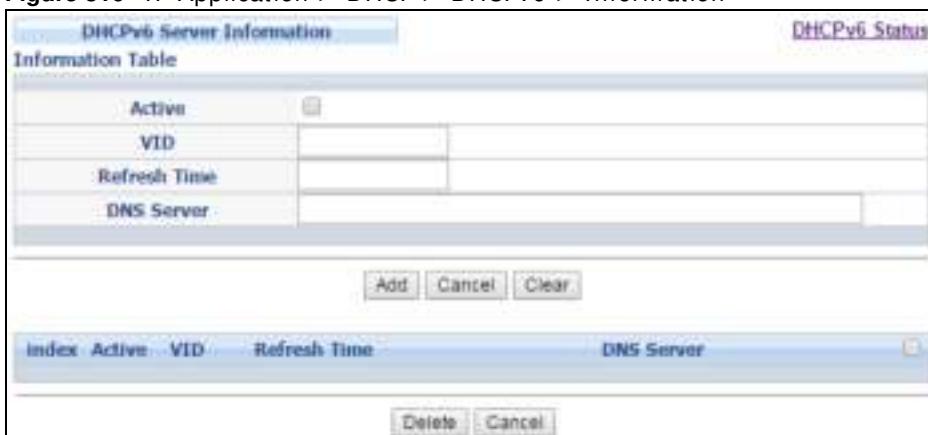
The following table describes the labels in this screen.

Table 211 IP Application > DHCP > DHCPv6

| LABEL | DESCRIPTION |
|-------------------|--|
| Server Status | This section displays configuration settings related to the Switch's DHCP server mode. |
| Index | The Dynamic Host Configuration Protocol for IPv6 (DHCPv6, RFC 3315) is a server-client protocol that allows a DHCP server to assign and pass IPv6 network addresses, prefixes and other configuration information to DHCP clients. DHCPv6 servers and clients exchange DHCP messages using UDP. |
| VID | This is the index number of a DHCPv6 server information |
| DHCP Server | This field displays the VLAN ID to which the DHCP server belongs. |
| Information | This field displays Yes when the entry supports display of the refresh time and DNS server; it shows No when it does not. |
| Prefix Delegation | This field displays Yes when the entry supports the prefix delegation; it shows No when it does not. The prefix delegation is used by an IPv6 device to generate its IP address. |
| DHCP Relay | A DHCPv6 relay agent is on the same network as the DHCPv6 clients and helps forward messages between the DHCPv6 server (that's in another network) and the DHCPv6 clients. This field displays Yes when the Switch supports DHCPv6 Relay and No when it does not. Yes means the Switch forwards all DHCP requests to the same DHCP server. No means the Switch does not forward DHCP requests to a DHCP server. |

43.7 DHCPv6 Information

Use this screen to configure DHCPv6 and DNS server settings on the Switch. Click **IP Application > DHCP > DHCPv6 > Information** in the navigation panel to display the screen as shown.

Figure 316 IP Application > DHCP > DHCPv6 > Information

The following table describes the labels in this screen.

Table 212 IP Application > DHCP > DHCPv6 > Information

| LABEL | DESCRIPTION |
|--------------|---|
| Active | Select this check box to enable the Switch to get DHCPv6 and DNS server settings. |
| VID | Enter the ID number of the VLAN to which the DHCPv6 server belongs here. |
| Refresh Time | Enter the number of seconds a DHCPv6 client should wait before refreshing information retrieved from a DHCPv6 server. The allowed range is 600 to 4294967295 seconds. |
| DNS Server | Specify the IPv6 address of the DNS server for the DHCP clients to use here. An 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address '2001:0db8:1a2b:0015:0000:0000:1a2f:0000'. IPv6 addresses can be abbreviated in two ways: <ul style="list-style-type: none"> • Leading zeros in a block can be omitted. So '2001:0db8:1a2b:0015:0000:0000:1a2f:0000' can be written as '2001:db8:1a2b:15:0:0:1a2f:0'. • Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So '2001:0db8:0000:0000:1a2f:0000:0000:0015' can be written as '2001:0db8::1a2f:0000:0000:0015', '2001:0db8:0000:0000:1a2f::0015', '2001:db8::1a2f:0:0:15' or '2001:db8:0:0:1a2f::15'. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to their last saved values. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each entry. Click an index number to change its settings. |
| Active | This field displays whether the DHCPv6 is activated or not. |
| VID | This field displays the ID number of the VLAN to which the DHCPv6 server belongs. |
| Refresh Time | This field displays the number of seconds a DHCPv6 client should wait before refreshing information retrieved from a DHCPv6 server. It displays disable if Refresh Time is not configured. |
| DNS Server | This field displays the IPv6 address of the DNS server that the DHCP clients will use. It displays disable when it is not configured. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

43.8 DHCPv6 Prefix Delegation

Prefix delegation enables an IPv6 device to use the received IPv6 prefix (for example, '2001:db2::/48') to generate its IP address. The Switch passes the the IPv6 prefix information to its connected hosts (according to VLAN) so that they can generate their IPv6 addresses.

Use this screen to configure DHCPv6 client and IPv6 prefix settings for a specific VLAN on the Switch. Click **IP Application > DHCP > DHCPv6 > Prefix Delegation** in the navigation panel to display the screen as shown.

Figure 317 IP Application > DHCP > DHCPv6 > Prefix Delegation

The following table describes the labels in this screen.

Table 213 IP Application > DHCP > DHCPv6 > Prefix Delegation

| LABEL | DESCRIPTION |
|----------------|--|
| Client DUID | Each DHCP client and server has a unique DHCP Unique Identifier (DUID), which is used for identification when they are exchanging DHCPv6 messages. The DUID is generated from the MAC address, time, vendor assigned ID and/or the vendor's private enterprise number registered with the IANA. Type the client DUID for the devices connected to the Switch in this field. |
| Client Name | Type a name to identify the DHCPv6 client in this field. |
| VID | Type the ID number of the VLAN to which the DHCPv6 client belongs here. |
| Prefix Address | IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as "/x" where x is a number. For example, '2001:db8:1a2b:15::1a2f:0/32' is a prefix address with prefix length. /32 means that the first 32 bits ('2001:db8') from the left is the network prefix. Type the prefix address in this field. For example, type '2001:db8:1a2b:15::1a2f:0' |
| Prefix Length | Type the prefix length in this field. For example, type 32. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to their last saved values. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| Index | This field displays a sequential number for each entry. Click an index number to change its settings. |
| Client DUID | This field displays the client DHCP Unique Identifier (DUID) which uniquely identifies the client. |
| Client Name | This field displays a name to identify the DHCPv6 client. |
| VID | This field displays the ID number of the VLAN to which the DHCPv6 client belongs. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

43.9 DHCPv6 Relay

A DHCPv6 relay agent is on the same network as the DHCPv6 clients and helps forward messages between the DHCPv6 server (that's in another network) and the DHCPv6 clients.

The DHCPv6 relay agent can add the remote identification (remote-ID) option and the interface-ID option to the Relay-Forward DHCPv6 messages. The remote-ID option carries a user-defined string, such as the system name. The interface-ID option provides slot number, port information and the VLAN ID to the DHCPv6 server. The remote-ID option (if any) is stripped from the Relay-Reply messages before the relay agent sends the packets to the clients. The DHCPv6 server copies the interface-ID option from the Relay-Forward message into the Relay-Reply message and sends it to the relay agent. The interface-ID should not change even after the relay agent restarts.

Use this screen to configure DHCPv6 relay settings for a specific VLAN on the Switch. Click **IP Application > DHCP > DHCPv6 > DHCPv6 Relay** in the navigation panel to display the screen as shown.

Figure 318 IP Application > DHCP > DHCPv6 > DHCPv6 Relay

The following table describes the labels in this screen.

Table 214 IP Application > DHCP > DHCPv6 > DHCPv6 Relay

| LABEL | DESCRIPTION |
|----------------|---|
| VID | Enter the ID number of the VLAN to which the DHCPv6 server that will assign IP information belongs here. |
| Helper Address | <p>Enter the IPv6 address of the DHCPv6 server that will assign IP information here.</p> <p>An 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address '2001:0db8:1a2b:0015:0000:0000:1a2f:0000'.</p> <p>IPv6 addresses can be abbreviated in two ways:</p> <ul style="list-style-type: none"> • Leading zeros in a block can be omitted. So '2001:0db8:1a2b:0015:0000:0000:1a2f:0000' can be written as '2001:db8:1a2b:15:0:0:1a2f:0'. • Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So '2001:0db8:0000:0000:1a2f:0000:0000:0015' can be written as '2001:0db8::1a2f:0000:0000:0015', '2001:0db8:0000:0000:1a2f::0015', '2001:db8::1a2f:0:0:15' or '2001:db8:0:0:1a2f::15'. |
| Options | |

Table 214 IP Application > DHCP > DHCPv6> DHCPv6 Relay (continued)

| LABEL | DESCRIPTION |
|----------------|--|
| Interface ID | Select this option to have the Switch add the interface-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCPv6 server. |
| Remote ID | Enter a string of up to 64 printable characters to be carried in the remote-ID option. The Switch adds the remote-ID option in the DHCPv6 requests from the clients in the specified VLAN before the Switch forwards them to a DHCPv6 server. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to reset the fields to their last saved values. |
| Clear | Click Clear to reset the fields to the factory defaults. |
| VID | This field displays the VLAN ID number. Click the VLAN ID to change the settings. |
| Helper Address | This field displays the IPv6 address of the remote DHCPv6 server for this VLAN. |
| Interface ID | This field displays whether the interface-ID option is added to DHCPv6 requests from clients in this VLAN. |
| Remote ID | This field displays whether the remote-ID option is added to DHCPv6 requests from clients in this VLAN. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Check the entry(ies) that you want to remove and then click the Delete button. |
| Cancel | Click Cancel to clear the selected checkbox(es). |

This chapter shows you how to configure and monitor the Virtual Router Redundancy Protocol (VRRP) on the Switch.


44.1 VRRP Overview

Each host on a network is configured to send packets to a statically configured default gateway (this Switch). The default gateway can become a single point of failure. Virtual Router Redundancy Protocol (VRRP), defined in RFC 2338, allows you to create redundant backup gateways to ensure that the default gateway of a host is always available.

In VRRP, a virtual router (VR) represents a number of physical layer-3 devices. An IP address is associated with the virtual router. A layer-3 device having the same IP address is the preferred master router while the other Layer-3 devices are the backup routers. The master router forwards traffic for the virtual router. When the master router becomes unavailable, a backup router assumes the role of the master router until the master router comes back up and takes over.

The following figure shows a VRRP network example with the switches (**A** and **B**) implementing one virtual router **VR1** to ensure the link between the host **X** and the uplink gateway **G**. Host **X** is configured to use **VR1** (192.168.1.20) as the default gateway. If switch **A** has a higher priority, it is the master router. Switch **B**, having a lower priority, is the backup router.

Figure 319 VRRP: Example 1

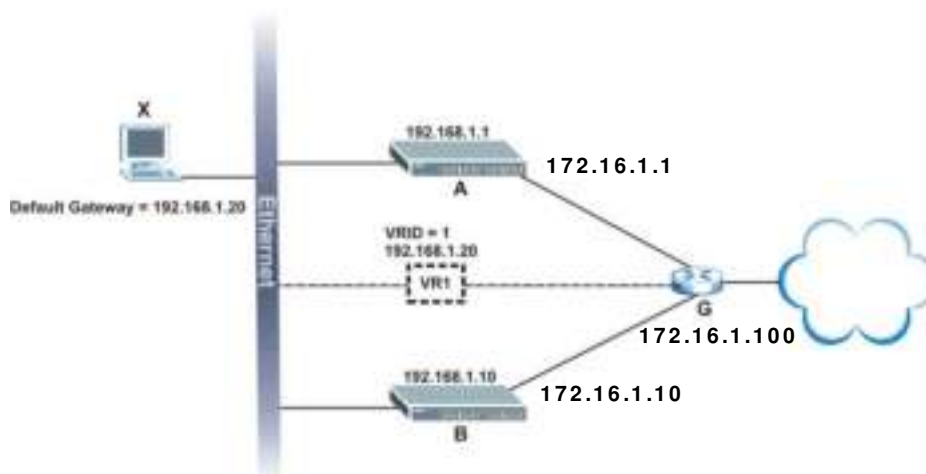

If switch **A** (the master router) is unavailable, switch **B** takes over. Traffic is then processed by switch **B**.

44.2 VRRP Status

Click **IP Application** > **VRRP** in the navigation panel to display the **VRRP Status** screen as shown next.

Figure 320 IP Application > VRRP Status



The following table describes the labels in this screen.

Table 215 IP Application > VRRP Status

| LABEL | DESCRIPTION |
|------------------|---|
| Index | This field displays the index number of a rule. |
| Network | This field displays the IP address and the subnet mask bits of an IP routing domain that is associated to a virtual router. |
| VRID | This field displays the ID number of the virtual router. |
| VR Status | This field displays the status of the virtual router. This field is Master indicating that this Switch functions as the master router. This field is Backup indicating that this Switch functions as a backup router. This field displays Init when this Switch is initiating the VRRP protocol or when the Uplink Status field displays Dead . |
| Uplink Status | This field displays the status of the link between this Switch and the uplink gateway. This field is Alive indicating that the link between this Switch and the uplink gateway is up. Otherwise, this field is Dead . This field displays Probe when this Switch is check for the link state. |
| Poll Interval(s) | The text box displays how often (in seconds) this screen refreshes. You may change the refresh interval by typing a new number in the text box and then clicking Set Interval . |
| Stop | Click Stop to halt system statistic polling. |

44.3 VRRP Configuration

The following sections describe the different parts of the VRRP Configuration screen.

44.3.1 IP Interface Setup

Before configuring VRRP, first create an IP interface (or routing domain) in the **IP Setup** screen (see the [Section 6.5 on page 65](#) for more information).

Click **IP Application**, **VRRP** and click the **Configuration** link to display the **VRRP Configuration** screen as shown next.

Note: You can only configure VRRP on interfaces with unique VLAN IDs.

Note: Routing domains with the same VLAN ID are not displayed in the table indicated.

Figure 321 IP Application > VRRP Configuration: IP Interface

The following table describes the labels in this screen.

Table 216 IP Application > VRRP Configuration: IP Interface

| LABEL | DESCRIPTION |
|----------------|--|
| Index | This field displays the index number of an entry. |
| Network | This field displays the IP address and number of subnet mask bit of an IP domain. |
| Authentication | Select None to disable authentication. This is the default setting. Select Simple to use a simple password to authenticate VRRP packet exchanges on this interface. |
| Key | When you select Simple in the Authentication field, enter a password key (up to eight printable ASCII character long) in this field. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to discard all changes made in this table. |

44.3.2 VRRP Parameters

This section describes the VRRP parameters.

44.3.2.1 Advertisement Interval

The master router sends out Hello messages to let the other backup routers know that it is still up and running. The time interval between sending the Hello messages is the advertisement interval. By default, a Hello message is sent out every second.

If the backup routers do not receive a Hello message from the master router after this interval expires, it is assumed that the master router is down. Then the backup router with the highest priority becomes the master router.

Note: All routers participating in the virtual router must use the same advertisement interval.

44.3.2.2 Priority

Configure the priority level (1 to 254) to set which backup router to take over in case the master router goes down. The backup router with the highest priority will take over. The priority of the VRRP router that owns the IP address(es) associated with the virtual router is 255.

44.3.2.3 Preempt Mode

If the master router is unavailable, a backup router assumes the role of the master router. However, when another backup router with a higher priority joins the network, it will preempt the lower priority backup router that is the master. Disable preempt mode to prevent this from happening.

By default, a layer 3 device with the same IP address as the virtual router will become the master router regardless of the preempt mode.

44.3.3 Configuring VRRP Parameters

After you set up an IP interface, configure the VRRP parameters in the **VRRP Configuration** screen.

Figure 322 IP Application > VRRP Configuration: VRRP Parameters

| | |
|------------------------|-------------------------------------|
| Active | <input type="checkbox"/> |
| Name | name |
| Network | <input type="text"/> |
| Virtual Router ID | 1 |
| Advertisement Interval | 1 |
| Preempt Mode | <input checked="" type="checkbox"/> |
| Priority | 100 |
| Uplink Gateway | 0.0.0.0 |
| Response Ping | <input type="checkbox"/> |
| Primary Virtual IP | 0.0.0.0 |
| Secondary Virtual IP | 0.0.0.0 |

The following table describes the labels in this screen.

Table 217 IP Application > VRRP Configuration: VRRP Parameters

| LABEL | DESCRIPTION |
|------------------------|--|
| Active | Select this option to enable this VRRP entry. |
| Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. |
| Network | Select an IP domain to which this VRRP entry applies. |
| Virtual Router ID | Select a virtual router number (1 to 7) for which this VRRP entry is created. You can configure up to seven virtual routers for one network. |
| Advertisement Interval | Specify the number of seconds between Hello message transmissions. The default is 1 . |
| Preempt Mode | Select this option to activate preempt mode. |
| Priority | Enter a number (between 1 and 254) to set the priority level. The bigger the number, the higher the priority. This field is 100 by default. |
| Uplink Gateway | Enter the IP address of the uplink gateway in dotted decimal notation. The Switch checks the link to the uplink gateway. |
| Response Ping | Select this option to have the Switch respond to a ping that is sent to the virtual IP address. |
| Primary Virtual IP | Enter the IP address of the primary virtual router in dotted decimal notation. |
| Secondary Virtual IP | This field is optional. Enter the IP address of a secondary virtual router in dotted decimal notation. This field is ignored when you enter 0.0.0.0 . |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to discard all changes made in this table. |
| Clear | Click Clear to set the above fields back to the factory defaults. |

44.3.4 Viewing VRRP Summary

View the VRRP configuration summary at the bottom of the screen.

Figure 323 IP Application > VRRP Configuration: Summary



The following table describes the labels in this screen.

Table 218 IP Application > VRRP Configuration: Summary

| LABEL | DESCRIPTION |
|--------|---|
| Index | This field displays the index number of an entry. Click an index number to change the settings. |
| Active | This field shows whether a VRRP entry is enabled (Yes) or disabled (No). |

Table 218 IP Application > VRRP Configuration: Summary (continued)


| LABEL | DESCRIPTION |
|----------------|---|
| Name | This field displays a descriptive name of an entry. |
| Network | This field displays the IP address and subnet mask of an interface. |
| VRID | This field displays the ID number of a virtual router. |
| Primary VIP | This field displays the IP address of the primary virtual router. |
| Uplink Gateway | This field displays the IP address of the uplink gateway. |
| Priority | This field displays the priority level (1 to 255) of the entry. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

44.4 VRRP Configuration Examples

The following sections show two VRRP configuration examples on the Switch.

44.4.1 One Subnet Network Example

The figure below shows a simple VRRP network with only one virtual router **VR1** (VRID = 1) and two switches. The network is connected to the WAN via an uplink gateway **G** (172.16.1.100). The host computer **X** is set to use **VR1** as the default gateway.

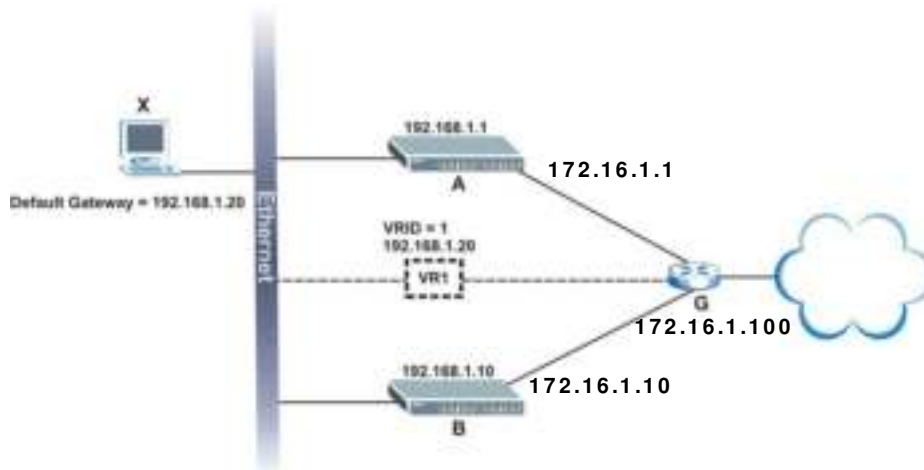Figure 324 VRRP Configuration Example: One Virtual Router Network

You want to set switch **A** as the master router. Configure the VRRP parameters in the **VRRP Configuration** screens on the switches as shown in the figures below.

Figure 325 VRRP Example 1: VRRP Parameter Settings on Switch A

| | |
|------------------------|-------------------------------------|
| Advis | <input checked="" type="checkbox"/> |
| Name | Example1 |
| Network | 192.168.1.10/24 |
| Virtual Router ID | 1 |
| Advertisement Interval | 1 |
| Preempt Mode | <input checked="" type="checkbox"/> |
| Priority | 100 |
| Uplink Gateway | 172.16.1.100 |
| Response Ping | <input checked="" type="checkbox"/> |
| Primary Virtual IP | 192.168.1.20 |
| Secondary Virtual IP | 0.0.0.0 |

EXAMPLE

Figure 326 VRRP Example 1: VRRP Parameter Settings on Switch B

| | |
|------------------------|-------------------------------------|
| Advis | <input checked="" type="checkbox"/> |
| Name | Example1 |
| Network | 192.168.1.10/24 |
| Virtual Router ID | 1 |
| Advertisement Interval | 1 |
| Preempt Mode | <input checked="" type="checkbox"/> |
| Priority | 100 |
| Uplink Gateway | 172.16.1.100 |
| Response Ping | <input checked="" type="checkbox"/> |
| Primary Virtual IP | 192.168.1.20 |
| Secondary Virtual IP | 0.0.0.0 |

EXAMPLE

After configuring and saving the VRRP configuration, the **VRRP Status** screens for both switches are shown next.

Figure 327 VRRP Example 1: VRRP Status on Switch A

| VRRP Status | | | | Configuration |
|-------------|-----------------|------|-----------|---------------|
| Index | Network | VRID | VR Status | Uplink Status |
| 1 | 192.168.1.10/24 | 1 | Master | Alive |

EXAMPLE

Figure 328 VRRP Example 1: VRRP Status on Switch B


| VRRP Status | | | | Configuration |
|-------------|-----------------|------|-----------|---------------|
| Index | Network | VRID | VR Status | Uplink Status |
| 1 | 192.168.1.10/24 | 1 | Backup | Alive |

EXAMPLE

44.4.2 Two Subnets Example

The following figure depicts an example in which two switches share the network traffic. Hosts in the two network groups use different default gateways. Each switch is configured to backup a virtual router using VRRP.

You wish to configure switch **A** as the master router for virtual router **VR1** and as a backup for virtual router **VR2**. On the other hand, switch **B** is the master for **VR2** and a backup for **VR1**.

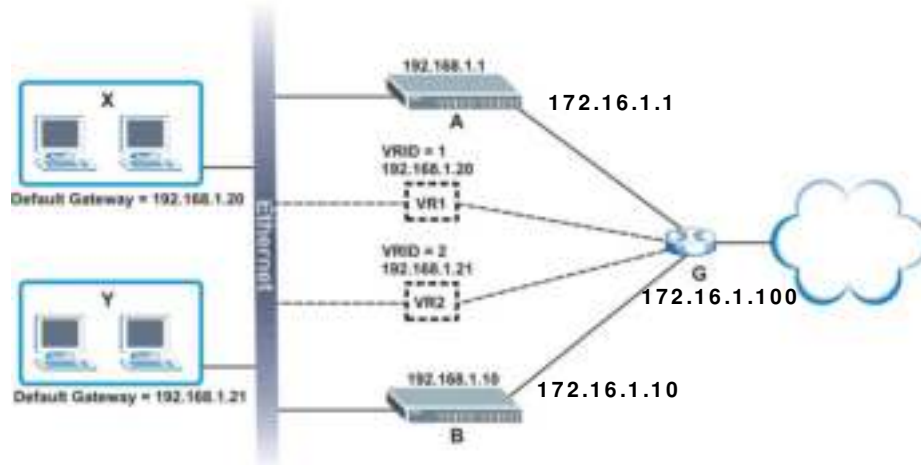Figure 329 VRRP Configuration Example: Two Virtual Router Network

You need to configure the **VRRP Configuration** screen for virtual router VR2 on each switch, while keeping the VRRP configuration in example 1 for virtual router **VR1** (refer to [Section 44.4.2 on page 436](#)). Configure the VRRP parameters on the switches as shown in the figures below.

Figure 330 VRRP Example 2: VRRP Parameter Settings for VR2 on Switch A

| | |
|------------------------|-------------------------------------|
| Advertise | <input checked="" type="checkbox"/> |
| Name | Example2 |
| Network | 192.168.1.10/24 |
| Virtual Router ID | 2 |
| Advertisement Interval | 1 |
| Preempt Mode | <input checked="" type="checkbox"/> |
| Priority | 100 |
| Historic Gateway | 172.16.1.100 |
| Response Ping | <input checked="" type="checkbox"/> |
| Primary Virtual IP | 192.168.1.21 |
| Secondary Virtual IP | 0.0.0.0 |

EXAMPLE

Figure 331 VRRP Example 2: VRRP Parameter Settings for VR2 on Switch B

| | |
|------------------------|-------------------------------------|
| Advertise | <input checked="" type="checkbox"/> |
| Name | Example2 |
| Network | 192.168.1.10/24 |
| Virtual Router ID | 2 |
| Advertisement Interval | 1 |
| Preempt Mode | <input checked="" type="checkbox"/> |
| Priority | 110 |
| Historic Gateway | 172.16.1.100 |
| Response Ping | <input checked="" type="checkbox"/> |
| Primary Virtual IP | 192.168.1.21 |
| Secondary Virtual IP | 0.0.0.0 |

EXAMPLE

After configuring and saving the VRRP configuration, the **VRRP Status** screens for both switches are shown next.

Figure 332 VRRP Example 2: VRRP Status on Switch A

| VRRP Status | | | | Configuration |
|-------------|-----------------|------|-----------|---------------|
| Index | Network | VRID | VR Status | Uplink Status |
| 1 | 192.168.1.10/24 | 2 | Backup | Alive |
| 2 | 192.168.1.10/24 | 1 | Master | Alive |

EXAMPLE

Figure 333 VRRP Example 2: VRRP Status on Switch B


| VRRP Status | | | | Configuration |
|-------------|-----------------|------|-----------|---------------|
| Index | Network | VRID | VR Status | Uplink Status |
| 1 | 192.168.1.10/24 | 2 | Master | Alive |
| 2 | 192.168.1.10/24 | 1 | Backup | Alive |

EXAMPLE

Load Sharing

45.1 Load Sharing Overview

The Switch learns the next-hop(s) using ARP and determines routing path(s) for a destination. The Switch supports Equal-Cost MultiPath (ECMP) to forward packets destined to the same device (**A** for example) through different routing paths (**1**, **2** and **3**) of equal path cost. This allows you to balance or share traffic loads between multiple routing paths when the Switch is connected to more than one next-hop. ECMP works with static routes or a routing protocol, such as OSPF.

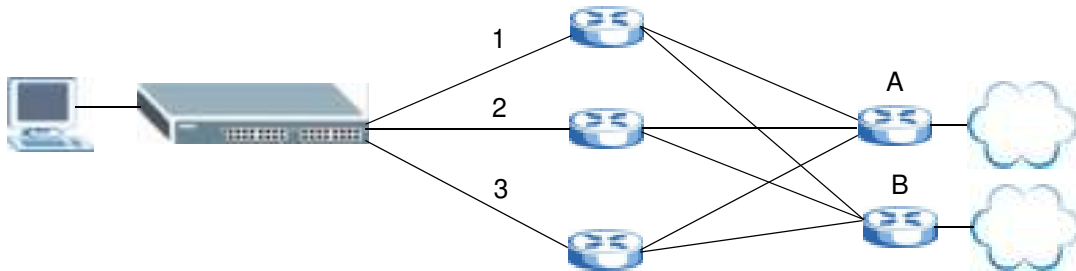

With ECMP, packets are routed through the paths of equal cost according to the hash algorithm output.

45.2 Configuring Load Sharing

Click **IP Application > Load Sharing** in the navigation panel to display the screen as shown next.

Figure 334 IP Application > Load Sharing

| Load Sharing | | |
|--|--------------------------|---------|
| Active | <input type="checkbox"/> | |
| Criteria | src-dst-ip ▼ | |
| Aging Time | 1200 | seconds |
| Discover Time | 3600 | seconds |
| Maximum Paths | 8 | |
| <input type="button" value="Apply"/> <input type="button" value="Cancel"/> | | |

The following table describes the labels in this screen.

Table 219 IP Application > Load Sharing

| LABEL | DESCRIPTION |
|---------------|---|
| Active | Select this option to enable Equal-Cost MultiPath (ECMP) routing on the Switch. |
| Criteria | <p>Select the criteria the Switch uses to determine the routing path for a packet.</p> <p>Select src-ip to have the Switch use a hash algorithm to convert a packet's source IP address into a hash value which acts as an index to a route path.</p> <p>Select src-dst-ip to have the Switch use a hash algorithm to convert a packet's source and destination IP addresses into a hash value which acts as an index to a route path.</p> |
| Aging Time | Specify the time interval (from 0 to 86400 in increments of 10) in seconds at which the Switch sends an ARP request to update a resolved next-hop's MAC address. |
| Discover Time | Specify the time interval (from 0 to 86400 in increments of 10) in seconds at which the Switch sends an ARP request to update an unresolved next-hop's MAC address. |
| Maximum Paths | <p>Set the maximum number of paths for one ECMP (Equal-Cost MultiPath) route. The maximum number varies by Switch. A smaller number of maximum-paths means more ECMP routes are allowed and a larger number of maximum-paths means fewer ECMP routes are allowed.</p> <p>The number of paths for a static route for ECMP cannot be bigger than the maximum-paths value configured here.</p> <p>Throughput may be influenced while configuring ECMP maximum-paths.</p> |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

ARP Setup

46.1 ARP Overview

Address Resolution Protocol (ARP) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address, also known as a Media Access Control or MAC address, on the local area network.

An IP (version 4) address is 32 bits long. In an Ethernet LAN, MAC addresses are 48 bits long. The ARP table maintains an association between each MAC address and its corresponding IP address.

46.1.1 How ARP Works

When an incoming packet destined for a host device on a local area network arrives at the Switch, the Switch looks in the ARP Table and if it finds the address, it sends it to the device.

If no entry is found for the IP address, ARP broadcasts the request to all the devices on the LAN. The Switch fills in its own MAC and IP address in the sender address fields, and puts the known IP address of the target in the target IP address field. In addition, the Switch puts all ones in the target MAC field (FF.FF.FF.FF.FF.FF is the Ethernet broadcast address). The replying device (which is either the IP address of the device being sought or the router that knows the way) replaces the broadcast address with the target's MAC address, swaps the sender and target pairs, and unicasts the answer directly back to the requesting machine. ARP updates the ARP Table for future reference and then sends the packet to the MAC address that replied.

46.1.2 ARP Learning Mode


The Switch supports three ARP learning modes: ARP-Reply, Gratuitous-ARP, and ARP-Request.

46.1.2.1 ARP-Reply

The Switch in ARP-Reply learning mode updates the ARP table only with the ARP replies to the ARP requests sent by the Switch. This can help prevent ARP spoofing.

In the following example, the Switch does not have IP address and MAC address mapping information for hosts **A** and **B** in its ARP table, and host **A** wants to ping host **B**. Host **A** sends an ARP request to the Switch and then sends an ICMP request after getting the ARP reply from the Switch. The Switch finds no matched entry for host **B** in the ARP table and broadcasts the ARP request to all the devices on the LAN. When the Switch receives the ARP reply from host **B**, it updates its ARP table and also forwards host **A**'s ICMP request to host **B**. After the Switch gets the

ICMP reply from host **B**, it sends out an ARP request to get host **A**'s MAC address and updates the ARP table with host **A**'s ARP reply. The Switch then can forward host **B**'s ICMP reply to host **A**.

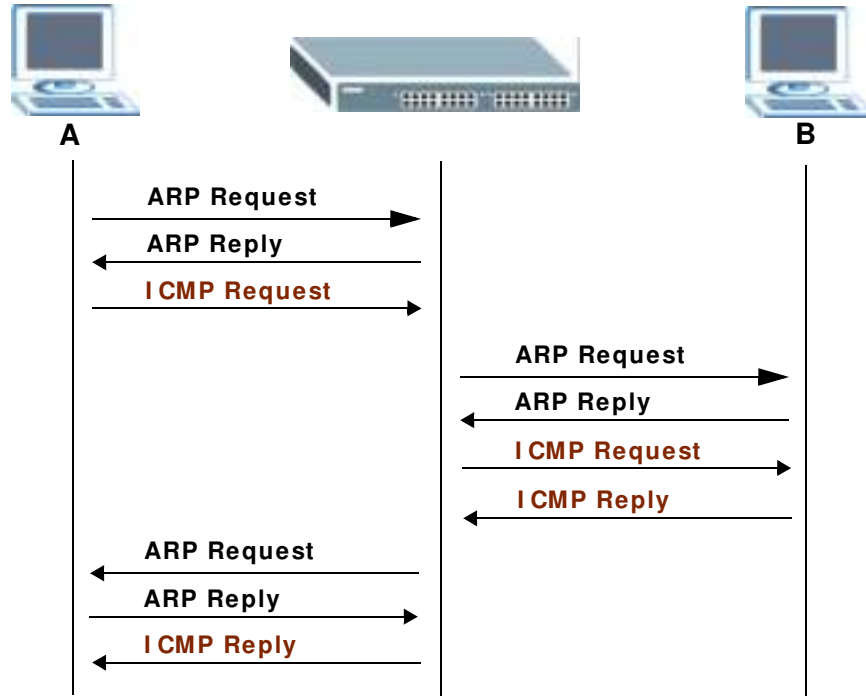

46.1.2.2 Gratuitous-ARP

A gratuitous ARP is an ARP request in which both the source and destination IP address fields are set to the IP address of the device that sends this request and the destination MAC address field is set to the broadcast address. There will be no reply to a gratuitous ARP request.


A device may send a gratuitous ARP packet to detect IP collisions. If a device restarts or its MAC address is changed, it can also use gratuitous ARP to inform other devices in the same network to update their ARP table with the new mapping information.

In Gratuitous-ARP learning mode, the Switch updates its ARP table with either an ARP reply or a gratuitous ARP request.

46.1.2.3 ARP-Request

When the Switch is in ARP-Request learning mode, it updates the ARP table with both ARP replies, gratuitous ARP requests and ARP requests.


Therefore in the following example, the Switch can learn host **A**'s MAC address from the ARP request sent by host **A**. The Switch then forwards host **B**'s ICMP reply to host **A** right after getting host **B**'s MAC address and ICMP reply.

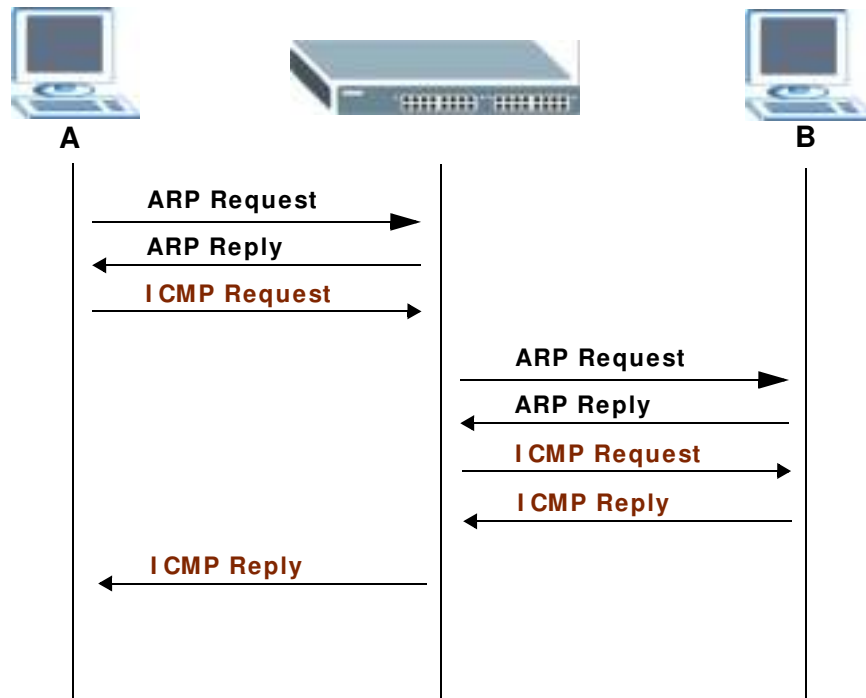

46.2 ARP Setup

Click **IP Application > ARP Setup** in the navigation panel to display the screen as shown. Click the link next to **ARP Learning** to open a screen where you can set the ARP learning mode for each port. Click the link next to **Static ARP** to open a screen where you can create static ARP entries on the Switch.

Figure 335 IP Application > ARP Setup

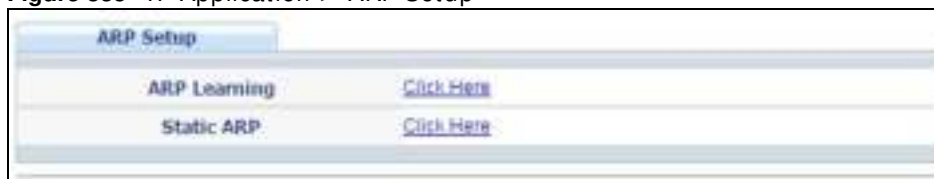

46.2.1 ARP Learning

Use this screen to configure each port's ARP learning mode. Click the link next to **ARP Learning** in the **IP Application > ARP Setup** screen to display the screen as shown next.

Figure 336 IP Application > ARP Setup > ARP Learning

| Port | ARP Learning Mode |
|------|-------------------|
| * | ARP-Request ▼ |
| 1 | ARP-Request ▼ |
| 2 | ARP-Request ▼ |
| 3 | ARP-Request ▼ |
| 4 | ARP-Request ▼ |
| 5 | ARP-Request ▼ |
| 6 | ARP-Request ▼ |
| 7 | ARP-Request ▼ |
| 8 | ARP-Request ▼ |
| 9 | ARP-Request ▼ |
| 10 | ARP-Request ▼ |
| 11 | ARP-Request ▼ |
| 12 | ARP-Request ▼ |
| 13 | ARP-Request ▼ |
| 14 | ARP-Request ▼ |
| 47 | ARP-Request ▼ |
| 48 | ARP-Request ▼ |
| 49 | ARP-Request ▼ |
| 50 | ARP-Request ▼ |
| 51 | ARP-Request ▼ |
| 52 | ARP-Request ▼ |

Apply Cancel

The following table describes the labels in this screen.

Table 220 IP Application > ARP Setup > ARP Learning

| LABEL | DESCRIPTION |
|----------------------|--|
| Slot (Stacking mode) | This field appears only in stacking mode. Click the drop-down list to choose the slot number of the Switch in a stack. |
| Port | This field displays the port number. In stacking mode, the first number represents the slot and the second the port number. |
| * | Settings in this row apply to all ports. Use this row only if you want to make some settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| ARP Learning Mode | Select the ARP learning mode the Switch uses on the port. Select ARP-Reply to have the Switch update the ARP table only with the ARP replies to the ARP requests sent by the Switch. Select Gratuitous-ARP to have the Switch update its ARP table with either an ARP reply or a gratuitous ARP request. Select ARP-Request to have the Switch update the ARP table with both ARP replies, gratuitous ARP requests and ARP requests. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

46.2.2 Static ARP

Use this screen to create static ARP entries that will display in the **Management > ARP Table** screen and will not age out. Click the link next to **Static ARP** in the **IP Application > ARP Setup** screen to display the screen as shown.

Figure 337 IP Application > ARP Setup > Static ARP

The following table describes the related labels in this screen.

Table 221 IP Application > ARP Setup > Static ARP

| LABEL | DESCRIPTION |
|-------------|--|
| Active | Select this check box to activate your rule. You may temporarily deactivate a rule without deleting it by clearing this check box. |
| Name | Enter a descriptive name (up to 32 printable ASCII characters) for identification purposes. |
| IP Address | Enter the IP address of a device connected to a Switch port with the corresponding MAC address below. |
| MAC Address | Enter the MAC address of the device with the corresponding IP address above. |
| VID | Enter the ID number of VLAN to which the device belongs. |
| Port | Enter the number of port to which the device connects. In stacking mode, the first number represents the slot and the second the port number. |
| Add | Click this to create a new entry or to update an existing one. This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to set the above fields back to the factory defaults. |
| Index | This field displays the index number of an entry. Click an index number to change the settings. |
| Active | This field displays Yes when the entry is activated and NO when it is deactivated. |
| Name | This field displays the descriptive name for this entry. This is for identification purposes only. |
| IP Address | This is the IP address of a device connected to a Switch port with the corresponding MAC address below. |
| MAC Address | This is the MAC address of the device with the corresponding IP address above. |
| VID | This field displays the VLAN to which the device belongs. |

Table 221 IP Application > ARP Setup > Static ARP (continued)

| LABEL | DESCRIPTION |
|--------|---|
| Port | This field displays the port to which the device connects. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to clear the check boxes. |

Maintenance

This chapter explains how to configure the maintenance screens that let you maintain the firmware and configuration files.

47.1 The Maintenance Screen

Use this screen to manage firmware and your configuration files. Click **Management > Maintenance** in the navigation panel to open the following screen.

Figure 338 Management > Maintenance



The following table describes the labels in this screen.

Table 222 Management > Maintenance

| LABEL | DESCRIPTION |
|-----------------------------|--|
| Current | This field displays which configuration (Configuration 1 or Configuration 2) is currently operating on the Switch. |
| Firmware Upgrade | Click Click Here to go to the Firmware Upgrade screen. |
| Restore Configuration | Click Click Here to go to the Restore Configuration screen. |
| Backup Configuration | Click Click Here to go to the Backup Configuration screen. |
| Erase Running-Configuration | Click Click Here to reset the current configuration of the Switch. Note that this will not reset the configuration to the factory default settings. |
| Save Configuration | Click Config 1 to save the current configuration settings to Configuration 1 on the Switch. Click Config 2 to save the current configuration settings to Configuration 2 on the Switch. |

Table 222 Management > Maintenance (continued)

| LABEL | DESCRIPTION |
|---------------|---|
| Reboot System | <p>Click Config 1 to reboot the system and load Configuration 1 on the Switch.</p> <p>Click Config 2 to reboot the system and load Configuration 2 on the Switch.</p> <p>Click Stacking Default to reboot the system and load stacking configurations on the Switch.</p> <p>Click Factory Default to reboot the system and load the factory default configuration on the Switch.</p> <p>Note: Make sure to click the Save button in any screen to save your settings to the current configuration on the Switch.</p> |
| Tech-Support | Click Click Here to see the Tech-Support screen. You can set CPU and memory thresholds for log reports and download related log reports for issue analysis. Log reports include CPU history and utilization, crash and memory. |

47.2 Firmware Upgrade

Make sure you have downloaded (and unzipped) the correct model firmware and version to your computer before uploading to the device.

Be sure to upload the correct model firmware as uploading the wrong model firmware may damage your device.

The Switch supports dual firmware images, **Firmware 1** and **Firmware 2**. Use this screen to specify which image is updated when firmware is uploaded using the web configurator and to specify which image is loaded when the Switch starts up.

Click **Management > Maintenance > Firmware Upgrade** to view the screen as shown next.

Figure 339 Management > Maintenance > Firmware Upgrade (Standalone mode)

| Firmware Upgrade | | Maintenance |
|------------------|------------|------------------------------|
| Name | Version | |
| XGS3700-48HP | Running | V4.30(AAGF.0)b3 07/17/2015 |
| | Firmware 1 | V4.30(AAGF.0)b3 07/17/2015 |
| | Firmware 2 | V4.20(AAGF.0) 01/21/2015 |

| | |
|--------------------|--------------|
| Current Boot Image | Firmware 1 |
| Config Boot Image | Firmware 1 ▼ |

Apply Cancel

To upgrade the internal switch firmware, browse the location of the binary (.BIN) file and click Upgrade button.

| | | | | |
|----------|-----|-----------|-------------|----------------|
| Firmware | 1 ▼ | File Path | Choose File | No file chosen |
|----------|-----|-----------|-------------|----------------|

Upgrade

Figure 340 Management > Maintenance > Firmware Upgrade (Stacking mode)

| Slot | Name | Status | Version |
|------|--------------|----------|------------|
| 1 | XGS3700-48HP | active | Running |
| | | | Firmware 1 |
| | | | Firmware 2 |
| 2 | XGS3700-24 | active | Running |
| | | | Firmware 1 |
| | | | Firmware 2 |
| 3 | | inactive | Running |
| | | | Firmware 1 |
| 4 | | inactive | Running |
| | | | Firmware 1 |

Current Boot Image: Firmware 1

Config Boot Image: Firmware 1

Apply Cancel

To upgrade the internal switch firmware, browse the location of the binary (.BIN) file and click Upgrade button.

All Firmware 1 File Path Choose File No file chosen

Upgrade

The top of firmware upgrade screen shows which firmware version is currently running on the Switch. Type the path and file name of the firmware file you wish to upload to the Switch in the **File Path** text box or click **Browse** to locate it. Firmware upgrades are only applied after a reboot. Click **Upgrade** to load the new firmware. Select the **Config Boot Image** drop-down list box if you want to reboot the Switch and click **Apply** to apply the new firmware immediately. Click **Upgrade** to load the new firmware.

After the firmware upgrade process is complete, see the **System Info** screen to verify your current firmware version number.

Table 223 Management > Maintenance > Firmware Upgrade

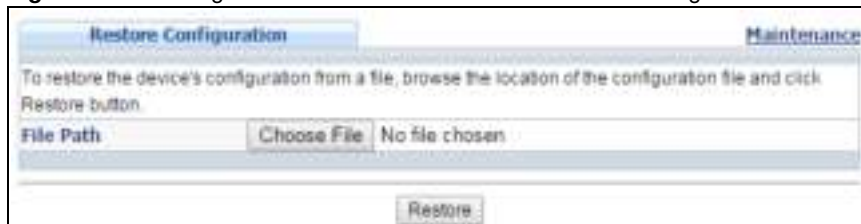
| LABEL | DESCRIPTION |
|------------------------|--|
| Slot (Stacking mode) | This is the slot index number. |
| Name | This is the name of the Switch that you're configuring. |
| Status (Stacking mode) | This field displays the current stacking status on the Switch. |

Table 223 Management > Maintenance> Firmware Upgrade (continued)

| LABEL | DESCRIPTION |
|--------------------|---|
| Version | The Switch has two firmware sets, Firmware 1 and Firmware 2 , residing in flash. <ul style="list-style-type: none"> Running shows the version number (and model code) and MM/DD/YYYY creation date of the firmware currently in use on the Switch (Firmware 1 or Firmware 2). The firmware information is also displayed at System Information in Basic Settings. Firmware 1 shows its version number (and model code) and MM/DD/YYYY creation date. Firmware 2 shows its version number (and model code) and MM/DD/YYYY creation date. |
| Current Boot Image | This displays which firmware is currently in use on the Switch (Firmware 1 or Firmware 2). |
| Config Boot Image | Select which firmware (Firmware 1 or Firmware 2) should load after rebooting. Click Apply and reboot the Switch to see changes including in the Current Boot Image field. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| (Stacking mode) | Click the drop-down list to choose the slot number of the Switch in a stack to upgrade the firmware on this slot. Or select All to upgrade the firmware for all slots. |
| Firmware | Choose to upload the new firmware to (Firmware) 1 or (Firmware) 2 . |
| Choose File | Click this and locate the path and file name of the firmware file you wish to upload to the Switch. |
| Upgrade | Click Upgrade to load the new firmware. Firmware upgrades are only applied after a reboot. To reboot, go to Management > Maintenance > Reboot System . You may also click Config 1 , Config 2 , or Factory Default (Config 1 , Config 2 and Factory Default are the configuration files you want the Switch to use when it restarts). |

47.3 Restore a Configuration File

Restore a previously saved configuration from your computer to the Switch using the **Restore Configuration** screen.

Figure 341 Management > Maintenance > Restore Configuration


Click the **Choose File** button to upload the path and file name of the configuration file you wish to restore in the **File Path** text box. After you have specified the file, click **Restore**. "config" is the name of the configuration file on the Switch, so your backup configuration file is automatically renamed when you restore using this screen.

47.4 Backup a Configuration File

Backing up your Switch configurations allows you to create various “snapshots” of your device from which you may restore at a later date.

Back up your current Switch configuration to a computer using the **Backup Configuration** screen.

Figure 342 Management > Maintenance > Backup Configuration

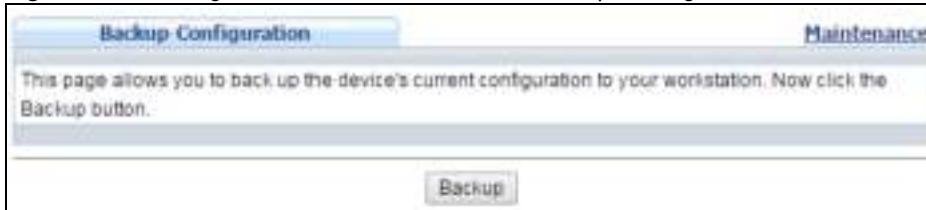

Follow the steps below to back up the current Switch configuration to your computer in this screen.

- 1 Click **Backup**.
- 2 If the current configuration file is open and/or downloaded to your computer automatically, you can click **File > Save As** to save the file to a specific place.


If a dialog box pops up asking whether you want to open or save the file, click **Save** or **Save File** to download it to the default downloads folder on your computer. If a **Save As** screen displays after you click **Save** or **Save File**, Choose a location to save the file on your computer from the **Save in** drop-down list box and type a descriptive name for it in the **File name** list box. Click **Save** to save the configuration file to your computer.

47.5 Erase Running-Configuration

Follow the steps below to clear current configuration on the Switch. Note that this will NOT reset the Switch back to its factory defaults. For example, if your Switch is set to stacking mode and you click erase running-configuration, after the the Switch restarts, it will remain in stacking mode. If you want to change the Switch to its factory default mode, click Factory Default button in Reboot System. See ([Section 47.7.1 on page 452](#)).

- 1 In the **Maintenance** screen, click the **Click Here** button next to **Erase Running-Configuration** to clear all Switch configuration information you configured on the Switch..
- 2 Click **OK** to reset all Switch configurations.

Figure 343 Erase Running-Configuration: Confirmation

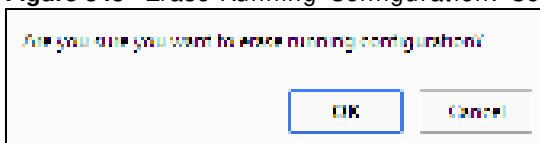

- 3 In the web configurator, click the **Save** button in the top of the screen to make the changes take effect. If you want to access the Switch web configurator again, you may need to change the IP address of your computer to be in the same subnet as that of the default Switch IP address (192.168.1.1).

47.6 Save Configuration

Click **Config 1** to save the current configuration settings permanently to configuration one on the Switch.

Click **Config 2** to save the current configuration settings permanently to configuration two on the Switch.

Alternatively, click **Save** on the top right-hand corner in any screen to save the configuration changes to the current configuration.

Note: Clicking the **Apply** or **Add** button does NOT save the changes permanently. All unsaved changes are erased after you reboot the Switch.

47.7 Reboot System

Reboot System allows you to restart the Switch without physically turning the power off. It also allows you to load configuration one (**Config 1**), configuration two (**Config 2**), stacking default, or factory default when you reboot. Follow the steps below to reboot the Switch.

- 1 In the **Maintenance** screen, click the **Config 1** button next to **Reboot System** to reboot and load configuration one. The following screen displays.

Figure 344 Reboot System: Confirmation



- 2 Click **OK** again and then wait for the Switch to restart. This takes up to two minutes. This does not affect the Switch's configuration.

Click **Config 2** and follow steps 1 to 2 to reboot and load configuration two on the Switch.


Click **Factory Default** and follow steps 1 to 2 to reboot and load default configuration settings on the Switch.

47.7.1 Load Stacking Default

Follow the steps below to reset the Switch back to the stacking defaults. The master Switch login information will not be reset.

- 1 In the click the **Stacking Default** button to clear all Switch configuration information you configured and return to the stacking defaults.
- 2 Click **OK** to reset all Switch configurations to the stacking defaults.

Figure 345 Load Stacking Default: Start

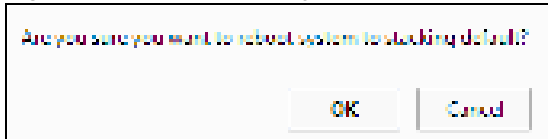


- 3 In the web configurator, click the **Save** button in the top of the screen to make the changes take effect. If you want to access the Switch web configurator again, you may need to change the IP address of your computer to be in the same subnet as that of the default Switch IP address (192.168.1.1).

47.7.2 Load Factory Default

Follow the steps below to reset the Switch back to the factory defaults.

- 1 In the click the **Factory Default** button to clear all Switch configuration information you configured and return to the factory defaults.
- 2 Click **OK** to reset all Switch configurations to the factory defaults.

Figure 346 Load Factory Default: Start

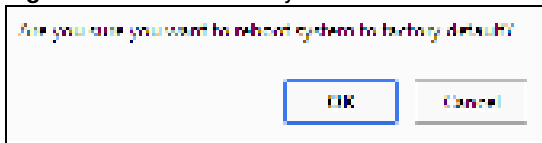

- 3 In the web configurator, click the **Save** button in the top of the screen to make the changes take effect. If you want to access the Switch web configurator again, you may need to change the IP address of your computer to be in the same subnet as that of the default Switch IP address (192.168.1.1).

47.8 Tech-Support

The Tech-Support feature is a log enhancement tool that logs useful information such as CPU utilization history, memory and Mbuf (Memory Buffer) log and crash reports for issue analysis by customer support should you have difficulty with your Switch. The Tech Support menu eases your effort in obtaining reports and it is also available in CLI command by typing "Show tech-support" command.

Click **Menu > Management > Maintenance > Tech-Support** to see the following screen.

Figure 347 Management > Maintenance > Tech-Support

You may need WordPad or similar software to see the log report correctly. The table below describes the fields in the above screen.

Table 224 Management > Maintenance > Tech-Support

| LABEL | DESCRIPTION |
|----------------|---|
| CPU | Type a number ranging from 50 to 100 in the CPU threshold box, and type another number ranging from 5 to 60 in the seconds box then click Apply . For example, 80 for CPU threshold and 5 for seconds means a log will be created when CPU utilization reaches over 80% and lasts for 5 seconds. The log report holds 7 days of CPU log data and is stored in volatile memory (RAM). The data is lost if the Switch is turned off or in event of power outage. After 7 days, the logs wrap around and new ones replace the earliest ones. The higher the CPU threshold number, the fewer logs will be created, and the less data technical support will have to analyze and vice versa. |
| Mbuf | Type a number ranging from 50 to 100 in the Mbuf (Memory Buffer) threshold box. The Mbuf log report is stored in flash (permanent) memory. For example, Mbuf 50 means a log will be created when the Mbuf utilization is over 50%. The higher the Mbuf threshold number, the fewer logs will be created, and the less data technical support will have to analyze and vice versa. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| All | Click Download to see all the log report and system status. This log report is stored in flash memory. If the All log report is too large, you can download the log reports separately below. |
| Crash | Click Download to see the crash log report. The log will include information of the last crash and is stored in flash memory. |
| CPU history | Click Download to see the CPU history log report. The 7-days log is stored in RAM and you will need to save it, otherwise it will be lost in event of Switch shutdown or power outage. |
| Memory Section | Click Download to see the memory section log report. This log report is stored in flash memory. |

Table 224 Management > Maintenance > Tech-Support

| LABEL | DESCRIPTION |
|-------|--|
| Mbuf | Click Download to see the Mbuf log report. The log includes Mbuf over threshold information. This log report is stored in flash memory. |
| ROM | Click Download to see the Read Only Memory (ROM) log report. This report is stored in flash memory. |

47.9 FTP Command Line

This section shows some examples of uploading to or downloading files from the Switch using FTP commands. First, understand the filename conventions.

47.9.1 Filename Conventions

The configuration file (also known as the romfile or ROM) contains the factory default settings in the screens such as password, Switch setup, IP Setup, and so on. Once you have customized the Switch's settings, they can be saved back to your computer under a filename of your choosing.

ZyNOS (ZyXEL Network Operating System, sometimes referred to as the "ras" file) is the system firmware and has a "bin" filename extension.

Table 225 Filename Conventions

| FILE TYPE | INTERNAL NAME | EXTERNAL NAME | DESCRIPTION |
|--------------------|----------------|---------------|---|
| Configuration File | config | .cfg | This is the configuration (config) filename on the Switch. Uploading the config file replaces the specified configuration file system, including your Switch configurations, system-related data (including the default password), the error log and the trace log. |
| Firmware | ras-0 ras-1 | *.bin | This is the generic name for the ZyNOS firmware on the Switch. <code>ras-0</code> is image 1; <code>ras-1</code> is image 2. |

You can store up to two images, or firmware files of the same device model, on the Switch. Only one image is used at a time.

- Run the `boot image <1|2>` command to specify which image is updated when firmware is loaded using the web configurator and to specify which image is loaded when the Switch starts up.
- You can also use FTP commands to upload firmware to any image.

The Switch supports dual firmware images, `ras-0` and `ras-1`. You can switch from one to the other by using the `boot image <index>` command, where `<index>` is 1 (`ras-0`) or 2 (`ras-1`). See the CLI Reference Guide for more information about using commands. The system does not reboot after it switches from one image to the other.

47.9.1.1 Example FTP Commands

```
ftp> put firmware.bin ras-0
```

This is a sample FTP session showing the transfer of the computer file "firmware.bin" to the Switch.

```
ftp> get config config.cfg
```

This is a sample FTP session saving the current configuration to a file called “config.cfg” on your computer.

If your (T)FTP client does not allow you to have a destination filename different than the source, you will need to rename them as the Switch only recognizes “config”, “ras-0”, and “ras-1”. Be sure you keep unaltered copies of both files for later use.

Be sure to upload the correct model firmware as uploading the wrong model firmware may damage your device.

47.9.2 FTP Command Line Procedure

- 1 Launch the FTP client on your computer.
- 2 Enter `open`, followed by a space and the IP address of your Switch.
- 3 Press [ENTER] when prompted for a username (the default is “admin”).
- 4 Enter your password as requested (the default is “1234”).
- 5 Enter `bin` to set transfer mode to binary.
- 6 Use `put` to transfer files from the computer to the Switch, for example, `put firmware.bin ras-0` transfers the firmware on your computer (firmware.bin) to the Switch and renames it to “ras-0”. Similarly, `put config.cfg config` transfers the configuration file on your computer (config.cfg) to the Switch and renames it to “config”. Likewise `get config config.cfg` transfers the configuration file on the Switch to your computer and renames it to “config.cfg”. See [Table 225 on page 455](#) for more information on filename conventions.
- 7 Enter `quit` to exit the ftp prompt.

47.9.3 GUI-based FTP Clients

The following table describes some of the commands that you may see in GUI-based FTP clients.

Table 226 General Commands for GUI-based FTP Clients

| COMMAND | DESCRIPTION |
|--------------------------|---|
| Host Address | Enter the address of the host server. |
| Login Type | Anonymous. This is when a user I.D. and password is automatically supplied to the server for anonymous access. Anonymous logins will work only if your ISP or service administrator has enabled this option. Normal. The server requires a unique User ID and Password to login. |
| Transfer Type | Transfer files in either ASCII (plain text format) or in binary mode. Configuration and firmware files should be transferred in binary mode. |
| Initial Remote Directory | Specify the default remote directory (path). |
| Initial Local Directory | Specify the default local directory (path). |

47.9.4 FTP Restrictions

FTP will not work when:

- FTP service is disabled in the **Service Access Control** screen.
- The IP address(es) in the **Remote Management** screen does not match the client IP address. If it does not match, the Switch will disconnect the FTP session immediately.

Access Control

This chapter describes how to control access to the Switch.

48.1 Access Control Overview

A console port and FTP are allowed one session each, Telnet and SSH share nine sessions, up to five Web sessions (five different usernames and passwords) and/or limitless SNMP access control sessions are allowed.

Table 227 Access Control Overview

| Console Port | SSH | Telnet | FTP | Web | SNMP |
|--------------|---------------------------|--------|-------------|---------------------|----------|
| One session | Share up to nine sessions | | One session | Up to five accounts | No limit |


A console port access control session and Telnet access control session cannot coexist when multi-login is disabled. See the Ethernet Switch CLI Reference Guide for more information on disabling multi-login.

48.1.1 What You Can Do

- Use the **Access Control** screen ([Section 48.2 on page 458](#)) to display the main screen.
- Use the **SNMP** screen ([Section 48.3.4 on page 465](#)) to configure your SNMP settings.
- Use the **Trap Group** screen ([Section 48.3.5 on page 466](#)) to specify the types of SNMP traps that should be sent to each SNMP manager.
- Use the **User Information** screen ([Section 48.3.7 on page 469](#)) to create SNMP users for authentication with managers using SNMP v3 and associate them to SNMP groups.
- Use the **Logins** screens ([Section 48.4 on page 471](#)) to assign which users can access the Switch via web configurator at any one time.
- Use the **Service Access Control** screen ([Section 48.10 on page 479](#)) to decide what services you may use to access the Switch.
- Use the **Remote Management** screen ([Section 48.11 on page 480](#)) to specify a group of one or more “trusted computers” from which an administrator may use a service to manage the Switch.

48.2 The Access Control Main Screen

Use this screen to display the main screen. Click **Management > Access Control** in the navigation panel to display the main screen as shown.

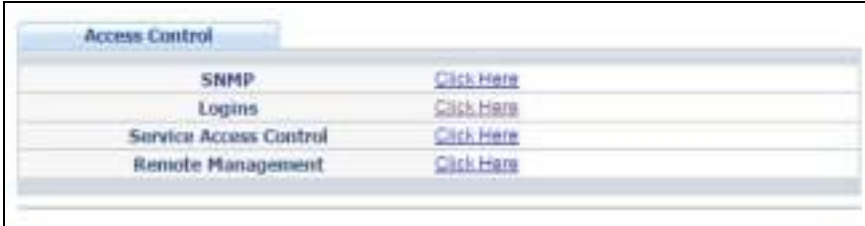Figure 348 Management > Access Control

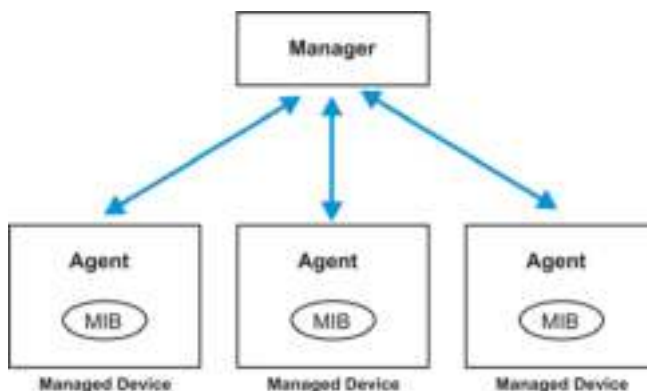
The following table describes the labels in this screen.

Table 228 Management > Access Control

| LABEL | DESCRIPTION |
|------------------------|---|
| SNMP | Click this link to configure your SNMP settings. |
| Logins | Click this link to assign which users can access the Switch via web configurator at any one time. |
| Service Access Control | Click this link to decide what services you may use to access the Switch. |
| Remote Management | Click this link to specify a group of one or more "trusted computers" from which an administrator may use a service to manage the Switch. |

48.3 About SNMP

Simple Network Management Protocol (SNMP) is an application layer protocol used to manage and monitor TCP/IP-based devices. SNMP is used to exchange management information between the network management system (NMS) and a network element (NE). A manager station can manage and monitor the Switch through the network via SNMP version 1 (SNMPv1), SNMP version 2c or SNMP version 3. The next figure illustrates an SNMP management operation. SNMP is only available if TCP/IP is configured.

Figure 349 SNMP Management Model

An SNMP managed network consists of two main components: agents and a manager.

An agent is a management software module that resides in a managed Switch (the Switch). An agent translates the local management information from the managed Switch into a form compatible with SNMP. The manager is the console through which network administrators perform

network management functions. It executes applications that control and monitor managed devices.

The managed devices contain object variables/managed objects that define each piece of information to be collected about a Switch. Examples of variables include number of packets received, node port status and so on. A Management Information Base (MIB) is a collection of managed objects. SNMP allows a manager and agents to communicate for the purpose of accessing these objects.

SNMP itself is a simple request/response protocol based on the manager/agent model. The manager issues a request and the agent returns responses using the following protocol operations:

Table 229 SNMP Commands

| COMMAND | DESCRIPTION |
|---------|--|
| Get | Allows the manager to retrieve an object variable from the agent. |
| GetNext | Allows the manager to retrieve the next object variable from a table or list within an agent. In SNMPv1, when a manager wants to retrieve all elements of a table from an agent, it initiates a Get operation, followed by a series of GetNext operations. |
| Set | Allows the manager to set values for object variables within an agent. |
| Trap | Used by the agent to inform the manager of some events. |

48.3.1 SNMP v3 and Security

SNMP v3 enhances security for SNMP management. SNMP managers can be required to authenticate with agents before conducting SNMP management sessions.

Security can be further enhanced by encrypting the SNMP messages sent from the managers. Encryption protects the contents of the SNMP messages. When the contents of the SNMP messages are encrypted, only the intended recipients can read them.

48.3.2 Supported MIBs

MIBs let administrators collect statistics and monitor status and performance.

The Switch supports the following MIBs:

- SNMP MIB II (RFC 1213)
- RFC 1157 SNMP v1
- RFC 1493 Bridge MIBs
- RFC 1643 Ethernet MIBs
- RFC 1155 SMI
- RFC 2674 SNMPv2, SNMPv2c
- RFC 1757 RMON
- SNMPv2, SNMPv2c or later version, compliant with RFC 2011 SNMPv2 MIB for IP, RFC 2012 SNMPv2 MIB for TCP, RFC 2013 SNMPv2 MIB for UDP

48.3.3 SNMP Traps

The Switch sends traps to an SNMP manager when an event occurs. The following tables outline the SNMP traps by category.

An OID (Object ID) that begins with “1.3.6.1.4.1.890.1.15” is defined in private MIBs. Otherwise, it is a standard MIB OID.

Table 230 SNMP System Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|------------------------------|---|-------------------------------|---|
| coldstart | coldStart | 1.3.6.1.6.3.1.1.5.1 | This trap is sent when the Switch is turned on. |
| warmstart | warmStart | 1.3.6.1.6.3.1.1.5.2 | This trap is sent when the Switch restarts. |
| fanspeed | zyHwMonitorFanSpeedOutOfRange | 1.3.6.1.4.1.890.1.15.3.26.2.1 | This trap is sent when the fan speed goes above or below the normal operating range. |
| poe (For PoE models only) | zyPoePowerPortOverload | 1.3.6.1.4.1.890.1.15.3.59.4.1 | This trap is sent when the port is turned off to supply power due to overloading. |
| | zyPoePowerPortShortCircuit | 1.3.6.1.4.1.890.1.15.3.59.4.2 | This trap is sent when the port is turned off to supply power due to short circuit. |
| | zyPoePowerPortOverSystemBudget | 1.3.6.1.4.1.890.1.15.3.59.4.3 | This trap is sent when the port is turned off to supply power because the requested power exceeds the total PoE power budget on the Switch. |
| temperature | zyHwMonitorTemperatureOutOfRange | 1.3.6.1.4.1.890.1.15.3.26.2.2 | This trap is sent when the temperature goes above or below the normal operating range. |
| voltage | zyHwMonitorPowerSupplyVoltageOutOfRange | 1.3.6.1.4.1.890.1.15.3.26.2.3 | This trap is sent when the voltage goes above or below the normal operating range. |
| reset | zySysMgmtUncontrolledSystemReset | 1.3.6.1.4.1.890.1.15.3.49.2.1 | This trap is sent when the Switch automatically resets. |
| | zySysMgmtControlledSystemReset | 1.3.6.1.4.1.890.1.15.3.49.2.2 | This trap is sent when the Switch resets by an administrator through a management interface. |
| | zySysMgmtBootImageInconsistence | 1.3.6.1.4.1.890.1.15.3.49.2.3 | This trap is sent when the index number of image which is loaded when the Switch starts up is different from what is specified via the CLI. |
| | RebootEvent | 1.3.6.1.4.1.890.1.5.1.1.2 | This trap is sent when the Switch reboots by an administrator through a management interface. |
| timesync | zyDateTimeTrapTimeServerNotReachable | 1.3.6.1.4.1.890.1.15.3.82.3.1 | This trap is sent when the Switch's date and time is not manually entered or the specified time server is not reachable. |
| intrusionlock | zyPortIntrusionLock | 1.3.6.1.4.1.890.1.15.3.61.3.2 | This trap is sent when intrusion lock occurs on a port. |
| loopguard | zyLoopGuardLoopDetect | 1.3.6.1.4.1.890.1.15.3.45.2.1 | This trap is sent when loopguard shuts down a port. |

Table 230 SNMP System Traps (continued)

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|-------------|---|--------------------------------|---|
| errdisable | zyErrdisableDetect | 1.3.6.1.4.1.890.1.15.3.24.4.1 | This trap is sent when an error is detected on a port, such as a loop occurs or the rate limit for specific control packets is exceeded. |
| | zyErrdisableRecovery | 1.3.6.1.4.1.890.1.15.3.24.4.2 | This trap is sent when the Switch ceases the action taken on a port, such as shutting down the port or discarding packets on the port, after the specified recovery interval. |
| dyinggasp | zyHwMonitorDyingGasp | 1.3.6.1.4.1.890.1.15.3.26.2.5 | The trap is sent when the device power goes below the normal value. |
| powersource | zyHwMonitorPowerSourceAbnormal | 1.3.6.1.4.1.890.1.15.3.26.2.10 | This trap is sent when the power source has an error. |
| | zyHwMonitorPowerSourceAbnormalRecovered | 1.3.6.1.4.1.890.1.15.3.26.2.11 | This trap is sent when the power source recovers to a normal status. |
| loginrecord | zyAccessControlLoginRecord | 1.3.6.1.4.1.890.1.15.3.9.4.1 | This trap is sent when users log in. |
| | zyAccessControlLogoutRecord | 1.3.6.1.4.1.890.1.15.3.9.4.2 | This trap is sent when users log out. |
| | zyAccessControlLoginFail | 1.3.6.1.4.1.890.1.15.3.9.4.3 | This trap is sent when users fail in login. |

Table 231 SNMP Stacking Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|------------------|---------------------------------|---------------------------------|--|
| Channel | zyStackingChannelUp | 1.3.6.1.4.1.890.1.15.3.9.7.4.1 | stacking channel up |
| | zyStackingChannelDown | 1.3.6.1.4.1.890.1.15.3.9.7.4.2 | stacking channel down |
| Slot | zyStackingSlotAttach | 1.3.6.1.4.1.890.1.15.3.9.7.4.3 | stacking slot attached success |
| | zyStackingSlotDetach | 1.3.6.1.4.1.890.1.15.3.9.7.4.4 | stacking slot detached |
| Master | zyStackingNewMaster | 1.3.6.1.4.1.890.1.15.3.9.7.4.5 | backup takeover as master |
| Upgrade Firmware | zyStackingUpgradeFirmwareFail | 1.3.6.1.4.1.890.1.15.3.9.7.4.6 | Upgrade Firmware fail with correspond slot ID. |
| Backup | zyStackingNewBackup | 1.3.6.1.4.1.890.1.15.3.9.7.4.7 | New Backup with correspond slot ID. |
| | zyStackingBackupTakeover | 1.3.6.1.4.1.890.1.15.3.9.7.4.8 | Replaced master with correspond slot ID. |
| Master | zyStackingNewMasterFromTakeover | 1.3.6.1.4.1.890.1.15.3.9.7.4.9 | New master from taking over with correspond slot ID. |
| Fail | zyStackingSyncConfFail | 1.3.6.1.4.1.890.1.15.3.9.7.4.10 | Sync. configuration fail with correspond slot ID. |
| | zyStackingSysRestoreConfFail | 1.3.6.1.4.1.890.1.15.3.9.7.4.11 | Stacking backup takeover restore configuration fail. |
| | zyStackingSlotInitFail | 1.3.6.1.4.1.890.1.15.3.9.7.4.12 | Stacking Slot init fail. |

Table 231 SNMP Stacking Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|--------|---------------------------|------------------------------------|-----------------------------|
| Change | zyStackingSlotChangeIndex | 1.3.6.1.4.1.890.1.15.3.9 7.4.13 | Stacking change slot index. |
| | zyStackingPriorityChange | 1.3.6.1.4.1.890.1.15.3.9 7.4.14 | Stacking priority change. |
| | zyStackingTopologyChange | 1.3.6.1.4.1.890.1.15.3.9 7.4.15 | Stacking topology change. |

Table 232 SNMP InterfaceTraps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|-----------------|--|-------------------------------|---|
| linkup | linkUp | 1.3.6.1.6.3.1.1.5.4 | This trap is sent when the Ethernet link is up. |
| linkdown | linkDown | 1.3.6.1.6.3.1.1.5.3 | This trap is sent when the Ethernet link is down. |
| autonegotiation | zyPortAutonegotiationFailed | 1.3.6.1.4.1.890.1.15.3.61.3.1 | This trap is sent when an Ethernet interface fails to auto-negotiate with the peer Ethernet interface. |
| lldp | lldpRem TablesChange | 1.0.8802.1.1.2.0.0.1 | The trap is sent when entries in the remote database have any updates. Link Layer Discovery Protocol (LLDP), defined as IEEE 802.1ab, enables LAN devices that support LLDP to exchange their configured settings. This helps eliminate configuration mismatch issues. |
| transceiver-ddm | zyTransceiverDdmiTemperatureOutOfRange | 1.3.6.1.4.1.890.1.15.3.84.3.1 | This trap is sent when the transceiver temperature is above or below the normal operating range. |
| | zyTransceiverDdmiTxPowerOutOfRange | 1.3.6.1.4.1.890.1.15.3.84.3.2 | This trap is sent when the transmitted optical power is above or below the normal operating range. |
| | zyTransceiverDdmiRxPowerOutOfRange | 1.3.6.1.4.1.890.1.15.3.84.3.3 | This trap is sent when the received optical power is above or below the normal operating range. |
| | zyTransceiverDdmiVoltageOutOfRange | 1.3.6.1.4.1.890.1.15.3.84.3.4 | This trap is sent when the transceiver supply voltage is above or below the normal operating range. |
| | zyTransceiverDdmiTxBiasOutOfRange | 1.3.6.1.4.1.890.1.15.3.84.3.5 | This trap is sent when the transmitter laser bias current is above or below the normal operating range. |
| storm-control | zyPortStormControlTrap | 1.3.6.1.4.1.890.1.15.3.78.2.1 | This trap is sent when storm control is detected on a specific port. A packet filter action has been applied on the interface. |

Table 232 SNMP InterfaceTraps (continued)

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|--------|------------------------------|--------------------------------|--|
| zuld | zyZuldUnidirectionalDetected | 1.3.6.1.4.1.890.1.15.3.110.3.1 | This trap is sent when a unidirectional link is detected. |
| | zyZuldBidirectionalRecovered | 1.3.6.1.4.1.890.1.15.3.110.3.2 | This trap is sent when the port which is shut down by ZULD becomes active again. |

Table 233 AAA Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|----------------|--|-------------------------------|---|
| authentication | authenticationFailure | 1.3.6.1.6.3.1.1.5.5 | This trap is sent when authentication fails due to incorrect user name and/or password. |
| | zyAaaAuthenticationFailure | 1.3.6.1.4.1.890.1.15.3.8.3.1 | This trap is sent when authentication fails due to incorrect user name and/or password. |
| | zyRadiusServerAuthenticationServerNotReachable | 1.3.6.1.4.1.890.1.15.3.71.2.1 | This trap is sent when there is no response message from the RADIUS authentication server. |
| | zyTacacsServerAuthenticationServerUnreachable | 1.3.6.1.4.1.890.1.15.3.83.2.1 | This trap is sent when there is no response message from the TACACS+ authentication server. |
| authorization | zyAaaAuthorizationFailure | 1.3.6.1.4.1.890.1.15.3.8.3.2 | This trap is sent when management connection authorization failed. |
| accounting | zyRadiusServerAccountingServerNotReachable | 1.3.6.1.4.1.890.1.15.3.71.2.2 | This trap is sent when there is no response message from the RADIUS accounting server. |
| | zyTacacsServerAccountingServerUnreachable | 1.3.6.1.4.1.890.1.15.3.83.2.2 | This trap is sent when there is no response message from the TACACS+ accounting server. |

Table 234 SNMP IP Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|------------|-------------------------|--------------------|---|
| ping | pingProbeFailed | 1.3.6.1.2.1.80.0.1 | This trap is sent when a single ping probe fails. |
| | pingTestFailed | 1.3.6.1.2.1.80.0.2 | This trap is sent when a ping test (consisting of a series of ping probes) fails. |
| | pingTestCompleted | 1.3.6.1.2.1.80.0.3 | This trap is sent when a ping test is completed. |
| traceroute | traceRouteTestFailed | 1.3.6.1.2.1.81.0.2 | This trap is sent when a traceroute test fails. |
| | traceRouteTestCompleted | 1.3.6.1.2.1.81.0.3 | This trap is sent when a traceroute test is completed. |

Table 235 SNMP Switch Traps

| OPTION | OBJECT LABEL | OBJECT ID | DESCRIPTION |
|------------|----------------------------------|--------------------------------|---|
| stp | STPNewRoot | 1.3.6.1.2.1.17.0.1 | This trap is sent when the STP root switch changes. |
| | zyMrstpNewRoot | 1.3.6.1.4.1.890.1.15.3.52.3.1 | This trap is sent when the MRSTP root switch changes. |
| | zyMstpNewRoot | 1.3.6.1.4.1.890.1.15.3.53.3.1 | This trap is sent when the MSTP root switch changes. |
| | STPTopologyChange | 1.3.6.1.2.1.17.0.2 | This trap is sent when the STP topology changes. |
| | zyMrstpTopologyChange | 1.3.6.1.4.1.890.1.15.3.52.3.2 | This trap is sent when the MRSTP topology changes. |
| | zyMstpTopologyChange | 1.3.6.1.4.1.890.1.15.3.53.3.2 | This trap is sent when the MSTP root switch changes. |
| mactable | zyMacForwardingTableFull | 1.3.6.1.4.1.890.1.15.3.48.2.1 | This trap is sent when more than 99% of the MAC table is used. |
| rmon | RmonRisingAlarm | 1.3.6.1.2.1.16.0.1 | This trap is sent when a variable goes over the RMON "rising" threshold. |
| | RmonFallingAlarm | 1.3.6.1.2.1.16.0.2 | This trap is sent when the variable falls below the RMON "falling" threshold. |
| cfm | dot1agCfmFaultAlarm | 1.3.111.2.802.1.1.8.0.1 | The trap is sent when the Switch detects a connectivity fault. |
| classifier | zyAcIV2ClassifierLogNotification | 1.3.6.1.4.1.890.1.15.3.105.4.1 | This trap is sent when the Switch detects classifier log information. |

48.3.4 Configuring SNMP

From the **Access Control** screen, display the **SNMP** screen. You can click **Access Control** to go back to the **Access Control** screen.

Figure 350 Management > Access Control > SNMP

The screenshot shows the SNMP configuration interface. At the top, there are tabs for 'SNMP', 'Access Control', 'Trap Group', and 'User'. The 'SNMP' tab is selected, and the 'General Setting' section is active. It contains four rows: 'Version' set to 'v2c', 'Get Community' set to 'public', 'Set Community' set to 'public', and 'Trap Community' set to 'public'. Below this is the 'Trap Destination' section, which is a table with columns for 'Version', 'IP', 'Port', and 'Username'. There are four rows in this table, all with 'Version' set to 'v2c' and 'IP' set to '0.0.0.0'. The 'Port' column has values of 162, 162, 162, and 162. The 'Username' column is empty for all rows. At the bottom of the form are 'Apply' and 'Cancel' buttons.

| General Setting | |
|-----------------|--------|
| Version | v2c |
| Get Community | public |
| Set Community | public |
| Trap Community | public |

| Trap Destination | | | |
|------------------|---------|------|----------|
| Version | IP | Port | Username |
| v2c | 0.0.0.0 | 162 | |
| v2c | 0.0.0.0 | 162 | |
| v2c | 0.0.0.0 | 162 | |
| v2c | 0.0.0.0 | 162 | |

The following table describes the labels in this screen.

Table 236 Management > Access Control > SNMP

| LABEL | DESCRIPTION |
|------------------|--|
| General Setting | Use this section to specify the SNMP version and community (password) values. |
| Version | Select the SNMP version for the Switch. The SNMP version on the Switch must match the version on the SNMP manager. Choose SNMP version 2c (v2c), SNMP version 3 (v3) or both (v3v2c). Note: SNMP version 2c is backwards compatible with SNMP version 1. |
| Get Community | Enter the Get Community string, which is the password for the incoming Get- and GetNext- requests from the management station. The Get Community string is only used by SNMP managers using SNMP version 2c or lower. |
| Set Community | Enter the Set Community string, which is the password for the incoming Set- requests from the management station. The Set Community string is only used by SNMP managers using SNMP version 2c or lower. |
| Trap Community | Enter the Trap Community string, which is the password sent with each trap to the SNMP manager. The Trap Community string is only used by SNMP managers using SNMP version 2c or lower. |
| Trap Destination | Use this section to configure where to send SNMP traps from the Switch. |
| Version | Specify the version of the SNMP trap messages. |
| IP | Enter the IP addresses of up to four managers to send your SNMP traps to. |
| Port | Enter the port number upon which the manager listens for SNMP traps. |
| Username | Enter the username to be sent to the SNMP manager along with the SNMP v3 trap. Note: This username must match an existing account on the Switch (configured in the Management > Access Control > SNMP > User screen). |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.3.5 Configuring SNMP Trap Group

From the **SNMP** screen, click **Trap Group** to view the screen as shown. Use the **Trap Group** screen to specify the types of SNMP traps that should be sent to each SNMP manager.

Figure 351 Management > Access Control > SNMP > Trap Group

The screenshot shows the 'Trap Group' configuration interface. At the top, there is a 'Trap Destination IP' dropdown menu. Below it, the 'Type' section lists categories: System, Interface, AAA, IP, and Switch. Each category has a checkbox and a plus sign. The 'Options' section lists various trap types, each with a checkbox. The categories and their options are:

- System:** coldstart, temperature, timesync, ermdisable, stacking
- Interface:** linkup, lldp, zuid
- AAA:** authentication
- IP:** ping
- Switch:** stp, cfm
- Other options:** warmstart, voltage, intrusionlock, dyinggasp, powersource, linkdown, transceiver-ddm, authorization, traceroute, mactable, classflet, fanspeed, reset, loopguard, poe, loginrecord, autonegotation, storm-control, accounting, rmon

At the bottom, there are 'Apply' and 'Cancel' buttons.

The following table describes the labels in this screen.

Table 237 Management > Access Control > SNMP > Trap Group

| LABEL | DESCRIPTION |
|---------------------|---|
| Trap Destination IP | Select one of your configured trap destination IP addresses. These are the IP addresses of the SNMP managers. You must first configure a trap destination IP address in the SNMP Setting screen. Use the rest of the screen to select which traps the Switch sends to that SNMP manager. |
| Type | Select the categories of SNMP traps that the Switch is to send to the SNMP manager. |
| Options | Select the individual SNMP traps that the Switch is to send to the SNMP station. See Section 48.3.3 on page 461 for individual trap descriptions. The traps are grouped by category. Selecting a category automatically selects all of the category's traps. Clear the check boxes for individual traps that you do not want the Switch to send to the SNMP station. Clearing a category's check box automatically clears all of the category's trap check boxes (the Switch only sends traps from selected categories). |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.3.6 Enabling/Disabling Sending of SNMP Traps on a Port

From the **SNMP > Trap Group** screen, click **Port** to view the screen as shown. Use this screen to set whether a trap received on the port(s) would be sent to the SNMP manager.

Figure 352 Management > Access Control > SNMP > Trap Group > Port (Standalone mode)

| Port | Active |
|------|-------------------------------------|
| * | <input type="checkbox"/> |
| 1 | <input checked="" type="checkbox"/> |
| 2 | <input checked="" type="checkbox"/> |
| 3 | <input checked="" type="checkbox"/> |
| 4 | <input checked="" type="checkbox"/> |
| 5 | <input checked="" type="checkbox"/> |
| 6 | <input checked="" type="checkbox"/> |
| 7 | <input checked="" type="checkbox"/> |
| 8 | <input checked="" type="checkbox"/> |
| 9 | <input checked="" type="checkbox"/> |
| 10 | <input checked="" type="checkbox"/> |
| 11 | <input checked="" type="checkbox"/> |
| 12 | <input checked="" type="checkbox"/> |
| 13 | <input checked="" type="checkbox"/> |
| 14 | <input checked="" type="checkbox"/> |
| 48 | <input checked="" type="checkbox"/> |
| 49 | <input checked="" type="checkbox"/> |
| 50 | <input checked="" type="checkbox"/> |
| 51 | <input checked="" type="checkbox"/> |
| 52 | <input checked="" type="checkbox"/> |

Figure 353 Management > Access Control > SNMP > Trap Group > Port (Stacking mode)

| Port | Active |
|------|-------------------------------------|
| 1/1 | <input type="checkbox"/> |
| 1/2 | <input checked="" type="checkbox"/> |
| 1/3 | <input checked="" type="checkbox"/> |
| 1/4 | <input checked="" type="checkbox"/> |
| 1/5 | <input checked="" type="checkbox"/> |
| 1/6 | <input checked="" type="checkbox"/> |
| 1/7 | <input checked="" type="checkbox"/> |
| 1/8 | <input checked="" type="checkbox"/> |
| 1/9 | <input checked="" type="checkbox"/> |
| 1/10 | <input checked="" type="checkbox"/> |
| 1/11 | <input checked="" type="checkbox"/> |
| 1/12 | <input checked="" type="checkbox"/> |
| 1/13 | <input checked="" type="checkbox"/> |
| 1/14 | <input checked="" type="checkbox"/> |
| 1/15 | <input checked="" type="checkbox"/> |
| 1/16 | <input checked="" type="checkbox"/> |
| 1/17 | <input checked="" type="checkbox"/> |
| 1/18 | <input checked="" type="checkbox"/> |
| 1/19 | <input checked="" type="checkbox"/> |
| 1/20 | <input checked="" type="checkbox"/> |
| 1/21 | <input checked="" type="checkbox"/> |
| 1/22 | <input checked="" type="checkbox"/> |
| 1/23 | <input checked="" type="checkbox"/> |
| 1/24 | <input checked="" type="checkbox"/> |
| 1/25 | <input checked="" type="checkbox"/> |
| 1/26 | <input checked="" type="checkbox"/> |
| 1/27 | <input checked="" type="checkbox"/> |
| 1/28 | <input checked="" type="checkbox"/> |
| 1/29 | <input checked="" type="checkbox"/> |
| 1/30 | <input checked="" type="checkbox"/> |
| 1/31 | <input checked="" type="checkbox"/> |
| 1/32 | <input checked="" type="checkbox"/> |
| 1/33 | <input checked="" type="checkbox"/> |
| 1/34 | <input checked="" type="checkbox"/> |
| 1/35 | <input checked="" type="checkbox"/> |
| 1/36 | <input checked="" type="checkbox"/> |
| 1/37 | <input checked="" type="checkbox"/> |
| 1/38 | <input checked="" type="checkbox"/> |
| 1/39 | <input checked="" type="checkbox"/> |
| 1/40 | <input checked="" type="checkbox"/> |
| 1/41 | <input checked="" type="checkbox"/> |
| 1/42 | <input checked="" type="checkbox"/> |
| 1/43 | <input checked="" type="checkbox"/> |
| 1/44 | <input checked="" type="checkbox"/> |
| 1/45 | <input checked="" type="checkbox"/> |
| 1/46 | <input checked="" type="checkbox"/> |
| 1/47 | <input checked="" type="checkbox"/> |
| 1/48 | <input checked="" type="checkbox"/> |
| 1/49 | <input checked="" type="checkbox"/> |
| 1/50 | <input checked="" type="checkbox"/> |

The following table describes the labels in this screen.

Table 238 Management > Access Control > SNMP > Trap Group > Port

| LABEL | DESCRIPTION |
|--------|---|
| Option | Select the trap type you want to configure here. |
| Slot | Select the slot number that represents the Switch in a stack. |

Table 238 Management > Access Control > SNMP > Trap Group > Port (continued)

| LABEL | DESCRIPTION |
|--------|---|
| Port | This field displays a port number. In stacking mode, the first number represents the slot and the second the port number. |
| 1/* | Settings in this row apply to all ports for the Switch represented by the slot ID (in stacking mode). Use this row only if you want to make some of the settings the same for all ports. Use this row first to set the common settings and then make adjustments on a port-by-port basis. Note: Changes in this row are copied to all the ports as soon as you make them. |
| Active | Select this check box to enable the sending of SNMP traps on this port. The Switch sends the related traps received on this port to the SNMP manager. Clear this check box to disable the sending of SNMP traps on this port. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.3.7 Configuring SNMP User

From the **SNMP** screen, click **User** to view the screen as shown. Use the **User** screen to create SNMP users for authentication with managers using SNMP v3 and associate them to SNMP groups. An SNMP user is an SNMP manager.

Figure 354 Management > Access Control > SNMP > User

The following table describes the labels in this screen.

Table 239 Management > Access Control > SNMP > User

| LABEL | DESCRIPTION |
|------------------|---|
| User Information | Note: Use the username and password of the login accounts you specify in this screen to create accounts on the SNMP v3 manager. |
| Username | Specify the username of a login account on the Switch. |

Table 239 Management > Access Control > SNMP > User (continued)

| LABEL | DESCRIPTION |
|----------------|--|
| Security Level | <p>Select whether you want to implement authentication and/or encryption for SNMP communication from this user. Choose:</p> <ul style="list-style-type: none"> • noauth - to use the username as the password string to send to the SNMP manager. This is equivalent to the Get, Set and Trap Community in SNMP v2c. This is the lowest security level. • auth - to implement an authentication algorithm for SNMP messages sent by this user. • priv - to implement authentication and encryption for SNMP messages sent by this user. This is the highest security level. <p>Note: The settings on the SNMP manager must be set at the same security level or higher than the security level settings on the Switch.</p> |
| Authentication | <p>Select an authentication algorithm. MD5 (Message Digest 5) and SHA (Secure Hash Algorithm) are hash algorithms used to authenticate SNMP data. SHA authentication is generally considered stronger than MD5, but is slower.</p> |
| Password | <p>Enter the password of up to 32 ASCII characters for SNMP user authentication.</p> |
| Privacy | <p>Specify the encryption method for SNMP communication from this user. You can choose one of the following:</p> <ul style="list-style-type: none"> • DES - Data Encryption Standard is a widely used (but breakable) method of data encryption. It applies a 56-bit key to each 64-bit block of data. • AES - Advanced Encryption Standard is another method for data encryption that also uses a secret key. AES applies a 128-bit key to 128-bit blocks of data. |
| Password | <p>Enter the password of up to 32 ASCII characters for encrypting SNMP packets.</p> |
| Group | <p>SNMP v3 adopts the concept of View-based Access Control Model (VACM) group. SNMP managers in one group are assigned common access rights to MIBs. Specify in which SNMP group this user is.</p> <p>admin - Members of this group can perform all types of system configuration, including the management of administrator accounts.</p> <p>readwrite - Members of this group have read and write rights, meaning that the user can create and edit the MIBs on the Switch, except the user account and AAA configuration.</p> <p>readonly - Members of this group have read rights only, meaning the user can collect information from the Switch.</p> |
| Add | <p>Click this to create a new entry or to update an existing one.</p> <p>This saves your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring.</p> |
| Cancel | <p>Click Cancel to reset the fields to your previous configuration.</p> |
| Clear | <p>Click Clear to reset the fields to the factory defaults.</p> |
| Index | <p>This is a read-only number identifying a login account on the Switch. Click on an index number to view more details and edit an existing account.</p> |
| Username | <p>This field displays the username of a login account on the Switch.</p> |
| Security Level | <p>This field displays whether you want to implement authentication and/or encryption for SNMP communication with this user.</p> |
| Authentication | <p>This field displays the authentication algorithm used for SNMP communication with this user.</p> |
| Privacy | <p>This field displays the encryption method used for SNMP communication with this user.</p> |
| Group | <p>This field displays the SNMP group to which this user belongs.</p> |
| | <p>Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries.</p> |

Table 239 Management > Access Control > SNMP > User (continued)

| LABEL | DESCRIPTION |
|--------|--|
| Delete | Click Delete to remove the selected entry from the summary table. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.4 Setting Up Login Accounts

Up to five people (one administrator and four non-administrators) may access the Switch via web configurator at any one time.

- An administrator is someone who can both view and configure Switch changes. The username for the Administrator is always **admin**. The default administrator password is **1234**.

Note: It is highly recommended that you change the default administrator password (**1234**).

- A non-administrator (username is something other than **admin**) is someone who can view but not configure Switch settings.

Click **Management > Access Control > Logins** to view the screen as shown.

Figure 355 Management > Access Control > Logins

The following table describes the labels in this screen.

Table 240 Management > Access Control > Logins

| LABEL | DESCRIPTION |
|---------------|--|
| Administrator | This is the default administrator account with the “admin” user name. You cannot change the default administrator user name. Only the administrator has read/write access. |
| Old Password | Type the existing system password (1234 is the default password when shipped). |

Table 240 Management > Access Control > Logins (continued)

| LABEL | DESCRIPTION |
|---|--|
| New Password | Enter your new system password. |
| Retype to confirm | Retype your new system password for confirmation |
| Edit Logins You may configure passwords for up to four users. These users have read-only access. You can give users higher privileges via the CLI. For more information on assigning privileges see the Ethernet Switch CLI Reference Guide. | |
| User Name | Set a user name (up to 32 ASCII characters long). |
| Password | Enter your new system password. |
| Retype to confirm | Retype your new system password for confirmation |
| Privilege | Type the privilege level for this user. At the time of writing, users may have a privilege level of 0, 3, 13, or 14 representing different configuration rights as shown below. <ul style="list-style-type: none"> • 0 - Display basic system information. • 3 - Display configuration or status. • 13 - Configure features except for login accounts, SNMP user accounts, the authentication method sequence and authorization settings, multiple logins, administrator and enable passwords, and configuration information display. • 14 - Configure login accounts, SNMP user accounts, the authentication method sequence and authorization settings, multiple logins, and administrator and enable passwords, and display configuration information. Users can run command lines if the session's privilege level is greater than or equal to the command's privilege level. The session privilege initially comes from the privilege of the login account. For example, if the user has a privilege of 5, he/she can run commands that requires privilege level of 5 or less but not more. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.5 SSH Overview


Unlike Telnet or FTP, which transmit data in clear text, SSH (Secure Shell) is a secure communication protocol that combines authentication and data encryption to provide secure encrypted communication between two hosts over an unsecured network.

Figure 356 SSH Communication Example

48.6 How SSH works

The following table summarizes how a secure connection is established between two remote hosts.

Figure 357 How SSH Works

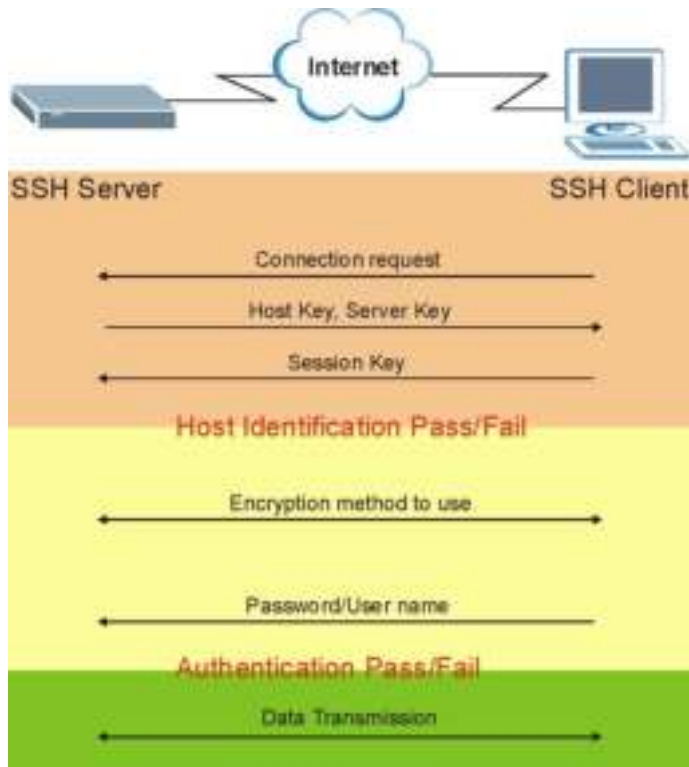

1 Host Identification

The SSH client sends a connection request to the SSH server. The server identifies itself with a host key. The client encrypts a randomly generated session key with the host key and server key and sends the result back to the server.

The client automatically saves any new server public keys. In subsequent connections, the server public key is checked against the saved version on the client computer.

2 Encryption Method

Once the identification is verified, both the client and server must agree on the type of encryption method to use.

3 Authentication and Data Transmission

After the identification is verified and data encryption activated, a secure tunnel is established between the client and the server. The client then sends its authentication information (user name and password) to the server to log in to the server.

48.7 SSH Implementation on the Switch

Your Switch supports SSH version 2 using RSA authentication and three encryption methods (DES, 3DES and Blowfish). The SSH server is implemented on the Switch for remote management and file transfer on port 22. Only one SSH connection is allowed at a time.

48.7.1 Requirements for Using SSH

You must install an SSH client program on a client computer (Windows or Linux operating system) that is used to connect to the Switch over SSH.

48.8 Introduction to HTTPS

HTTPS (HyperText Transfer Protocol over Secure Socket Layer, or HTTP over SSL) is a web protocol that encrypts and decrypts web pages. Secure Socket Layer (SSL) is an application-level protocol that enables secure transactions of data by ensuring confidentiality (an unauthorized party cannot read the transferred data), authentication (one party can identify the other party) and data integrity (you know if data has been changed).


It relies upon certificates, public keys, and private keys.

HTTPS on the Switch is used so that you may securely access the Switch using the web configurator. The SSL protocol specifies that the SSL server (the Switch) must always authenticate itself to the SSL client (the computer which requests the HTTPS connection with the Switch), whereas the SSL client only should authenticate itself when the SSL server requires it to do so. Authenticating client certificates is optional and if selected means the SSL-client must send the Switch a certificate. You must apply for a certificate for the browser from a Certificate Authority (CA) that is a trusted CA on the Switch.

Please refer to the following figure.

- 1 HTTPS connection requests from an SSL-aware web browser go to port 443 (by default) on the Switch's WS (web server).
- 2 HTTP connection requests from a web browser go to port 80 (by default) on the Switch's WS (web server).

Figure 358 HTTPS Implementation

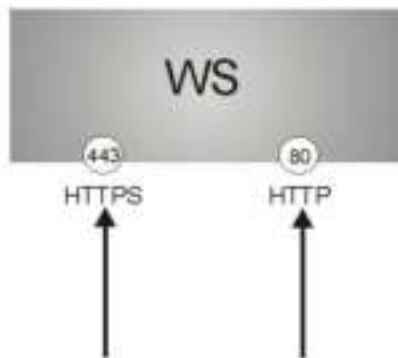

Note: If you disable **HTTP** in the **Service Access Control** screen, then the Switch blocks all HTTP connection attempts.

48.9 HTTPS Example

If you haven't changed the default HTTPS port on the Switch, then in your browser enter "https:// Switch IP Address/" as the web site address where "Switch IP Address" is the IP address or domain name of the Switch you wish to access.

48.9.1 Internet Explorer Warning Messages

48.9.1.1 Internet Explorer 6

When you attempt to access the Switch HTTPS server, a Windows dialog box pops up asking if you trust the server certificate.

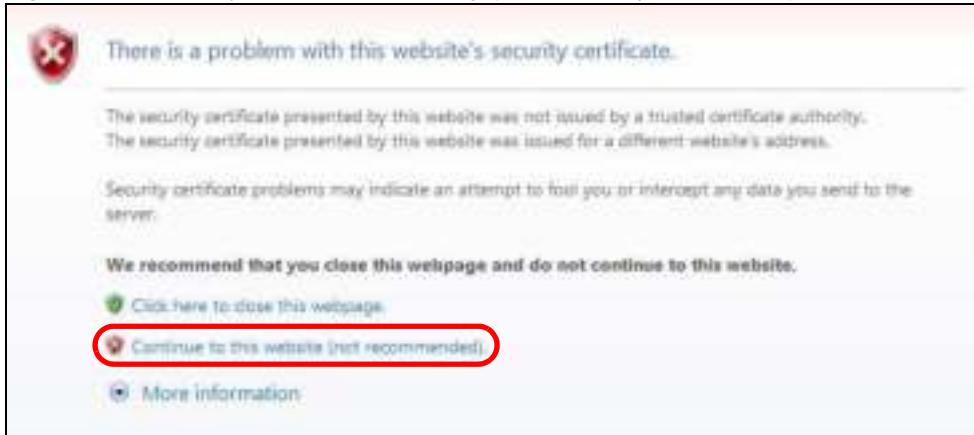
You see the following **Security Alert** screen in Internet Explorer. Select **Yes** to proceed to the web configurator login screen; if you select **No**, then web configurator access is blocked.

Figure 359 Security Alert Dialog Box (Internet Explorer 6)




48.9.1.2 Internet Explorer 7 or 8

When you attempt to access the Switch HTTPS server, a screen with the message "There is a problem with this website's security certificate." may display. If that is the case, click **Continue to this website (not recommended)** to proceed to the web configurator login screen.


Figure 360 Security Certificate Warning (Internet Explorer 7 or 8)

After you log in, you will see the red address bar with the message **Certificate Error**. Click on **Certificate Error** next to the address bar and click **View certificates**.

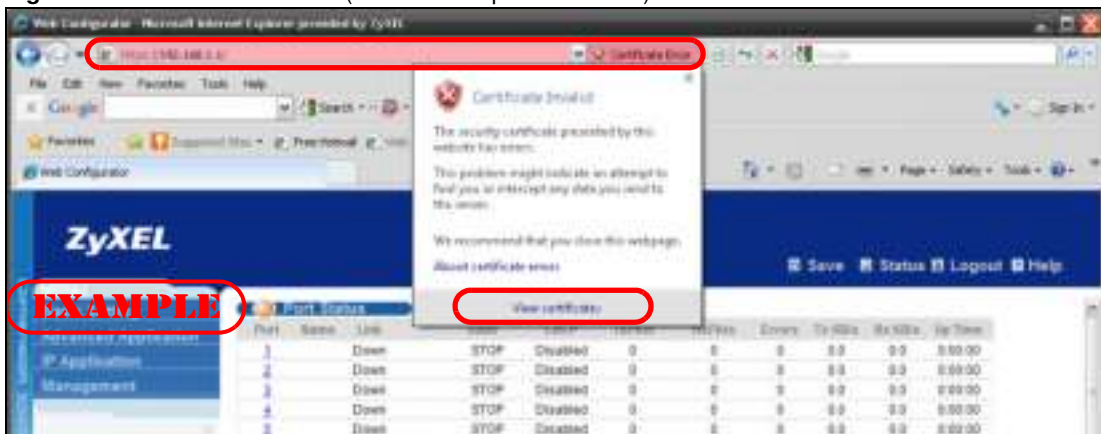Figure 361 Certificate Error (Internet Explorer 7 or 8)

Click **Install Certificate...** and follow the on-screen instructions to install the certificate in your browser.


Figure 362 Certificate (Internet Explorer 7 or 8)

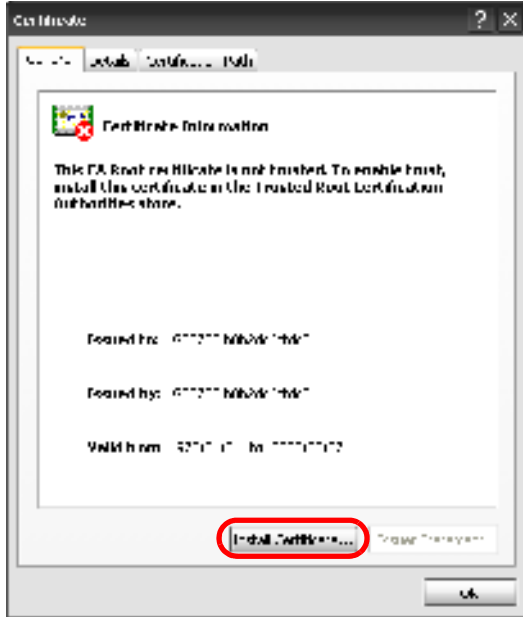

48.9.2 Mozilla Firefox Warning Messages

When you attempt to access the Switch HTTPS server, a **This Connection is Untrusted** screen may display. If that is the case, click **I Understand the Risks** and then the **Add Exception...** button.

Figure 363 Security Alert (Mozilla Firefox)

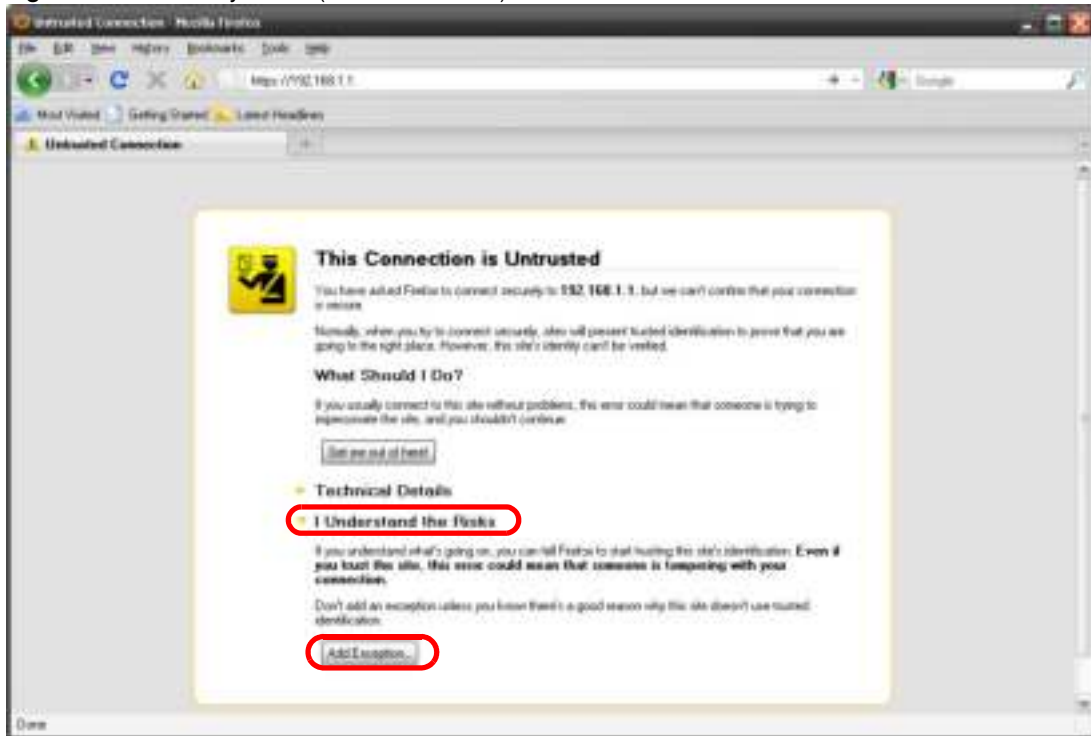

Confirm the HTTPS server URL matches. Click **Confirm Security Exception** to proceed to the web configurator login screen.


Figure 364 Security Alert (Mozilla Firefox)



48.9.3 The Main Screen

After you accept the certificate and enter the login username and password, the Switch main screen appears. The lock displayed in the bottom right of the browser status bar or next to the website address denotes a secure connection.

Figure 365 Example: Lock Denoting a Secure Connection

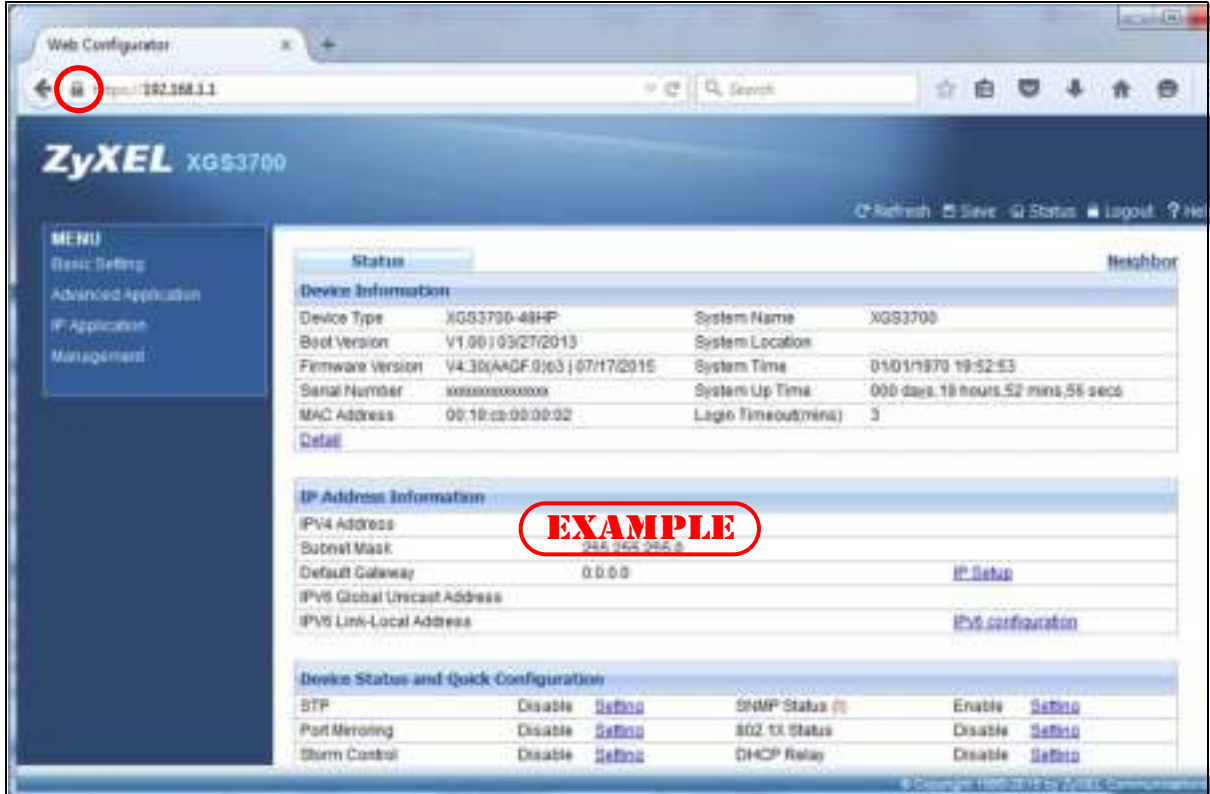

48.10 Service Access Control

Service Access Control allows you to decide what services you may use to access the Switch. You may also change the default service port and configure “trusted computer(s)” for each service in the **Remote Management** screen (discussed later). Click **Access Control** to go back to the main **Access Control** screen.

Figure 366 Management > Access Control > Service Access Control

| Service Access Control | | | Access Control | |
|------------------------|-------------------------------------|--------------|----------------|---------|
| Services | Active | Service Port | Timeout | |
| Console | <input checked="" type="checkbox"/> | | 5 | Minutes |
| Telnet | <input checked="" type="checkbox"/> | 23 | 5 | Minutes |
| SSH | <input checked="" type="checkbox"/> | 22 | | |
| FTP | <input checked="" type="checkbox"/> | 21 | 5 | Minutes |
| HTTP | <input checked="" type="checkbox"/> | 80 | 3 | Minutes |
| HTTPS | <input checked="" type="checkbox"/> | 443 | | |
| ICMP | <input checked="" type="checkbox"/> | | | |
| SNMP | <input checked="" type="checkbox"/> | | | |

The following table describes the fields in this screen.

Table 241 Management > Access Control > Service Access Control

| LABEL | DESCRIPTION |
|--------------|---|
| Services | Services you may use to access the Switch are listed here. |
| Active | Select this option for the corresponding services that you want to allow to access the Switch. |
| Service Port | For Telnet, SSH, FTP, HTTP or HTTPS services, you may change the default service port by typing the new port number in the Service Port field. If you change the default port number then you will have to let people (who wish to use the service) know the new port number for that service. |
| Timeout | Type how many minutes (from 1 to 255) a management session can be left idle before the session times out. After it times out you have to log in with your password again. Very long idle timeouts may have security risks. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

48.11 Remote Management

From the **Access Control** screen, display the **Remote Management** screen as shown next.

You can specify a group of one or more “trusted computers” from which an administrator may use a service to manage the Switch. Click **Access Control** to return to the **Access Control** screen.

Figure 367 Management > Access Control > Remote Management

| Entry | Active | Start Address | End Address | Telnet | FTP | HTTP | ICMP | SNMP | SSH | HTTPS |
|-------|-------------------------------------|---------------|-------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|
| 1 | <input checked="" type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> |
| 2 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 3 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 4 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 5 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 6 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 7 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 8 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 9 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 10 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 11 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 12 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 13 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 14 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 15 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |
| 16 | <input type="checkbox"/> | 0.0.0.0 | 0.0.0.0 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

The following table describes the labels in this screen.

Table 242 Management > Access Control > Remote Management

| LABEL | DESCRIPTION |
|--|--|
| Entry | This is the client set index number. A “client set” is a group of one or more “trusted computers” from which an administrator may use a service to manage the Switch. |
| Active | Select this check box to activate this secured client set. Clear the check box if you wish to temporarily disable the set without deleting it. |
| Start Address End Address | Configure the IP address range of trusted computers from which you can manage this Switch. The Switch checks if the client IP address of a computer requesting a service or protocol matches the range set here. The Switch immediately disconnects the session if it does not match. |
| Telnet/ FTP/ HTTP/ ICMP/ SNMP/ SSH/ HTTPS | Select services that may be used for managing the Switch from the specified trusted computers. |
| Apply | Click Apply to save your changes to the Switch’s run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Diagnostic

This chapter explains the **Diagnostic** screen. You can use this screen to help you identify problems.

49.1 Diagnostic

Click **Management > Diagnostic** in the navigation panel to open this screen. Use this screen to check system logs, ping IP addresses or perform port tests.

Figure 368 Management > Diagnostic

The screenshot shows the 'Diagnostic' screen with a tabbed interface. The 'Info' tab is selected. Below the tab, there are four main test sections:

- Ping Test:** Includes radio buttons for IPv4 (selected) and IPv6, a 'Count' field set to 3, and an 'IP Address/Host Name' field with a 'Ping' button.
- Trace Route Test:** Includes radio buttons for IPv4 (selected) and IPv6, 'TTL' set to 30, 'Wait Time' set to 2 seconds, 'Queries' set to 3, and an 'IP Address/Host Name' field with a 'Trace Route' button.
- Ethernet Port Test:** Includes a 'Port' field and a 'Port Test' button.
- Cable Diagnostics:** Includes a 'Port' field and a 'Diagnose' button.

The following table describes the labels in this screen.

Table 243 Management > Diagnostic

| LABEL | DESCRIPTION |
|--------------------------|--|
| Ping Test | |
| IPv4 | <p>Select this option if you want to ping an IPv4 address, and select which traffic flow (in-band or out-of-band) the Switch is to send ping frames.</p> <p>If you select in-band, the Switch sends the frames to all ports except the management port (labelled MGMT).</p> <p>If you select out-of-band, the Switch sends the frames to the management port (labelled MGMT).</p> <p>Otherwise, select - to send ping requests to all VLANs on the Switch.</p> |
| IPv6 | <p>Select this option if you want to ping an IPv6 address. You can also select vlan and specify the ID number of the VLAN to which the Switch is to send ping requests.</p> <p>Otherwise, select - to send ping requests to all VLANs on the Switch.</p> |
| Count | <p>Enter the number of ICMP Echo Request (ping) messages the Switch continuously sends.</p> |
| IP Address/ Host Name | <p>Type the IP address or host name of a device that you want to ping in order to test a connection.</p> <p>Click Ping to have the Switch ping the IP address.</p> |
| Trace Route Test | |
| IPv4 | <p>Select this option if you want to trace the route packets take to a device with an IPv4 address, and select in-band or out-of-band on which the Switch traces the path.</p> <p>Otherwise, select - to trace the path on any VLAN.</p> |
| IPv6 | <p>Select this option if you want to trace the route packets take to a device with an IPv6 address.</p> |
| TTL | <p>Enter the Time To Live (TTL) value for the ICMP Echo Request packets. This is to set the maximum number of the hops (routers) a packet can travel through. Each router along the path will decrement the TTL value by one and forward the packets. When the TTL value becomes zero and the destination is not found, the router drops the packets and informs the sender.</p> |
| Wait Time | <p>Specify how many seconds the Switch waits for a response to a probe before running another traceroute.</p> |
| Queries | <p>Specify how many times the Switch performs the traceroute function.</p> |
| IP Address/ Host Name | <p>Enter the IP address or host name of a device to which you want to perform a traceroute.</p> <p>Click Trace Route to have the Switch perform the traceroute function. This determines the path a packet takes to the specified device.</p> |
| Ethernet Port Test | <p>Enter a port number and click Port Test to perform an internal loopback test.</p> |
| Cable Diagnostics | <p>Enter a port number and click Diagnose to perform a physical wire-pair test of the Ethernet connections on the specified port(s). The following fields display when you diagnose a port.</p> |
| Port | <p>This is the number of the physical Ethernet port on the Switch.</p> |
| Channel | <p>An Ethernet cable usually has four pairs of wires. A 10BASE-T or 100BASE-TX port only use and test two pairs, while a 1000BASE-T port requires all four pairs.</p> <p>This displays the descriptive name of the wire-pair in the cable.</p> |

Table 243 Management > Diagnostic (continued)

| LABEL | DESCRIPTION |
|-----------------------|--|
| Pair status | <p>Ok: The physical connection between the wire-pair is okay.</p> <p>Open: There is no physical connection (an open circuit detected) between the wire-pair.</p> <p>Short: There is an short circuit detected between the wire-pair.</p> <p>Unknown: The Switch failed to run cable diagnostics on the cable connected this port.</p> <p>Unsupported: The port is a fiber port or it is not active.</p> |
| Cable length (m) | <p>This displays the total length of the Ethernet cable that is connected to the port when the Pair status is Ok and the Switch chipset supports this feature.</p> <p>This shows N/ A if the Pair status is Open or Short. Check the Distance to fault.</p> <p>This shows Unsupported if the Switch chipset does not support to show the cable length.</p> |
| Distance to fault (m) | <p>This displays the distance between the port and the location where the cable is open or shorted.</p> <p>This shows N/ A if the Pair status is Ok.</p> <p>This shows Unsupported if the Switch chipset does not support to show the distance.</p> |

System Log

50.1 Overview

A log message stores the information for viewing.

50.2 System Log

Click **Management > System Log** in the navigation panel to open this screen. Use this screen to check current system logs.

Note: When a log reaches the maximum number of log messages, new log messages automatically overwrite existing log messages, starting with the oldest existing log message first.

Figure 369 Management > System Log



The summary table shows the time the log message was recorded and the reason the log message was generated. Click **Refresh** to update this screen. Click **Clear** to clear the whole log, regardless of what is currently displayed on the screen. Click **Download** to save the log to your computer.

Syslog Setup

This chapter explains the syslog screens.

51.1 Syslog Overview

The syslog protocol allows devices to send event notification messages across an IP network to syslog servers that collect the event messages. A syslog-enabled device can generate a syslog message and send it to a syslog server.

Syslog is defined in RFC 3164. The RFC defines the packet format, content and system log related information of syslog messages. Each syslog message has a facility and severity level. The syslog facility identifies a file in the syslog server. Refer to the documentation of your syslog program for details. The following table describes the syslog severity levels.

Table 244 Syslog Severity Levels

| CODE | SEVERITY |
|------|--|
| 0 | Emergency: The system is unusable. |
| 1 | Alert: Action must be taken immediately. |
| 2 | Critical: The system condition is critical. |
| 3 | Error: There is an error condition on the system. |
| 4 | Warning: There is a warning condition on the system. |
| 5 | Notice: There is a normal but significant condition on the system. |
| 6 | Informational: The syslog contains an informational message. |
| 7 | Debug: The message is intended for debug-level purposes. |

51.2 Syslog Setup

Click **Management > Syslog** in the navigation panel to display this screen. The syslog feature sends logs to an external syslog server. Use this screen to configure the device's system logging settings and configure a list of external syslog servers.

Figure 370 Management > Syslog Setup

The following table describes the labels in this screen.

Table 245 Management > Syslog Setup

| LABEL | DESCRIPTION |
|---------------------|--|
| Syslog | Select Active to turn on syslog (system logging) and then configure the syslog setting |
| Logging Type | This column displays the names of the categories of logs that the device can generate. |
| Active | Select this option to set the device to generate logs for the corresponding category. |
| Facility | The log facility allows you to send logs to different files in the syslog server. Refer to the documentation of your syslog program for more details. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Syslog Server Setup | |
| Active | Select this check box to have the device send logs to this syslog server. Clear the check box if you want to create a syslog server entry but not have the device send logs to it (you can edit the entry later). |
| Server Address | Enter the IP address of the syslog server. |
| Log Level | Select the severity level(s) of the logs that you want the device to send to this syslog server. The lower the number, the more critical the logs are. |

Table 245 Management > Syslog Setup

| LABEL | DESCRIPTION |
|------------|--|
| Add | Click Add to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clear | Click Clear to return the fields to the factory defaults. |
| Index | This is the index number of a syslog server entry. Click this number to edit the entry. |
| Active | This field displays Yes if the device is to send logs to the syslog server. No displays if the device is not to send logs to the syslog server. |
| IP Address | This field displays the IP address of the syslog server. |
| Log Level | This field displays the severity level of the logs that the device is to send to this syslog server. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Delete | Click Delete to remove the selected entry(ies). |
| Cancel | Click Cancel to begin configuring this screen afresh. |

Cluster Management

This chapter introduces cluster management.


52.1 Clustering Management Status Overview

Cluster Management allows you to manage switches through one Switch, called the cluster manager. The switches must be directly connected and be in the same VLAN group so as to be able to communicate with one another.

Table 246 ZyXEL Clustering Management Specifications

| | |
|-----------------------------------|---|
| Maximum number of cluster members | 24 |
| Cluster Member Models | Cluster member models must be compatible with ZyXEL cluster management implementation. |
| Cluster Manager | The cluster manager is the Switch through which you manage the cluster member switches. |
| Cluster Members | Cluster members are the switches being managed by the cluster manager switch. |

In the following example, switch **A** in the basement is the cluster manager and the other switches on the upper floors of the building are cluster members.

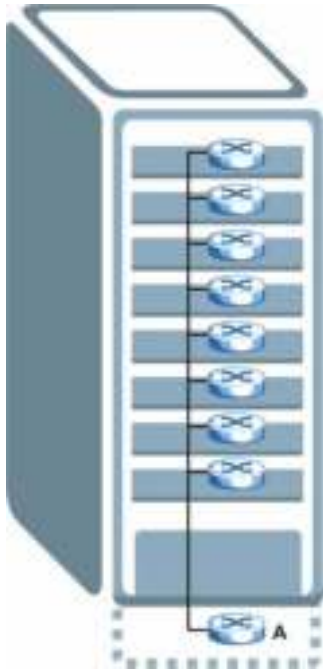Figure 371 Clustering Application Example

52.2 Cluster Management Status

Click **Management > Cluster Management** in the navigation panel to display the following screen.

Note: A cluster can only have one manager.

Figure 372 Management > Cluster Management

| Clustering Management Status | | Configuration | | |
|------------------------------|-------------------|---------------|-------|--------|
| Status | None | | | |
| Manager | 00:00:00:00:00:00 | | | |
| The Number Of Member = 0 | | | | |
| Index | MacAddr | Name | Model | Status |

The following table describes the labels in this screen.

Table 247 Management > Cluster Management

| LABEL | DESCRIPTION |
|----------------------|--|
| Status | This field displays the role of this Switch within the cluster. Manager Member (you see this if you access this screen in the cluster member switch directly and not via the cluster manager) None (neither a manager nor a member of a cluster) |
| Manager | This field displays the cluster manager switch's hardware MAC address. |
| The Number of Member | This field displays the number of switches that make up this cluster. The following fields describe the cluster member switches. |
| Index | You can manage cluster member switches via the cluster manager switch. Each number in the Index column is a hyperlink leading to the cluster member switch's web configurator (see Figure 373 on page 492). |
| MacAddr | This is the cluster member switch's hardware MAC address. |
| Name | This is the cluster member switch's System Name . |
| Model | This field displays the model name. |
| Status | This field displays: Online (the cluster member switch is accessible) Error (for example, the cluster member switch password was changed or the switch was set as the manager and so left the member list, etc.) Offline (the switch is disconnected - Offline shows approximately 1.5 minutes after the link between cluster member and manager goes down) |

52.2.1 Cluster Member Switch Management

Go to the **Clustering Management Status** screen of the cluster manager switch and then select an **Index** hyperlink from the list of members to go to that cluster member switch's web configurator home page. This cluster member web configurator home page and the home page that you'd see if you accessed it directly are different.

Figure 373 Cluster Management: Cluster Member Web Configurator Screen

52.2.1.1 Uploading Firmware to a Cluster Member Switch

You can use FTP to upload firmware to a cluster member switch through the cluster manager switch as shown in the following example.

Figure 374 Example: Uploading Firmware to a Cluster Member Switch

```
C:\>ftp 192.168.1.1
Connected to 192.168.1.1.
220 Switch FTP version 1.0 ready at Thu Jan  1 00:58:46 1970
User (192.168.0.1:(none)): admin
331 Enter PASS command
Password:
230 Logged in
ftp> ls
200 Port command okay
150 Opening data connection for LIST
--w--w--w-   1 owner   group       6173152 Jul  01 12:00 ras-0
--w--w--w-   1 owner   group       6173152 Jul  01 12:00 ras-1
-rw-rw-rw-   1 owner   group      33554432 Jul  01 12:00 config
--w--w--w-   1 owner   group         0 Jul  01 12:00 ras-00-a0-c5-01-23-46
-rw-rw-rw-   1 owner   group         0 Jul  01 12:00 config-00-a0-c5-01-23-46
226 File sent OK
ftp: 297 bytes received in 0.00Seconds 297000.00Kbytes/sec.
ftp> bin
200 Type I OK
ftp> put 410AAGB0.bin ras-00-a0-c5-01-23-46
200 Port command okay
150 Opening data connection for STOR ras-00-a0-c5-01-23-46
226 File received OK
ftp: 262144 bytes sent in 0.63Seconds 415.44Kbytes/sec.
ftp>
```

The following table explains some of the FTP parameters.

Table 248 FTP Upload to Cluster Member Example

| FTP PARAMETER | DESCRIPTION |
|--------------------------|--|
| User | Enter "admin". |
| Password | The web configurator password default is 1234. |
| ls | Enter this command to list the name of cluster member switch's firmware and configuration file. |
| 410AAGB0.bin | This is the name of the firmware file you want to upload to the cluster member switch. |
| ras-00-a0-c5-01-23-46 | This is the cluster member switch's firmware name as seen in the cluster manager switch. |
| config-00-a0-c5-01-23-46 | This is the cluster member switch's configuration file name as seen in the cluster manager switch. |

52.3 Clustering Management Configuration

Use this screen to configure clustering management. Click **Configuration** from the **Cluster Management** screen to display the next screen.

Figure 375 Management > Clustering Management > Configuration

Clustering Management Configuration Status

Clustering Manager:

Active

Name

VID

Apply Cancel

Clustering Candidate:

List

Password

Add Cancel Refresh

| Index | MacAddr | Name | Model |
|-------|---------|------|-------|
| | | | |

Remove Cancel

EXAMPLE

The following table describes the labels in this screen.

Table 249 Management > Clustering Management > Configuration

| LABEL | DESCRIPTION |
|---|--|
| Clustering Manager | |
| Active | Select Active to have this Switch become the cluster manager switch. A cluster can only have one manager. Other (directly connected) switches that are set to be cluster managers will not be visible in the Clustering Candidates list. If a switch that was previously a cluster member is later set to become a cluster manager, then its Status is displayed as Error in the Cluster Management Status screen appears in the member summary list below. |
| Name | Type a name to identify the Clustering Manager . You may use up to 32 printable characters (spaces are allowed). |
| VID | This is the VLAN ID and is only applicable if the Switch is set to 802.1Q VLAN. All switches must be directly connected and in the same VLAN group to belong to the same cluster. Switches that are not in the same VLAN group are not visible in the Clustering Candidates list. This field is ignored if the Clustering Manager is using Port-based VLAN. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Clustering Candidate | The following fields relate to the switches that are potential cluster members. |
| List | A list of suitable candidates found by auto-discovery is shown here. The switches must be directly connected. Directly connected switches that are set to be cluster managers will not be visible in the Clustering Candidate list. Switches that are not in the same management VLAN group will not be visible in the Clustering Candidate list. |
| Password | Each cluster member's password is its web configurator password. Select a member in the Clustering Candidate list and then enter its web configurator password. If that switch administrator changes the web configurator password afterwards, then it cannot be managed from the Cluster Manager . Its Status is displayed as Error in the Cluster Management Status screen. If multiple devices have the same password then hold [SHIFT] and click those switches to select them. Then enter their common web configurator password. |
| Add | Click Add to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |
| Refresh | Click Refresh to perform auto-discovery again to list potential cluster members. |
| The next summary table shows the information for the clustering members configured. | |
| Index | This is the index number of a cluster member switch. |
| MacAddr | This is the cluster member switch's hardware MAC address. |
| Name | This is the cluster member switch's System Name . |
| Model | This is the cluster member switch's model name. |
| | Select an entry's check box to select a specific entry. Otherwise, select the check box in the table heading row to select all entries. |
| Remove | Click the Remove button to remove the selected cluster member switch(es) from the cluster. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

MAC Table

This chapter introduces the **MAC Table** screen.


53.1 MAC Table Overview

The **MAC Table** screen (a MAC table is also known as a filtering database) shows how frames are forwarded or filtered across the Switch's ports. When a device (which may belong to a VLAN group) sends a packet which is forwarded to a port on the Switch, the MAC address of the device is shown on the Switch's **MAC Table**. It also shows whether the MAC address is dynamic (learned by the Switch) or static (manually entered in the **Static MAC Forwarding** screen).

The Switch uses the **MAC Table** to determine how to forward frames. See the following figure.

- 1 The Switch examines a received frame and learns the port from which this source MAC address came.
- 2 The Switch checks to see if the frame's destination MAC address matches a source MAC address already learned in the **MAC Table**.
 - If the Switch has already learned the port for this MAC address, then it forwards the frame to that port.
 - If the Switch has not already learned the port for this MAC address, then the frame is flooded to all ports. Too much port flooding leads to network congestion then the Switch sends an ARP to request the MAC address. The Switch then learns the port that replies with the MAC address.
 - If the Switch has already learned the port for this MAC address, but the destination port is the same as the port it came in on, then it filters the frame.

Figure 376 MAC Table Flowchart

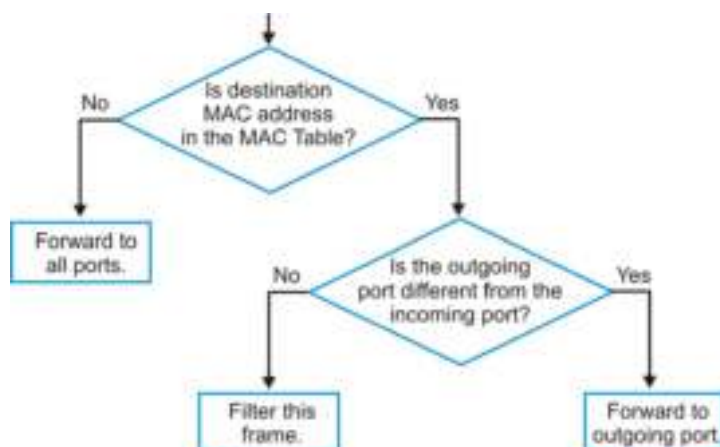

53.2 Viewing the MAC Table

Click **Management > MAC Table** in the navigation panel to display the following screen. Use this screen to search specific MAC addresses. You can also directly add dynamic MAC address(es) into the static MAC forwarding table or MAC filtering table from the MAC table using this screen.

Figure 377 Management > MAC Table

| Index | MAC Address | VID | Port | Type |
|-------|-------------------|-----|------|---------|
| 1 | 00:19:cb:00:00:02 | 1 | CPU | Static |
| 2 | 3c:97:0e:63:af:24 | 1 | 1 | Dynamic |
| 3 | 50:67:00:01:ac:fd | 1 | 1 | Dynamic |
| 4 | 50:67:00:69:0d:2c | 1 | 1 | Dynamic |
| 5 | 74:27:ea:2b:fa:aa | 1 | 1 | Dynamic |
| 6 | 74:27:ea:5f:0b:79 | 1 | 1 | Dynamic |
| 7 | a0:e4:cb:5a:34:b7 | 1 | 1 | Dynamic |

The following table describes the labels in this screen.

Table 250 Management > MAC Table

| LABEL | DESCRIPTION |
|---------------|---|
| Condition | <p>Select All to display all MAC addresses in the MAC table.</p> <p>Select Static to only display static MAC address(es) in this screen.</p> <p>Select MAC and enter a valid MAC address (six hexadecimal character pairs) to display the MAC address information in this screen.</p> <p>Select VID and type a VLAN identification number to display all MAC addresses in the VLAN.</p> <p>Select Port and type the number of a port to display all MAC addresses learned from the port.</p> |
| Sort by | Select this to display and arrange the data according to MAC address (MAC), VLAN group (VID) or port number (Port). The information is then displayed in the summary table below. |
| Transfer Type | <p>Select Dynamic to MAC forwarding and click Transfer to add the relative dynamic MAC address(es) you select the criteria here into the static MAC forwarding table (see Section 8.2 on page 124). The type of the MAC address(es) will be changed to "static".</p> <p>Select Dynamic to MAC filtering and click Transfer to add the relative dynamic MAC address(es) you make the search here into the static MAC filtering table (see Section 10.1 on page 130). The MAC address(es) will be removed from the MAC table and all traffic sent from the MAC address(es) will be blocked by the Switch.</p> |
| Search | Click this to search data in the MAC table according to your input criteria. |
| Transfer | Click this to perform the MAC address transferring you selected in the Transfer Type field. |

Table 250 Management > MAC Table (continued)

| LABEL | DESCRIPTION |
|-------------|--|
| Cancel | Click this to begin configuring the search criteria afresh. |
| Index | This is the incoming frame index number. |
| MAC Address | This is the MAC address of the device from which this incoming frame came. |
| VID | This is the VLAN group to which this frame belongs. |
| Port | This is the port from which the above MAC address was learned. In stacking mode, the first number represents the slot and the second the port number. |
| Type | This shows whether the MAC address is dynamic (learned by the Switch) or static (manually entered in the Static MAC Forwarding screen). |

This chapter introduces the IP table.


54.1 IP Table Overview

The **IP Table** screen shows how packets are forwarded or filtered across the Switch's ports. When a device (which may belong to a VLAN group) sends a packet which is forwarded to a port on the Switch, the IP address of the device is shown on the Switch's **IP Table**. The **IP Table** also shows whether the IP address is dynamic (learned by the Switch) or static (belonging to the Switch).

The Switch uses the **IP Table** to determine how to forward packets. See the following figure.

- 1 The Switch examines a received packet and learns the port from which this source IP address came.
- 2 The Switch checks to see if the packet's destination IP address matches a source IP address already learned in the **IP Table**.
 - If the Switch has already learned the port for this IP address, then it forwards the packet to that port.
 - If the Switch has not already learned the port for this IP address, then the packet is flooded to all ports. Too much port flooding leads to network congestion then the Switch sends an ARP to request the MAC address. The Switch then learns the port that replies with the MAC address.
 - If the Switch has already learned the port for this IP address, but the destination port is the same as the port it came in on, then it filters the packet.

Figure 378 IP Table Flowchart

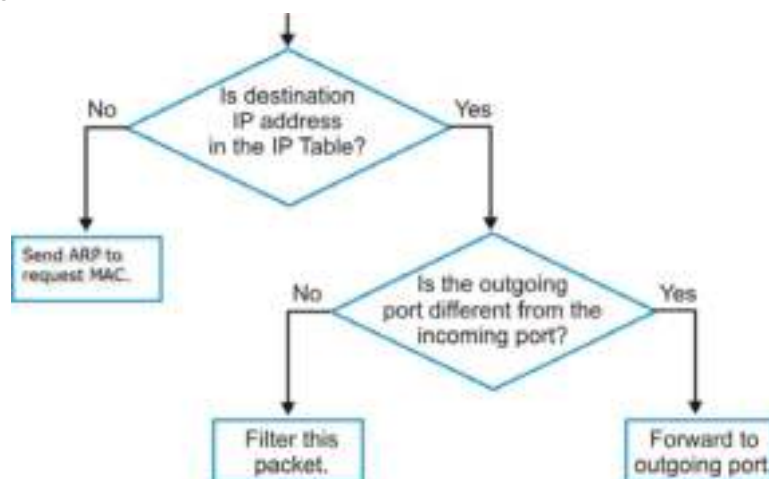

54.2 Viewing the IP Table

Click **Management > IP Table** in the navigation panel to display the following screen.

Figure 379 Management > IP Table

| IP Table | | | | |
|----------|--------------|-----|------|---------|
| Sort by | IP | VID | Port | |
| Index | IP Address | VID | Port | Type |
| 1 | 172.21.56.2 | 1 | 1 | dynamic |
| 2 | 172.21.56.6 | 1 | 1 | dynamic |
| 3 | 172.21.56.8 | 1 | 1 | dynamic |
| 4 | 172.21.56.9 | 1 | 1 | dynamic |
| 5 | 172.21.56.11 | 1 | 1 | dynamic |
| 6 | 172.21.56.12 | 1 | 1 | dynamic |
| 7 | 172.21.56.15 | 1 | 1 | dynamic |
| 8 | 172.21.56.27 | 1 | 1 | dynamic |
| 9 | 172.21.56.58 | 1 | 1 | dynamic |

The following table describes the labels in this screen.

Table 251 Management > IP Table

| LABEL | DESCRIPTION |
|------------|---|
| Sort by | Click one of the following buttons to display and arrange the data according to that button type. The information is then displayed in the summary table below. |
| IP | Click this button to display and arrange the data according to IP address. |
| VID | Click this button to display and arrange the data according to VLAN group. |
| Port | Click this button to display and arrange the data according to port number. |
| Index | This field displays the index number. |
| IP Address | This is the IP address of the device from which the incoming packets came. |
| VID | This is the VLAN group to which the packet belongs. |
| Port | This is the port from which the above IP address was learned. This field displays CPU to indicate the IP address belongs to the Switch. In stacking mode, the first number represents the slot and the second the port number. |
| Type | This shows whether the IP address is dynamic (learned by the Switch) or static (belonging to the Switch). |

ARP Table

This chapter introduces ARP Table.

55.1 ARP Table Overview

Address Resolution Protocol (ARP) is a protocol for mapping an Internet Protocol address (IP address) to a physical machine address, also known as a Media Access Control or MAC address, on the local area network.

An IP (version 4) address is 32 bits long. In an Ethernet LAN, MAC addresses are 48 bits long. The ARP Table maintains an association between each MAC address and its corresponding IP address.

55.1.1 How ARP Works

When an incoming packet destined for a host device on a local area network arrives at the Switch, the Switch's ARP program looks in the ARP Table and if it finds the address, it sends it to the device.

If no entry is found for the IP address, ARP broadcasts the request to all the devices on the LAN. The Switch fills in its own MAC and IP address in the sender address fields, and puts the known IP address of the target in the target IP address field. In addition, the Switch puts all ones in the target MAC field (FF.FF.FF.FF.FF.FF is the Ethernet broadcast address). The replying device (which is either the IP address of the device being sought or the router that knows the way) replaces the broadcast address with the target's MAC address, swaps the sender and target pairs, and unicasts the answer directly back to the requesting machine. ARP updates the ARP Table for future reference and then sends the packet to the MAC address that replied.

55.2 The ARP Table Screen

Click **Management > ARP Table** in the navigation panel to open the following screen. Use the ARP table to view IP-to-MAC address mapping(s) and remove specific dynamic ARP entries.

Figure 380 Management > ARP Table

| Index | IP Address | MAC Address | VID | Port | Age(s) | Type |
|-------|--------------|-------------------|-----|------|--------|---------|
| 1 | 172.21.56.2 | a0:e4:cb:5a:34:b7 | 1 | 1 | 200 | dynamic |
| 2 | 172.21.56.6 | c0:3f:d5:ba:9e:b7 | 1 | 1 | 10 | dynamic |
| 3 | 172.21.56.8 | c0:3f:d5:b6:78:44 | 1 | 1 | 60 | dynamic |
| 4 | 172.21.56.9 | 3c:97:de:f3:af:24 | 1 | 1 | 230 | dynamic |
| 5 | 172.21.56.11 | 74:27:ea:2b:fa:aa | 1 | 1 | 25 | dynamic |
| 6 | 172.21.56.12 | cc:5d:4e:33:a5:6c | 1 | 1 | 55 | dynamic |
| 7 | 172.21.56.15 | c0:3f:d5:b9:9a:48 | 1 | 1 | 70 | dynamic |
| 8 | 172.21.56.18 | 00:13:49:00:00:01 | 1 | 1 | 245 | dynamic |
| 9 | 172.21.56.58 | 4:5:28:d3:46:43 | 1 | 1 | 140 | dynamic |

The following table describes the labels in this screen.

Table 252 Management > ARP Table

| LABEL | DESCRIPTION |
|-------------|---|
| Condition | Specify how you want the Switch to remove ARP entries when you click Flush . Select All to remove all of the dynamic entries from the ARP table. Select IP Address and enter an IP address to remove the dynamic entries learned with the specified IP address. Select Port and enter a port number to remove the dynamic entries learned on the specified port. |
| Flush | Click Flush to remove the ARP entries according to the condition you specified. |
| Cancel | Click Cancel to return the fields to the factory defaults. |
| Index | This is the ARP table entry number. |
| IP Address | This is the IP address of a device connected to a Switch port with the corresponding MAC address below. |
| MAC Address | This is the MAC address of the device with the corresponding IP address above. |
| VID | This field displays the VLAN to which the device belongs. |
| Port | This field displays the port to which the device connects. CPU means this IP address is the Switch's management IP address. In stacking mode, the first number represents the slot and the second the port number. |
| Age(s) | This field displays how long (in seconds) an entry can still remain in the ARP table before it ages out and needs to be relearned. This shows 0 for a static entry. |
| Type | This shows whether the IP address is dynamic (learned by the Switch) or static (manually configured in the Basic Setting > IP Setup or IP Application > ARP Setup > Static ARP screen). |

Routing Table

This chapter introduces the routing table.

56.1 Overview

The routing table contains the route information to the network(s) that the Switch can reach.

56.2 Viewing the Routing Table Status

Use this screen to view routing table information. Click **Management > Routing Table** in the navigation panel to display the screen as shown.

Figure 381 Management > Routing Table

| Index | Destination | Gateway | Interface | Metric | Type |
|-------|--------------|-----------|-----------|--------|-------|
| 1 | | | | 1 | LOCAL |
| 2 | 127.0.0.0/16 | 127.0.0.1 | 127.0.0.1 | 1 | LOCAL |

The following table describes the labels in this screen.

Table 253 Management > Routing Table

| LABEL | DESCRIPTION |
|-------------|---|
| Index | This field displays the index number. |
| Destination | This field displays the destination IP routing domain. |
| Gateway | This field displays the IP address of the gateway device. |
| Interface | This field displays the IP address of the Interface. |
| Metric | This field displays the cost of the route. |
| Type | This field displays the method used to learn the route. STATIC - added as a static entry. |

Path MTU Table

This chapter introduces the IPv6 Path MTU table.

57.1 Path MTU Overview

The largest size (in bytes) of a packet that can be transferred over a data link is called the maximum transmission unit (MTU). The Switch uses Path MTU Discovery to discover Path MTU (PMTU), that is, the minimum link MTU of all the links in a path to the destination. If the Switch receives an ICMPv6 Packet Too Big error message after sending a packet, it fragments the next packet according to the suggested MTU in the error message.

57.2 Viewing the Path MTU Table

Use this screen to view IPv6 path MTU information on the Switch. Click **Management > Path MTU Table** in the navigation panel to display the screen as shown.

Figure 382 Management > Path MTU Table



| Index | Destination Address | MTU | Expire |
|-------|---------------------|-----|--------|
|-------|---------------------|-----|--------|

The following table describes the labels in this screen.

Table 254 Management > Path MTU Table

| LABEL | DESCRIPTION |
|---------------------|---|
| Path MTU aging time | This field displays how long an entry remains in the Path MTU table before it ages out and needs to be relearned. |
| Index | This field displays the index number of each entry in the table. |
| Destination Address | This field displays the destination IPv6 address of each path/entry. |
| MTU | This field displays the maximum transmission unit of the links in the path. |
| Expire | This field displays how long (in minutes) an entry can still remain in the Path MTU table before it ages out and needs to be relearned. |

Configure Clone

This chapter shows you how you can copy the settings of one port onto other ports.

58.1 Configure Clone

Cloning allows you to copy the basic and advanced settings from a source port to a destination port or ports. Click **Management** > **Configure Clone** to open the following screen.

Figure 383 Management > Configure Clone (Standalone)

| Configure Clone | |
|---------------------------------------|-------------|
| Source | Destination |
| <input checked="" type="radio"/> Port | |

Port Features

| | |
|--|--|
| Basic Setting | <input type="checkbox"/> Active |
| | <input type="checkbox"/> Name |
| | <input type="checkbox"/> Speed / Duplex |
| | <input type="checkbox"/> BPDU Control |
| | <input type="checkbox"/> Flow Control |
| | <input type="checkbox"/> Intrusion Lock |
| Advanced Application | <input type="checkbox"/> VLANfq |
| | <input type="checkbox"/> VLANfq Member |
| | <input type="checkbox"/> Bandwidth Control |
| | <input type="checkbox"/> VLAN Stacking |
| | <input type="checkbox"/> Port Security |
| | <input type="checkbox"/> Broadcast Storm Control |
| | <input type="checkbox"/> Mirroring |
| | <input type="checkbox"/> Port Authentication |
| | <input type="checkbox"/> Queuing Method |
| | <input type="checkbox"/> IGMP Filtering |
| | <input type="checkbox"/> Spanning Tree Protocol |
| | <input type="checkbox"/> Multiple Rapid Spanning Tree Protocol |
| | <input type="checkbox"/> Protocol-based VLAN |
| | <input type="checkbox"/> Port-based VLAN |
| | <input type="checkbox"/> MAC Authentication |
| | <input type="checkbox"/> Two-rate three color marker |
| | <input type="checkbox"/> Ethernet CAM |
| | <input type="checkbox"/> Loop Guard |
| | <input type="checkbox"/> ARP Inspection |
| | <input type="checkbox"/> DHCP Snooping |
| | <input type="checkbox"/> VLAN Mapping |
| | <input type="checkbox"/> Layer 2 Protocol Tunneling |
| | <input type="checkbox"/> LLDP |
| | <input type="checkbox"/> sFlow |
| | <input type="checkbox"/> PPPoE IA |
| | <input type="checkbox"/> ARP Learning |
| | <input type="checkbox"/> CPUProtection |
| <input type="checkbox"/> Multiple Spanning Tree Protocol | |
| <input type="checkbox"/> Power over Ethernet | |
| <input type="checkbox"/> SNMP Trap | |
| <input type="checkbox"/> MAC Pinning | |
| <input type="checkbox"/> Green Ethernet | |
| <input type="checkbox"/> Anti-DoS | |
| <input type="checkbox"/> BPDU Guard | |
| <input type="checkbox"/> IPv6 DHCP Trust | |
| <input type="checkbox"/> IPv6 Source Guard | |
| <input type="checkbox"/> ZLLD | |

Figure 384 Management > Configure Clone (Stacking)

The following table describes the labels in this screen.

Table 255 Management > Configure Clone

| LABEL | DESCRIPTION |
|---------------------------|---|
| Source/ Destination | In stacking mode, a port is defined by a slot ID representing the Switch in the stack and a port number. |
| Port / Slot (Stacking) | <p>Select the source port and slot (in stacking mode) under the Source label. This port's attributes are copied.</p> <p>Enter the destination port or ports under the Destination label. These are the ports which are going to have the same attributes as the source port. You can enter individual ports separated by a comma or a range of ports by using a hyphen. For example, 2, 4, 6 indicates that ports 2, 4 and 6 are the destination ports. 2-6 indicates that ports 2 through 6 are the destination ports.</p> <p>In stacking mode, you can select multiple destination slots.</p> |
| Basic Setting | Select which port settings (configured in the Basic Setting menus) should be copied to the destination port(s). |

Table 255 Management > Configure Clone (continued)

| LABEL | DESCRIPTION |
|----------------------|--|
| Advanced Application | Select which port settings (configured in the Advanced Application menus) should be copied to the destination ports. |
| Apply | Click Apply to save your changes to the Switch's run-time memory. The Switch loses these changes if it is turned off or loses power, so use the Save link on the top navigation panel to save your changes to the non-volatile memory when you are done configuring. |
| Cancel | Click Cancel to begin configuring this screen afresh. |

IPv6 Neighbor Table

This chapter introduces the IPv6 neighbor table.

59.1 IPv6 Neighbor Table Overview

An IPv6 host is required to have a neighbor table. If there is an address to be resolved or verified, the Switch sends out a neighbor solicitation message. When the Switch receives a neighbor advertisement in response, it stores the neighbor's link-layer address in the neighbor table. You can also manually create a static IPv6 neighbor entry using the **Basic Setting > IPv6 > IPv6 Configuration > IPv6 Neighbor Setup** screen.

When the Switch needs to send a packet, it first consults other table to determine the next hop. Once the next hop IPv6 address is known, the Switch looks into the neighbor table to get the link-layer address and sends the packet when the neighbor is reachable. If the Switch cannot find an entry in the neighbor table or the state for the neighbor is not reachable, it starts the address resolution process. This helps reduce the number of IPv6 solicitation and advertisement messages.

59.2 Viewing the IPv6 Neighbor Table

Use this screen to view IPv6 neighbor information on the Switch. Click **Management > IPv6 Neighbor Table** in the navigation panel to display the screen as shown.

Figure 385 Management > IPv6 Neighbor Table



| Index | Interface | Neighbor Address | MAC | Status | Type |
|-------|-----------|------------------|-----|--------|------|
|-------|-----------|------------------|-----|--------|------|

The following table describes the labels in this screen.

Table 256 Management > IPv6 Neighbor Table

| LABEL | DESCRIPTION |
|------------------|--|
| Index | This field displays the index number of each entry in the table. |
| Interface | This field displays the ID number of the IPv6 interface on which the IPv6 address is created or through which the neighboring device can be reached. |
| Neighbor Address | This field displays the IPv6 address of the Switch or a neighboring device. |
| MAC | This field displays the MAC address of the IPv6 interface on which the IPv6 address is configure or the MAC address of the neighboring device. |

Table 256 Management > IPv6 Neighbor Table (continued)

| LABEL | DESCRIPTION |
|--------|---|
| Status | <p>This field displays whether the neighbor IPv6 interface is reachable. In IPv6, “reachable” means an IPv6 packet can be correctly forwarded to a neighbor node (host or router) and the neighbor can successfully receive and handle the packet. The available options in this field are:</p> <ul style="list-style-type: none"> • reachable (R): The interface of the neighboring device is reachable. (The Switch has received a response to the initial request.) • stale (S): The last reachable time has expired and the Switch is waiting for a response to another initial request. The field displays this also when the Switch receives an unrequested response from the neighbor’s interface. • delay (D): The neighboring interface is no longer known to be reachable, and traffic has been sent to the neighbor recently. The Switch delays sending request packets for a short to give upper-layer protocols a chance to determine reachability. • probe (P): The Switch is sending request packets and waiting for the neighbor’s response. • invalid (IV): The neighbor address is with an invalid IPv6 address. • unknown (?): The status of the neighboring interface can not be determined for some reason. • incomplete (I): Address resolution is in progress and the link-layer address of the neighbor has not yet been determined. The interface of the neighboring device did not give a complete response. |
| Type | <p>This field displays the type of an address mapping to a neighbor interface. The available options in this field are:</p> <ul style="list-style-type: none"> • other (O): none of the following type. • local (L): A Switch interface is using the address. • dynamic (D): The IP address to MAC address can be successfully resolved using IPv6 Neighbor Discovery protocol. Is it similar as IPv4 ARP (Address Resolution protocol). • static (S): The interface address is statically configured. |

Troubleshooting

This chapter offers some suggestions to solve problems you might encounter. The potential problems are divided into the following categories.

- [Power, Hardware Connections, and LEDs](#)
- [Switch Access and Login](#)
- [Switch Configuration](#)

60.1 Power, Hardware Connections, and LEDs

The Switch does not turn on. None of the LEDs turn on.

- 1 Make sure the Switch is turned on (in DC models or if the DC power supply is connected in AC/DC models).
- 2 Make sure you are using the power adaptor or cord included with the Switch.
- 3 Make sure the power adaptor or cord is connected to the Switch and plugged in to an appropriate power source. Make sure the power source is turned on.
- 4 Turn the Switch off and on (in DC models or if the DC power supply is connected in AC/DC models).
- 5 Disconnect and re-connect the power adaptor or cord to the Switch (in AC models or if the AC power supply is connected in AC/DC models).
- 6 If the problem continues, contact the vendor.

The **ALM** LED is on.

- 1 Turn the Switch off and on (in DC models or if the DC power supply is connected in AC/DC models).
- 2 Disconnect and re-connect the power adaptor or cord to the Switch (in AC models or if the AC power supply is connected in AC/DC models).
- 3 If the problem continues, contact the vendor.

One of the LEDs does not behave as expected.

- 1 Make sure you understand the normal behavior of the LED. See [Section 3.3 on page 35](#).
- 2 Check the hardware connections. See [Section 3.1 on page 30](#).
- 3 Inspect your cables for damage. Contact the vendor to replace any damaged cables.
- 4 Turn the Switch off and on (in DC models or if the DC power supply is connected in AC/DC models).
- 5 Disconnect and re-connect the power adaptor or cord to the Switch (in AC models or if the AC power supply is connected in AC/DC models).
- 6 If the problem continues, contact the vendor.

60.2 Switch Access and Login

I forgot the IP address for the Switch.

- 1 The default in-band IP address is **192.168.1.1**.
- 2 Use the console port to log in to the Switch.
- 3 Use the **MGMT** port to log in to the Switch, the default IP address of the **MGMT** port is 192.168.0.1.
- 4 If this does not work, you have to reset the device to its factory defaults. See [Section 4.6 on page 44](#).

I forgot the username and/or password.

- 1 The default username is **admin** and the default password is **1234**.
- 2 If this does not work, you have to reset the device to its factory defaults. See [Section 4.6 on page 44](#).

I cannot see or access the **Login** screen in the web configurator.

- 1 Make sure you are using the correct IP address.
 - The default in-band IP address is [192.168.1.1](#).

- If you changed the IP address, use the new IP address.
 - If you changed the IP address and have forgotten it, see the troubleshooting suggestions for [I forgot the IP address for the Switch](#).
- 2 Check the hardware connections, and make sure the LEDs are behaving as expected. See [Section 3.3 on page 35](#).
 - 3 Make sure your Internet browser does not block pop-up windows and has JavaScripts and Java enabled.
 - 4 Make sure your computer is in the same subnet as the Switch. (If you know that there are routers between your computer and the Switch, skip this step.)
 - 5 Reset the device to its factory defaults, and try to access the Switch with the default IP address. See [Section 4.6 on page 44](#).
 - 6 If the problem continues, contact the vendor, or try one of the advanced suggestions.

Advanced Suggestions

- Try to access the Switch using another service, such as Telnet. If you can access the Switch, check the remote management settings to find out why the Switch does not respond to HTTP.

I can see the **Login** screen, but I cannot log in to the Switch.

- 1 Make sure you have entered the user name and password correctly. The default user name is **admin**, and the default password is **1234**. These fields are case-sensitive, so make sure [Caps Lock] is not on.
- 2 You may have exceeded the maximum number of concurrent Telnet sessions. Close other Telnet session(s) or try connecting again later.

Check that you have enabled logins for HTTP or Telnet. If you have configured a secured client IP address, your computer's IP address must match it. Refer to the chapter on access control for details.
- 3 Disconnect and re-connect the cord to the Switch.
- 4 If this does not work, you have to reset the device to its factory defaults. See [Section 4.6 on page 44](#).

Pop-up Windows, JavaScripts and Java Permissions

In order to use the web configurator you need to allow:

- Web browser pop-up windows from your device.
- JavaScripts (enabled by default).
- Java permissions (enabled by default).

I cannot see some of **Advanced Application** submenus at the bottom of the navigation panel.

The recommended screen resolution is 1024 by 768 pixels. Adjust the value in your computer and then you should see the rest of **Advanced Application** submenus at the bottom of the navigation panel.

There is unauthorized access to my Switch via telnet, HTTP and SSH.

Click the **Display** button in the **System Log** field in the **Management > Diagnostic** screen to check for unauthorized access to your Switch. To avoid unauthorized access, configure the secured client setting in the **Management > Access Control > Remote Management** screen for telnet, HTTP and SSH (see [Section 48.11 on page 480](#)). Computers not belonging to the secured client set cannot get permission to access the Switch.

60.3 Switch Configuration

I lost my configuration settings after I restart the Switch.

Make sure you save your configuration into the Switch's nonvolatile memory each time you make changes. Click **Save** at the top right corner of the web configurator to save the configuration permanently. See also [Section 47.6 on page 452](#) for more information about how to save your configuration.



Common Services

The following table lists some commonly-used services and their associated protocols and port numbers. For a comprehensive list of port numbers, ICMP type/code numbers and services, visit the IANA (Internet Assigned Number Authority) web site.

- **Name:** This is a short, descriptive name for the service. You can use this one or create a different one, if you like.
- **Protocol:** This is the type of IP protocol used by the service. If this is **TCP/ UDP**, then the service uses the same port number with TCP and UDP. If this is **User-Defined**, the **Port(s)** is the IP protocol number, not the port number.
- **Port(s):** This value depends on the **Protocol**. Please refer to RFC 1700 for further information about port numbers.
 - If the **Protocol** is **TCP, UDP, or TCP/ UDP**, this is the IP port number.
 - If the **Protocol** is **USER**, this is the IP protocol number.
- **Description:** This is a brief explanation of the applications that use this service or the situations in which this service is used.

Table 257 Commonly Used Services

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|--------------------|--------------|---------------|---|
| AH (IPSEC_TUNNEL) | User-Defined | 51 | The IPSEC AH (Authentication Header) tunneling protocol uses this service. |
| AIM/New-ICQ | TCP | 5190 | AOL's Internet Messenger service. It is also used as a listening port by ICQ. |
| AUTH | TCP | 113 | Authentication protocol used by some servers. |
| BGP | TCP | 179 | Border Gateway Protocol. |
| BOOTP_CLIENT | UDP | 68 | DHCP Client. |
| BOOTP_SERVER | UDP | 67 | DHCP Server. |
| CU-SEEME | TCP UDP | 7648 24032 | A popular videoconferencing solution from White Pines Software. |
| DNS | TCP/UDP | 53 | Domain Name Server, a service that matches web names (for example www.zyxel.com) to IP numbers. |
| ESP (IPSEC_TUNNEL) | User-Defined | 50 | The IPSEC ESP (Encapsulation Security Protocol) tunneling protocol uses this service. |
| FINGER | TCP | 79 | Finger is a UNIX or Internet related command that can be used to find out if a user is logged on. |
| FTP | TCP TCP | 20 21 | File Transfer Program, a program to enable fast transfer of files, including large files that may not be possible by e-mail. |
| H.323 | TCP | 1720 | NetMeeting uses this protocol. |
| HTTP | TCP | 80 | Hyper Text Transfer Protocol - a client/server protocol for the world wide web. |

Table 257 Commonly Used Services (continued)

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|-------------------|--------------|---------|---|
| HTTPS | TCP | 443 | HTTPS is a secured http session often used in e-commerce. |
| ICMP | User-Defined | 1 | Internet Control Message Protocol is often used for diagnostic or routing purposes. |
| ICQ | UDP | 4000 | This is a popular Internet chat program. |
| IGMP (MULTICAST) | User-Defined | 2 | Internet Group Multicast Protocol is used when sending packets to a specific group of hosts. |
| IKE | UDP | 500 | The Internet Key Exchange algorithm is used for key distribution and management. |
| IRC | TCP/UDP | 6667 | This is another popular Internet chat program. |
| MSN Messenger | TCP | 1863 | Microsoft Networks' messenger service uses this protocol. |
| NEW-ICQ | TCP | 5190 | An Internet chat program. |
| NEWS | TCP | 144 | A protocol for news groups. |
| NFS | UDP | 2049 | Network File System - NFS is a client/server distributed file service that provides transparent file sharing for network environments. |
| NNTP | TCP | 119 | Network News Transport Protocol is the delivery mechanism for the USENET newsgroup service. |
| PING | User-Defined | 1 | Packet INternet Groper is a protocol that sends out ICMP echo requests to test whether or not a remote host is reachable. |
| POP3 | TCP | 110 | Post Office Protocol version 3 lets a client computer get e-mail from a POP3 server through a temporary connection (TCP/IP or other). |
| PPTP | TCP | 1723 | Point-to-Point Tunneling Protocol enables secure transfer of data over public networks. This is the control channel. |
| PPTP_TUNNEL (GRE) | User-Defined | 47 | PPTP (Point-to-Point Tunneling Protocol) enables secure transfer of data over public networks. This is the data channel. |
| RCMD | TCP | 512 | Remote Command Service. |
| REAL_AUDIO | TCP | 7070 | A streaming audio service that enables real time sound over the web. |
| REXEC | TCP | 514 | Remote Execution Daemon. |
| RLOGIN | TCP | 513 | Remote Login. |
| RTELNET | TCP | 107 | Remote Telnet. |
| RTSP | TCP/UDP | 554 | The Real Time Streaming (media control) Protocol (RTSP) is a remote control for multimedia on the Internet. |
| SFTP | TCP | 115 | Simple File Transfer Protocol. |
| SMTP | TCP | 25 | Simple Mail Transfer Protocol is the message-exchange standard for the Internet. SMTP enables you to move messages from one e-mail server to another. |
| SNMP | TCP/UDP | 161 | Simple Network Management Program. |
| SNMP-TRAPS | TCP/UDP | 162 | Traps for use with the SNMP (RFC:1215). |

Table 257 Commonly Used Services (continued)

| NAME | PROTOCOL | PORT(S) | DESCRIPTION |
|-------------|-----------------|----------------|--|
| SQL-NET | TCP | 1521 | Structured Query Language is an interface to access data on many different types of database systems, including mainframes, midrange systems, UNIX systems and network servers. |
| SSH | TCP/UDP | 22 | Secure Shell Remote Login Program. |
| STRM WORKS | UDP | 1558 | Stream Works Protocol. |
| SYSLOG | UDP | 514 | Syslog allows you to send system logs to a UNIX server. |
| TACACS | UDP | 49 | Login Host Protocol used for (Terminal Access Controller Access Control System). |
| TELNET | TCP | 23 | Telnet is the login and terminal emulation protocol common on the Internet and in UNIX environments. It operates over TCP/IP networks. Its primary function is to allow users to log into remote host systems. |
| TFTP | UDP | 69 | Trivial File Transfer Protocol is an Internet file transfer protocol similar to FTP, but uses the UDP (User Datagram Protocol) rather than TCP (Transmission Control Protocol). |
| VDOLIVE | TCP | 7000 | Another videoconferencing solution. |

Overview

IPv6 (Internet Protocol version 6), is designed to enhance IP address size and features. The increase in IPv6 address size to 128 bits (from the 32-bit IPv4 address) allows up to 3.4×10^{38} IP addresses.

IPv6 Addressing

The 128-bit IPv6 address is written as eight 16-bit hexadecimal blocks separated by colons (:). This is an example IPv6 address `2001:0db8:1a2b:0015:0000:0000:1a2f:0000`.

IPv6 addresses can be abbreviated in two ways:

- Leading zeros in a block can be omitted. So `2001:0db8:1a2b:0015:0000:0000:1a2f:0000` can be written as `2001:db8:1a2b:15:0:0:1a2f:0`.
- Any number of consecutive blocks of zeros can be replaced by a double colon. A double colon can only appear once in an IPv6 address. So `2001:0db8:0000:0000:1a2f:0000:0000:0015` can be written as `2001:0db8::1a2f:0000:0000:0015`, `2001:0db8:0000:0000:1a2f::0015`, `2001:db8::1a2f:0:0:15` or `2001:db8:0:0:1a2f::15`.

Prefix and Prefix Length

Similar to an IPv4 subnet mask, IPv6 uses an address prefix to represent the network address. An IPv6 prefix length specifies how many most significant bits (start from the left) in the address compose the network address. The prefix length is written as “/x” where x is a number. For example,

```
2001:db8:1a2b:15::1a2f:0/32
```

means that the first 32 bits (`2001:db8`) is the subnet prefix.

Link-local Address

A link-local address uniquely identifies a device on the local network (the LAN). It is similar to a “private IP address” in IPv4. You can have the same link-local address on multiple interfaces on a device. A link-local unicast address has a predefined prefix of `fe80::/10`. The link-local unicast address format is as follows.

Table 258 Link-local Unicast Address Format

| | | |
|--------------|---------|--------------|
| 1111 1110 10 | 0 | Interface ID |
| 10 bits | 54 bits | 64 bits |

Global Address

A global address uniquely identifies a device on the Internet. It is similar to a “public IP address” in IPv4. A global unicast address starts with a 2 or 3.

Unspecified Address

An unspecified address (0:0:0:0:0:0:0 or ::) is used as the source address when a device does not have its own address. It is similar to “0.0.0.0” in IPv4.

Loopback Address

A loopback address (0:0:0:0:0:0:0:1 or ::1) allows a host to send packets to itself. It is similar to “127.0.0.1” in IPv4.

Multicast Address

In IPv6, multicast addresses provide the same functionality as IPv4 broadcast addresses. Broadcasting is not supported in IPv6. A multicast address allows a host to send packets to all hosts in a multicast group.

Multicast scope allows you to determine the size of the multicast group. A multicast address has a predefined prefix of ff00::/8. The following table describes some of the predefined multicast addresses.

Table 259 Predefined Multicast Address

| MULTICAST ADDRESS | DESCRIPTION |
|--------------------|--|
| FF01:0:0:0:0:0:0:1 | All hosts on a local node. |
| FF01:0:0:0:0:0:0:2 | All routers on a local node. |
| FF02:0:0:0:0:0:0:1 | All hosts on a local connected link. |
| FF02:0:0:0:0:0:0:2 | All routers on a local connected link. |
| FF05:0:0:0:0:0:0:2 | All routers on a local site. |
| FF05:0:0:0:0:0:1:3 | All DHCP servers on a local site. |

The following table describes the multicast addresses which are reserved and can not be assigned to a multicast group.

Table 260 Reserved Multicast Address

| MULTICAST ADDRESS |
|--------------------|
| FF00:0:0:0:0:0:0:0 |
| FF01:0:0:0:0:0:0:0 |
| FF02:0:0:0:0:0:0:0 |
| FF03:0:0:0:0:0:0:0 |
| FF04:0:0:0:0:0:0:0 |
| FF05:0:0:0:0:0:0:0 |
| FF06:0:0:0:0:0:0:0 |
| FF07:0:0:0:0:0:0:0 |
| FF08:0:0:0:0:0:0:0 |
| FF09:0:0:0:0:0:0:0 |

Table 260 Reserved Multicast Address (continued)

| MULTICAST ADDRESS |
|--------------------|
| FF0A:0:0:0:0:0:0:0 |
| FF0B:0:0:0:0:0:0:0 |
| FF0C:0:0:0:0:0:0:0 |
| FF0D:0:0:0:0:0:0:0 |
| FF0E:0:0:0:0:0:0:0 |
| FF0F:0:0:0:0:0:0:0 |

Subnet Masking

Both an IPv6 address and IPv6 subnet mask compose of 128-bit binary digits, which are divided into eight 16-bit blocks and written in hexadecimal notation. Hexadecimal uses four bits for each character (1 ~ 10, A ~ F). Each block's 16 bits are then represented by four hexadecimal characters. For example, FFFF:FFFF:FFFF:FFFF:FC00:0000:0000:0000.

Interface ID

In IPv6, an interface ID is a 64-bit identifier. It identifies a physical interface (for example, an Ethernet port) or a virtual interface (for example, the management IP address for a VLAN). One interface should have a unique interface ID.

EUI-64

The EUI-64 (Extended Unique Identifier) defined by the IEEE (Institute of Electrical and Electronics Engineers) is an interface ID format designed to adapt with IPv6. It is derived from the 48-bit (6-byte) Ethernet MAC address as shown next. EUI-64 inserts the hex digits fffe between the third and fourth bytes of the MAC address and complements the seventh bit of the first byte of the MAC address. See the following example.

Table 261

| MAC | 00 | : | 13 | : | 49 | : | 12 | : | 34 | : | 56 |
|-----|----|---|----|---|----|---|----|---|----|---|----|
| | | | | | | | | | | | |

Table 262

| EUI-64 | 02 | : | 13 | : | 49 | : | FF | : | FE | : | 12 | : | 34 | : | 56 |
|--------|----|---|----|---|----|---|----|---|----|---|----|---|----|---|----|
| | | | | | | | | | | | | | | | |

Stateless Autoconfiguration

With stateless autoconfiguration in IPv6, addresses can be uniquely and automatically generated. Unlike DHCPv6 (Dynamic Host Configuration Protocol version six) which is used in IPv6 stateful autoconfiguration, the owner and status of addresses don't need to be maintained by a DHCP server. Every IPv6 device is able to generate its own and unique IP address automatically when IPv6 is initiated on its interface. It combines the prefix and the interface ID (generated from its own Ethernet MAC address, see [Interface ID](#) and [EUI-64](#)) to form a complete IPv6 address.

When IPv6 is enabled on a device, its interface automatically generates a link-local address (beginning with fe80).

When the interface is connected to a network with a router and the Switch is set to automatically obtain an IPv6 network prefix from the router for the interface, it generates ¹another address which

combines its interface ID and global and subnet information advertised from the router. This is a routable global IP address.

DHCPv6


The Dynamic Host Configuration Protocol for IPv6 (DHCPv6, RFC 3315) is a server-client protocol that allows a DHCP server to assign and pass IPv6 network addresses, prefixes and other configuration information to DHCP clients. DHCPv6 servers and clients exchange DHCP messages using UDP.

Each DHCP client and server has a unique DHCP Unique Identifier (DUID), which is used for identification when they are exchanging DHCPv6 messages. The DUID is generated from the MAC address, time, vendor assigned ID and/or the vendor's private enterprise number registered with the IANA. It should not change over time even after you reboot the device.

Identity Association

An Identity Association (IA) is a collection of addresses assigned to a DHCP client, through which the server and client can manage a set of related IP addresses. Each IA must be associated with exactly one interface. The DHCP client uses the IA assigned to an interface to obtain configuration from a DHCP server for that interface. Each IA consists of a unique IAID and associated IP information.

The IA type is the type of address in the IA. Each IA holds one type of address. IA_NA means an identity association for non-temporary addresses and IA_TA is an identity association for temporary addresses. An IA_NA option contains the T1 and T2 fields, but an IA_TA option does not. The DHCPv6 server uses T1 and T2 to control the time at which the client contacts with the server to extend the lifetimes on any addresses in the IA_NA before the lifetimes expire. After T1, the client sends the server (**S1**) (from which the addresses in the IA_NA were obtained) a Renew message. If the time T2 is reached and the server does not respond, the client sends a Rebind message to any available server (**S2**). For an IA_TA, the client may send a Renew or Rebind message at the client's discretion.

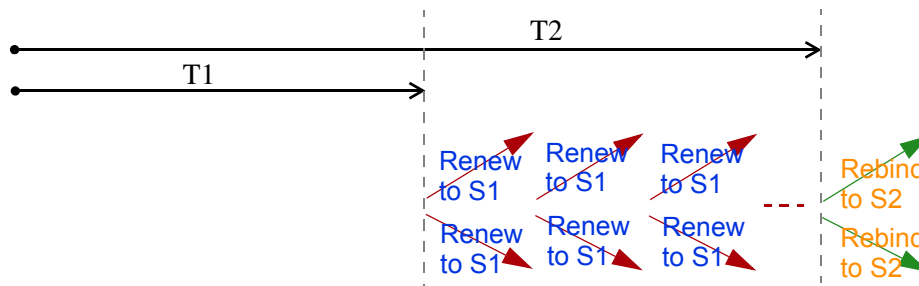

DHCP Relay Agent

A DHCP relay agent is on the same network as the DHCP clients and helps forward messages between the DHCP server and clients. When a client cannot use its link-local address and a well-known multicast address to locate a DHCP server on its network, it then needs a DHCP relay agent to send a message to a DHCP server that is not attached to the same network.

The DHCP relay agent can add the remote identification (remote-ID) option and the interface-ID option to the Relay-Forward DHCPv6 messages. The remote-ID option carries a user-defined string,

1. In IPv6, all network interfaces can be associated with several addresses.

such as the system name. The interface-ID option provides slot number, port information and the VLAN ID to the DHCPv6 server. The remote-ID option (if any) is stripped from the Relay-Reply messages before the relay agent sends the packets to the clients. The DHCP server copies the interface-ID option from the Relay-Forward message into the Relay-Reply message and sends it to the relay agent. The interface-ID should not change even after the relay agent restarts.

Prefix Delegation

Prefix delegation enables an IPv6 router to use the IPv6 prefix (network address) received from the ISP (or a connected uplink router) for its LAN. The Switch uses the received IPv6 prefix (for example, 2001:db2::/48) to generate its LAN IP address. Through sending Router Advertisements (RAs) regularly by multicast, the Switch passes the IPv6 prefix information to its LAN hosts. The hosts then can use the prefix to generate their IPv6 addresses.

ICMPv6

Internet Control Message Protocol for IPv6 (ICMPv6 or ICMP for IPv6) is defined in RFC 4443. ICMPv6 has a preceding Next Header value of 58, which is different from the value used to identify ICMP for IPv4. ICMPv6 is an integral part of IPv6. IPv6 nodes use ICMPv6 to report errors encountered in packet processing and perform other diagnostic functions, such as "ping".

Neighbor Discovery Protocol (NDP)

The Neighbor Discovery Protocol (NDP) is a protocol used to discover other IPv6 devices and track neighbor's reachability in a network. An IPv6 device uses the following ICMPv6 messages types:

- Neighbor solicitation: A request from a host to determine a neighbor's link-layer address (MAC address) and detect if the neighbor is still reachable. A neighbor being "reachable" means it responds to a neighbor solicitation message (from the host) with a neighbor advertisement message.
- Neighbor advertisement: A response from a node to announce its link-layer address.
- Router solicitation: A request from a host to locate a router that can act as the default router and forward packets.
- Router advertisement: A response to a router solicitation or a periodical multicast advertisement from a router to advertise its presence and other parameters.

IPv6 Cache

An IPv6 host is required to have a neighbor cache, destination cache, prefix list and default router list. The Switch maintains and updates its IPv6 caches constantly using the information from response messages. In IPv6, the Switch configures a link-local address automatically, and then sends a neighbor solicitation message to check if the address is unique. If there is an address to be resolved or verified, the Switch also sends out a neighbor solicitation message. When the Switch receives a neighbor advertisement in response, it stores the neighbor's link-layer address in the neighbor cache. When the Switch uses a router solicitation message to query for a router and receives a router advertisement message, it adds the router's information to the neighbor cache, prefix list and destination cache. The Switch creates an entry in the default router list cache if the router can be used as a default router.

When the Switch needs to send a packet, it first consults the destination cache to determine the next hop. If there is no matching entry in the destination cache, the Switch uses the prefix list to

determine whether the destination address is on-link and can be reached directly without passing through a router. If the address is onlink, the address is considered as the next hop. Otherwise, the Switch determines the next-hop from the default router list or routing table. Once the next hop IP address is known, the Switch looks into the neighbor cache to get the link-layer address and sends the packet when the neighbor is reachable. If the Switch cannot find an entry in the neighbor cache or the state for the neighbor is not reachable, it starts the address resolution process. This helps reduce the number of IPv6 solicitation and advertisement messages.

Multicast Listener Discovery

The Multicast Listener Discovery (MLD) protocol (defined in RFC 2710) is derived from IPv4's Internet Group Management Protocol version 2 (IGMPv2). MLD uses ICMPv6 message types, rather than IGMP message types. MLDv1 is equivalent to IGMPv2 and MLDv2 is equivalent to IGMPv3.

MLD allows an IPv6 switch or router to discover the presence of MLD listeners who wish to receive multicast packets and the IP addresses of multicast groups the hosts want to join on its network.

MLD snooping and MLD proxy are analogous to IGMP snooping and IGMP proxy in IPv4.

MLD filtering controls which multicast groups a port can join.

MLD Messages

A multicast router or switch periodically sends general queries to MLD hosts to update the multicast forwarding table. When an MLD host wants to join a multicast group, it sends an MLD Report message for that address.

An MLD Done message is equivalent to an IGMP Leave message. When an MLD host wants to leave a multicast group, it can send a Done message to the router or switch. The router or switch then sends a group-specific query to the port on which the Done message is received to determine if other devices connected to this port should remain in the group.

Example - Enabling IPv6 on Windows XP/2003/Vista

By default, Windows XP and Windows 2003 support IPv6. This example shows you how to use the `ipv6 install` command on Windows XP/2003 to enable IPv6. This also displays how to use the `ipconfig` command to see auto-generated IP addresses.

```
C:\>ipv6 install
Installing...
Succeeded.

C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . :
    IP Address. . . . . : 10.1.1.46
    Subnet Mask . . . . . : 255.255.255.0
    IP Address. . . . . : fe80::2d0:59ff:feb8:103c%4
    Default Gateway . . . . . : 10.1.1.254
```


IPv6 is installed and enabled by default in Windows Vista. Use the `ipconfig` command to check your automatic configured IPv6 address as well. You should see at least one IPv6 address available for the interface on your computer.

Example - Enabling DHCPv6 on Windows XP


Windows XP does not support DHCPv6. If your network uses DHCPv6 for IP address assignment, you have to additionally install a DHCPv6 client software on your Windows XP. (Note: If you use static IP addresses or Router Advertisement for IPv6 address assignment in your network, ignore this section.)

This example uses Dibbler as the DHCPv6 client. To enable DHCPv6 client on your computer:

- 1 Install Dibbler and select the DHCPv6 client option on your computer.
- 2 After the installation is complete, select **Start > All Programs > Dibbler-DHCPv6 > Client Install as service**.
- 3 Select **Start > Control Panel > Administrative Tools > Services**.
- 4 Double click **Dibbler - a DHCPv6 client**.

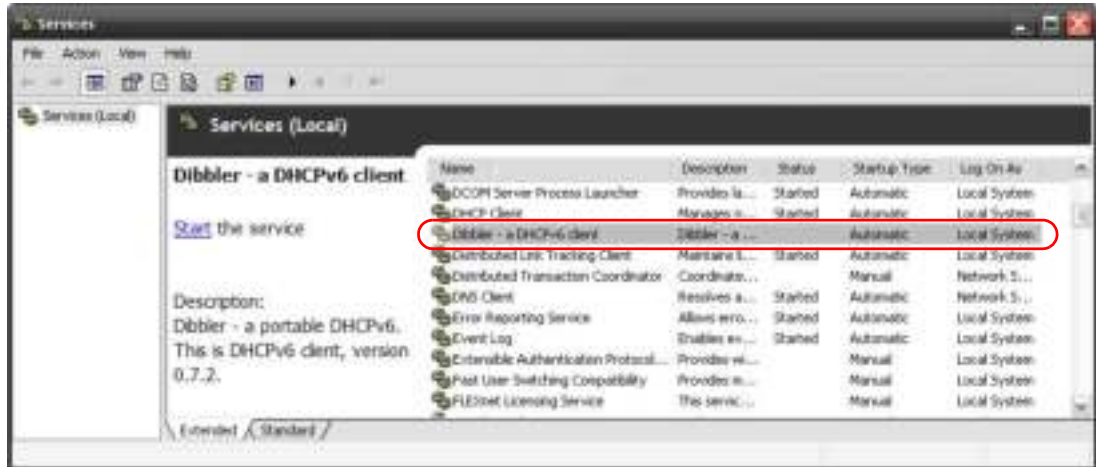

- Click **Start** and then **OK**.

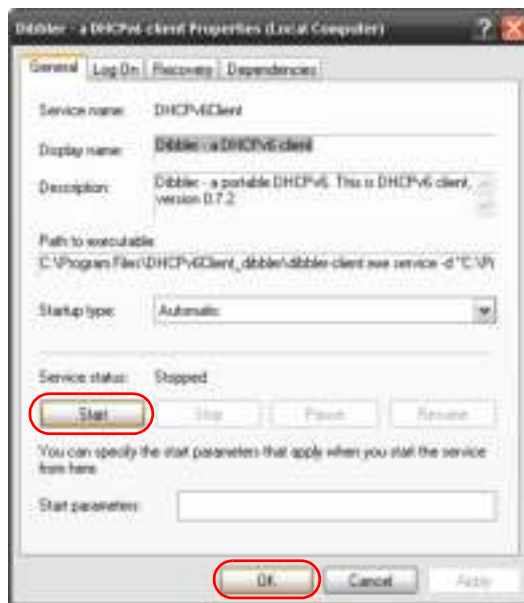


- Now your computer can obtain an IPv6 address from a DHCPv6 server.

Example - Enabling IPv6 on Windows 7

Windows 7 supports IPv6 by default. DHCPv6 is also enabled when you enable IPv6 on a Windows 7 computer.

To enable IPv6 in Windows 7:

- Select **Control Panel > Network and Sharing Center > Local Area Connection**.
- Select the **Internet Protocol Version 6 (TCP/IPv6)** checkbox to enable it.
- Click **OK** to save the change.

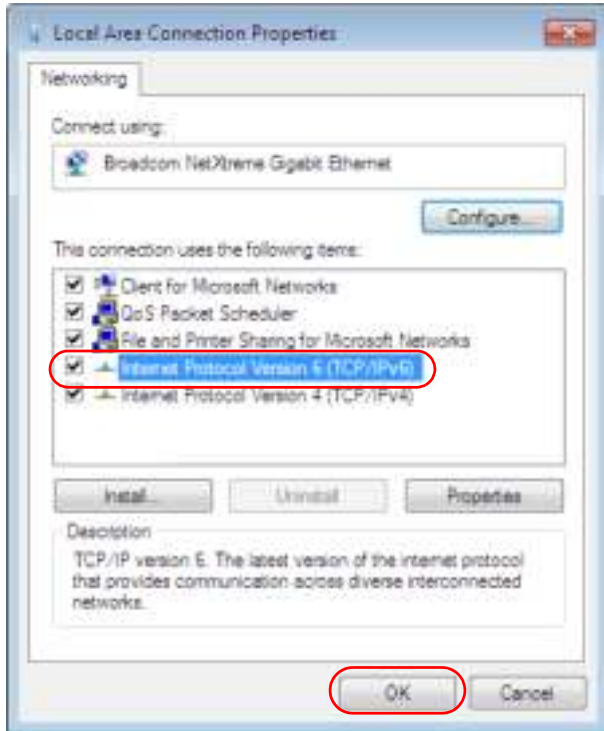

- 4 Click **Close** to exit the **Local Area Connection Status** screen.
- 5 Select **Start > All Programs > Accessories > Command Prompt**.
- 6 Use the `ipconfig` command to check your dynamic IPv6 address. This example shows a global address (2001:b021:2d::1000) obtained from a DHCP server.

```
C:\>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IPv6 Address. . . . . : 2001:b021:2d::1000
    Link-local IPv6 Address . . . . . : fe80::25d8:dcab:c80a:5189%11
    IPv4 Address. . . . . : 172.16.100.61
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : fe80::213:49ff:feaa:7125%11
                                172.16.100.254
```

Customer Support

In the event of problems that cannot be solved by using this manual, you should contact your vendor. If you cannot contact your vendor, then contact a ZyXEL office for the region in which you bought the device.

See <http://www.zyxel.com/homepage.shtml> and also

http://www.zyxel.com/about_zyxel/zyxel_worldwide.shtml for the latest information.

Please have the following information ready when you contact an office.

Required Information

- Product model and serial number.
- Warranty Information.
- Date that you received your device.
- Brief description of the problem and the steps you took to solve it.

Corporate Headquarters (Worldwide)

Taiwan

- ZyXEL Communications Corporation
- <http://www.zyxel.com>

Asia

China

- ZyXEL Communications (Shanghai) Corp.
- ZyXEL Communications (Beijing) Corp.
- ZyXEL Communications (Tianjin) Corp.
- <http://www.zyxel.cn>

India

- ZyXEL Technology India Pvt Ltd
- <http://www.zyxel.in>

Kazakhstan

- ZyXEL Kazakhstan

- <http://www.zyxel.kz>

Korea

- ZyXEL Korea Corp.
- <http://www.zyxel.kr>

Malaysia

- ZyXEL Malaysia Sdn Bhd.
- <http://www.zyxel.com.my>

Pakistan

- ZyXEL Pakistan (Pvt.) Ltd.
- <http://www.zyxel.com.pk>

Philippines

- ZyXEL Philippines
- <http://www.zyxel.com.ph>

Singapore

- ZyXEL Singapore Pte Ltd.
- <http://www.zyxel.com.sg>

Taiwan

- ZyXEL Communications Corporation
- <http://www.zyxel.com/tw/zh/>

Thailand

- ZyXEL Thailand Co., Ltd
- <http://www.zyxel.co.th>

Vietnam

- ZyXEL Communications Corporation-Vietnam Office
- <http://www.zyxel.com/vn/vi>

Europe

Austria

- ZyXEL Deutschland GmbH
- <http://www.zyxel.de>

Belarus

- ZyXEL BY
- <http://www.zyxel.by>

Belgium

- ZyXEL Communications B.V.
- <http://www.zyxel.com/be/nl/>
- <http://www.zyxel.com/be/fr/>

Bulgaria

- ZyXEL България
- <http://www.zyxel.com/bg/bg/>

Czech Republic

- ZyXEL Communications Czech s.r.o
- <http://www.zyxel.cz>

Denmark

- ZyXEL Communications A/S
- <http://www.zyxel.dk>

Estonia

- ZyXEL Estonia
- <http://www.zyxel.com/ee/et/>

Finland

- ZyXEL Communications
- <http://www.zyxel.fi>

France

- ZyXEL France
- <http://www.zyxel.fr>

Germany

- ZyXEL Deutschland GmbH
- <http://www.zyxel.de>

Hungary

- ZyXEL Hungary & SEE
- <http://www.zyxel.hu>

Italy

- ZyXEL Communications Italy
- <http://www.zyxel.it/>

Latvia

- ZyXEL Latvia
- <http://www.zyxel.com/lv/lv/homepage.shtml>

Lithuania

- ZyXEL Lithuania
- <http://www.zyxel.com/lt/lt/homepage.shtml>

Netherlands

- ZyXEL Benelux
- <http://www.zyxel.nl>

Norway

- ZyXEL Communications
- <http://www.zyxel.no>

Poland

- ZyXEL Communications Poland
- <http://www.zyxel.pl>

Romania

- ZyXEL Romania
- <http://www.zyxel.com/ro/ro>

Russia

- ZyXEL Russia
- <http://www.zyxel.ru>

Slovakia

- ZyXEL Communications Czech s.r.o. organizacna zlozka
- <http://www.zyxel.sk>

Spain

- ZyXEL Communications ES Ltd
- <http://www.zyxel.es>

Sweden

- ZyXEL Communications

- <http://www.zyxel.se>

Switzerland

- Studerus AG
- <http://www.zyxel.ch/>

Turkey

- ZyXEL Turkey A.S.
- <http://www.zyxel.com.tr>

UK

- ZyXEL Communications UK Ltd.
- <http://www.zyxel.co.uk>

Ukraine

- ZyXEL Ukraine
- <http://www.ua.zyxel.com>

Latin America

Argentina

- ZyXEL Communication Corporation
- <http://www.zyxel.com/ec/es/>

Brazil

- ZyXEL Communications Brasil Ltda.
- <https://www.zyxel.com/br/pt/>

Ecuador

- ZyXEL Communication Corporation
- <http://www.zyxel.com/ec/es/>

Middle East

Israel

- ZyXEL Communication Corporation
- <http://il.zyxel.com/homepage.shtml>

Middle East

- ZyXEL Communication Corporation

- <http://www.zyxel.com/me/en/>

North America

USA

- ZyXEL Communications, Inc. - North America Headquarters
- <http://www.zyxel.com/us/en/>

Oceania

Australia

- ZyXEL Communications Corporation
- <http://www.zyxel.com/au/en/>

Africa

South Africa

- Nology (Pty) Ltd.
- <http://www.zyxel.co.za>

Legal Information

Copyright

Copyright © 2015 by ZyXEL Communications Corporation.

The contents of this publication may not be reproduced in any part or as a whole, transcribed, stored in a retrieval system, translated into any language, or transmitted in any form or by any means, electronic, mechanical, magnetic, optical, chemical, photocopying, manual, or otherwise, without the prior written permission of ZyXEL Communications Corporation.

Published by ZyXEL Communications Corporation. All rights reserved.

Disclaimer

ZyXEL does not assume any liability arising out of the application or use of any products, or software described herein. Neither does it convey any license under its patent rights nor the patent rights of others. ZyXEL further reserves the right to make changes in any products described herein without notice. This publication is subject to change without notice.

Regulatory Notice and Statement

United States of America



The following information applies if you use the product within USA area.

Federal Communications Commission (FCC) EMC Statement

- This device complies with Part 15 of FCC rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operations.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

Canada

The following information applies if you use the product within Canada area

Industry Canada ICES statement

CAN ICES-3 (A)/NMB-3(A)

European Union



The following information applies if you use the product within the European Union.

CE EMC statement

This is Class A Product. In domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

List of National Codes

| COUNTRY | ISO 3166 2 LETTER CODE | COUNTRY | ISO 3166 2 LETTER CODE |
|----------------|------------------------|----------------|------------------------|
| Austria | AT | Liechtenstein | LI |
| Belgium | BE | Lithuania | LT |
| Bulgaria | BG | Luxembourg | LU |
| Croatia | HR | Malta | MT |
| Cyprus | CY | Netherlands | NL |
| Czech Republic | CR | Norway | NO |
| Denmark | DK | Poland | PL |
| Estonia | EE | Portugal | PT |
| Finland | FI | Romania | RO |
| France | FR | Serbia | RS |
| Germany | DE | Slovakia | SK |
| Greece | GR | Slovenia | SI |
| Hungary | HU | Spain | ES |
| Iceland | IS | Sweden | SE |
| Ireland | IE | Switzerland | CH |
| Italy | IT | Turkey | TR |
| Latvia | LV | United Kingdom | GB |

Safety Warnings

- Do NOT use this product near water, for example, in a wet basement or near a swimming pool.
- Do NOT expose your device to dampness, dust or corrosive liquids.
- Do NOT store things on the device.
- Do NOT install, use, or service this device during a thunderstorm. There is a remote risk of electric shock from lightning.
- Connect ONLY suitable accessories to the device.
- Do NOT open the device or unit. Opening or removing covers can expose you to dangerous high voltage points or other risks. ONLY qualified service personnel should service or disassemble this device. Please contact your vendor for further information.
- Make sure to connect the cables to the correct ports.
- Place connecting cables carefully so that no one will step on them or stumble over them.
- Always disconnect all cables from this device before servicing or disassembling.
- Use ONLY an appropriate power adaptor or cord for your device. Connect it to the right supply voltage (for example, 110V AC in North America or 230V AC in Europe).
- DO NOT remove the plug and connect it to a power outlet by itself; always attach the plug to the power adaptor first before connecting it to a power outlet.
- Do NOT allow anything to rest on the power adaptor or cord and do NOT place the product where anyone can walk on the power adaptor or cord.
- Do NOT use the device if the power adaptor or cord is damaged as it might cause electrocution.
- If the power adaptor or cord is damaged, remove it from the device and the power source.
- Do NOT attempt to repair the power adaptor or cord. Contact your local vendor to order a new one.
- DO NOT use the device outside, and make sure all the connections are indoors. There is a remote risk of electric shock from lightning.
- CAUTION: RISK OF EXPLOSION IF BATTERY (on the motherboard) IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS. Dispose them at the applicable collection point for the recycling of electrical and electronic equipment. For detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the store where you purchased the product.
- Do not obstruct the device ventilation slots as insufficient airflow may harm your device.
- Use ONLY power wires of the appropriate wire gauge for your device. Connect it to a power supply of the correct voltage.
- Fuse Warning! Replace a fuse only with a fuse of the same type and rating.
- The POE (Power over Ethernet) devices that supply or receive power and their connected Ethernet cables must all be completely indoors.
- This equipment must be grounded. Never defeat the ground conductor or operate the equipment in the absence of a suitably installed ground conductor. Contact the appropriate electrical inspection authority or an electrician if you are uncertain that suitable grounding is available.
- When connecting or disconnecting power to hot-pluggable power supplies, if offered with your system, observe the following guidelines:
 - Install the power supply before connecting the power cable to the power supply.
 - Unplug the power cable before removing the power supply.
 - If the system has multiple sources of power, disconnect power from the system by unplugging all power cables from the power supply.
- The following warning statements apply, where the disconnect device is not incorporated in the equipment or where the plug on the power supply cord is intended to serve as the disconnect device,
 - For PERMANENTLY CONNECTED EQUIPMENT, a readily accessible disconnect device shall be incorporated external to the equipment;
 - For PLUGGABLE EQUIPMENT, the socket-outlet shall be installed near the equipment and shall be easily accessible.

Environment Statment

European Union - Disposal and Recycling Information

WEEE Directive

The symbol below means that according to local regulations your product and/or its battery shall be disposed of separately from domestic waste. If this product is end of life, take it to a recycling station designated by local authorities. At the time of disposal, the separate collection of your product and/or its battery will help save natural resources and ensure that the environment is sustainable development.

Die folgende Symbol bedeutet, dass Ihr Produkt und/oder seine Batterie gemäß den örtlichen Bestimmungen getrennt vom Hausmüll entsorgt werden muss. Wenden Sie sich an eine Recyclingstation, wenn dieses Produkt das Ende seiner Lebensdauer erreicht hat. Zum Zeitpunkt der Entsorgung wird die getrennte Sammlung von Produkt und/oder seiner Batterie dazu beitragen, natürliche Ressourcen zu sparen und die Umwelt und die menschliche Gesundheit zu schützen.

El símbolo de abajo indica que según las regulaciones locales, su producto y/o su batería deberán depositarse como basura separada de la doméstica. Cuando este producto alcance el final de su vida útil, llévelo a un punto limpio. Cuando llegue el momento de desechar el producto, la recogida por separado éste y/o su batería ayudará a salvar los recursos naturales y a proteger la salud humana y medioambiental.

Le symbole ci-dessous signifie que selon les réglementations locales votre produit et/ou sa batterie doivent être éliminés séparément des ordures ménagères. Lorsque ce produit atteint sa fin de vie, amenez-le à un centre de recyclage. Au moment de la mise au rebut, la collecte séparée de votre produit et/ou de sa batterie aidera à économiser les ressources naturelles et protéger l'environnement et la santé humaine.

Il simbolo sotto significa che secondo i regolamenti locali il vostro prodotto e/o batteria deve essere smaltito separatamente dai rifiuti domestici. Quando questo prodotto raggiunge la fine della vita di servizio portarlo a una stazione di riciclaggio. Al momento dello smaltimento, la raccolta separata del vostro prodotto e/o della sua batteria aiuta a risparmiare risorse naturali e a proteggere l'ambiente e la salute umana.

Symbolen innebär att enligt lokal lagstiftning ska produkten och/eller dess batteri kastas separat från hushållsavfallet. När den här produkten når slutet av sin livslängd ska du ta den till en återvinningsstation. Vid tiden för kasseringen bidrar du till en bättre miljö och mänsklig hälsa genom att göra dig av med den på ett återvinningsställe.



Environmental Product Declaration

| Български (Bulgarian) | Čeština (Czech) | Dansk (Danish) | Deutsch (German) |
|---|--|--|---|
| <p>Екологична декларация за продуктите</p> <p>RoHS Директива 2011/65/EU WEEE Директива 2012/19/EU PFW Директива 94/62/EEC REACH Регламент (CE) № 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Дата (dd/mm/yyyy): 01/10/2014</p>  | <p>Environmentální prohlášení o produktu</p> <p>RoHS Směrnice 2011/65/EU WEEE Směrnice 2012/19/EU PFW Směrnice 94/62/EEC REACH Nařízení (ES) č. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Miljøerklæring</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PFW Direktiv 94/62/EF REACH Forordning (EF) nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Dato (dd/mm/yyyy): 01/10/2014</p>  | <p>Produkt-Umweltdeklaration</p> <p>RoHS Richtlinie 2011/65/EU WEEE Richtlinie 2012/19/EU PFW Richtlinie 94/62/EG REACH VERORDNUNG (EG) Nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  |
| Eesti keel (Estonian) | English | Español (Spanish) | Français (French) |
| <p>Toote keskkonnateavitus</p> <p>RoHS Direktiiv 2011/65/EU WEEE Direktiiv 2012/19/EU PFW Direktiiv 94/62/EEC REACH MÄÄRUS (EÜ) nr 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Kuupäev (dd/mm/yyyy): 01/10/2014</p>  | <p>Environmental product declaration</p> <p>RoHS Directive 2011/65/EU WEEE Directive 2012/19/EU PFW Directive 94/62/EEC REACH Regulation (EC) No 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Date (dd/mm/yyyy): 01/10/2014</p>  | <p>Declaraciones Ambientales de Producto</p> <p>RoHS Directiva 2011/65/UE WEEE Directiva 2012/19/UE PFW Directiva 94/62/CE REACH REGLAMENTO (CE) nº 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Fecha (dd/mm/yyyy): 01/10/2014</p>  | <p>Produit environnemental de produit</p> <p>RoHS Directive 2011/65/UE WEEE Directive 2012/19/UE PFW Directive 94/62/CE REACH RÈGLEMENT (CE) N° 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Date (dd/mm/yyyy): 01/10/2014</p>  |
| Hrvatski (Croatian) | Italiano (Italian) | Latviešu valoda (Latvian) | Lietuvių kalba (Lithuanian) |
| <p>Deklaraciju o zbrinjavanju proizvoda</p> <p>RoHS Direktiva 2011/65/EU WEEE Direktiva 2012/19/EU PFW Direktiva 94/62/EEC REACH Uredba (EZ) br. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Dichiarazione ambientale di prodotto</p> <p>RoHS Direttiva 2011/65/UE WEEE Direttiva 2012/19/UE PFW Direttiva 94/62/CE REACH REGOLAMENTO (CE) N. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  | <p>Produkta vides ietekmējuma deklarācija</p> <p>RoHS Direktīva 2011/65/EU WEEE Direktīva 2012/19/EU PFW Direktīva 94/62/EEC REACH Regula (EĶ) Nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datums (dd/mm/yyyy): 01/10/2014</p>  | <p>Aplinkosaugimo gaminto deklaracija</p> <p>RoHS Direktyva 2011/65/UE WEEE Direktyva 2012/19/UE PFW Direktyva 94/62/EEC REACH REGLAMENTAS (ES) Nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  |
| Magyar (Hungarian) | Malti (Maltese) | Nederlands (Dutch) | Polski (Polish) |
| <p>Környezetvédelmi terméknyilatkozat</p> <p>RoHS 2011/65/EU irányelv WEEE 2012/19/EU irányelv PFW 94/62/EEC irányelv REACH 1907/2006/EK rendelet</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Dikjarazzjoni Ambientali dwar il-Prodott</p> <p>RoHS Direktiva 2011/65/UE WEEE Direktiva 2012/19/UE PFW Direktiva 94/62/CE REACH REGOLAMENTO (KE) NRU 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  | <p>Miljøproduktveklæring</p> <p>RoHS Rådning 2011/65/EU WEEE Rådning 2012/19/EU PFW Rådning 94/62/EF REACH Forordning (EØF) nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Deklaracja środowiskowa produktu</p> <p>RoHS Dyrektywa 2011/65/UE WEEE Dyrektywa 2012/19/UE PFW Dyrektywa 94/62/EEC REACH Rozporządzenie (WE) nr 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  |
| Português (Portuguese) | Română (Romanian) | Slovenčina (Slovak) | Slovenščina (Slovene) |
| <p>Declaração ambiental do produto</p> <p>RoHS Diretiva 2011/65/UE WEEE Diretiva 2012/19/UE PFW Diretiva 94/62/CE REACH Regulamento (CE) nº 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  | <p>Declarație de mediu privind produsele</p> <p>RoHS Directivă 2011/65/UE WEEE Directivă 2012/19/UE PFW Directivă 94/62/CE REACH REGULAMENTUL (CE) NR 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Data (dd/mm/yyyy): 01/10/2014</p>  | <p>Vyhlasenie o environmentálnom vplyve</p> <p>RoHS Smernica 2011/65/EU WEEE Smernica 2012/19/EU PFW Smernica 94/62/EEC REACH Nařízení (ES) č. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Okoljska deklaracija izdelka</p> <p>RoHS Direktiva 2011/65/EU WEEE Direktiva 2012/19/EU PFW Direktiva 94/62/EEC REACH Uredba (ES) št. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  |
| Suomi (Finnish) | Svenska (Swedish) | Ελληνικά (Greek) | Norsk (Norwegian) |
| <p>Standardin perustava ympäristövaatelu</p> <p>RoHS Direktiiv 2011/65/EU WEEE Direktiiv 2012/19/EU PFW Direktiiv 94/62/EEC REACH ASETUS (EY) N:o 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Päivämäärä (dd/mm/yyyy): 01/10/2014</p>  | <p>Miljöproduktdeklaration</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PFW Direktiv 94/62/EEC REACH Förordning (EG) nr 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Datum (dd/mm/yyyy): 01/10/2014</p>  | <p>Περιβαλλοντική Δήλωση προϊόντος</p> <p>RoHS Οδηγία 2011/65/ΕΕ WEEE Οδηγία 2012/19/ΕΕ PFW Οδηγία 94/62/ΕΕΚ REACH Κοινοτικό (ΕΚ) απόφ. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Ημερομηνία (dd/mm/yyyy): 01/10/2014</p>  | <p>Miljødeklarasjon</p> <p>RoHS Direktiv 2011/65/EU WEEE Direktiv 2012/19/EU PFW Direktiv 94/62/EF REACH Forordning (EF) nr. 1907/2006</p> <p>Име / Подпис: Richard Hsu / Quality Management Division Senior Manager Dato (dd/mm/yyyy): 01/10/2014</p>  |

台灣

以下訊息僅適用於產品銷售至台灣地區

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

第十二條 經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條 低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

安全警告

為了您的安全，請先閱讀以下警告及指示：

- 請勿將此產品接近水、火焰或放置在高溫的環境。
- 避免設備接觸
 - 任何液體 - 切勿讓設備接觸水、雨水、高濕度、污水腐蝕性的液體或其他水份。
 - 灰塵及污物 - 切勿接觸灰塵、污物、沙土、食物或其他不適合的材料。
- 雷雨天氣時，不要安裝、使用或維修此設備。有遭受電擊的風險。
- 切勿重摔或撞擊設備，並勿使用不正確的電源變壓器。
- 若接上不正確的電源變壓器會有爆炸的風險。
- 請勿隨意更換產品內的電池。
- 如果更換不正確之電池型式，會有爆炸的風險，請依製造商說明書處理使用過之電池。
- 請將廢電池丟棄在適當的電器或電子設備回收處。
- 請勿將設備解體。
- 請勿阻礙設備的散熱孔，空氣對流不足將會造成設備損害。
- 請插在正確的電壓供給插座（如：北美 / 台灣電壓 110V AC，歐洲是 230V AC）。
- 假若電源變壓器或電源變壓器的纜線損壞，請從插座拔除，若您還繼續插電使用，會有觸電死亡的風險。
- 請勿試圖修理電源變壓器或電源變壓器的纜線，若有毀損，請直接聯絡您購買的店家，購買一個新的電源變壓器。
- 請勿將此設備安裝於室外，此設備僅適合放置於室內。
- 請勿隨一般垃圾丟棄。
- 請參閱產品背貼上的設備額定功率。
- 請參考產品型錄或是彩盒上的作業溫度。
- 設備必須接地，接地導線不允許被破壞或沒有適當安裝接地導線，如果不確定接地方式是否符合要求可聯繫相應的電氣檢驗機構檢驗。
- 如果您提供的系統中有提供熱插拔電源，連接或斷開電源請遵循以下指導原則
 - 先連接電源線至設備連，再連接電源。
 - 先斷開電源再拔除連接至設備的電源線。
 - 如果系統有多個電源，需拔除所有連接至電源的電源線再關閉設備電源。
- 產品沒有斷電裝置或者採用電源線的插頭視為斷電裝置的一部分，以下警語將適用：
 - 對永久連接之設備，在設備外部須安裝可觸及之斷電裝置；
 - 對插接式之設備，插座必須接近安裝之地點而且是易於觸及的。

Viewing Certifications

Go to <http://www.zyxel.com> to view this product's documentation and certifications.

ZyXEL Limited Warranty

ZyXEL warrants to the original end user (purchaser) that this product is free from any defects in material or workmanship for a specific period (the Warranty Period) from the date of purchase. The Warranty Period varies by region. Check with your vendor and/or the authorized ZyXEL local distributor for details about the Warranty Period of this product. During the warranty period, and upon proof of purchase, should the product have indications of failure due to faulty workmanship and/or materials, ZyXEL will, at its discretion, repair or replace the defective products or components without charge for either parts or labor, and to whatever extent it shall deem necessary to restore the product or components to proper operating condition. Any replacement will consist of a new or re-manufactured functionally equivalent product of equal or higher value, and will be solely at the discretion of ZyXEL. This warranty shall not apply if the product has been modified, misused, tampered with, damaged by an act of God, or subjected to abnormal working conditions.

Note

Repair or replacement, as provided under this warranty, is the exclusive remedy of the purchaser. This warranty is in lieu of all other warranties, express or implied, including any implied warranty of merchantability or fitness for a particular use or purpose. ZyXEL shall in no event be held liable for indirect or consequential damages of any kind to the purchaser.

To obtain the services of this warranty, contact your vendor. You may also refer to the warranty policy for the region in which you bought the device at http://www.zyxel.com/web/support_warranty_info.php.

Registration

Register your product online to receive e-mail notices of firmware upgrades and information at www.zyxel.com for global products, or at www.us.zyxel.com for North American products.

Trademarks

ZyNOS (ZyXEL Network Operating System) and ZON (ZyXEL One Network) are registered trademarks of ZyXEL Communications, Inc. Other trademarks mentioned in this publication are used for identification purposes only and may be properties of their respective owners.

Open Source Licenses

This product contains in part some free software distributed under GPL license terms and/or GPL like licenses. Open source licenses are provided with the firmware package. You can download the latest firmware at www.zyxel.com. To obtain the source code covered under those Licenses, please contact support@zyxel.com.tw to get it.

Numbers

802.1P priority [72](#)

802.3az [340](#)

A

access control

 limitations [458](#)

 login account [471](#)

 remote management [480](#)

 service port [479](#)

 SNMP [459](#)

accounting

 setup [257](#)

address learning, MAC [112, 114](#)

Address Resolution Protocol (ARP) [441, 500, 504, 506](#)

administrator password [471](#)

age [150](#)

aggregator ID [177, 180](#)

aging time [64](#)

anti-arpscan [372](#)

 blocked hosts [374](#)

 host threshold [375](#)

 status [373](#)

 trusted hosts [374](#)

applications

 bridging [22](#)

 IEEE 802.1Q VLAN [23](#)

 switched workgroup [22](#)

ARP

 how it works [441, 500](#)

 table [500](#)

ARP (Address Resolution Protocol) [441, 500](#)

ARP inspection [265, 297](#)

 and MAC filter [297](#)

 configuring [298](#)

 syslog messages [298](#)

 trusted ports [298](#)

ARP scan [372](#)

authentication

 and RADIUS [254](#)

 setup [257](#)

authorization

 privilege levels [260](#)

 setup [257](#)

automatic VLAN registration [102](#)

B

back up, configuration file [451](#)

basic settings [56](#)

binding [265](#)

binding table [265](#)

 building [265](#)

BPDU [378](#)

BPDU (Bridge Protocol Data Units) [378](#)

BPDU guard [378](#)

 and Errdisable Recovery [378](#)

 port status [378](#)

BPDUs (Bridge Protocol Data Units) [133](#)

Bridge Protocol Data Units [378](#)

Bridge Protocol Data Units (BPDUs) [133](#)

C

CDP [310](#)

certifications

 viewing [537](#)

CFI (Canonical Format Indicator) [101](#)

changing the password [42](#)

Cisco Discovery Protocol, see CDP

CIST [136](#)

CIST (Common and Internal Spanning Tree) [134](#)

Class of Service (CoS) [404](#)

classifier [201, 205](#)

- and QoS [201](#)
- editing [206, 207](#)
- example [208](#)
- overview [201](#)
- setup [201, 205, 206, 207](#)
- viewing [206, 207](#)

cloning a port See port cloning

cluster management [489](#)

- and switch passwords [494](#)
- cluster manager [489, 494](#)
- cluster member [489, 494](#)
- cluster member firmware upgrade [492](#)
- network example [489](#)
- setup [493](#)
- specification [489](#)
- status [490](#)
- switch models [489](#)
- VID [494](#)
- web configurator [491](#)

cluster manager [489](#)

cluster member [489](#)

command interface [25](#)

Common and Internal Spanning Tree (CIST) [134](#)

Common and Internal Spanning Tree, See CIST [136](#)

configuration [398](#)

- change running config [452](#)

configuration file [44](#)

- backup [451](#)
- restore [44, 450](#)
- saving [452](#)

configuration, saving [43](#)

console port

- settings [33](#)

contact information [526](#)

copying port settings, See port cloning

copyright [533](#)

CPU management port [117](#)

CPU protection

- configuration [328](#)
- overview [325](#)

current date [62](#)

current time [62](#)

customer support [526](#)

D

daylight saving time [62](#)

default gateway [421](#)

default IP address [33](#)

DHCP [413](#)

- client IP pool [421](#)
- configuration options [413](#)
- modes [413](#)
- relay agent [413](#)
- relay example [423](#)
- server [413](#)
- setup [420](#)

DHCP (Dynamic Host Configuration Protocol) [413](#)

DHCP relay option 82 [296](#)

DHCP snooping [265, 295](#)

- configuring [297](#)
- DHCP relay option 82 [296](#)
- trusted ports [295](#)
- untrusted ports [295](#)

DHCP snooping database [296](#)

DHCP Unique Identifier [427](#)

DHCPv6

- DHCP Unique Identifier [427](#)

diagnostics [482](#)

- Ethernet port test [483](#)
- ping [483](#)

Differentiated Service (DiffServ) [404](#)

DiffServ [404](#)

- activate [406](#)
- and TRTCM [410](#)
- DS field [404](#)
- DSCP [404](#)
- DSCP-to-IEEE802.1p mapping [411](#)
- network example [404](#)
- PHB [404](#)

disclaimer [533](#)

documentation

- related [2](#)

double-tagged frames [219](#)

DS (Differentiated Services) [404](#)

DSCP

- DSCP-to-IEEE802.1p mapping [411](#)
- service level [404](#)
- what it does [404](#)

DSCP (DiffServ Code Point) [404](#)

DUID [427](#)
dynamic link aggregation [175](#)

E

EEE [340](#)
egress port [120](#)
Energy Efficient Ethernet [340](#)
error disable detect [326](#), [330](#)
error disable recovery
 configuration [331](#)
 overview [325](#)
Ethernet broadcast address [441](#), [500](#)
Ethernet OAM [381](#)
Ethernet port test [483](#)
Ethernet ports
 default settings [31](#)
external authentication server [254](#)

F

Fan Module [34](#)
fan speed [59](#), [60](#)
FCC interference statement [533](#)
file transfer using FTP
 command example [455](#)
filename convention, configuration
 configuration
 file names [455](#)
filtering [130](#)
 rules [130](#)
filtering database, MAC table [495](#)
firmware [58](#)
 upgrade [448](#), [492](#)
flow control [72](#)
 back pressure [72](#)
 IEEE802.3x [72](#)
forwarding
 delay [150](#)
frames
 tagged [111](#)
 untagged [111](#)
front panel [30](#)

FTP [25](#), [455](#)
 file transfer procedure [456](#)
 restrictions over WAN [457](#)

G

GARP [102](#)
GARP (Generic Attribute Registration Protocol) [102](#)
GARP terminology [102](#)
GARP timer [64](#), [102](#)
general setup [61](#)
getting help [45](#)
GMT (Greenwich Mean Time) [62](#)
Green Ethernet [340](#)
GVRP [102](#), [111](#)
 and port assignment [111](#)
GVRP (GARP VLAN Registration Protocol) [102](#)

H

hardware installation [26](#)
hardware monitor [58](#), [59](#), [60](#)
hardware overview [30](#)
hello time [149](#)
hops [150](#)
HTTPS [474](#)
 certificates [474](#)
 implementation [474](#)
 public keys, private keys [474](#)
HTTPS example [475](#)

I

IEEE 802.1p, priority [65](#)
IEEE 802.1x
 activate [187](#), [192](#), [256](#)
 reauthentication [189](#)
IEEE 802.1x, port authentication [185](#)
IGMP
 version [227](#)
IGMP (Internet Group Management Protocol) [227](#)

- IGMP filtering [227](#)
 - profile [235](#)
 - profiles [231, 237, 238, 241, 242](#)
 - IGMP leave timeout
 - fast [233](#)
 - normal [233](#)
 - IGMP snooping [228](#)
 - MVR [244](#)
 - IGMP throttling [233](#)
 - ingress port [120](#)
 - Installation
 - Rack-mounting [27](#)
 - installation
 - freestanding [26](#)
 - precautions [27](#)
 - Installing the Fan Module [34](#)
 - Internet Protocol version 6, see IPv6
 - introduction [21](#)
 - IP
 - interface [65, 66, 67, 431](#)
 - routing domain [65](#)
 - setup [65](#)
 - IP address [66, 67](#)
 - IP source guard [265](#)
 - ARP inspection [265, 297](#)
 - DHCP snooping [265, 295](#)
 - static bindings [265](#)
 - IP subnet mask [66, 67](#)
 - IP table [498](#)
 - how it works [498](#)
 - IPv4 static route
 - configuration [397](#)
 - IPv6 [24, 517](#)
 - addressing [517](#)
 - EUI-64 [519](#)
 - global address [518](#)
 - interface ID [519](#)
 - link-local address [517](#)
 - Neighbor Discovery Protocol [24, 517](#)
 - ping [24, 517](#)
 - prefix [427, 517](#)
 - prefix length [427, 517](#)
 - stateless autoconfiguration [519](#)
 - unspecified address [518](#)
 - IPv6 static route
 - configuration [398](#)
- ## L
- L2PT [307](#)
 - access port [308](#)
 - CDP [307](#)
 - configuration [308](#)
 - encapsulation [307](#)
 - LACP [307](#)
 - MAC address [307](#)
 - mode [308](#)
 - overview [307](#)
 - PAgP [307](#)
 - point to point [307](#)
 - STP [307](#)
 - tunnel port [308](#)
 - UDLD [307](#)
 - VTP [307](#)
 - LACP [175, 310](#)
 - system priority [182](#)
 - timeout [183](#)
 - Layer 2 protocol tunneling, see L2PT
 - LEDs [35](#)
 - limit MAC address learning [197](#)
 - Link Aggregate Control Protocol (LACP) [175](#)
 - link aggregation [175](#)
 - dynamic [175](#)
 - ID information [176](#)
 - setup [177, 180](#)
 - status [177](#)
 - traffic distribution algorithm [177](#)
 - traffic distribution type [180](#)
 - Link Layer Discovery Protocol (LLDP) [343, 344](#)
 - LLDP (Link Layer Discovery Protocol) [343](#)
 - LLDP-MED (Link Layer Discovery Protocol for Media Endpoint Devices) [344](#)
 - local port mirroring [162](#)
 - lockout [43](#)
 - login [37](#)
 - password [42](#)
 - login account
 - Administrator [471](#)
 - non-administrator [471](#)
 - login accounts [471](#)
 - configuring via web configurator [471](#)
 - multiple [471](#)
 - number of [471](#)
 - login password [472](#)

- loop guard [299](#)
 - how it works [300](#)
 - port shut down [300](#)
 - probe packet [300](#)
- loop guard, vs STP [299](#)

- M**

- MAC (Media Access Control) [58](#)
- MAC address [58](#), [441](#), [500](#)
 - maximum number per port [197](#), [198](#)
- MAC address learning [64](#), [112](#), [114](#), [124](#), [197](#)
 - specify limit [197](#)
- MAC authentication [186](#)
 - aging time [193](#)
- MAC filter
 - and ARP inspection [297](#)
- MAC freeze [197](#)
- MAC table [495](#)
 - how it works [495](#)
 - viewing [496](#)
- MAC-based VLAN [122](#)
- maintenance
 - configuration backup [451](#)
 - firmware [448](#)
 - restoring configuration [450](#)
- maintenance [447](#)
 - current configuration [447](#)
 - main screen [447](#)
- Management Information Base (MIB) [460](#)
- management port [33](#), [120](#)
 - default IP address [33](#)
- managing the device
 - good habits [25](#)
 - using FTP. See FTP.
 - using SNMP. See SNMP.
 - using Telnet. See command interface.
 - using the command interface. See command interface.
 - using the web configurator. See web configurator.
- man-in-the-middle attacks [297](#)
- max
 - age [150](#)
 - hops [150](#)
- maximum transmission unit [503](#)

- Memory Buffer [453](#)
- MGMT port [33](#)
- MIB
 - and SNMP [460](#)
 - supported MIBs [460](#)
- MIB (Management Information Base) [460](#)
- mini GBIC ports [32](#)
 - connection speed [32](#)
 - connector type [32](#)
 - transceiver installation [32](#)
 - transceiver removal [33](#)
- mirroring ports [162](#)
- monitor port [165](#), [166](#)
- MSA (MultiSource Agreement) [32](#)
- MST Instance, See MSTI [136](#)
- MST region [135](#)
- MSTI [136](#)
 - MST ID [136](#)
- MSTI (Multiple Spanning Tree Instance) [134](#)
- MSTP [132](#), [134](#)
 - bridge ID [155](#)
 - configuration [147](#), [151](#)
 - configuration digest [155](#)
 - forwarding delay [150](#)
 - Hello Time [155](#)
 - hello time [149](#)
 - Max Age [155](#)
 - max age [150](#)
 - max hops [150](#)
 - MST region [135](#)
 - network example [134](#)
 - path cost [151](#)
 - port priority [151](#)
 - revision level [150](#)
- MSTP (Multiple Spanning Tree Protocol) [132](#)
- MTU [503](#)
- MTU (Multi-Tenant Unit) [63](#)
- multicast [227](#)
 - 802.1 priority [231](#), [237](#), [238](#), [241](#), [242](#)
 - and IGMP [227](#)
 - IGMP throttling [233](#)
 - IP addresses [227](#)
 - overview [227](#)
 - setup [230](#), [231](#), [237](#), [238](#), [239](#), [241](#), [242](#)
- multicast group [235](#)
- multicast VLAN [248](#)
- Multiple Spanning Tree Instance, See MSTI [134](#)

Multiple Spanning Tree Protocol [133](#)
 Multiple Spanning Tree Protocol, See MSTP. [132](#)
 Multiple STP [133](#)
 Multiple STP, see MSTP [134](#)
 MVR [244](#)
 configuration [246](#)
 group configuration [248](#)
 network example [244](#)
 MVR (Multicast VLAN Registration) [244](#)

N

network management system (NMS) [459](#)
 NTP (RFC-1305) [62](#)

O

OAM [381](#)
 details [383](#)
 discovery [381](#)
 port configuration [381](#)
 remote loopback [381](#)
 remote-loopback [389](#)
 Operations, Administration and Maintenance [381](#)
 other documentation [2](#)

P

PAGP [310](#)
 password [42](#)
 administrator [471](#)
 Path MTU [503](#)
 Path MTU Discovery [503](#)
 PHB (Per-Hop Behavior) [404](#)
 ping, test connection [483](#)
 policy [211, 402](#)
 and classifier [211, 402](#)
 and DiffServ [210](#)
 configuration [211, 402](#)
 example [213](#)
 overview [210](#)
 rules [210](#)

policy routing
 benefits [400](#)
 cost savings [400](#)
 load sharing [400](#)
 overview [400](#)
 policy-based routing [400](#)
 Port Aggregation Protocol, see PAGP
 port authentication [185](#)
 and RADIUS [254](#)
 IEEE802.1x [187, 192, 256](#)
 MAC authentication [186](#)
 port based VLAN type [64](#)
 port cloning [504, 506](#)
 advanced settings [504, 506](#)
 basic settings [504, 506](#)
 port details [52](#)
 port isolation [120](#)
 port mirroring [162, 166](#)
 direction [166, 170](#)
 egress [166, 170](#)
 ingress [166, 170](#)
 port redundancy [175](#)
 port security [195, 199](#)
 address learning [197](#)
 limit MAC address learning [197](#)
 MAC address learning [195, 199](#)
 overview [195, 199](#)
 setup [195, 199, 301, 308](#)
 port setup [69](#)
 port status [51](#)
 port details [52](#)
 port VLAN trunking [103](#)
 port-based VLAN [117](#)
 all connected [120](#)
 port isolation [120](#)
 settings wizard [120](#)
 ports
 “standby” [175](#)
 diagnostics [483](#)
 mirroring [162](#)
 speed/duplex [72](#)
 power
 voltage [59, 61](#)
 power module
 disconnecting [34](#)
 power status [59, 61](#)
 PPPoE IA

- trusted ports [318](#)
- untrusted ports [318](#)
- priority level [65](#)
- priority, queue assignment [65](#)
- product registration [537](#)
- protocol based VLAN [114](#)
 - and IEEE 802.1Q tagging [114](#)
 - example [116](#)
 - hexadecimal notation for protocols [113, 115](#)
 - isolate traffic [114](#)
 - priority [113, 115](#)
- PVID [101, 111](#)
- PVID (Priority Frame) [101](#)

Q

- QoS
 - and classifier [201](#)
- queue weight [216](#)
- queuing [215](#)
 - SPQ [216](#)
 - WFQ [216](#)
 - WRR [216](#)
- queuing method [215, 217](#)

R

- RADIUS [254](#)
 - advantages [254](#)
 - and authentication [254](#)
 - Network example [253](#)
 - server [254](#)
 - settings [254](#)
 - setup [254](#)
- Rapid Spanning Tree Protocol, See RSTP. [132](#)
- reboot
 - load configuration [452](#)
- reboot system [452](#)
- reflector port [162](#)
- registration
 - product [537](#)
- related documentation [2](#)
- remote management [480](#)
 - service [481](#)

- trusted computers [481](#)
- remote port mirroring [162, 167](#)
- Removing the Fan Module [34](#)
- resetting [44, 451, 452, 453](#)
 - to factory default settings [451, 452, 453](#)
- restoring configuration [44, 450](#)
- RFC 3164 [486](#)
- RMirror [162](#)
 - monitor port [168](#)
 - reflector port [168](#)
 - source [168](#)
- RMirror, see also remote port mirroring [167](#)
- Round Robin Scheduling [216](#)
- routing domain [65, 431](#)
- routing table [502](#)
- RSTP [132](#)
- rubber feet [26](#)

S

- save configuration [43, 452](#)
- Secure Shell See SSH
- service access control [479](#)
 - service port [480](#)
- sFlow [312](#)
 - collector [314](#)
 - configuration [312](#)
 - datagram [312](#)
 - overview [312](#)
 - poll interval [314](#)
 - sample rate [314](#)
 - UDP port [315](#)
- sFlow agent [312](#)
- sFlow collector [312](#)
- Simple Network Management Protocol, see SNMP
- SNMP [25, 459](#)
 - agent [459](#)
 - and MIB [460](#)
 - authentication [470](#)
 - communities [466](#)
 - management model [459](#)
 - manager [459](#)
 - MIB [460](#)
 - network components [459](#)
 - object variables [460](#)

- protocol operations [460](#)
 - security [470](#)
 - setup [465](#)
 - traps [466](#)
 - users [469](#)
 - version 3 and security [460](#)
 - versions supported [459](#)
 - SNMP traps [461](#)
 - supported [461](#), [463](#), [465](#)
 - source-based routing [400](#)
 - Spanning Tree Protocol, See STP. [132](#)
 - SPQ (Strict Priority Queuing) [216](#)
 - SSH
 - encryption methods [474](#)
 - how it works [473](#)
 - implementation [474](#)
 - SSH (Secure Shell) [472](#)
 - SSL (Secure Socket Layer) [474](#)
 - standby ports [175](#)
 - static bindings [265](#)
 - static MAC address [124](#)
 - static MAC forwarding [112](#), [114](#), [124](#)
 - static multicast address [127](#)
 - static multicast forwarding [127](#)
 - static route
 - overview [396](#)
 - static routes [398](#)
 - static trunking example [183](#)
 - Static VLAN [107](#)
 - static VLAN
 - control [109](#)
 - tagging [109](#)
 - status
 - LED [35](#)
 - link aggregation [177](#)
 - port [51](#)
 - power [59](#), [61](#)
 - STP [141](#), [145](#), [154](#)
 - VLAN [104](#)
 - VRRP [431](#)
 - STP [132](#), [310](#)
 - bridge ID [141](#), [146](#)
 - bridge priority [139](#), [144](#)
 - configuration [138](#), [142](#), [147](#)
 - designated bridge [133](#)
 - forwarding delay [140](#), [144](#)
 - Hello BPDUs [133](#)
 - Hello Time [139](#), [141](#), [144](#), [146](#)
 - how it works [133](#)
 - Max Age [140](#), [141](#), [144](#), [146](#)
 - path cost [132](#), [140](#), [145](#)
 - port priority [140](#), [145](#)
 - port state [133](#)
 - root port [133](#)
 - status [141](#), [145](#), [154](#)
 - terminology [132](#)
 - vs loop guard [299](#)
 - subnet based VLANs [111](#)
 - and DHCP VLAN [113](#)
 - and priority [112](#)
 - configuration [112](#)
 - switch lockout [43](#)
 - switch reset [44](#)
 - switch setup [63](#)
 - syslog [298](#), [486](#)
 - protocol [486](#)
 - settings [486](#)
 - setup [486](#)
 - severity levels [486](#)
 - system information [56](#)
 - system reboot [452](#)
- ## T
- TACACS+ [254](#)
 - setup [256](#)
 - TACACS+ (Terminal Access Controller Access-Control System Plus) [253](#)
 - tagged VLAN [101](#)
 - Tech-Support [453](#)
 - temperature indicator [58](#), [59](#), [60](#)
 - time
 - current [62](#)
 - time zone [62](#)
 - Time (RFC-868) [62](#)
 - time server [62](#)
 - time service protocol [62](#)
 - format [62](#)
 - trademarks [537](#)
 - transceiver
 - installation [32](#)
 - removal [33](#)

- traps
 - destination [466](#)
 - TRTCM
 - and bandwidth control [408](#)
 - and DiffServ [410](#)
 - color-aware mode [406](#)
 - color-blind mode [406](#)
 - setup [408](#)
 - trunk group [175](#)
 - trunking [175](#)
 - example [183](#)
 - trusted ports
 - ARP inspection [298](#)
 - DHCP snooping [295](#)
 - PPPoE IA [318](#)
 - Tunnel Protocol Attribute, and RADIUS [261](#)
 - Two Rate Three Color Marker (TRTCM) [405](#)
 - Two Rate Three Color Marker, see TRTCM [405](#)
 - Type of Service (ToS) [404](#)
- ## U
- UDLD [310](#)
 - UniDirectional Link Detection, see UDLD
 - untrusted ports
 - ARP inspection [298](#)
 - DHCP snooping [295](#)
 - PPPoE IA [318](#)
 - user profiles [253](#)
- ## V
- Vendor Specific Attribute See VSA
 - ventilation holes [26](#)
 - VID [69](#), [101](#), [104](#), [105](#), [221](#)
 - number of possible VIDs [101](#)
 - priority frame [101](#)
 - VID (VLAN Identifier) [101](#)
 - Virtual Router
 - status [431](#)
 - Virtual Router (VR) [430](#)
 - Virtual Router Redundancy Protocol (VRRP) [430](#)
 - VLAN [63](#), [101](#)
 - acceptable frame type [111](#)
 - automatic registration [102](#)
 - ID [101](#)
 - ingress filtering [111](#)
 - introduction [63](#)
 - number of VLANs [104](#)
 - port number [105](#)
 - port settings [109](#)
 - port-based VLAN [117](#)
 - port-based, all connected [120](#)
 - port-based, isolation [120](#)
 - port-based, wizard [120](#)
 - static VLAN [107](#)
 - status [104](#), [105](#)
 - tagged [101](#)
 - trunking [103](#), [111](#)
 - type [64](#), [103](#)
 - VLAN (Virtual Local Area Network) [63](#)
 - VLAN mapping [303](#)
 - activating [303](#)
 - configuration [305](#)
 - example [303](#)
 - priority level [303](#)
 - tagged [303](#)
 - traffic flow [303](#)
 - untagged [303](#)
 - VLAN ID [303](#)
 - VLAN number [66](#), [67](#), [69](#)
 - VLAN stacking [219](#), [221](#)
 - configuration [221](#)
 - example [219](#)
 - frame format [221](#)
 - port roles [220](#), [223](#)
 - port-based Q-in-Q [223](#)
 - priority [221](#)
 - selective Q-in-Q [225](#)
 - VLAN Trunking Protocol, see VTP
 - VLAN, protocol based, See protocol based VLAN
 - VLAN, subnet based, See subnet based VLANs [111](#)
 - VRID (Virtual Router ID) [431](#)
 - VRRP [430](#)
 - advertisement interval [433](#)
 - authentication [432](#)
 - backup router [430](#)
 - configuration example [435](#)
 - Hello message [433](#)
 - how it works [430](#)
 - interface setup [431](#)

- master router [430](#)
- network example [430, 435](#)
- parameters [433](#)
- preempt mode [433, 434](#)
- priority [433, 434](#)
- status [431](#)
- uplink gateway [434](#)
- uplink status [431](#)
- Virtual Router [430](#)
- Virtual Router ID [434](#)
- VRID [431](#)

VSA [260](#)

VTP [310](#)

W

- warranty [537](#)
 - note [537](#)
- web configurator [25, 37](#)
 - getting help [45](#)
 - layout [38](#)
 - login [37](#)
 - logout [45](#)
 - navigation panel [39](#)
- weight, queuing [216](#)
- Weighted Round Robin Scheduling (WRR) [216](#)
- WFQ (Weighted Fair Queuing) [216](#)
- WRR (Weighted Round Robin Scheduling) [216](#)

Z

- ZON Neighbor Management [49](#)
- ZON Utility [49](#)
- ZULD [390](#)
 - example [390](#)
 - probe time [393](#)
 - status [391](#)
- ZULD (ZyXEL Unidirectional Link Detection) [390](#)
- ZyNOS (ZyXEL Network Operating System) [455](#)
- ZyXEL Unidirectional Link Detection [390](#)
- ZyXEL Unidirectional Link Detection (ZULD) [390](#)