

# WalkingPad User Manual

For security purpose, please read the User Manual carefully.



Manufacturer: Beijing Kingsmith Technology Co., Ltd.  
Address: Floor 4, Building 25, Area 18, ABP Park, Fengtai, Beijing, China.  
MADE IN CHINA



Model No. : *WPA1F Pro*

## IMPORTANT SAFETY INSTRUCTIONS

---



1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
2. Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

WARNING: keep young children away from this machine at all times. Contact with the moving surface may result in severe friction burns.

 
## Content

---

|                                    |    |
|------------------------------------|----|
| 1. Product and Accessories         | 02 |
| 2. Function schematic diagram      | 03 |
| 3. Guide for initial operation     | 07 |
| 4. Learn to use WalkingPad         | 09 |
| 5. Safety Notice                   | 13 |
| 6. Maintenance and Service         | 16 |
| 7. Trademark and Legal Declaration | 17 |
| 8. Replacement and Disposal        | 18 |

## Welcome to use


Thank you for choosing the WalkingPad Walking device, hereinafter referred to as a walkingpad, which possess various advantages including exquisite, foldable, innovative integral design. From now on, enjoy the quality life of walking at home.

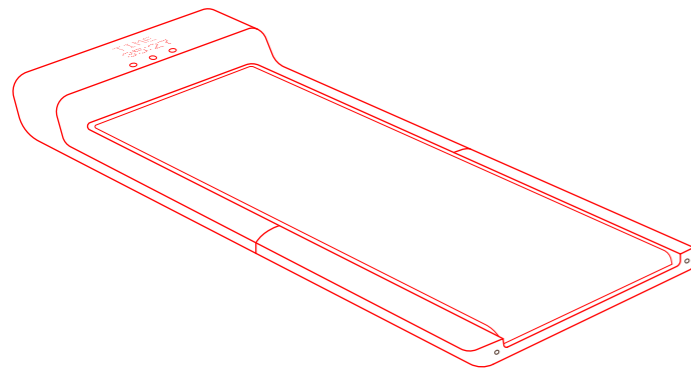

| Performance & indicators | Detailed parameters                       |
|--------------------------|-------------------------------------------|
| Expansion dimensions     | 1432 x 547 x 129 mm<br>56.5" x 21.5" x 5" |
| Folding dimensions       | 822 x 547 x 129 mm<br>32.5" x 21.5" x 5"  |
| Walking Area             | 1200 x 415 mm<br>47" x 16.5"              |
| Gross weight             | 30 kg / 66.0 lbs                          |
| Net weight               | 27 kg / 59.4 lbs                          |
| Maximum load             | 100 kg / 220 lbs                          |
| Applicable age           | 14 ~ 60 years old                         |
| Applicable height        | Unlimited                                 |
| Minimum speed            | 0.5 km/hr 0.5 mi/hr                       |
| Maximum speed            | 6 km/hr 3.75 mi/hr                        |
| Power Input              | 918 W                                     |
| Frequency                | 50 Hz                                     |
| Rated voltage            | 220 V ~                                   |
| Sport mode               | Standby mode/ Manual mode/ Automatic mode |


## 01 Product and Accessories

 Please carefully check whether the contents of the package are complete and intact. If there is any missing or damaged, please contact the seller.

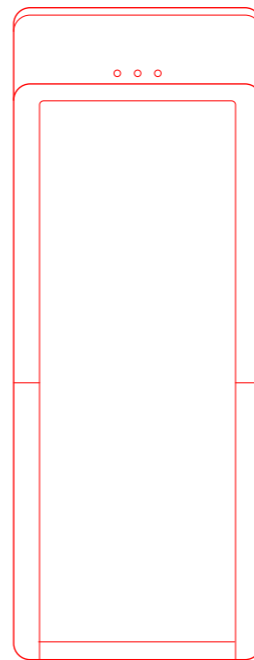

Main Product

### Parts

 

Power Cable



Remote Controller



Lanyard




Wrench



Silicone Oil


### Other accessories

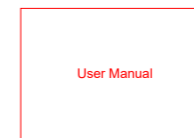 

User Manual

## 02 Function schematic diagram
 
### 1. Product main body

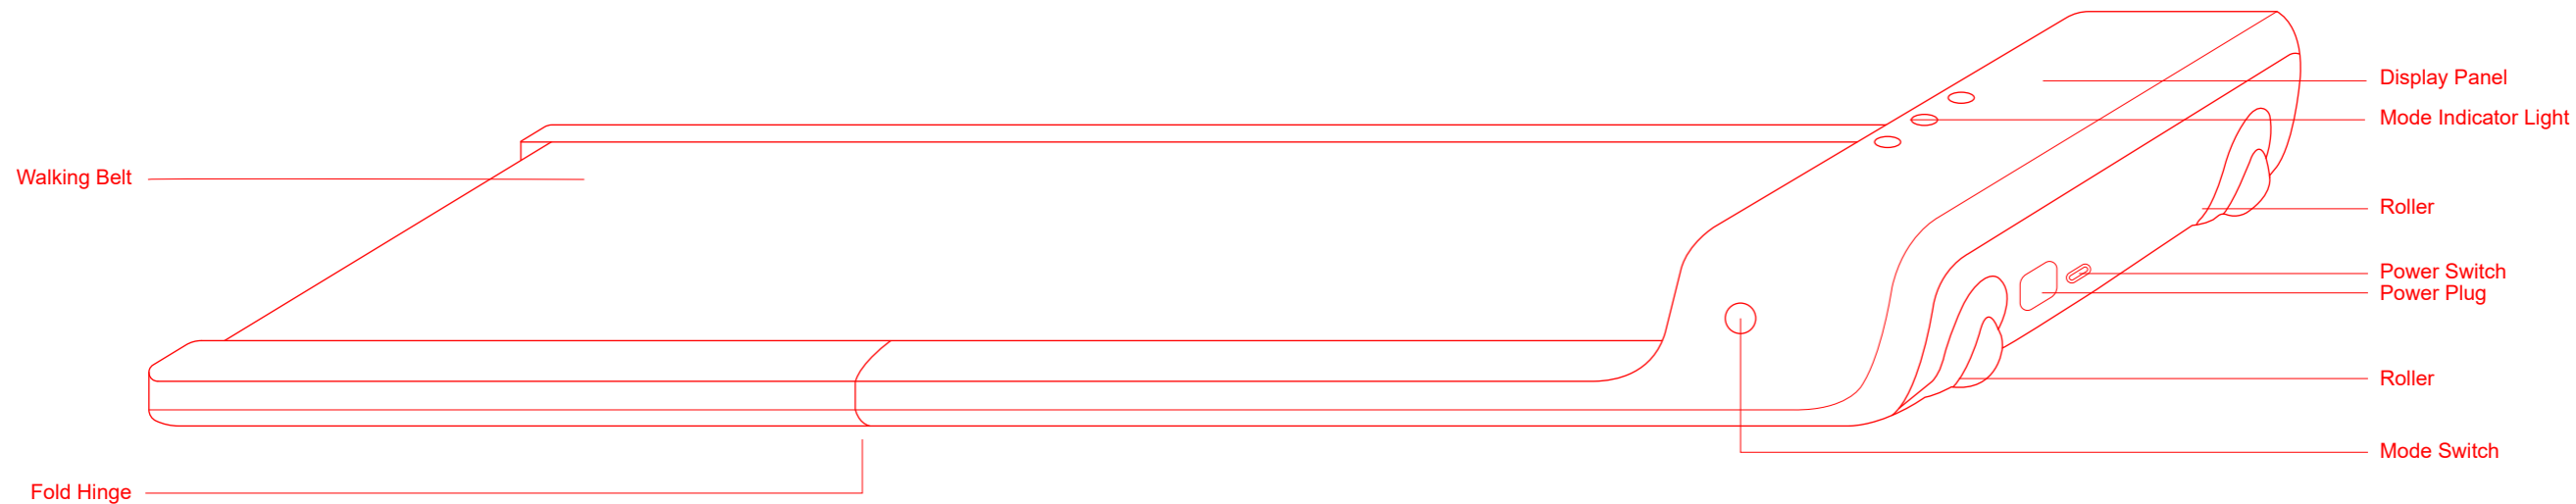

## 02 Function schematic diagram

### 2. Introduction of the function of the indicator panel

TIME  
5:27

Display Time

SPD  
3.5

Display Speed

KN  
0.34

Display Distance

STEP  
34

Display Steps

CAL  
23

Display Calorie



Standby Mode



Manual Mode



Automatic Mode

 


Wi-Fi Warning Light




Fault Warning Light


### 3. Walkingpad remote control

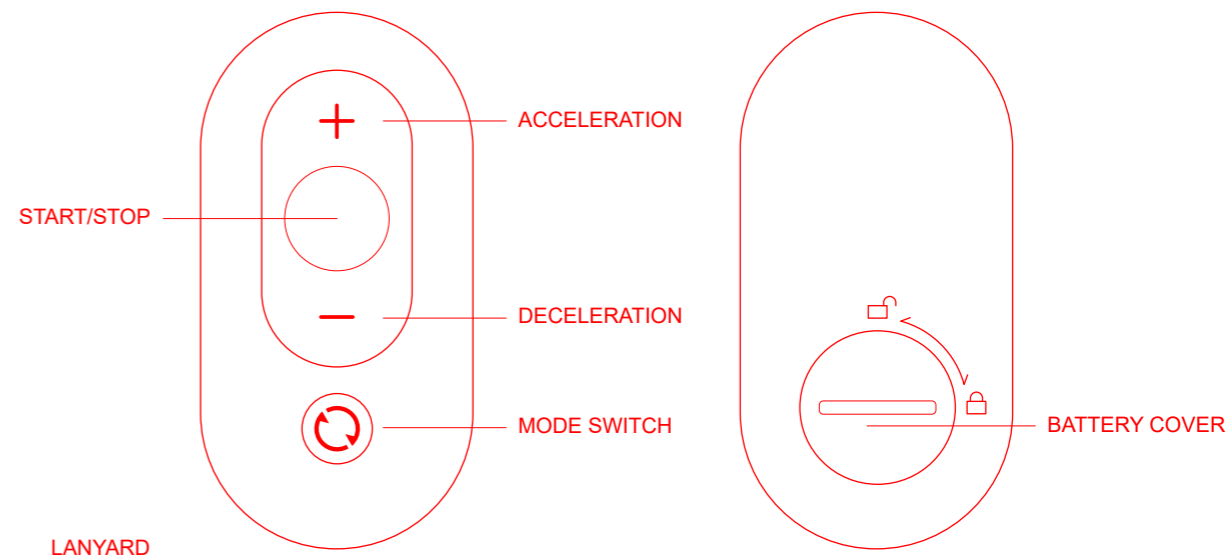


### 03 Guide for initial operation

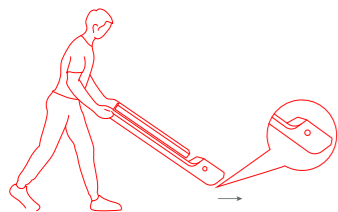 

 
1. Choose flat ground to place the WalkingPad. It is forbidden to place it on thick and soft cushion. Please note: Don't connect the power before the WalkingPad is fully unfolded.

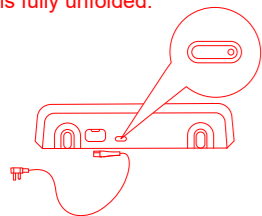

 4. Connect the power cord and press the button to switch on.



 
2. Unfold the walkingpad slowly and press it down to completely flat.

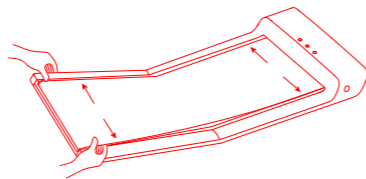


3. Check and adjust the walking belt to make sure it's centered.



 5. Search "Mi Home" APP from Apple Store or Google Play and complete installation.

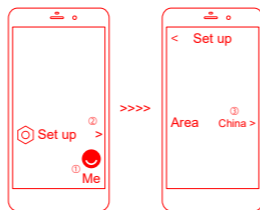

 
6. Set the address to China. (APP → Profile → Settings → Region → Chinese mainland)

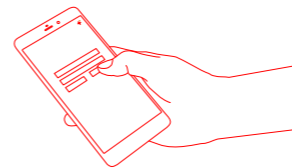

7. Open the APP, add walkingpad as prompted.



 
10. After completing the novice mode, unlock all functions.

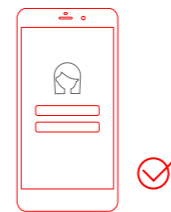

8. Enter novice guide.



 9. Complete Novice Guide to unlock all Functions ( maximum speed 6 km/hr ). Otherwise the speed limit remains at 3 km/hr.

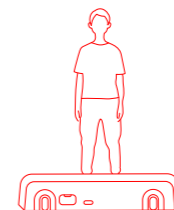

11. Start to use the walkingpad.

## 04 Learn to use WalkingPad

### 1. Mode instruction

#### Standby Mode

Light of the Standby mode is on;  
Motor and sensor stop responding.

#### Manual Mode

Light of the manual mode is on;  
Control the speed through the remote control or APP.

#### Automatic Mode

Light of the automatic mode is on;  
Speed is automatically controlled by intelligent algorithm.  
It follows the speed of walking.

### 2. Instructions of the standby mode control

#### Standby Mode

The motor and sensor stop responding in this mode to prevent nonusers from accidentally triggering the walkingPad.

 


Mode Switch  
Short press: return to the previous mode.


### 3. Instructions of manual mode control (primary mode)

#### Manual Mode

In this mode, the speed of the walkingpad can be controlled by the remote control. It is recommended that beginners use the manual mode first and then use the automatic mode after being skilled in using the walkingpad. The manual mode is controlled by remote control by default, that is, the START/STOP button of the remote control is used to start or stop the walkingPad, which can be modified in the client "Personalized".

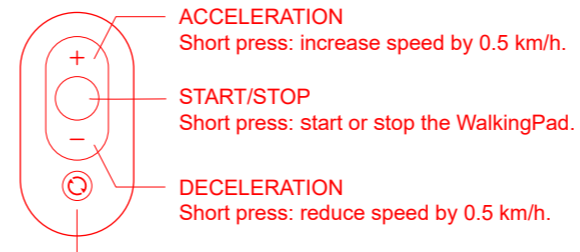

 MODE SWITCH  
Short press: switch to automatic mode.  
Long press: switch to standby mode.

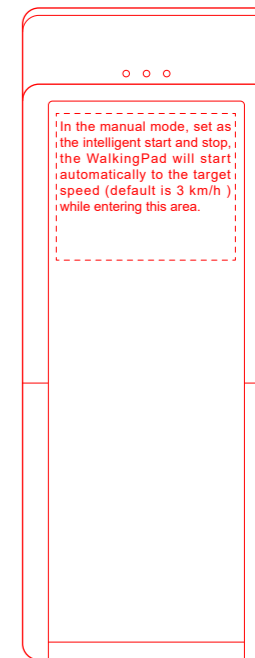


## 04 Learn to use WalkingPad


### 4. Description of automatic mode control (advance mode)

#### Automatic mode

 This is a challenging and higher-class mode, User can walk on the walkingpad completely out of remote controller. We only recommend those who have good sports skills or walking-device experience to take the challenge.

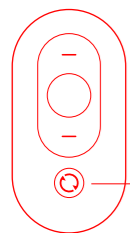

 **Mode Switch**  
Short press: switch to manual mode.  
Long press: switch to standby mode.

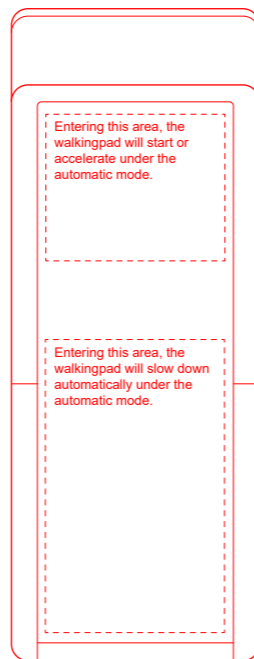

### 5. Remote Controller Notice

If the remote controller has no response or you change a new one, the remote controller and walking device need to re-establish communication.

**Remote control pairing method:**  
Restart the WalkingPad, press and hold down the mode switch button on the remote control immediately, hearing the sound of "Beep" indicates the success of pairing. Note: During the operation, the remote control should be close to the LED display panel of WalkingPad.

### 6. Wi-Fi Warning Light

**Long-term Lighting Mode:** Indicates that the machine is not connected to the cloud server.

**Long-term Lighting Out Mode:** Successful Connection between "Machine" and "Cloud".

**Flash Mode:** Indicates that the machine is networking or that the chip is being upgraded.

### 7. Error Warning Light

Error Warning Light on the display panel is off when WalkingPad works well. When error occurs, Error warning light turns on and shows its error code.

- E01: Communication fault;
- E02: Voltage Protection;
- E03: IPM Overheating;
- E05: Overcurrent protection;
- E06: Motor Protection;
- E08: Sensor Fault;
- E09: Wi-Fi Communication Fault.

### 8. Networking and firmware upgrade

 
By default, the factory is in the state of waiting for networking and can directly use customer bundles.

When you need to enter the networking state again, you can press the mode button on the walking machine for a long time in standby mode, make a "Di" sound directly from WalkingPad, and the Wi-Fi warning light begins to flicker.


OTA firmware upgrade, in the "MI Home" APP can receive update prompts, see the update instructions, according to the prompts on the phone to operate, automatically complete the firmware upgrade. In firmware upgrade, Wi-Fi warning lights enter blinking status prompt.



## 05 Safety Notice

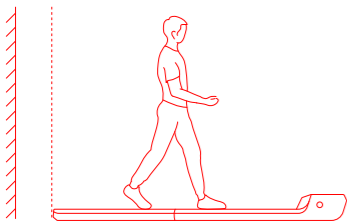

 
Please keep a rear distance of 1000 mm or more.

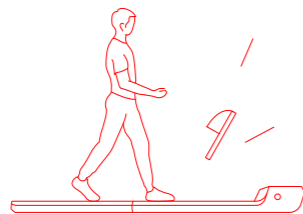


Please choose sport shoes.



 
Please do not stand up on the walking machine when it is under auto calibration situation.

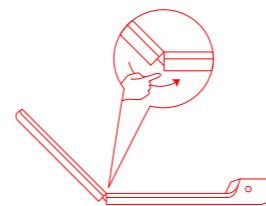


Anti-pinch.

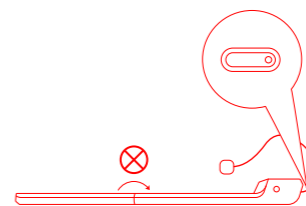 

 
Turn the power off before fold up the walkingpad.

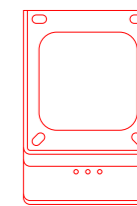


Prohibition of vertical placement.

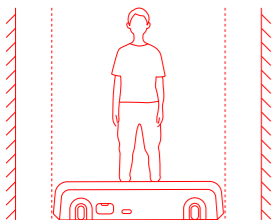 

 
Please keep a distance of 500 mm or more for both sides.

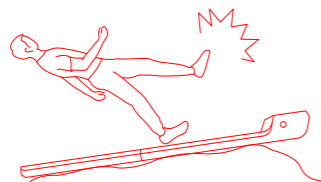


Using on uneven ground is prohibited.

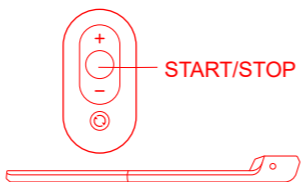 

 
It is strictly forbidden to walk up and down the walking pad while walking. When an emergency occurs, please press the remote control START/STOP and step away from the walking pad from one side.

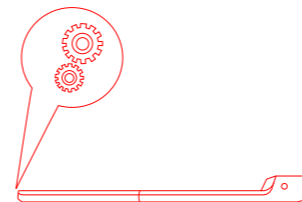

Anti-involved, please do not trample.

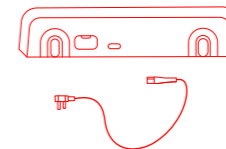 


 Please pull out the plug when you are not using it.

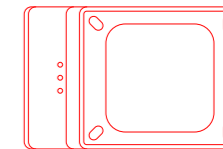


Prohibition of lateral placement.


## 05 Safety Notice

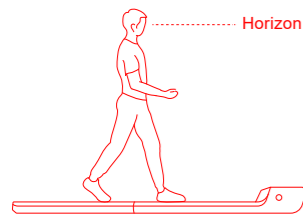 

 
Please keep your sight horizontal to avoid dizziness.

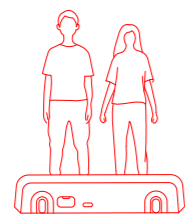

 
More than one person on the walkingpad is prohibited.

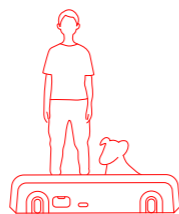


Using machine with pet is prohibited.

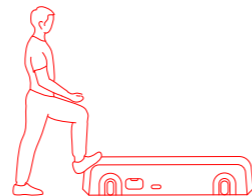 

 
Trampling the machine head is prohibited.

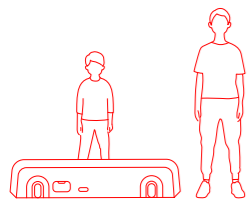

 
Children should be supervised to ensure that they do not play with the walkingpad.

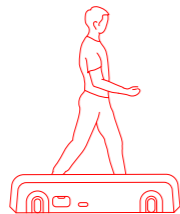

 Walking sideways on the machine is prohibited.

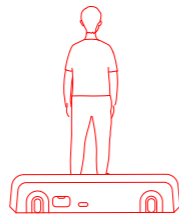

 
Walking backwards on the machine is prohibited.

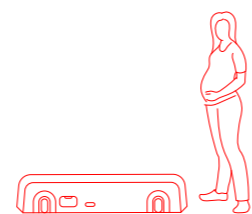

Please use this product reasonably according to your physical condition (the elderly and pregnant women should use it cautiously). If you feel unwell, stop exercising immediately. If necessary, please seek medical attention.


## 06 Maintenance and Service
 
### 1. Clean the walking machine

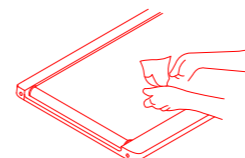


- Turn off the machine and unplug the power cord.
- Add several drops of detergent on cotton rag or towel. Don't pour the detergent on the belt directly, and don't use acid or corrosive cleaners.
- Wipe off dust and stains on the frame, front panel and belt. Do not wipe backside of the belt.
- After using for a period, dust and stains may appear on the back part, that is normal situation, and just clean them up.

### 2. Adjust the belt

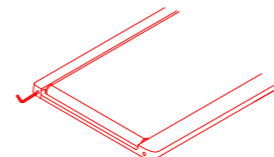 

- Press and hold both Mode Switch Button and Acceleration Button on the remote control over 3 seconds.
- Front panel shows "CALI" and the speed is 4 km/hr ( 2.5 mi/hr ).
- If belt deviates to the left: Turn the left adjusting screw for a half-circle clockwise.
- If belt deviates to the right: Turn the right adjusting screw for a half-circle clockwise.
- If belt is slipping: Turn both left and right adjusting screw for a half-circle clockwise at same time.
- Keep the machine running for 1-2 minutes and check whether it needs to readjust.

### 3. Lubricate the Belt

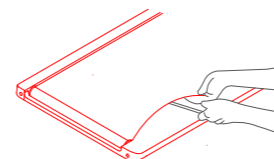 

- Turn off the machine and unplug the power cord.
- Lift up the belt and apply silicone oil on the backside of the belt.
- Turn on the machine again
- Keep the machine running under 4 km/hr ( 2.5 mi/hr ) for 10-20 20 seconds.
- Only apply 5 ml ~ 10 ml lubricant oil each time, too much lubricant oil makes the belt become slipping.
- Apply for silicone oil once every 3 months.

## 07 Trademark and Legal Declaration

---

Beijing Kingsmith Technology Co., Ltd holds the patents of KingSmith Walkingpad Walking Device series products. Kingsmith edits and owns the copyright of this manual book. Without Kingsmith's written permission, any form of unauthorized distribution, reproduction, publication, release or quotation by any institution or individual is prohibited. This manual contains as many as possible of all the functions and instructions for use. However, due to product imperfections, design changes, etc., the description may still have discrepancies with what you have purchased. In view of product updates, description in this manual book may differ from what you have purchased in color, appearance, etc. Actual supplies prevail. This appliance is not intended for persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Children aged from 8 years and above and persons can use this appliance with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understood the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Product performance standard : Q/FTSMS0001-2017

## 08 Replacement and Disposal

---



The battery contained in this appliance must be removed for or disposal.

When replacing the battery, use only original battery, available from our online parts shop.

The battery compartment is located on the underside of the appliance. Open the compartment by removing the screw in the cover using a suitable screwdriver, and then press the lower end of the locking catch on the connectors. In that way, both sides of the connection can be separated by pulling them apart.

When inserting a new battery, push together the two connectors and ensure that the catch locks over the stop.

Never dispose of old battery in domestic garbage, but only through the proper public collection points. This also applies to the battery of defective appliances.

## 08 Replacement and Disposal

---



Devices marked with this symbol must be disposed of separately from your household waste, as they contain valuable materials which can be recycled. Proper disposal protects the environment and human health. Your local authority or retailer can provide information on the matter.