

Vibrerende masturbator Handleiding



Hoe te gebruiken

- Haal de bovenste dop eraf voor gebruik.
- Stop 3 AAA batterijen in de batterijklep onderin.
- Om de trilfunctie aan te zetten draait u aan het wieltje aan de onderkant. Met dit wieltje wisselt u ook van intensiteit.

Schoonmaken, bewaren en veiligheid

Haal de binnensleeve er uit en was af onder warm water en met een antibacteriële zeep. Afspoelen met koud/lauw water en goed afdrogen. Nooit reinigen met middelen die alcohol, benzine of aceton bevatten. Stel de masturbator nooit bloot aan extreme hitte.



Wieltje voor trilfunctie



Batterij klepje

How to use

- Remove the top cap before use.
- Insert 3 AAA batteries into the bottom battery cover.
- To turn on the vibration function, turn the wheel at the bottom. You can also change the intensity with this wheel.

Cleaning, Storage and Safety

Remove the inner sleeve and wash under warm water and an antibacterial soap. Rinse with cold/lukewarm water and dry well. Never clean with resources containing alcohol, petrol or acetone. Never expose the masturbator to extreme heat.



Turning wheel for vibration



Battery cover