



# RAZER KRAKEN KITTYPOTION

MASTER GUIDE

Whether you're looking to stream, make photo ops pop or just be immersed in your favorite movie or game with killer audio, the **Razer Kraken Kitty Edition** allows you to fully express your own unique personality, passion and style in the most colorful way imaginable.

 
## CONTENTS

1. WHAT'S INSIDE .....	3
2. WHAT'S NEEDED .....	4
3. LET'S GET YOU COVERED.....	5
4. TECHNICAL SPECIFICATIONS.....	4
5. GETTING STARTED.....	5
6. INSTALLING RAZER SYNAPSE 3 FOR YOUR RAZER KRAKEN KITTY EDITION .....	7
7. CONFIGURING YOUR RAZER KRAKEN KITTY EDITION VIA RAZER SYNAPSE 3.....	8
8. SAFETY AND MAINTENANCE .....	18
9. LEGALESE.....	19

---

## 1. WHAT'S INSIDE

### RAZER KRAKEN KITTY EDITION GAMING HEADSET

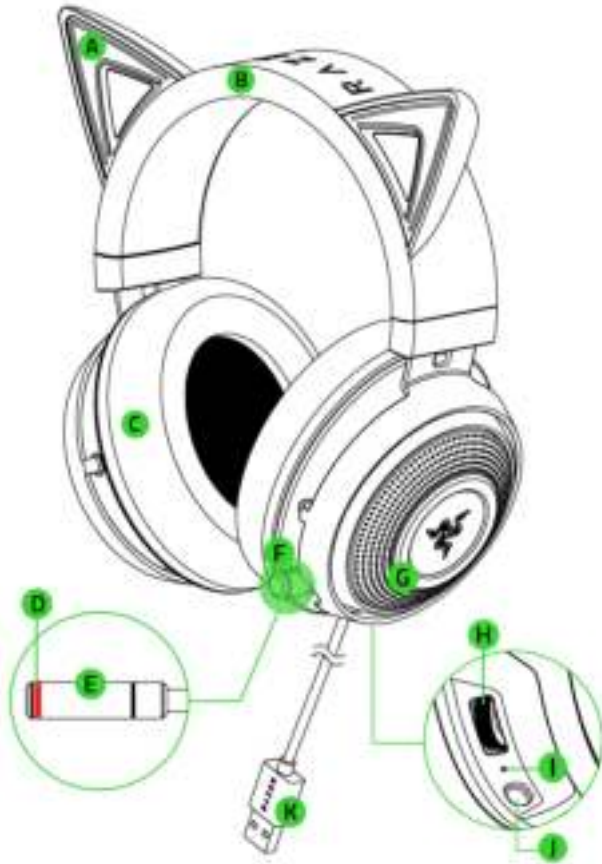

- A. Backlit kitty ears
- B. Adjustable padded headband
- C. Cooling gel-infused ear cushions
- D. Mic mute indicator
- E. Mic mute button
- F. Retractable mic
- G. Backlit Razer logo
- H. Volume wheel
- I. THX Spatial Audio indicator
- J. THX Spatial Audio button
- K. USB connector

---

## 2. WHAT'S NEEDED

### PRODUCT REQUIREMENTS

- PC with a free USB port

 
### RAZER SYNAPSE REQUIREMENTS

- Windows® 7 64-bit (or higher)
- Internet connection
- 100 MB of free hard disk space


---

### 3. LET'S GET YOU COVERED

You've got a great device in your hands complete with a 2-year limited warranty coverage. Now maximize its potential and score exclusive Razer benefits by registering at [razerid.razer.com](https://razerid.razer.com)

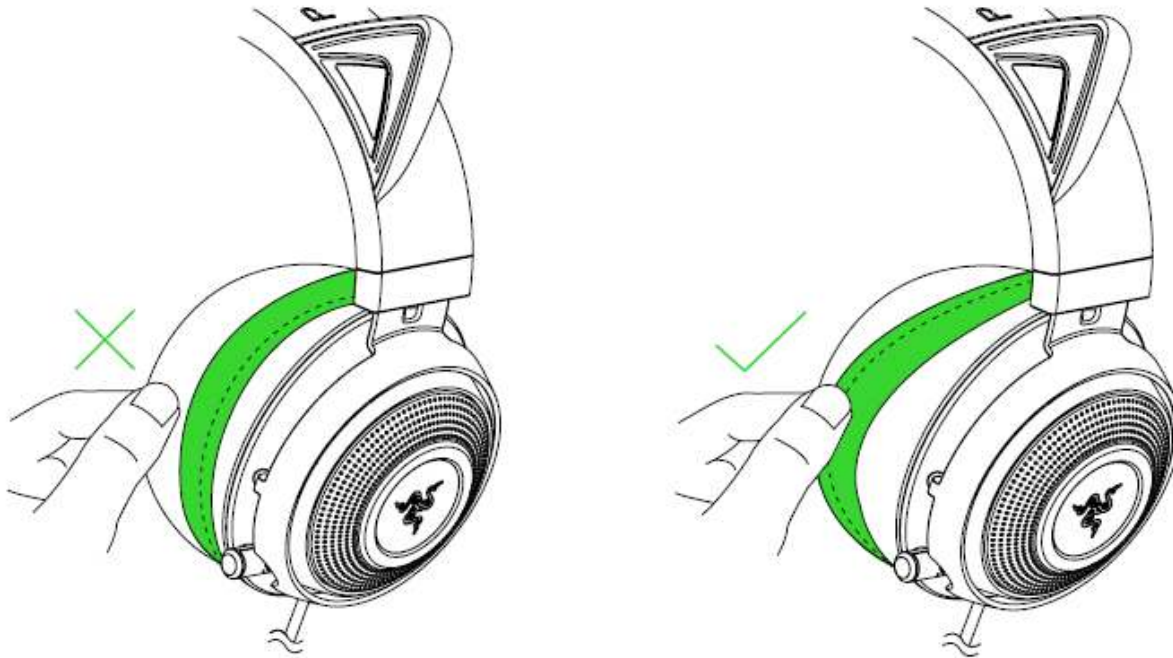

 *Your product's serial number can be found underneath the ear cushion, as shown here.*

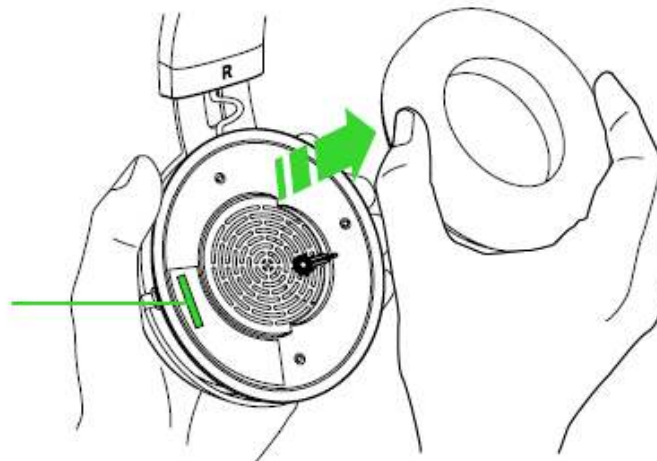

---

## 4. TECHNICAL SPECIFICATIONS

### HEADPHONES

- Frequency response: 20 Hz – 20 kHz
- Impedance: 32  $\Omega$  @ 1 kHz
- Sensitivity (@1 kHz): 109 dB
- Drivers: 50 mm, with Neodymium magnets
- Inner ear cup diameter: 65 x 44 mm
- Connection type: USB Digital
- Cable length: 1.3 m / 4.27 ft.
- Approx. weight: 275 g / 0.60 lbs
- Oval ear cushions: Designed for full-ear coverage with cooling gel, for sound isolation and comfort

### MICROPHONE

- Frequency response: 100 Hz – 10 kHz
- Signal-to-noise ratio: > 60 dB
- Sensitivity (@1 kHz):  $-45 \pm 3$  dB
- Pick-up pattern: Unidirectional ECM boom
- Mute Function: Click-to-mute

### ON-EARCUP CONTROLS

- Volume up and down
- THX Spatial on/off toggle

### AUDIO USAGE

- Audio Usage: Devices with USB Connector
- Audio + Microphone Usage: Devices with USB Connector

---

 
## 5. GETTING STARTED

### THE MIC


Pull the tip of the mic until it is fully extended.



Bend the mic until it's a few millimeters away from your mouth. Make sure the mic diaphragm is in front of your mouth and the air vent is on the opposite side.

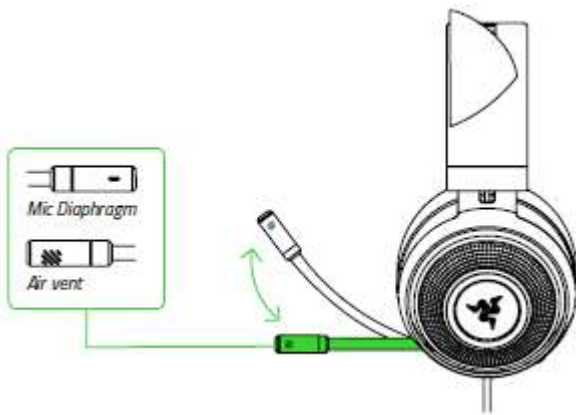

 
Press the mic mute button to turn the mic on or off.

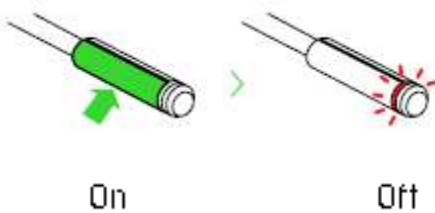




## THE VOLUME WHEEL

 Rotate the volume wheel as shown to increase or decrease the volume.

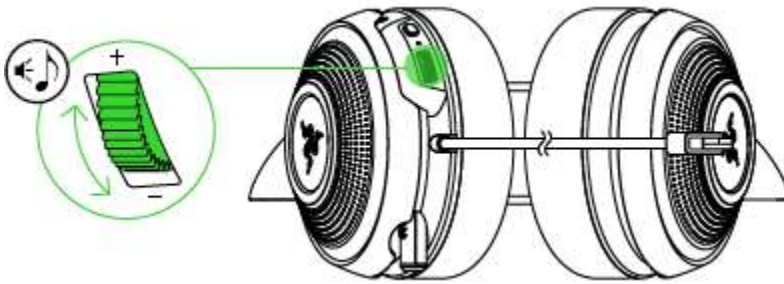


## GET COMFY

 It's recommended to gently stretch the headset before placing it over your head to minimize headband stress however, don't stretch the headset beyond its limits.

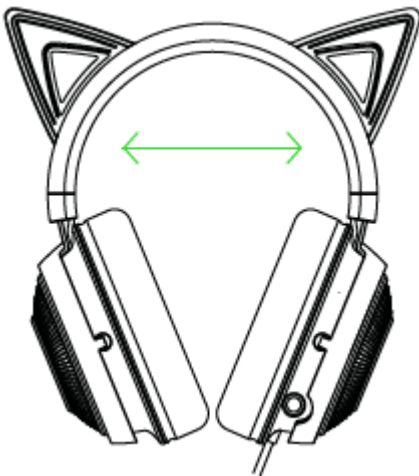

---

## 6. INSTALLING RAZER SYNAPSE 3 FOR YOUR RAZER KRAKEN KITTY EDITION

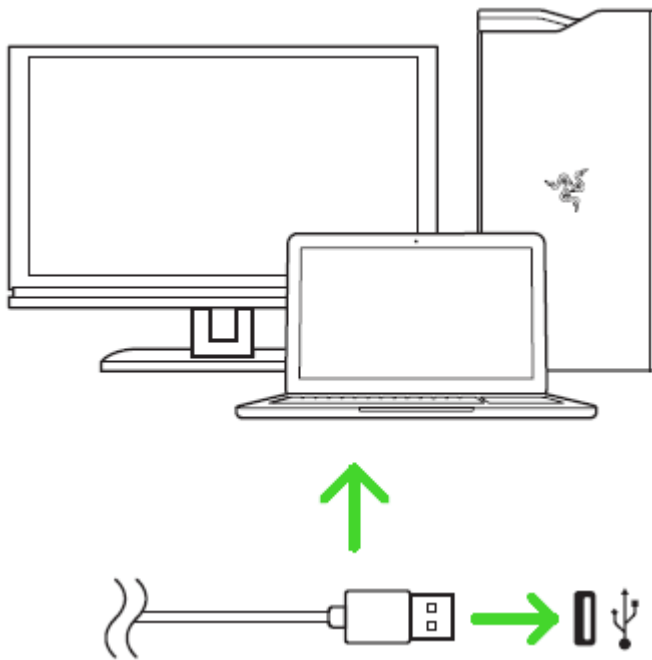 

Step 1: Make sure your Razer device is connected to the USB port of your computer.

Step 2: Install Razer Synapse 3 when prompted\* or download the installer from [razer.com/synapse](https://razer.com/synapse).

Step 3: Create your Razer ID or log in using an existing account.

*\*Applicable for Windows 8 or later.*

---

## 7. CONFIGURING YOUR RAZER KRAKEN KITTY EDITION VIA RAZER SYNAPSE 3

 
*Disclaimer. The features listed here require you to log in to Razer Synapse. These features are also subject to change based on the current software version and your Operating System.*

### SYNAPSE TAB

The Synapse tab is your default tab when you first launch Razer Synapse 3. This tab allows you to navigate the Dashboard subtab.

### DASHBOARD

The Dashboard subtab is an overview of your Razer Synapse 3 where you can access all your Razer devices, modules, and online services.

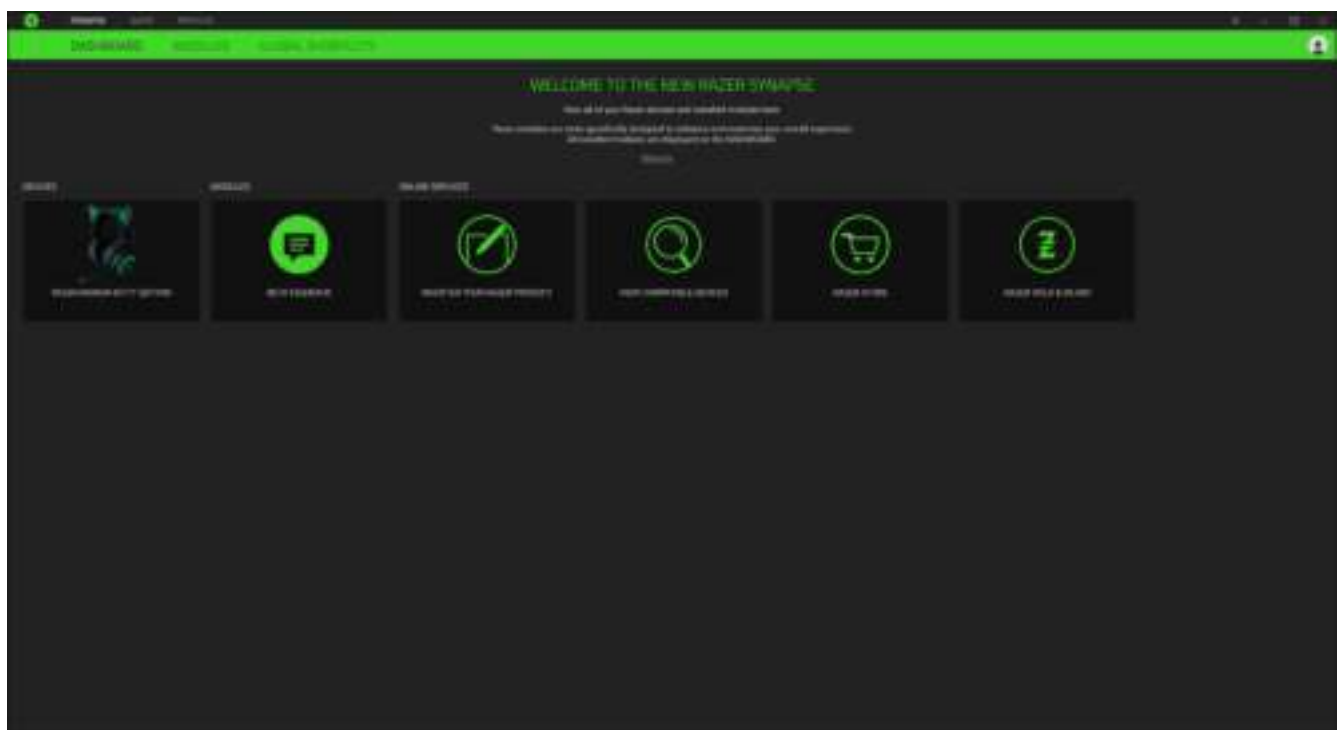


## AUDIO TAB

The Audio tab is the main tab for your Razer Kraken Kitty Edition. From here, you can customize your device's settings to unleash its full potential. Changes made under this tab are automatically saved to your system and cloud storage.

### SOUND

 The Sound subtab is for modifying your device's sound properties.

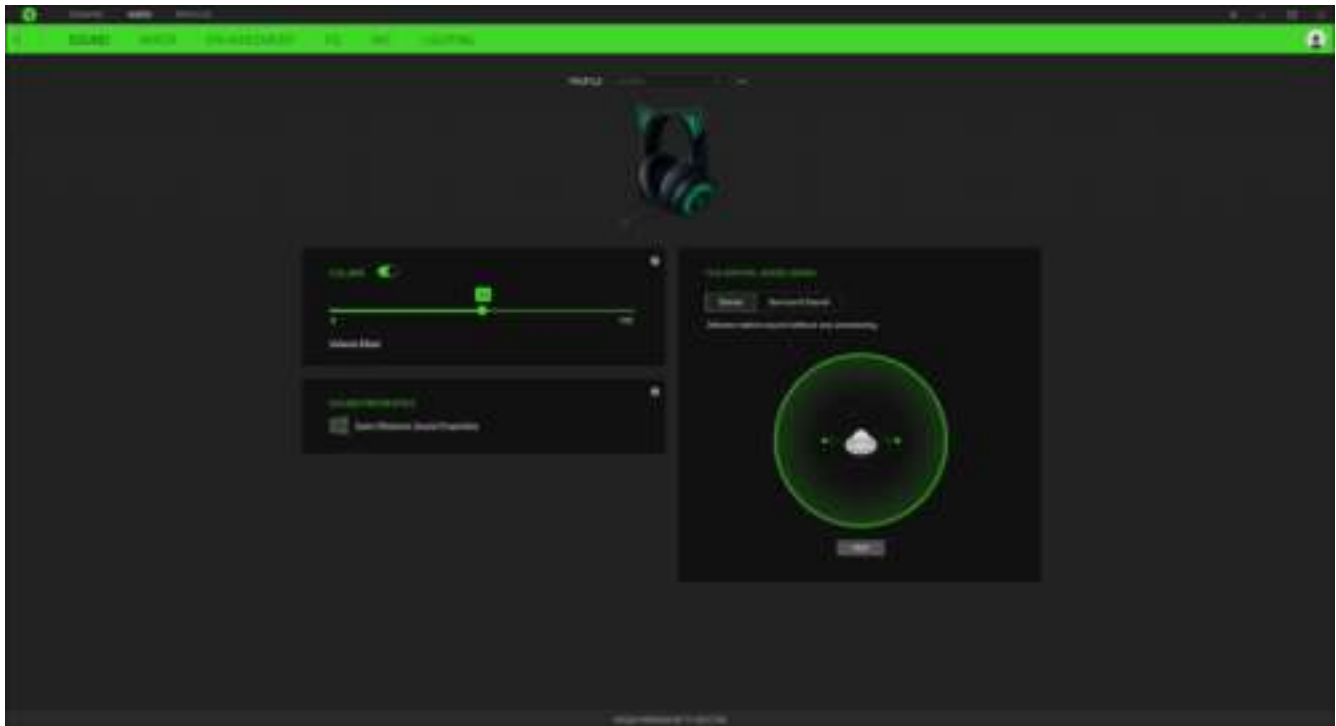

#### *Profile*

Profile is a data storage for keeping all your Razer peripheral's settings. By default, the profile name is based on your system's name. To add, rename, duplicate, or delete a profile, simply press the Miscellaneous button (⋮).

#### *Volume*

The volume slider allows you to adjust audio intensity of your device. Clicking the link will launch the Windows Volume Mixer window.

#### *Sound Properties*

 
Clicking the link will launch the Windows sound properties window.

#### *THX Spatial Audio Demo*

This feature allows you to test the effect of THX Spatial Audio on your headset.


## MIXER

The Mixer subtab allows you to enable/disable the THX Spatial Audio, as well as calibrate the audio positioning.

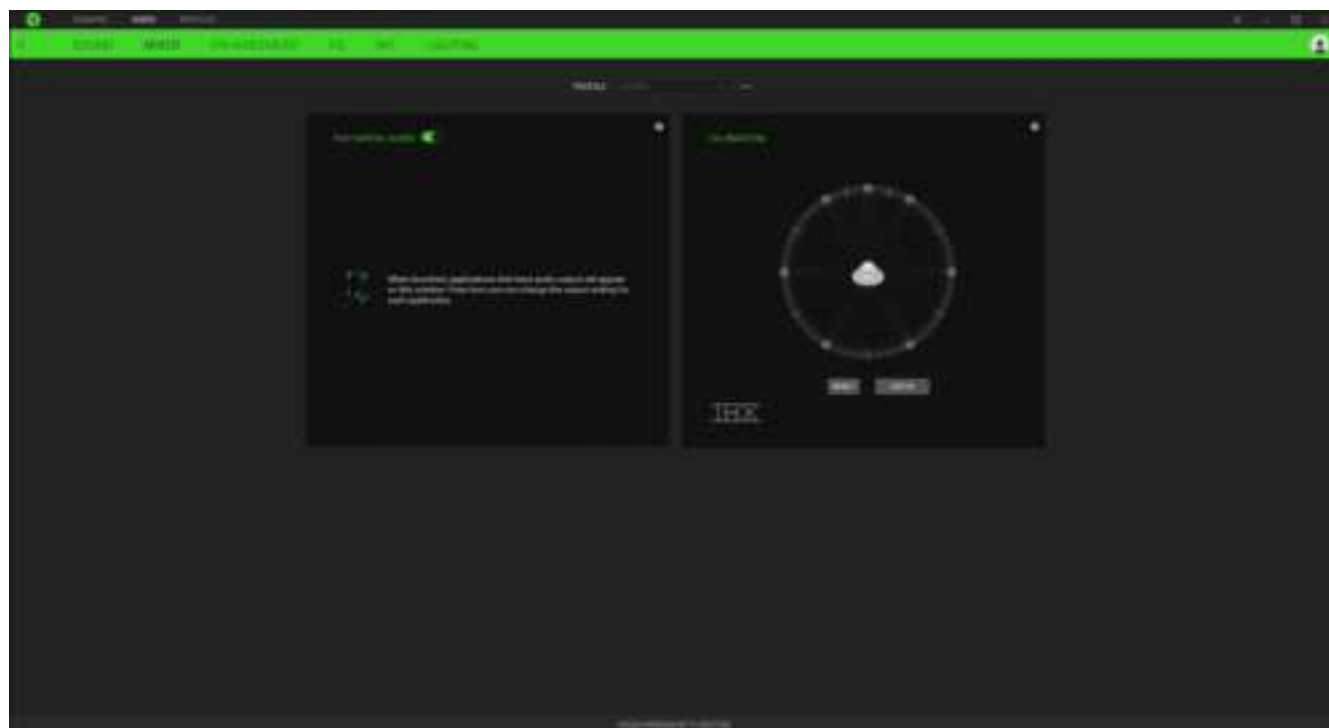

## ENHANCEMENT

 The Enhancement subtab is for customizing the incoming audio settings.

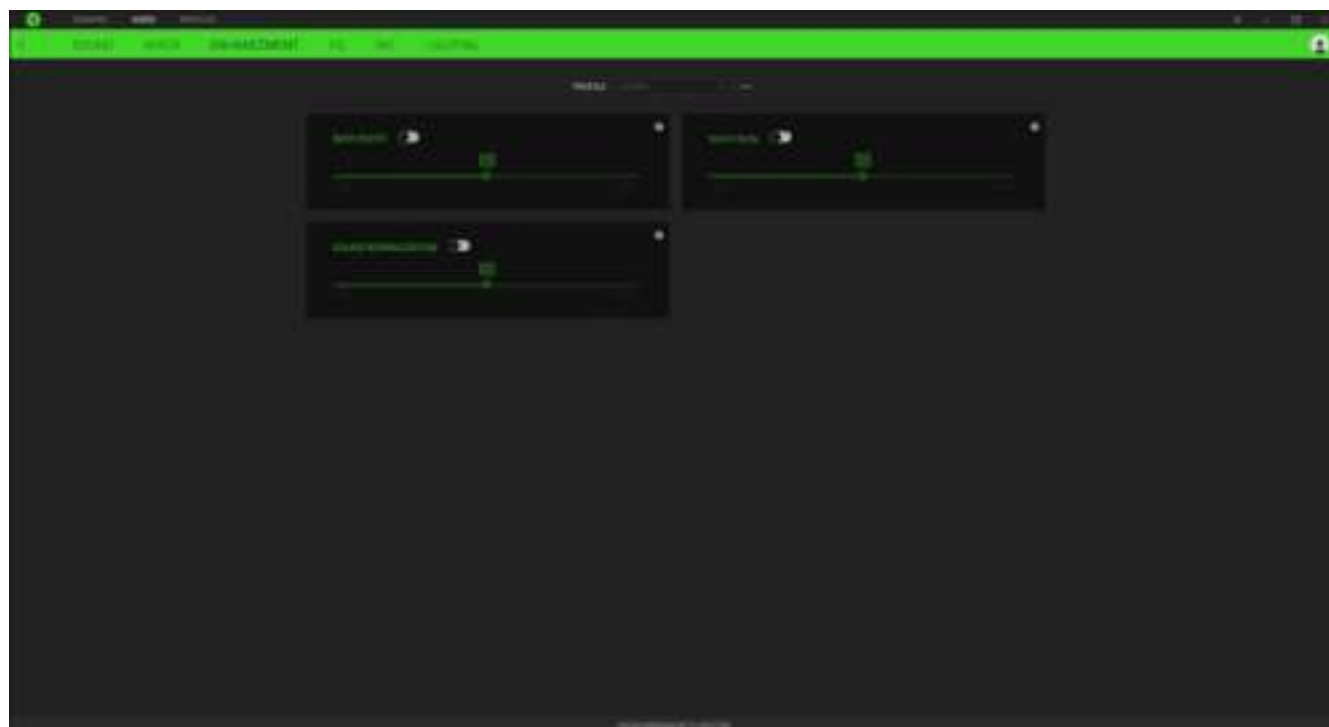

### *Bass Boost*

Enhances the low frequency response to improve the bass output of your headset

### *Sound Normalization*

 
Reduces the loudest audio received to avoid sudden and unpleasant increase in volume from effects such as shouting or explosions.

### *Voice Clarity*

Improves the quality of incoming voice conversations by filtering the sound to improve clarity and adjusts the volume.


## EQ

With the EQ subtab, you can alter the frequency response of your audio system.

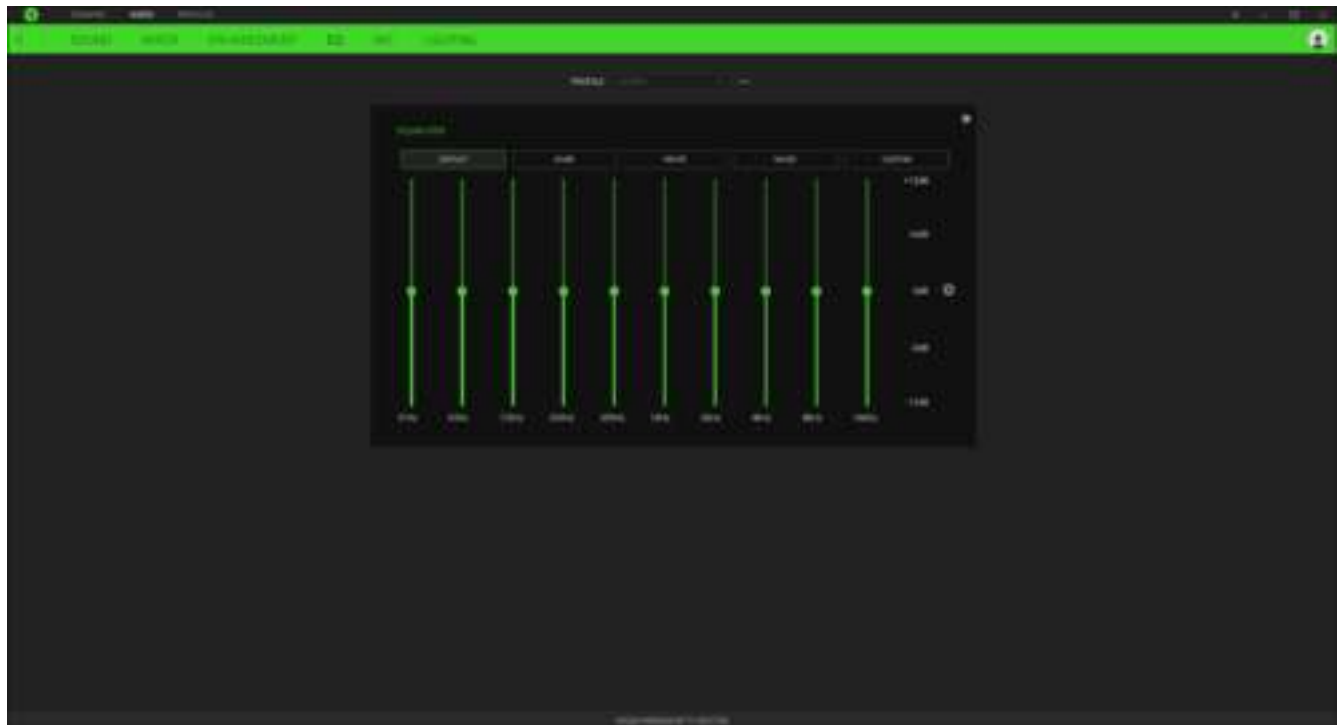

## MIC

 The Mic subtab enables you to change the settings for all outgoing mic audio.

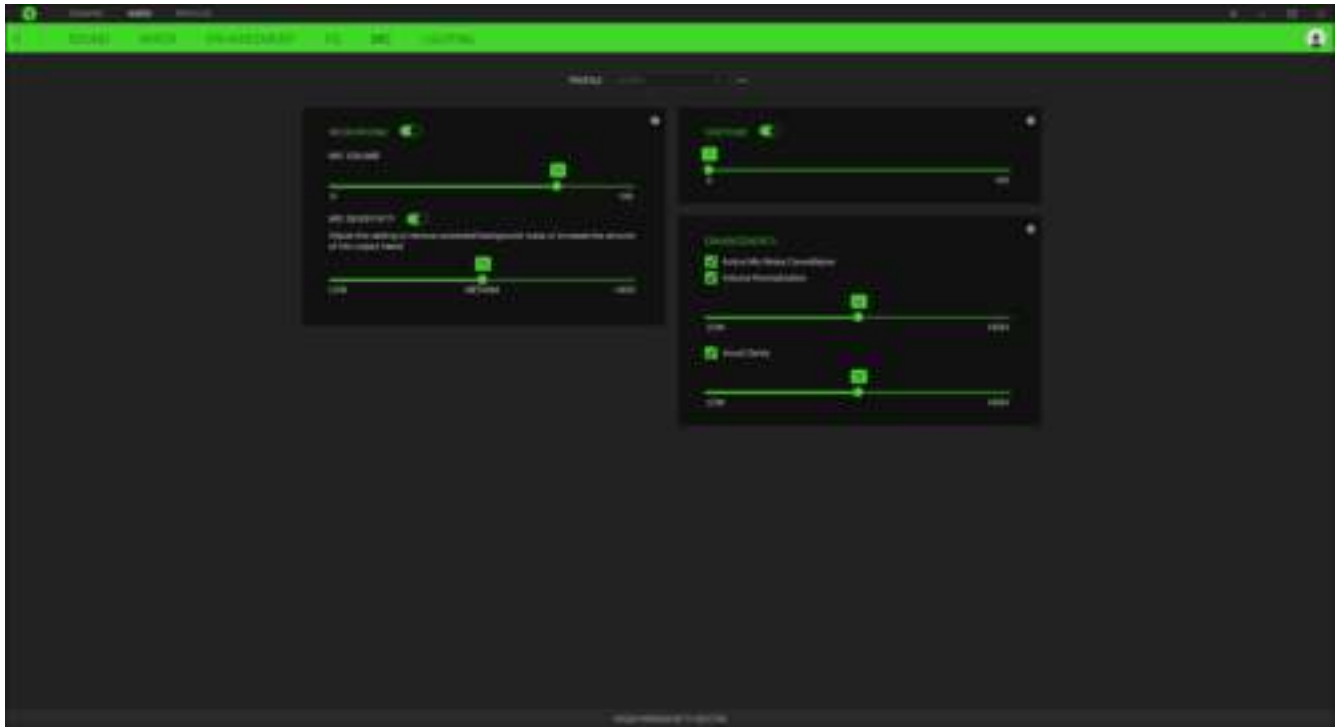

### *Microphone*

Allows you to enable/disable the microphone on your headset using the toggle button.

### *Mic Volume*

Adjusts the microphone input or mutes the mic when the function is disabled.

### *Mic Sensitivity*

Changes the microphone's sensitivity so that it cuts out background noises and isolate your voice.

### *Sidetone*

Enable or disable monitoring the microphone's raw audio input through the headset with an additional option to increase or decrease the volume.

 
### *Enhancements*

Improves the quality of the microphone input by:

- reducing the variation of loudness via **Volume Normalization**
- decreasing environmental noise through **Ambient Noise Reduction**
- emphasizing the voice frequency by means of **Vocal Clarity**

## Lighting

The Lighting subtab enables you to modify your Razer device's light settings.

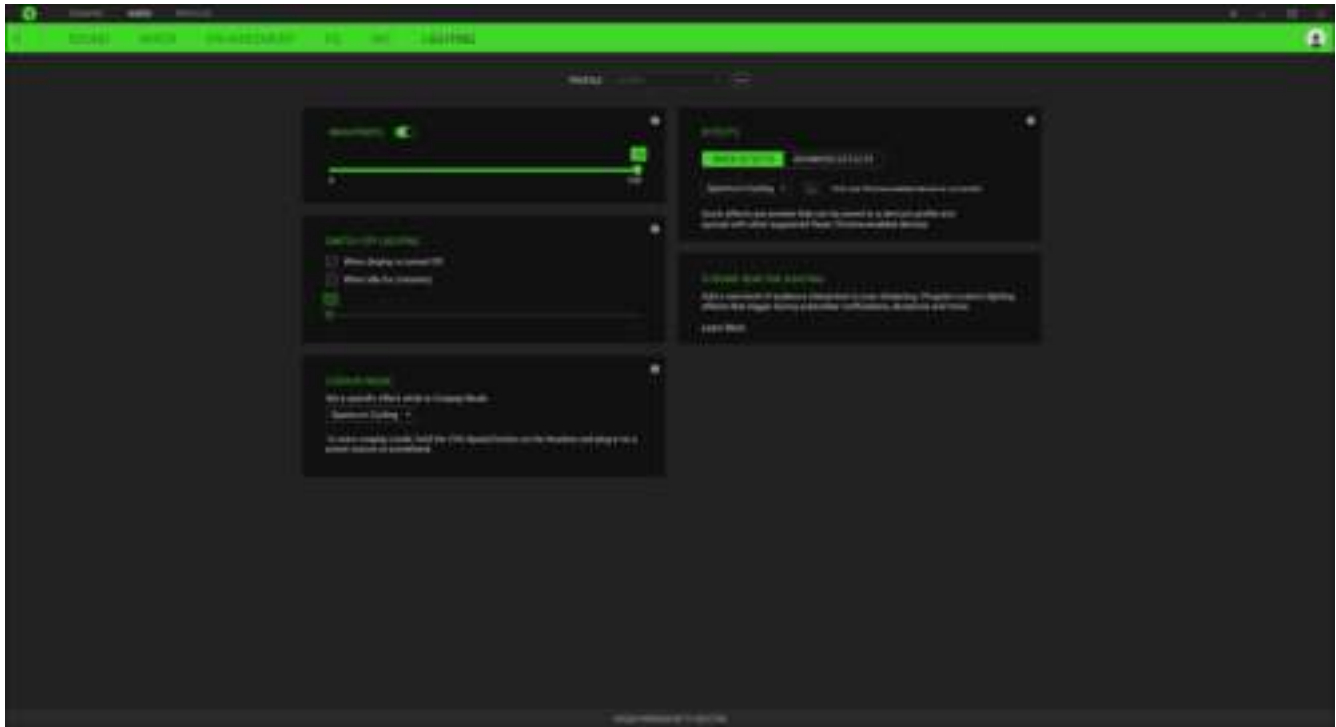

### *Brightness*

You can turn off your Razer device's lighting by toggling the Brightness option or increase/decrease the luminance using the slider.

### *Switch Off Lighting*

This is a power saving tool which allows you to disable your device's lighting in response to your system's display turning off and/or automatically power down when your Razer Kraken Kitty Edition has been idle for a set amount of time.


### *Cosplay Mode*

Choose an effect that you can enable even if you do not have access to Razer Synapse 3.

### *Stream-Reactive Lighting*

This function allows your headset's lighting to change dynamically based on integrated actions for different streaming services.




### *Advanced Effects*


The Advanced Effects option allows you to choose a Chroma Effect you want to use on your Razer Chroma-enabled peripheral. To start making your own Chroma Effect, simply press the Chroma Studio button (  CHROMA STUDIO ). [Click here to learn more about the Chroma Studio](#)



### Quick Effects

A number of quick effects can be selected and applied to your headset's lighting, as listed here:

		DESCRIPTION	HOW TO SET UP
	Breathing	The lighting fades in and out of the selected color(s)	Select up to 2 colors
	Spectrum cycling	The LEDs will cycle through all 16.8 million colors	(Default) No configuration needed
	Static	The LEDs will remain lit in the selected color	Select any single-color lighting

 
If you have other supported Razer Chroma-enabled devices, you can synchronize their quick effects with your Razer device by clicking the Chroma Sync button (  ).

## PROFILES TAB

The Profiles tab is a convenient way of managing all your profiles and linking them to your games and applications.

 
### DEVICES

View which Razer device is using a specific profile using the Devices subtab. To create a new profile within the selected device, simply click the add button (+). To rename, duplicate, or delete a profile, simply press the Miscellaneous button (⋮). Each profile can be set to automatically activate when you run an application using the Link Games option.

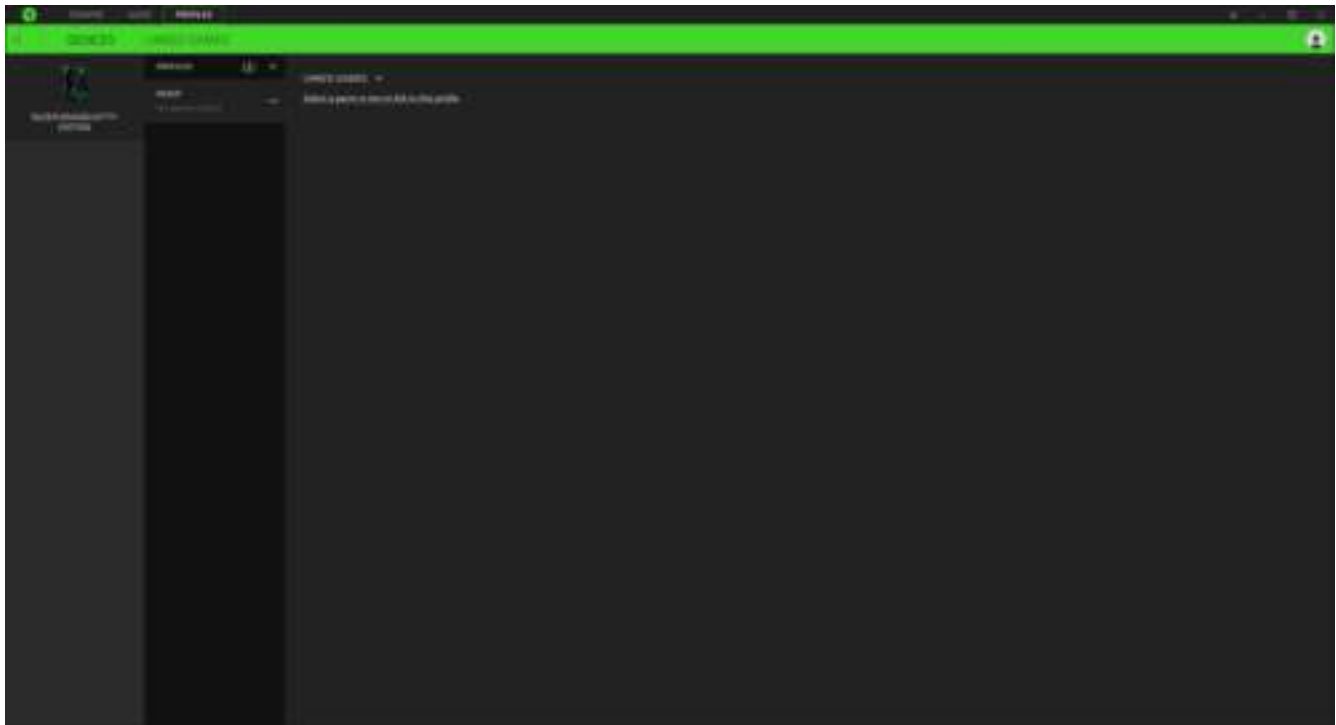


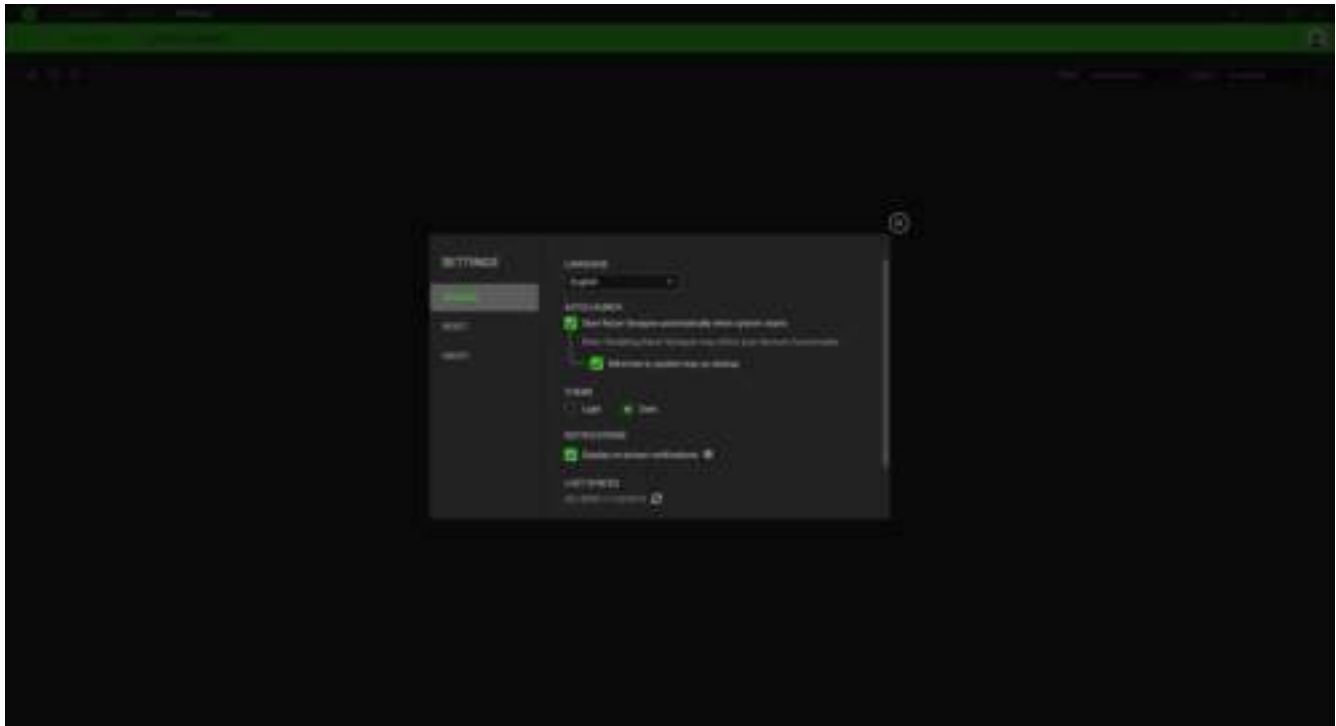 
## LINKED GAMES

The Linked Games subtab gives you the flexibility to add games, view peripherals that are linked to games, or search for added games. You can also sort games based on alphabetical order, last played, or most played. Added games will still be listed here even if it is not linked to a Razer device.

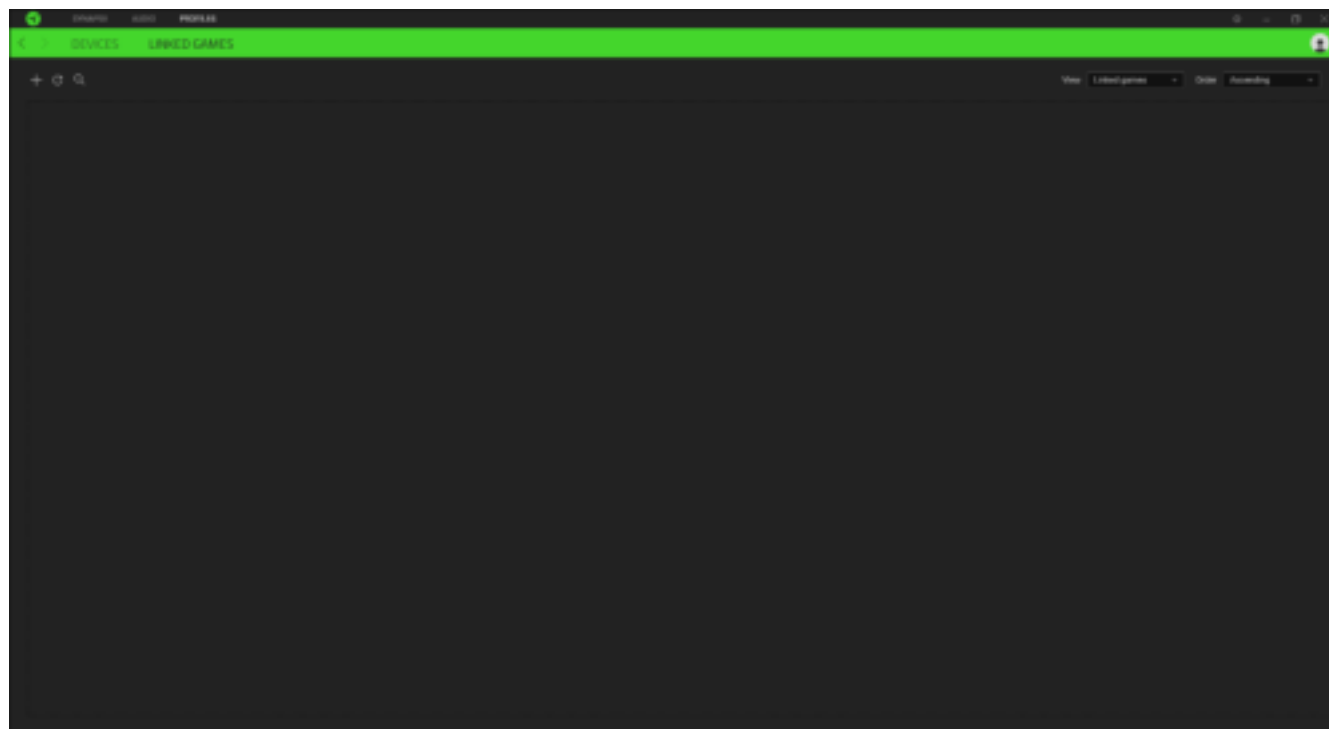

## SETTINGS WINDOW

The Settings window, accessible by clicking the  button on Razer Synapse 3, enables you to configure the startup behavior, change language, view your Razer device's master guide, or perform factory reset on any connected Razer device.



### GENERAL

The default tab of the Settings window, The General tab enables you to change the software's display language and start-up behavior or view the master guide of all connected Razer devices.

### RESET

The Reset tab allows you to perform a factory reset on all connected Razer devices with on-board memory. All profiles stored on the selected device's on-board memory will be erased.

*Note: Performing a factor / reset on devices without on-board memory will only create a new profile for your device on Razer Synapse 3 using the default settings.*

### ABOUT

The About tab displays brief software information, its copyright statement, and also provides relevant links for its terms of use. You may also use this tab to check for software updates, or as a quick access to Razer's social communities.

---

## 8. SAFETY AND MAINTENANCE

### SAFETY GUIDELINES

In order to achieve maximum safety while using your Razer Kraken Kitty Edition, we suggest that you adopt the following guidelines:

Should you have trouble operating the device properly and troubleshooting does not work, unplug the device and contact the Razer hotline or go to [support.razer.com](https://support.razer.com) for assistance.

Do not take apart the device (doing so will void your warranty) and do not attempt to operate it under abnormal current loads.

Keep the device away from liquid, humidity or moisture. Operate the device only within the specific temperature range of 0° C (32 °F) to 40° C (104 °F). Should the temperature exceed this range, unplug and/or switch off the device in order to let the temperature stabilize to an optimal level.

The device isolates external ambient sounds even at low volumes, resulting in lowered awareness of your external surroundings. Please remove the device when engaging in any activity that requires active awareness of your surroundings.

Listening to excessively loud volume over an extended period of time can damage your hearing. Furthermore, legislation of certain countries permits only a maximum sound level of 85dB for 8 hours a day. We therefore recommend that you reduce the volume to a comfortable level when listening for prolonged periods of time. Please, take good care of your hearing.

### MAINTENANCE AND USE

The Razer Kraken Kitty Edition requires minimum maintenance to keep it in optimum condition. Once a month we recommend you unplug the device and clean it using a soft cloth or cotton swab to prevent dirt buildup. Do not use soap or harsh cleaning agents.

---

## 9. LEGALESE

### **COPYRIGHT AND INTELLECTUAL PROPERTY INFORMATION**

©2019 Razer Inc. All rights reserved. Razer, the triple-headed snake logo, Razer logo, "For Gamers. By Gamers.", and "Powered by Razer Chroma" logo are trademarks or registered trademarks of Razer Inc. and/or affiliated companies in the United States or other countries. All other trademarks and trade names are the property of their respective owners and other company and product names mentioned herein may be trademarks of their respective companies.

Windows and the Windows logo are trademarks of the Microsoft group of companies.

Razer Inc. ("Razer") may have copyright, trademarks, trade secrets, patents, patent applications, or other intellectual property rights (whether registered or unregistered) concerning the product in this guide. Furnishing of this guide does not give you a license to any such copyright, trademark, patent or other intellectual property right. The Razer Kraken Kitty Edition (the "Product") may differ from pictures whether on packaging or otherwise. Razer assumes no responsibility for such differences or for any errors that may appear. Information contained herein is subject to change without notice.

### **LIMITED PRODUCT WARRANTY**

For the latest and current terms of the Limited Product Warranty, please visit: [razer.com/warranty](https://www.razer.com/warranty)

### **LIMITATION OF LIABILITY**

Razer shall in no event be liable for any lost profits, loss of information or data, special, incidental, indirect, punitive or consequential or incidental damages, arising in any way out of distribution of, sale of, resale of, use of, or inability to use the Product. In no event shall Razer's liability exceed the retail purchase price of the Product.

### **GENERAL**

These terms shall be governed by and construed under the laws of the jurisdiction in which the Product was purchased. If any term herein is held to be invalid or unenforceable, then such term (in so far as it is invalid or unenforceable) shall be given no effect and deemed to be excluded without invalidating any of the remaining terms. Razer reserves the right to amend any term at any time without notice.