

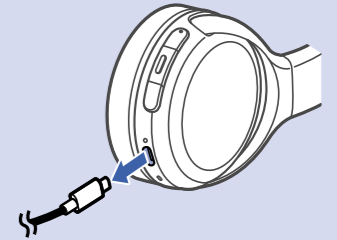
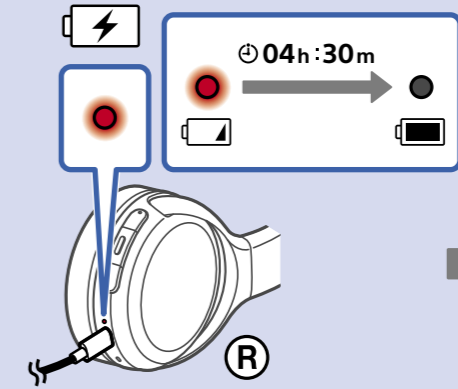
 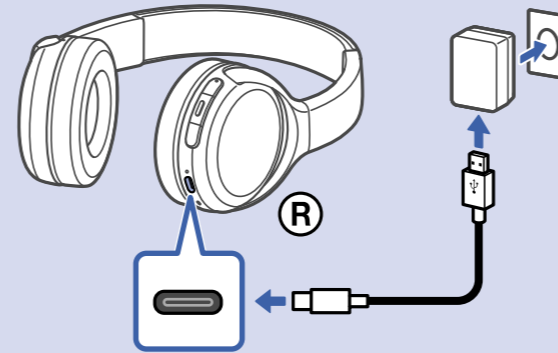
 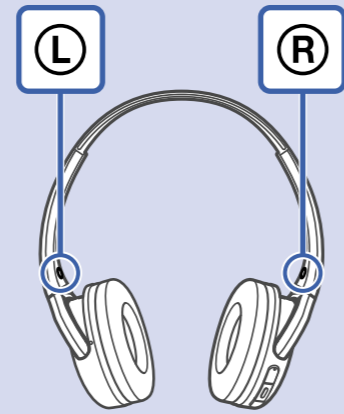


1





2



WH-CH510








Android™ iPhone

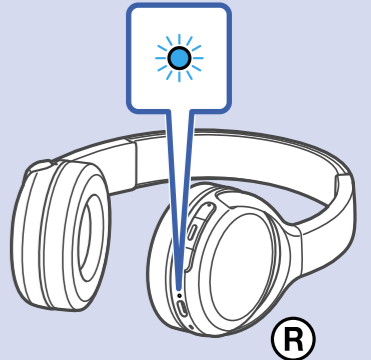
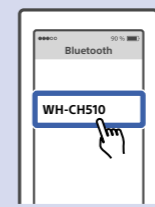


3

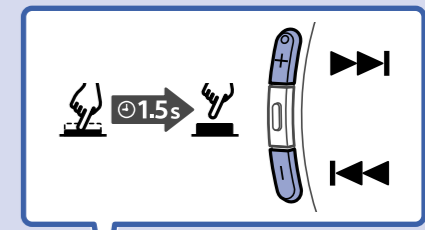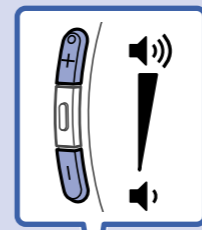

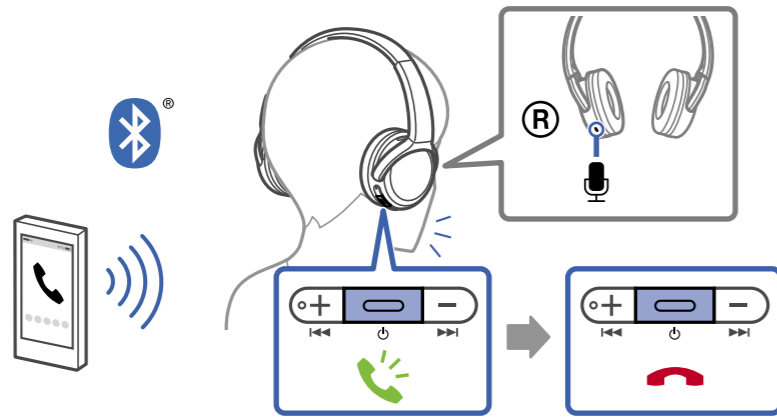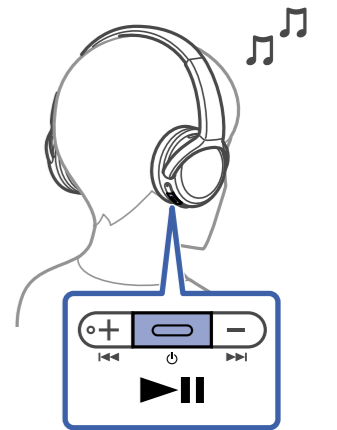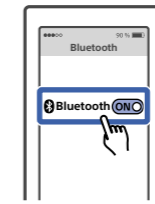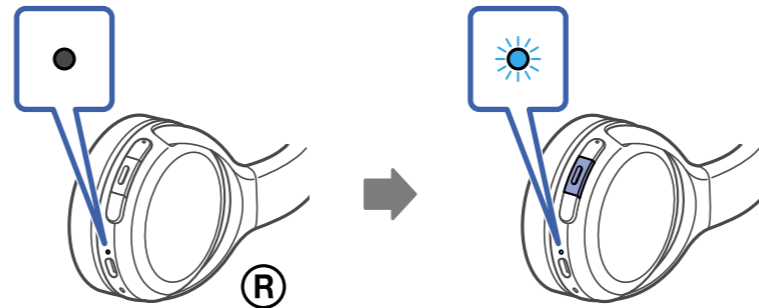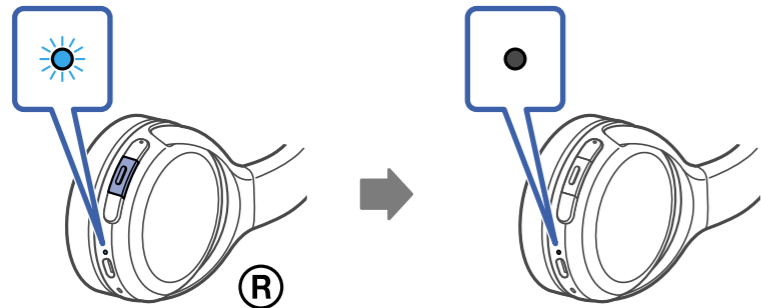

Android/iPhone

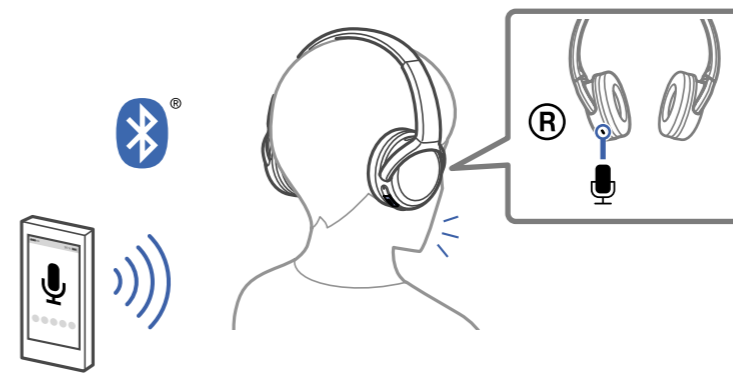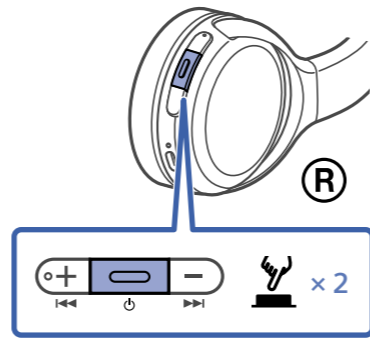

http://rd1.sony.net/help/mdr/whch510/h_zz/

