



Item No. : EMT107M Installation guide

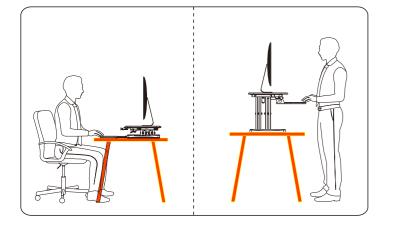


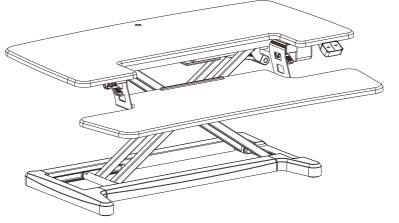


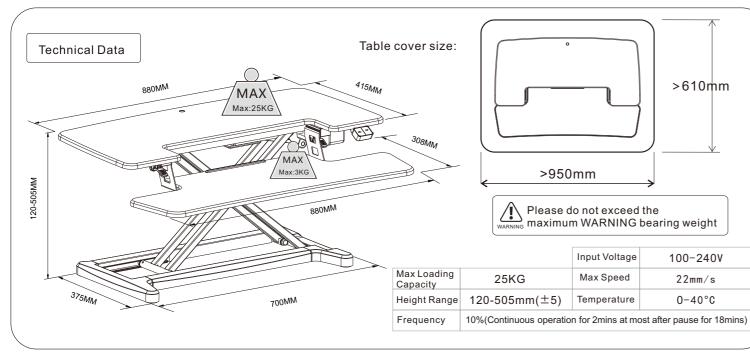

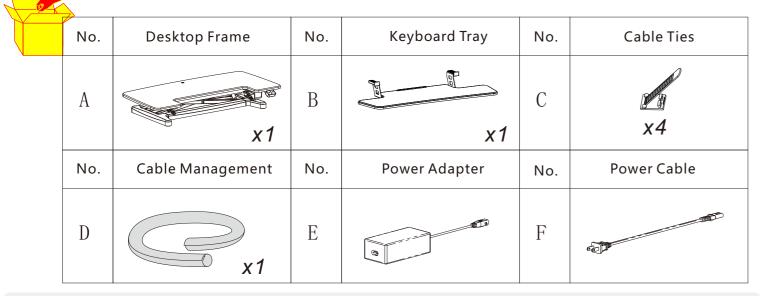


STEP 1 STEP 2

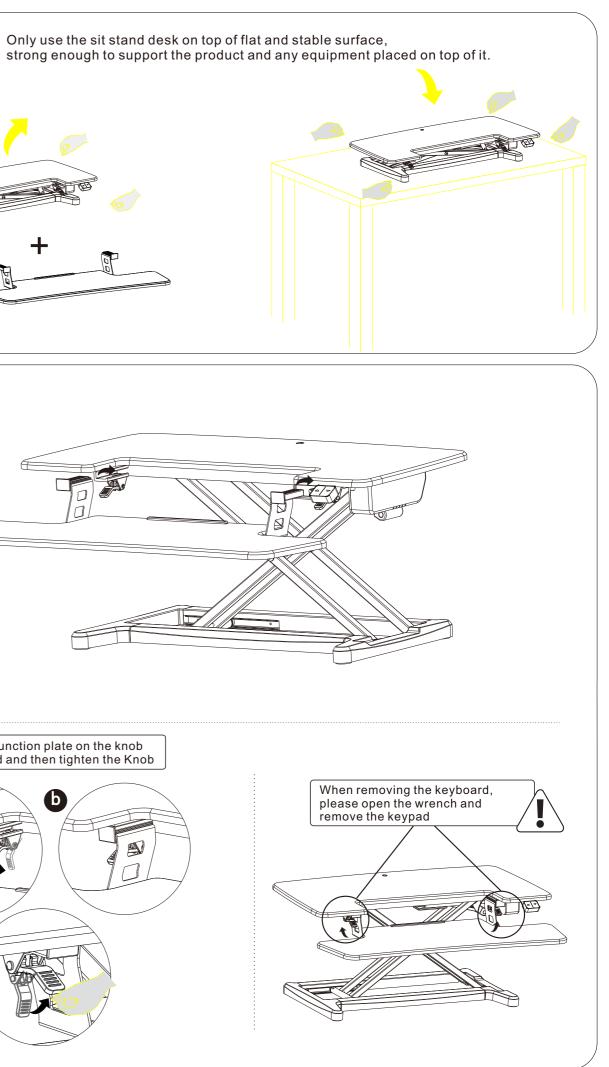

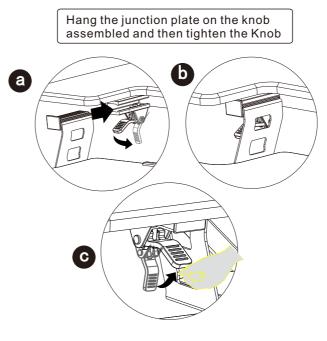





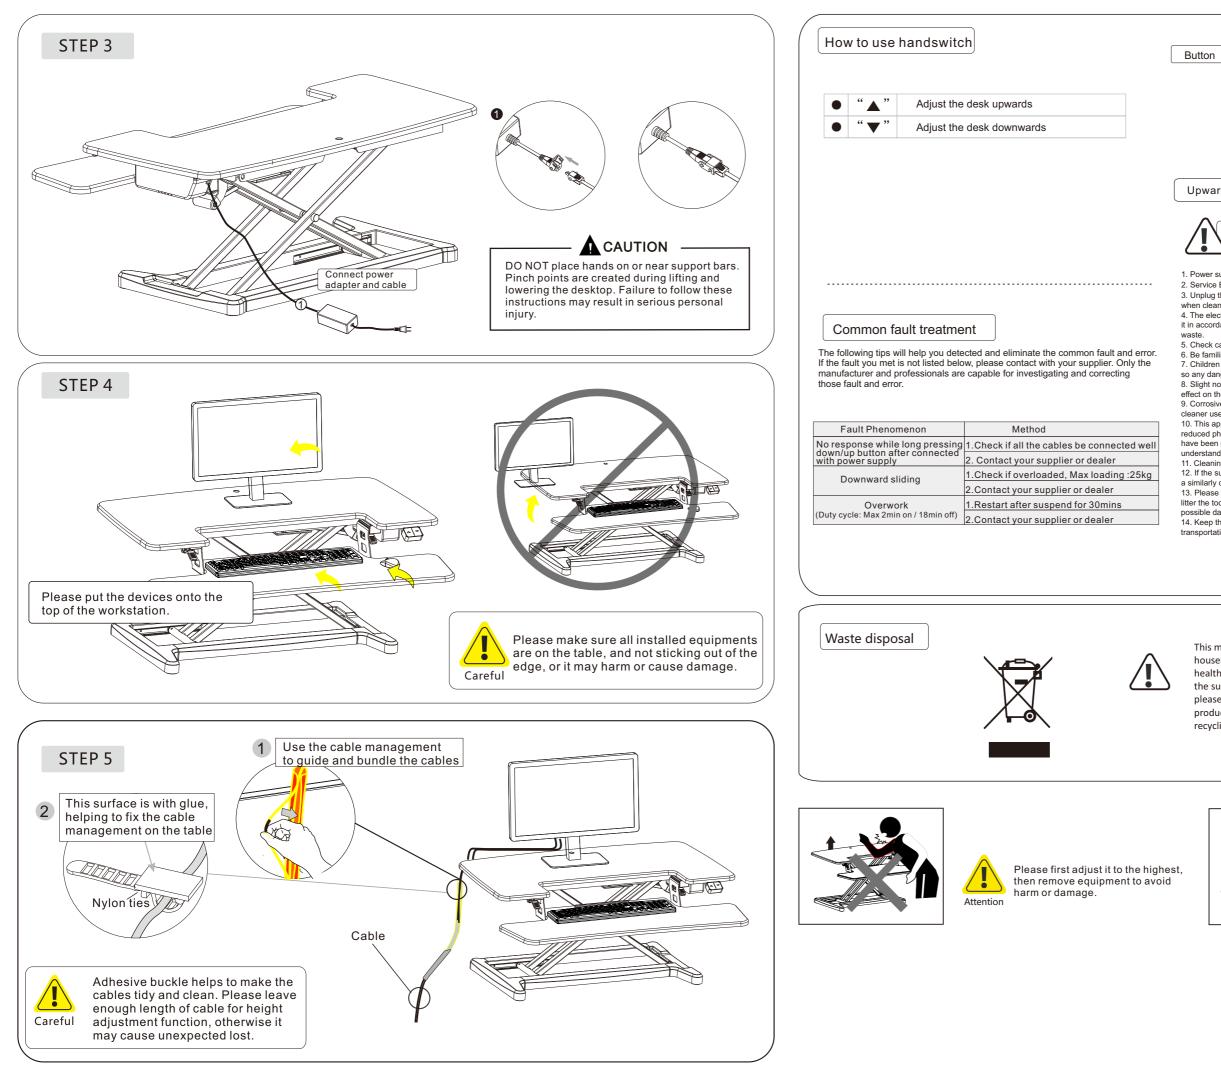

Downwards



Upwards



1. Power supply: AC100V-240V,50/60HZ

2. Service Environment: 0-40°C

3. Unplug the power plug before cleaning, wipe the dust on surface with slight wet dishcloth when cleaning, be careful not to let the drops into the internal parts, not loose the connector. 4. The electric box contains electronic components, metals, plastics, wires etc., so dispose of it in accordance with each country's environmental legislation, not the general household

5. Check carefully to ensure correct and complete assembly before using.

6. Be familiar with all functions and program settings of the product before first use. 7. Children are forbidden to play on the product because of unforeseen action when playing,

so any dangerous consequences caused by this improper action will not be on 8. Slight noise caused by the V-ribbed belt or brake system due to structure will not have any

effect on the use of the equipment. 9. Corrosive or abrasive materials are forbidden to clean the equipment. Must ensure that the

cleaner used will not pollute the environment. 10. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

11. Cleaning and user maintenance shall not be made by children without supervision 12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

13. Please make sure there is no hazard sources in your operating environment. e.g., do not litter the tools around. Always be careful to treat the packaging materials in order to avoid any possible danger, e.g. plastic bag may lead to choking hazard to children. 14. Keep the original package of the equipment if necessary in case of the future use in transportation.

This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





Please move it by two persons, or parts may collide and cause damage