

SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

These instructions are also available on our website. Please visit www.hot-europe.com



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: When the hairdryer is used in a bathroom, unplug it after use since the proximity to water presents a hazard even when the hairdryer is switched OFF.

For additional protection the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: Do not block the air inlet or outlet during use. When using the appliance, care must be taken to prevent hair entering the air inlet opening. The air outlet opening of this appliance will become hot during use, avoid touching the outlet or any accessories attached to the outlet.

NOTE: Use on towel dried hair only.

WARNING: Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU, the ROHS Directive 2011/65/EU and the Energy and Using Products Directive 2009/125/EC.

GUARANTEE AND SERVICE SECTION:

Your Revlon appliance is guaranteed against defects under normal use for three years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. For all claims within the warranty period please contact our Support Team. This guarantee does not cover defects which have occurred due to misuse, abuse, or are caused by failure to follow the instructions contained within this manual. This does not affect your consumer statutory rights. The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3416 - product manufactured week 34 of the year 2016.

For product support, please visit us at:

www.hot-europe.com/support

Or contact us by phone:

+44 (0) 115 965 7430

For product information, visit us at:

www.revlonbeautycare.com



This appliance complies with EU legislation 2012/19/EU on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful life.

Please DO NOT dispose of appliance in normal household waste.

Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

220-240V ~ 50-60Hz 2200W

The REVLON® trademark is used under license from Revlon, by Helen of Troy Limited.

Made in China.

European Headquarters

Kaz Europe Sàrl, Place Chauderon 18, CH-1003 Lausanne, Switzerland.

HOT (UK) Ltd, 1-4 Jessops Riverside, 800 Brightside Lane, Sheffield, S9 2RX United Kingdom.

©2016 Revlon. All rights reserved. (AW009475)

AW ISSUE No#: 1 Date: 09.16.16

REVLON®



FRIZZ FIGHTER HAIR DRYER

RVDR5229UK



PAP

OPERATING INSTRUCTIONS

This appliance is intended for household use only. The appearance of this appliance may differ from the illustration. Only use this appliance for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.

IONIC TECHNOLOGY™ - Negative ions produced by this anti-static, IONIC hair appliance nourish and condition your hair, leaving it looking and feeling soft, smooth and shiny. Negative ions also reduce the size of water droplets on your hair. These smaller droplets evaporate faster, reducing drying time. The IONIC function automatically operates when the unit is switched on.

FOLDING HANDLE - Twist handle to release from folded position and click it into place for use, for storage reverse process.

HEAT AND SPEED CONTROL - High temperatures and speed settings are ideal for fast drying or rough drying before styling; low temperatures and speed settings are ideal for styling and use on extensions.

OVERHEATING CUT-OFF - This appliance is equipped with a thermostat that will cycle OFF (0) should the heat of the dryer exceed the optimum drying level, due to partially blocked air inlet or outlet openings. In the event that the appliance stops, turn the appliance OFF (0) and allow it to cool down. Once the appliance cools, the thermostat will automatically reset and usage may resume.

COOL SHOT BUTTON - Once the desired style is achieved, push the cool shot button (❄️) to set the style with a flow of cool air.

SMOOTHING CONCENTRATOR - Channels airflow for smooth, manageable drying. Do not concentrate the airflow on any one area for an extended period of time. If you desire to dry your hair quickly, remove the attachment and set the dryer to a high heat and speed setting. Before drying thick hair with this attachment, use the dryer on the high setting to remove excess moisture.

STYLING - Always towel-dry hair before using a hairdryer. Set the dryer on a high heat/speed setting and circulate airflow through the hair. Do not concentrate airflow on any one area for a long period of time. As soon as hair is almost completely dry, lower the heat/speed setting and use a styling brush to shape the hair.

REMOVABLE END CAP CLEANING INSTRUCTIONS - This dryer is a precision designed professional tool, it must breathe to operate at peak efficiency. Always check that the air intake is free from lint, hair and other matter. Do not attempt this when the dryer is operating or connected to the mains supply. Turn off the appliance before cleaning the end cap. Hold the end cap at both sides and rotate it anti-clockwise to remove it from the dryer. Clean with a vacuum or thoroughly dust off the end cap with a brush and replace it on the dryer. This should be done regularly.

HANGING RING - This dryer features a ring allowing it to be conveniently hung on a hook for easy access.

CLEANING - Always unplug the appliance from the mains after use and allow it to cool before cleaning. Wipe the outer surface of the dryer with a slightly moist cloth, then wipe dry.

STORAGE - Always unplug when not in use. Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

FEATURES

- A. 3 HEAT SETTINGS
- B. 2 SPEED SETTINGS
- C. COOL SHOT BUTTON
- D. SMOOTHING CONCENTRATOR
- E. FOLDING HANDLE
- F. REMOVABLE END CAP
- G. HANGING RING

