# SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance.

These instructions are also available on our website. Please visit

www.hot-europe.com

**WARNING:** The appliance has a heated surface. Persons insensitive to heat must be careful when using the appliance.

**WARNING:** If water leaks from the appliance, the appliance should no longer be used.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly gualified persons in order to avoid a hazard.

**WARNING:** Should this product malfunction, do not attempt to repair it. This appliance has no userserviceable parts or components.

**WARNING:** This appliance must not be taken into the bathroom.

**WARNING:** Do not operate under a blanket or pillow as excessive heating can occur causing fire, electric shock or injury to persons.

**WARNING:** Only use this appliance for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.

# **WARNING:** DO NOT USE ON:

- Any area of the body that is swollen, burned or inflamed or when skin erupts or ulcerated sores are present
- Anv area of the body that is anaesthetized or lacks the ability to sense pressure or pain unless approved by your doctor.
- Legs with varicose veins.

- Calves of legs with unexplained pain
- Areas of the skin with severe acne, a rash or other skin ailments

NOTE: The Ultimate Indulgence Foot Spa should not be used with any additives which could bubble or salts which could corrode key parts and components

NOTE: Consult your doctor before use if you are pregnant. Do not use if you suffer from Diabetes or any other circulatory disease or illness. Massage should be pleasant and comfortable. Should pain or discomfort result, discontinue use and consult your doctor

NOTE: This appliance contains water which could splash during use please ensure that the appliance is operated on a water resistant surface to prevent damage to flooring etc. IMPORTANT: DO NOT allow the footbath to run continuously for longer than 20 minutes. Switch it off and allow the appliance to cool down to room temperature.

### **GUARANTEE AND SERVICE SECTION:**

Your Revion appliance is guaranteed against defects under normal use for three years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your receipt or other proof of purchase for all claims within the warranty period. The quarantee becomes void if the proof of purchase is not presented. For all claims within the warranty period please contact our Support Team.

This guarantee does not cover defects which have occurred due to misuse, abuse. or are caused by failure to follow the instructions contained within this manual. This does not affect your consumer statutory rights. The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3419 - product manufactured week 34 of the year 2019.

For product support, please visit us at:

### www.hot-europe.com/support

Or contact us by phone:

## +44 (0) 115 965 7430

For product information, visit us at:

## www.revlonbeautvcare.com



This appliance complies with EU legislation 2012/19/EU on end of life recycling. Products showing the 'Crossed Through' wheeled bin symbol on either the rating label, gift box or instructions must be recycled separately from household waste at the end of their useful

Please DO NOT dispose of appliance in normal household waste.

Your local appliance retailer may operate a 'take-back' scheme when you are ready to purchase a replacement product, alternatively contact your local government authority for further help and advice on where to take your appliance for recycling.

This product carries the CE mark and is manufactured in conformity with the Electromagnetic Directive 2014/30/EU, the Low Voltage Directive 2014/35/EU.

the ROHS Directive 2011/65/EU and the Energy and Using Products Directive 2009/125/EC.

220-240V ~ 50-60Hz 600W

Type#, EM7034EA

The REVLON® trademark is used under license from Revlon, by Helen of Troy Limited



European Headquarters Helen of Troy - Kaz Europe Sàrl Place Chauderon 18, CH-1003 Lausanne, Switzerland

1-4 Jessops Riverside, 800 Brightside Lane

Sheffield, S9 2RX United Kingdom. © 2019, Revlon. All rights reserved.

(AW013772)

printed in China

AW ISSUE No#: 3 Date: 27FEB19

# REVLON



**ULTIMATE INDULGENCE** 

RVFB7034UK

# **OPERATING INSTRUCTIONS**

This appliance is intended for household use only.

The appearance of this appliance may differ from the illustration.

Only use this appliance for its intended purpose as described in this manual.

Do not use attachments not recommended by the manufacturer.

### HOW TO USE

- 1. Place the appliance on a flat, level, solid floor. Unfold the foot spa by pulling up the edge one side at a time while holding the base firmly (figures 1 3).
- 2. Use the anti-collapse system to lock the unit. To do this, pull out the metal props at the front and back of the foot spa and push them into place under the edge of the tub (figures 4 & 5).
- 3. Ensure that the unit is unplugged before filling with water. Fill with warm tap water to the MAX fill line located on the inside of the tank.
- 4. Connect the appliance to the mains.
- Sit in a comfortable position and then place your feet in the foot spa. Always place your feet in the foot spa or remove them from the spa while in a sitting position. Never use the appliance in a standing position or stand up in the unit, as too much pressure will cause the unit to crack.
- 6. To operate the unit, select the desired water temperature by turning the ON/OFF switch to position 1, 2 or 3 (Low, Medium, High).

**NOTE:** The temperature of the water can reach up to 42°C within 15 minutes if the temperature of the warm water initially added was at 37°C.

To reach a warm temperature quicker, we suggest using warmer tap water.

**NOTE:** This foot spa cannot be used without water. It is NOT intended for dry operation.

- 7. The bubble jet strips will begin to emit bubbles. Enjoy a deep massage by sliding feet back and forth over the stimulating acunode mat on the footspa floor.
- If desired, add some drops of essential oil in the essential oil therapy case
  positioned on the side of the foospa for a true beauty salon experience.

**ALWAYS** use the Essential Oil Therapy Case. **NEVER** add essential oils or other aroma pads directly into the water as this can result in degradation to the special foldable material.

Ten minutes daily is sufficient to feel refreshed. The length of the massage and the frequency of use can be increased if necessary.

### **AFTER USE**

- 1. When you have finished, turn the appliance OFF by turning the ON/OFF switch to position 0, and remove the plug from the mains.
- 2. Hold the appliance on the sides of the unit and pour the water out.

**NOTE:** The footbath should be emptied through the convenient pouring mouth at the front of the unit.

3. To store the foot spa, unlock the anti-collapse system by unclipping the metal props from under the edge of the tub and folding them away. Then fold the foot spa down by pressing down on the edges while holding the base firmly.

**CLEANING** - Rinse the unit with water and a mild cleaning liquid and dry. Wipe with a soft, damp cloth.

**DO NOT** use an abrasive cleaner. Keep away from all solvents and any harsh detergents.

DO NOT immerse the appliance in water.

STORAGE - Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

### FFATURES

- A SPLASH GLIARD
- B SOFT ACLINODE MAT
- C. BUBBLING STRIPS

  D. MAX FILLLINE

F SWITCH ON AND TEMPERATURE SETTINGS BUTTON

F ESSENTIAL OIL THERAPY CASE

G FASY POURING MOUTH

















