

PRODUCT MANUAL

一、Packaging items

- >Wireless headphone
- >Manual
- >Charging cable

二、Precautions

- >Store and use this product in a normal temperature environment;
- >Do not expose this product to rain or moisture;
- >Do not throw, to avoid damage caused by falling products;
- >Do not disassemble, repair and modify this product;
- >Do not use chemical solvents to wipe the product;
- >Do not arbitrarily discard or put in the fire, so as not to cause danger!

三、Tips

In order to achieve the best sound quality headphones, please wear your headphones normally, do not disassemble the hardware yourself, use dry, soft cotton and so on.

We recommend that you take the following precautions:

1. Please listen to the appropriate volume of music, to prevent the adverse effects of hearing.
2. Do not use the product in the exposed liquid, wet or moisture in the environment.
3. When the temperature exceeds the specified temperature range 0°C to 40°C, do not operate the product. (If the range exceeds the specified temperature, turn off the device and allow the temperature to stabilize within the specified operating range.)

四、Instructions

No.	Function Realization	Headphone status	Operate	voice prompt	Indicator
1	Power On	Headphone OFF	Long Press "  /  " about 2s	"Bluetooth mode"	Blue and red lights flicker alternately
2	Power Off	Headphone on	Long Press "  /  " about 3s	"Power Off"	Indicator off
3	Pairing	Headphone off	Enter Pairing Status when Power On	"Bluetooth mode"	Blue and red lights flicker alternately
4	Pairing Successful	Pairing	/	"Ding Ding"	Blue light on
5	Disconnect	connected	/	"Dong"	Blue and red lights flicker alternately
6	Auto Pairing	Power Off	Auto pairing when power on	Ding Dong"	Blue light on
7	Out of distance disconnect	Out of distance disconnect	Out of distance disconnect. Headphone enter into pairing status. Blue and red lights flicker alternately. Headphone will be auto connected if move to working range within 1meter, or will automatic power off after 5mins without connection.	"Ding Dong"	Blue light on
8	Volume adjustment	Playing music	Short press:  /  / 	Maximum/Minimum Volume: "0 0"	/
9	Previous Track	Playing Music	Long press:  / 	/	/
10	Next track	Playing Music	Long Press: "  /  "	/	/
11	Play/Pause Music	Playing Music	Short Press "  /  "	/	/

12	Answer Calls	Incoming Calls	Short Press "  " /	Ring Ring™	/
13	Reject Calls	Incoming Calls	Short Press "  " /	/	/
14	Reject Calls	Incoming Calls	Long Press "  " /	/	/
15	Redial the last number	On State	Double Press "  " /	/	/
16	Hang up Calls	On Calling	Short Press "  " /	/	/
17	Low Electricity Prompt	On State	Battery voltage lower than 3.7V	Prompt: "Please Charge" every 20s.	/
18	Low Electricity Power Off	On state	Battery voltage lower than 3.1V	"Power Off"	/
19	Charging Indicator	Charging	Red Light when Charging	/	Red light On
20	AUX IN	Any status	One Plug in Headphone, another plug into the audio device	"Power Off"	Indicator Off
21	Fully Charge	charging	Fully Charge	/	Red Light Off
22	FM Mode	Headphone On	Long Press "  /  " about 2s	"FM Mode"	/
23	Automatic Station Searching	FM Mode	Short Press "  /  " /	/	Blue light flash
24	SD Card Mode	insert SD Card when on Bluetooth mode	Long Press "  /  " about 2s	"SD Card Mode"	/
25	Bluetooth Mode	FM Mode	Long Press "  /  " about 2s	"Bluetooth Mode"	/
26	Turn on/OFF LED light	Headphone On	Long Press 2 Second "  " /	/	LED light on/OFF
27	Switching Sound Effects	Playing Music Bluetooth Or SD Card Mode	Short Press "  /  " /	/	/