

Nutri Lite

 
For other languages see
pettadore.com/pages/manuals

*Please read this manual carefully before using.
Keep the manual in a safe place for future reference.*



PETTADORE
C A T T O G E T H E R


01 / Contents of the box



Main
Body



 Food
Hopper



Food
Bowl



Stainless
Steel Bowl



USB-DC
Cable
(1.5 m)

 


Desiccant



Manual

02 / Meet your Nutri Lite

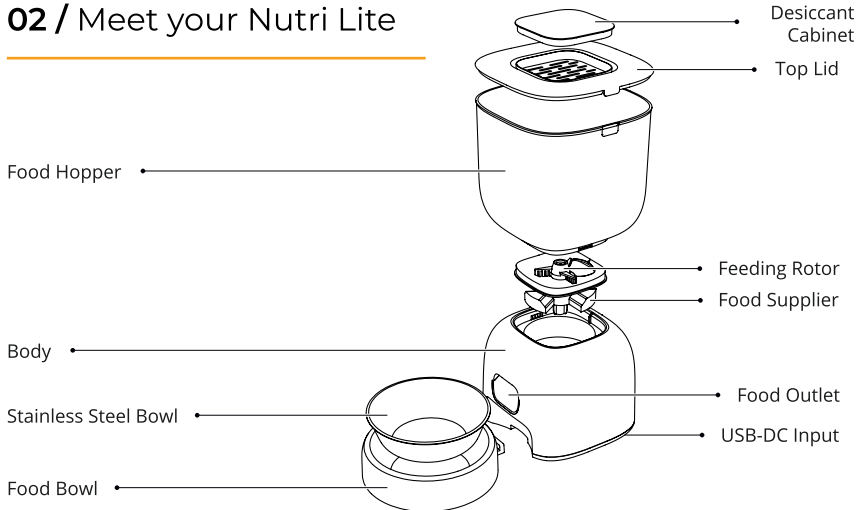

03 / Setup

1) Install

Take out the food hopper and install it by aligning the slot on the base.

2) Place the Desiccant

Remove the desiccant from the packaging and place it in the desiccant cabinet.

** It is recommended to replace the desiccant once a month.*

Don't let it fall into the hopper, and NEVER use it if it is damaged.

3) Power on the feeder

A. Battery power supply: remove the battery cover by releasing the retaining clip, insert 3 good quality alkaline "D" batteries and reinstall the battery cover. *

B. Power adapter supply: plug in the power adapter and connect the power cable into the slot. Connect the USB-DC cable to the power input port at the bottom of the feeder, then connect a 5V/1A USB adapter to the wall outlet. **


*** The USB adapter is not included, please prepare yourself*

4) Install Food Bowl


Tilt the base unit back slightly, align the buckle of the food bowl with the base unit to install; the same steps to disassemble.

5) Fill the hopper with food

Open the top lid, pour dry food into the hopper to fill it and close the top lid.

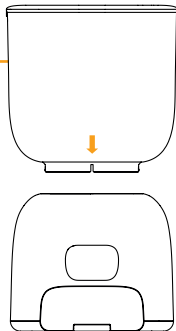

Kibble size checker

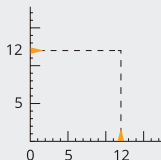

04 / Operations

Unlock The Panel

Press the  button for 5 seconds to unlock. After 30 seconds of no operation the screen will lock automatically.

Setting Clock

1. Unlock the panel and press the  button to enter the settings.
2. Press  or  to adjust the hours and press to confirm. Press  or  to adjust the minutes and press the  button to confirm.

Program Feeding Schedule


1. **Program Meal Time(s):** after confirming the clock setting, the MEAL **1** number will flash, indicating that you can now configure your first meal. Press  or  to adjust the hours and minutes and press the  button to confirm.
3. **Meal Size:** after setting the meal time, the PORTION  number will flash, indicating that you can configure your meal size. Press  or  to select the desired amount and press the  button to confirm.
4. Repeat this process to plan your desired meal times and portions (up to 4 meals and 9 portions per meal).
5. When you are finished with your settings, long press the  button to save and exit the set mode.

Check feeding schedule

Press + or - when the panel is locked to check the upcoming feeding moment in the schedule.

Manual feeding

Unlock the panel and press the + button.

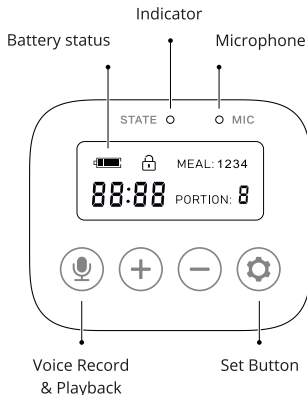

Cancel Feeding Schedule

Set the portion to “PORTION: 0” to cancel the feeding schedule.

Default Meal Settings

Unlock the panel and press  and  simultaneously until you hear the “DiDi” sound. This resets the time, clears the feeding schedule and the recording.

Record voice memo

Unlock the panel and long press  to enter recording mode, the “STATE” indicator light will light up. Record your voice towards the “MIC” hole for up to 10 seconds. If the button is released within 10 seconds, the recording ends immediately. **Note:** If you need to record again, repeat the above steps.

Play record

Unlock the panel and press  to play the recorded voice memo. If nothing plays, there is no record.

05 / Indicator & Icons

STATE 	ON	Working
STATE 	ON	Voice recording
	BLINK	Device defective
		Low battery power

	OFF	Battery uninstalled
	ON	Battery installed
	ON	Low battery power
	ON	Panel unlocked
	ON	Panel locked
MEAL: 1234	OFF	No meals plannend
	ON	Meals planned
	BLINK	Setting Meals


06 / Cleaning and maintenance

Power Off

Unplug the device and take out the alkaline batteries.

Play record

1. Hold the base steady and pull out the food hopper upward.
2. Disassemble the food supplier and food rotor.
3. The main body of the feeder is not dish washer-safe. Do not immerse the main body in water, this could damage the internal electronics and cause the batteries to short circuit, create an electrical shock, or catch fire.
4. Use a dry soft cloth to clean. The body is not waterproof, do not use a wet cloth.
5. Make sure all parts of the feeder are completely clean and dry before reinstalling and filling.

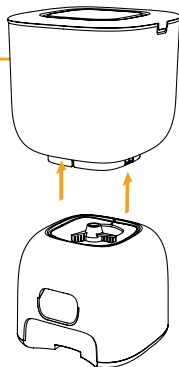

Assembling

1. Align the triangle mark when installing the Food Supplier.
2. Install the food hopper by aligning the slot on the base.



Replace the desiccant

Open the desiccant cabinet and replace the desiccant.
It is recommended to replace the desiccant once a month.

Replace Batteries

Unplug the feeder and open the battery lid at the bottom to replace the batteries.

Warnings:

- _Make sure the food hopper is completely dry after cleaning it.
- _Replace the food in the hopper on a regular basis when the device is not being used.
- _Clean and maintain your device on a regular basis to prolong the operating time of your feeder.

07 / Troubleshooting

Issue	Cause	Solution
No display on LCD Screen	No power plugged in or battery installed	Plug in the device or install batteries
	Feeder defective	Contact customer service
Food Supplier can not be installed	Food is blocking the installation	Clear any food and align the triangle and reinstall
Food hopper can not be installed	Food is blocking the installation	Clear any food and reinstall
E1 – Display	Impurities inside the food hopper	Clean the impurities inside of the food hopper
	Food size is inapplicable	Ensure to use 5-12 mm dry food

08 / Specifications

Model: PF007

Dimension: 168*296*290 mm

Material: Food-grade ABS, SUS 304 Stainless steel bowl

Power Input: Input Voltage 5V-1A or 3x D Size batteries

Capacity: 3.0 L

Warranty: 1 Year

Weight: 1,13 kg

Kibble size: 5-12 mm diameter



For other languages see pettadore.com/pages/manuals



09 / Precautions

Device

1. Use the product in an indoor environment.
2. Place the product on a level surface to prevent tipping, spilling, and improper operation.
3. Keep the device in a dry area and do not expose the device to sunlight.
4. DO NOT place the feeder in a high place to avoid damage from dropping.
5. DO NOT put anything other than dry food into the food hopper. Otherwise, there is a risk of dysfunction or mistaken feeding.
6. The pet food's shape and density will cause some deviations from the food hopper's capacity and the feeding unit's quantity.
7. To prevent the feeder from being hit by pets, it is recommended to place the feeder in a corner or against the wall.
8. To avoid tripping over the power cable, always keep the power cable out of the way of foot traffic.
9. Do not place anything on top of this feeder.
10. After each fill-up of the hopper, there may be a deviation of two portions at the initial feeding time. It is recommended to calibrate manually. (Click the manual feeding button until food is fed)
11. Ensure there are no barriers near the food outlet to make sure the pets can be fed normally.
12. Use the appliance only for its intended purpose.
13. Avoid using accessory attachments not recommended by the manufacturer, as they may cause injuries.

Environment friendly disposal

Help protect the environment! Please follow your local regulations for the disposal of nonfunctional electrical equipment.



Manufacturer: Pettadore
Vasteland 78 unit A2.14, 3011 BN
Rotterdam, The Netherlands

Electricity safety

1. Please check the power supply before going out.
2. Always plug the cord into the appliance first and then into the wall outlet.
3. The clock time will be saved for a year if the device is powered off.
4. Please pay attention to the battery display when powered by batteries. Replace the batteries when  shows on the LCD screen.
5. It's suggested to replace the batteries once a year if you do not use the batteries, because their power will run off as time goes by.
6. When powered by batteries, it is normal for the electric quantity icon to fluctuate occasionally because of the large transient current.
7. To prevent electric shock, do not insert the power card or plug into water or other liquids.
8. The device only supports the use of a 5V/1A adapter; please do not use a non-specific adapter.
9. Please ensure the power cord is shielded or organized securely to prevent pets from biting it.
10. Keep the supply cord away from heating elements and metal enclosures during use.
11. Do not operate the appliance with a damaged cord or plug. If it malfunctions or is damaged, return it to an authorized service facility for inspection, repair, or adjustment.

Caution

1. This feeder is suitable for cats and small to medium-sized dogs.
2. DO NOT use this feeder for puppies, kittens, dogs or cats with any physical disability.
3. DO NOT eat the desiccant. DO NOT use it if it is damaged.
4. Use ONLY dry food. Feeder works best with 5-12 mm food diameter.
5. Do NOT disassemble or modify the device yourself.
6. DO NOT immerse the feeder in water at any time, as this can cause damage to the electronic components.
7. Dispose of all packaging materials properly. Some items may be packed in bags; these bags could cause suffocation; keep away from both children and pets.
8. DO NOT operate the feeder without Bowl, Food Hopper and Lid securely in place
9. DO NOT clean the main unit; instead, please wipe it with a dry cloth. After cleaning the other parts, please dry it before reinstalling.
10. Children must use the device under the guidance of adults.

10 / Warranty Terms

During the warranty period, if the product malfunctions due to manufacturing defects, it will be repaired at Pettadore's expense. The following conditions are not covered by the warranty:

- 1) Damage caused by intentional actions.
- 2) Failure to follow the User Manual instructions for product use and maintenance.
- 3) Natural wear and tear, including but not limited to scratching, corrosion, oxidation, and rust.
- 4) Repairs, modifications, or cleaning performed by a non-Pettadore authorized third party or the user themselves.



For other languages see pettadore.com/pages/manuals





CAT TOGETHER