





Formula 3/5R

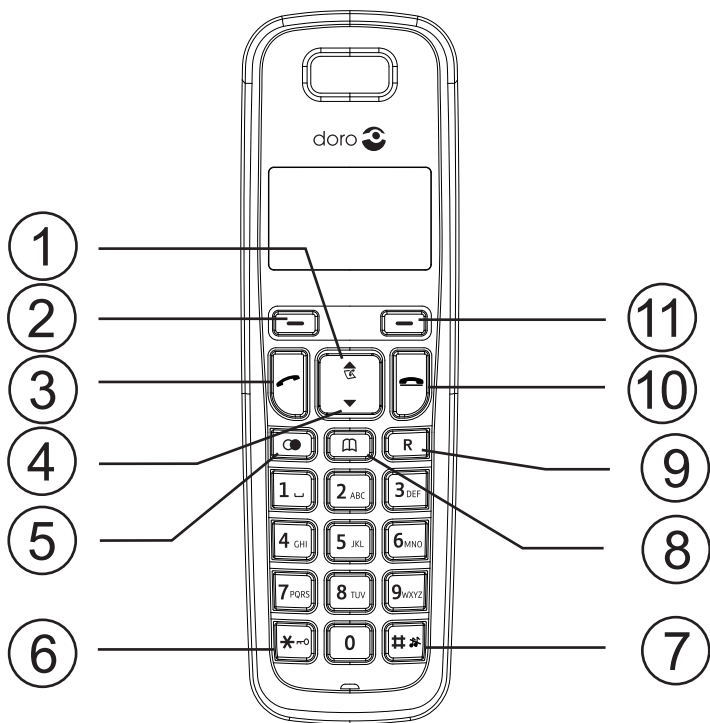

Formula 5r

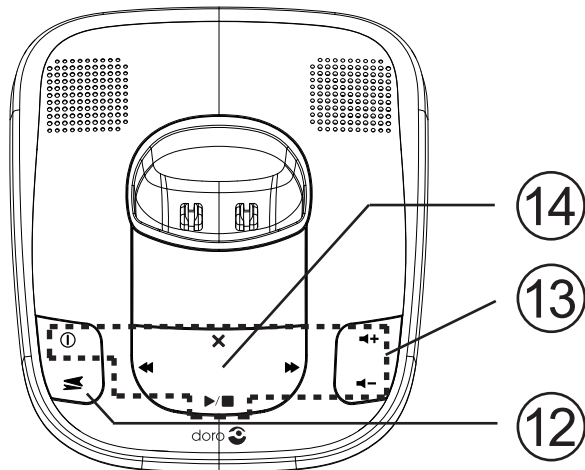

English

1. Up / missed call
2. Left menu button/OK
3. Talk button
4. Down/Redial
5. Redial
6. * and keypad lock
7. # and ring signal On / Off
8. Phone book
9. R Recall button (PBX features)
10. End call and on / off button
11. Right menu button/Back/Internal call






Only for Formula 5r:

12. Paging
13. Answer machine functions. Detailed in *Answer machine* section.
14. Message indication/display

Installation

This device is intended for the analogue telephone network lines in AT, BE, BG, CH, CY, CZ, DE, DK, EE, ES, FI, FR, GB, GR, HU, IE, IS, IT, LV, LT, LU, MT, NL, NO, PL, PT, RO, SI, SK, SE.

Connection

1. Connect mains adapter and phone cable to wall sockets.
2. Insert batteries (1.2V NiMH AAA Doro 500mAh) in accordance with the markings.
3. Place the handset into base unit with the keypad facing outwards to charge (24 hours the first time).
4. Press  (left menu button).
5. Scroll   to **HS SETTINGS**.
6. Press **OK** (left menu button).
7. Scroll to **LANGUAGE**. Press **OK**.
8. Scroll to **ENGLISH**. Press **OK**.
9. Press  or  several times to exit the menu screens.






Note!

Use the telephone line cord supplied, an existing line cord from a previous phone may not be compatible.

The mains socket outlet must be located near the equipment and easily accessible.

If the Formula 5r base unit's display is showing -- the answer machine is disconnected, or time/date is not set.

Date/Time

1. Press  (left menu button).
2. Scroll   to **HS SETTINGS**. Press **OK**.
3. Scroll to **HS DISPLAY**. Press **OK**.
4. Scroll to **TIME**. Press **OK**.
5. Scroll to **DATE & TIME**. Press **OK**.
6. Scroll to **SET TIME**. Press **OK**.
7. Enter time of day (HH-MM). Press **OK**.
8. Scroll to **SET DATE**. Press **OK**.
9. Enter date (DD MM YY). Press **OK**.
10. Press  or  several times to exit the menu screens.

The format of date/time can also be adjusted in this menu in the same way as other settings.

Battery

When the batteries are relatively new (less than 6 months) and fully-charged (10 hours) they will last for approx 100 hours standby time or approx 10 hours call time. Full battery capacity will not be reached until the batteries have been charged 4–5 times. It is not possible to overcharge or damage the batteries by charging them for "too long". It may take up to 5 minutes charging before display illuminates, if batteries are totally empty.

Warning!


Risk of explosion if battery is replaced by an incorrect type. Use only original batteries. The guarantee does not cover any damage caused by using the wrong batteries.

Note!

When the battery is low or when there is too great a distance to the base unit the telephone will be unable to connect to a line. Do not place the base unit close to other electrical equipment, in direct sunlight or other strong heat sources! This is to minimize the risk of any interference. It is normal for the device to become warm during charging and this is not dangerous.

Dispose of used batteries according to the instructions.


Battery LED

When the batteries are running low,  will flash and a warning tone will be heard when a call is in progress.

Please note that the complete battery indicator in the display will flash as long as the handset is charging, and when the battery is fully charged only the inner segment will flash.

Range

The telephone's range depends on whether or not the radio waves carrying the call are restricted by obstacles in their path, and is usually between 50 and 300 metres. Coverage can be improved by turning one's head so that the handset is aligned with the base unit. Sound quality declines as the limit is reached until the call is finally interrupted.

The  symbol is shown when the phone is within range and goes out/flashs when it is out of range.

Eco Functionality

We have introduced the ECO FUNCTIONALITY label to help customers identify products within our assortment having a lower impact on the enviornment. Products carrying this label feature:



- Reduced power consumption in both operational and standby modes.
- Adaptive transmission power depending on range on base unit.

Operation

Making a call

1. Enter the required number. Delete if necessary with right menu button **C**.
2. Press  to make the call. Press  to end the call.

Receiving a call

1. Wait for the handset to ring.
2. Press  to answer. Press  to end the call.

Volume control

The volume may be adjusted during a call with  .




Redial

Press . Scroll among the 5 most recently dialled numbers with  . Press .

Mute button

The microphone can be switched on / off during a call with **C** (right menu button).

Paging

The handset will ring when  (on the base unit) is pressed. The signal will stop automatically after a while or if the  button on the handset or the  button on the base unit are pressed.

Temporary silent mode

When someone calls, you can press **C** (right menu button) to turn off the handset ring signal.



Softkeys

Note the top two keys just under the menu are “softkeys”. Their function is shown in the Display directly above them.






Phonebook

You can save 20 numbers/names. If you subscribe to a caller ID service, the name allocated to the caller in the phonebook will be shown for incoming calls. It is possible to choose between various ringers for the numbers saved in the Phonebook (only functions if you subscribe to a caller ID service).





Save name/number in handset

1. Press . Press .
2. Scroll to **ADD**. Press **OK**.
3. Press equivalent digit key several times for desired name. Press **OK**.
4. Enter the telephone number, including the area code. Delete if necessary with right menu button **C**. Press **OK**.
5. Scroll to required ringer. Press **OK**.





Managing the phonebook

1. Press . Scroll between entries with /. You can quick search the phonebook by pressing the corresponding number key for the first letter.
2. Press  to make a call or press  for various options.

Edit number

1. Press  (left menu button).
2. Scroll / to **PHONEBOOK**, press **OK**.
3. Scroll to the name you choose to edit, press .
4. Scroll to **EDIT**, press **OK**.
5. Check name is correct, press **OK**.
6. Number will appear with cursor flashing at the end of the number.
7. Press **C** to backspace/delete number.
8. Re-enter correct number, press **OK**.
9. Select melody, press **OK**.



Delete number

1. Press  (left menu button).
2. Scroll / to **PHONEBOOK**, press **OK**.
3. Scroll to the name you choose to delete, press .
4. Scroll to **DELETE**, press **OK**.


Incoming numbers/Caller ID

The display shows you who is calling and the 10 most recent missed calls. **NEW CALLS** will be shown in standby mode and ★ in the list indicates a missed call. This function requires a subscription from your service provider!

Retrieving and dialling

1. Press ▲. Scroll to the desired entry with ▼.
2. Press  to call or press  for various options (↶ = back).

Deleting new calls/number log

1. Scroll ▲ to new call number, press  (left menu button).
2. Scroll ▼ to **DELETE** or if more than one number, scroll to **DELETE ALL**, press **OK**.
 1 **CONFIRM** will be displayed on screen, press **OK**.

Caller identification messages


In addition to number display, the following messages will be shown occasionally:

OUT OF AREA	Unknown number, e.g. international call.
WITHHELD	Information about the number is blocked. Number cannot be shown.
OO	MSG indication from your network operator*



*To remove the message indicator: Press ▲ and then hold down **4**.

Settings

Functions

1. Press . Scroll to **HS SETTINGS**. Press **OK**.
2. Scroll to desired function e.g. **LANGUAGE**. Press **OK**.
3. Scroll to desired setting. Press **OK**.

ALARM

When the alarm is activated  will be shown in standby mode. When the alarm goes off, a signal will be heard for 45 seconds. The signal can be turned off with any button. If **SNOOZE** is activated the alarm will go off again approx. 7 minutes later. Turn the alarm off permanently via the menu or by holding  down for a few seconds. The volume is determined by the set ringer level.

RING SETUP

The handset's ringer signal.
INT/EXT=internal/external.

Note!

Melodies 2,3,4... will continue for up to 8 seconds if the call is answered in another phone. Set melody 1 if you want to avoid this.

TONE SETUP

Any of the following warning tones can be disabled: KEYTONE, LOW BATTERY and RANGE.

LANGUAGE

The language of the display texts.

RENAME HS

The text shown in standby mode.

HS DISPLAY

Show name or time in standby mode.

AUTO ANSWER


The call is answered when the handset is lifted from the base.

DATE & TIME

Setting the date/time. The format of date/time can also be adjusted.

System settings

System PIN is 0000 on delivery.

1. Press . Scroll to **BS SETTINGS**. Press **OK**.
2. Scroll to desired function. Press **OK**.
3. Enter the desired setting. Press **OK**.

BS RINGER/ RING VOLUME

The base unit's ringer signal can be adjusted. Only applies to Formula 5r.

DELETE HS

To de-register a handset.

WARNING: A deregistered handset can no longer be used with the system!

FLASH TIME

Recall time.

LONG=New Zealand. **MEDIUM**=France/Portugal. **SHORT**=others incl. UK/AUS.

 
CHANGE PIN



The code (e.g. 0000) can be changed.

Expanded system (Two or more handsets e.g duo, trio...)




The call number for internal calls will be shown in the display in standby mode. The base unit should be positioned centrally so that the coverage area is roughly equal for all handsets.

Intercom / internal call

1. Press  (right menu button).
2. If using more than 2 handsets: Enter call number **1-5** for the desired handset or press **9** for all.

A tone will be heard if an external call comes in while an internal call is in progress. End the internal call with  and then answer the external call with .

Transferring calls/Conference between handsets



1. When an external call is connected;
2. Press . Scroll to **INTERCOM**. Press **OK**.
3. If using more than 2 handsets: Enter call number **1-5** for the desired handset or press **9** for all.
4. To transfer: press . For conference: hold  pressed down.

Register a new handset

All handsets included in the package are already registered to the base unit. Only for separate handsets/service measures. You can register up to 5 handsets to one base unit.

Note!

This model is GAP (Generic Access Profile) compatible, which means that the handset and the base unit can both be used with most other GAP compatible units irrespective of manufacturer. However the GAP protocol cannot guarantee that all functions may be accessed. Extra handsets will not be available as accessories.

1. Hold down  on the base for around 6 seconds.
2. Press . Scroll to **Registration**. Press **OK**.
3. Enter the base unit's PIN code (e.g. 0000). Press **OK**.
4. If the registration is successful the unit will return to standby mode within one minute.


Answer machine (only Formula 5r)


When the answer machine is switched on calls are answered after a set number of rings, your outgoing message is heard and the caller can leave a message. Total memory capacity is up to 15 minutes depending on the set sound quality. Most functions can be accessed from both base unit and handset.

Switching the answer machine on/off

Press ① (on the base unit) to switch the answer machine on/off. If the base unit's display is flashing/showing -- the answer machine is disconnected, or time/date is not set.

On/Off from the handset

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM ON/OFF**. Press **OK**.
3. Scroll to desired setting. Press **OK**.


If the handset's display shows  with a steady light the answer machine is switched on. If there are new messages, the indicator will flash whether the answer machine is off or on.

Note!

*Even when answer machine is OFF it will still answer after 10 rings, please see **Remote activation**.*

Outgoing message


The outgoing message (max 3 min) is heard by incoming calls. There are two separate outgoing messages, one for Answer only (callers cannot leave a message) and one for normal answering function. Please also select desired answer function. See *TAM Settings*.

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM SETTINGS**. Press **OK**.
3. Scroll to **OGM SETTINGS**. Press **OK**.
4. Scroll to **ANSWER & REC/ANSWER ONLY**. Press **OK**.
5. Scroll to **Record MESS**. Press **OK**.
6. After the long beep you can record your message (speaking 20 cm from the keypad). Press **OK**.
7. The message will be played back to you. Repeat the above to change.

Note!





 
*A pre-recorded message is used until you make your own recording, and that message can also be restored if required. To restore this, press **C** (right menu button) during playback of outgoing message.*

Screening

Incoming messages will be heard on the loudspeaker of the base unit as they are received. If nothing can be heard, check that the volume is turned up and that the function has been activated – see separate description *Answer machine settings*. You can also press **OK** on the handset while recording is in progress. The call can be intercepted by pressing  or lifting the receiver of another telephone connected to the same line.

Use of answer machine (base unit)


The numbers on the base unit will flash when there are new messages.



	Start playback
	Stop playback
	Prev msg/Skip forward
	Delete current message
	To increase/decrease the volume







Delete all old messages

After playback: Hold down **X** until you hear a beep.


Use of answer machine (handset)

New messages are indicated by  flashing in the display in standby mode. Playback always starts with new messages.


1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **MSG PLAYBACK**. Press **OK**.
3. During playback the following commands are available (see table below).
4. End by pressing .

2 ()	Delete during playback
4 ()	Previous message
5 ()	Stop
6 ()	Skip to next message
 / 	Volume control

Delete all old messages

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **Delete all**. Press **OK**.
3. Confirm by pressing **OK**.

Personal message (Memo)

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **MEMO**. Press **OK**.
3. After the long beep you can record your message (speaking approx. 20 cm from the keypad).
4. Press **OK**. The message will be played back to you.
5. Memos are played back in the same way as ordinary incoming messages.


Out of memory

The memory has room for up to 59 messages (including the outgoing message) max. 15 minutes depending on the compression you set. When **TAM FULL** is shown or the base unit flashes **FF**, no new messages can be recorded until the old ones have been played back and deleted. In that case, the telephone answer machine responds with the outgoing message for Answer Only.

Note!

Remember to delete messages regularly!

Answer machine settings

1. Press . Scroll to **ANS. MACHINE**. Press **OK**.
2. Scroll to **TAM SETTINGS**. Press **OK**.
3. Scroll to desired function. Press **OK**.
4. Scroll to desired setting. Press **OK**.

ANSWER MODE	Choose between ANSWER & REC and ANSWER ONLY (caller cannot leave message).
TAM LANGUAGE	Select language for pre-recorded outgoing message. To activate this, press C (right menu button) during playback of outgoing message.
OGM SETTINGS	Record/listen to outgoing msg.
ANSWER DELAY	Select after how many rings (2,4,6,8, time saver*) the call will be answered.
RECORD TIME	Select maximum recording time for each msg.
REMOTE ACC.	Select remote access off/on.
COMPRESSION	Higher compression gives longer recording time but reduced sound quality, LOW = best sound quality but about half memory capacity.
BS SCREENING	Enable/disable the function in base unit which is described in chapter <i>Screening</i> .
CHANGE PIN	Change remote access code (0000).

Note!

The Time Saver function answers calls after six ring signals, until the first new message has been registered - then the answer machine switches to answering after approximately two signals. This is useful when using remote access; if you call up the answer machine and there is no reply after four rings that means there are no messages recorded and you can hang up before you are charged for the call.

Remote activation

The answer machine can be activated via the remote access functions.

1. Call the answer machine. It will answer after approximately 10 rings.
2. Press ***** when the outgoing message is played.
3. Enter the PIN code, see *Answer machine Settings*. One beep confirms correct code.
4. Press **7**.
5. Replace the handset.

Remote access

The unit can be remotely accessed using an ordinary tone dialling telephone.

1. Call the answer machine.
2. Press ***** when the outgoing message is played.
3. Enter the PIN code, see *TAM Settings*. One beep confirms correct code.
4. Select a remote access command (see table below).
5. Replace the handset.

2	Erase single msg during playback
4	Skip to previous message
5	Playback of messages
6	Skip to next message
7	Turn on the answer machine
8	Stop
9	Turn off the answer machine

Troubleshooting

Check that the telephone cord is undamaged and properly plugged in. Disconnect any additional equipment, extension cords and other phones. If the problem is resolved, the fault is with some other equipment.

Test the equipment on a known working line (e.g. at a neighbour's house). If the equipment works there the fault is probably with your telephone line. Please report this to your network operator.

No number shown when ringing

- This function requires a Caller ID subscription from your service provider.

Warning tone/Not possible to make calls

- The batteries may be running low (charge the handset).
- The hand unit may be nearly out of range. Move closer to a base unit.

Telephone does not work

- Check that the adapter/phone cord is connected correctly.
- Check that you have selected Tone Dial, see *System Settings*.
- Check the charge status of the handset batteries.
- Connect another functioning telephone to the network wall socket.

The telephone continues to ring

- Some of the telephone's ringers do not follow the line signal, which means that the signal may continue for up to 8 seconds after answering a call.

The answer machine does not respond to remote access

- Check that you are using a tone dial telephone.
- Try holding the buttons down longer, approximately 1 second per digit.

The answer machine is not answering

- Memory may be full. Listen to/delete your messages.
- Check that the adapter/phone cord is connected correctly.
- Check that the answer machine function is turned on.

If the telephone still does not work, please contact the place of purchase for service. Don't forget the receipt or a copy of the invoice.

Warranty and other information

Specific Absorption Rate (SAR)

This device meets applicable international safety requirements for exposure to radio waves. The max. limit according to WHO is 2W/kg (per 10g tissue). This telephone measures 0,04 W/kg (per 10g tissue). Close to the base, i.e. within 20% of the maximum range, the SAR value is reduced to around 0,02 W/kg (per 10g tissue).

Declaration of conformity

Doro hereby declares that the products Doro Formula 3/5r conform to the essential requirements and other regulations contained in the directives 1999/5/EC (R&TTE), 2002/95/EC (ROHS). A copy of the manufacturer's declaration is available at www.doro.com/dofc

Guarantee

This product is guaranteed for a period of 12 months from the date of purchase. If you experience any problems please contact the place of purchase. Proof of purchase is required for any service or support needed during the guarantee period. This guarantee will not apply to a fault caused by an accident or a similar incident or damage, liquid ingress, negligence, abnormal usage, non-maintenance or any other circumstances on the user's part. Furthermore, this guarantee will not apply to any fault caused by a thunderstorm or any other voltage fluctuations. As a matter of precaution, we recommend disconnecting the device during a thunderstorm. Batteries are consumables and are not included in any guarantee. This guarantee does not apply if other batteries than DORO original batteries have been used.

Doro Formula 3

Doro Formula 3 Duo

Doro Formula 3 Trio

Doro Formula 3 Quad

Doro Formula 5r

Doro Formula 5r Duo

Doro Formula 5r Trio

Doro Formula 5r Quad

English

Version 1.2

www.doro.com

