

User manual for Remote

Specification :

1. With the function of pointer, motion sensor, speaker and shock vibration.
2. Connect with nunchuck (Not Included) for some games if necessary.
3. Connection via Wireless connection with the console by simply pressing the SYNC. Button.
4. Compatible with or without motion plus (Not Included)


CAUTION :

Do NOT expose the Remote to extreme conditions, including direct sunlight, excessive heat or humidity. Keep the Remote away from liquid.

Operating Instruction:


A. Batteries Installation :

1. Remove the battery cover of the Remote
2. Insert the 2pcsxAA size batteries (NOT Included) inside the battery compartment

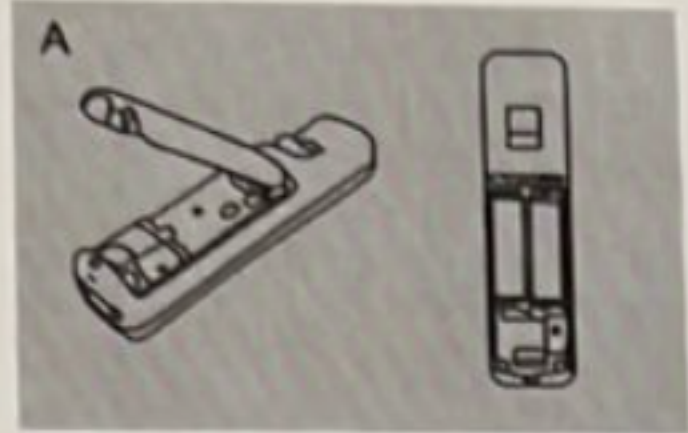

B. Synchronizing the Remote with the console :

1. Turn on the Power button of the console.
2. Remove the battery cover of the Remote. And press and release the SYNC. button. The blue LED indicators of Remote will flash.
3. Open the SD Card Slot cover at the front of the console. Press and release the SYNC. button.
4. When the blue LED indicators of Remote stop flashing, then the synchronization between Remote and console is finished. The blue LED light will indicate the player number of Remote.

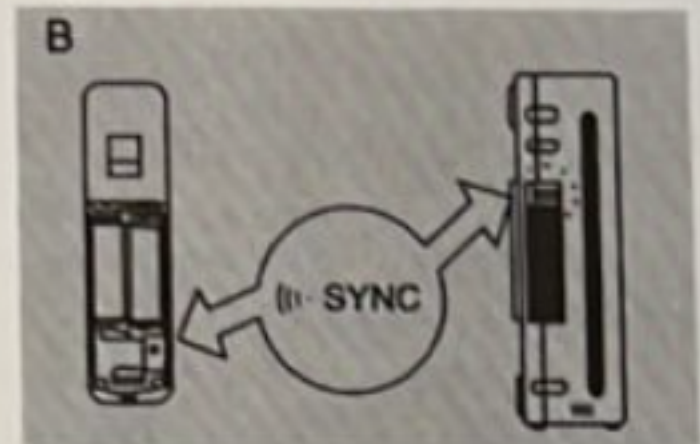

User manual for Wired Nunchuck

Specification :

1. Motion sensor, Thumb stick and Triggers
2. Certain games need the Nunchuck controller for additional control options
3. Control perfectly to fit a player's hand
4. The nunchuck doesn't need its own power
5. It plugs into the Remote when using

CAUTION :

Do not expose the Nunchuck to extreme conditions, including direct sunlight or excessive heat or humidity. Keep your Nunchuck away from liquids.

Operating Instruction:

1. Connecting the Nunchuck :

Insert the Nunchuck plug into the External Extension Connector at the bottom of the Remote until it "clicks" into place.

2. Disconnecting the Nunchuck :

Press the Lock/Release Levers on the sides of the Nunchuck plug and pull the plug straight out of the External Extension Connector at the bottom of the Remote.

