High Speed Hair Dryer





Important safty instructions

In order to avoid accidental injuries such as electric shock and fire caused by improper use, please read the instruction manual carefully before use, and keep it properly for future reference.

- This product should not be used by persons with physical, sensory or intellectual disabilities, and persons without relevant experience and knowledge (including children), unless supervised or instructed by a guardian to ensure that • they can use this product safely.
- Do not block the air inlet of the hair dryer in the working • state, otherwise it may cause the heating wire turns red, causing a fire.
- Do not soak the hair dryer in water.
- O Do not use hair dryer in wet environment. • Please keep the hair dryer dry, otherwise it may cause electric shock.
- Do not use with wet hands, otherwise electric shock or fire due to short circuit may occur.
- Do not use near petroleum gas or other flammable products (such as volatile agents, paint thinners, sprays, etc.), otherwise it may cause explosion or fire due to short circuit.
- ODo not wrap the power cord around the main body of the product during storage, otherwise it may cause the power cord to break, electric shock or fire due to short circuit.
- Oo not store in a highly humid place, otherwise it may cause electric shock or fire due to short circuit. Keep out of reach of children and infants, as this may result in
- electric shock and injury.

 Do not repair, disassemble or modify this product by yourself, otherwise it may cause fire or abnormal movement
- resulting in injury. For added protection, it is recommended to install a residual current device (RCD) with a rated residual operating current not exceeding 30 mA in the bathroom power supply electrical
- OD o not use if the power cord or plug is damaged or hot, otherwise it may cause burns injury, electric shock or fire due to short circuit.

Warning

- ODo not use this product near a bathtub, shower, washbasin or other utensils filled with water.
- The air outlet and nozzle may become hot during use, please do not touch it with your hands, otherwise it may
- ODo not use on infants or young children, otherwise it may
- cause burns.

 When using the hair dryer in the bathroom, please unplug it after use
- Do not pull the power cord forcibly, otherwise it may cause the power cord to break, cause electric shock or short circuit and cause fire.
- This product is only used to dry hair and hair, do not use it to dry shoes and clothes, or it may cause a fire due to short
- Do not wrap the power cord around the main body of the product during storage, otherwise it may cause the power cord to break, electric shock or fire due to short circuit.

Maintenance

- When cleaning, please make size the power switch is off and unplug the electric plug Please regiderly use a dry to wel, cotton swab or toothbrush to remove the attachments from the air intele end outlet.
- or sharp objects to avoid damage to the product.
- Do not use alcohol, nail polish remover or detergent etc. to clean this product, otherwise it may cause malfunction,
- creak or discoloration.


 Children aged 3 years and over, as well as groups with reduced physical or mental akility or lack of experience and knowledge, are given proper supervision or guidance on the safe use of decirical applicances so that they understand the potential dangers, and they can use electrical appliances.

Features

- 1. High speed brushless motor This product uses a 110,000-rpm high-speed brushless motor, which can instantly generate strong airflow that does not damage the hair, and quickly dries the hair.
- 2. Intelligent temperature control system This hair dryer has a built-in intelligent temperature control system, which can precisely control the airflow temperature to prevent overheating and hair damage.
- 3. Negative ion hair care technology The built-in 200 million-level negative ion generator can generate negative ions, neutralize the positive charges in the hair, reduce the accumulation of static electricity, and avoid
- 4. Noise reduction design

By optimizing the motor, the sharp high-frequency noise is modulated to a frequency that cannot be perceived by the human ear, and the noise is further reduced by adding sound-absorbing cotton through the dynamic balance of the motor, so as to achieve a better user experience.

Function.

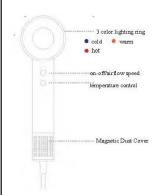


The illustrations of products, accessories, and user interfaces in the manual are schematic diagrams and are for reference only.

Due to product updates and upgrades, there may be slight differences between the actual product and the schematic diagram. Please refer to the actual product.

Switch function

on-off/airflow speed

 Push up and down to quickly switch between two speeds. Before connecting the power plug, please make sure the power switch is in the off position.



Temperature control How to use: Short press the switch, each time you press it, the temperature will be switched, followed by cold air, warm air at 56°C, hot air at 80°C.

2.	•	9	
Cold	Warm	Hot	

Parameters

 
- Product Name: Hair Driver
- Item No : M021
- Product Size: 280×78×98mm
- Rated Voltage: 220V
- Rated Frequency: 50Hz
- Rated Power: 1600W

Rotating speed: 110000 rpm±5%

Cleaning and Maintenance

⚠ The filter screen needs to be cleaned and maintained regularly to avoid clogging by debris to ensure amouth

 Before cleaning the filter, make sure the hair dryer is switched off and unplugged from the mains.



. The air intake dust cover is fixed magnetically, pull the dust cover down to remove it from the handle



Cleaning and Maintenance

⚠ Do not wash the stainless steel filter with water, otherwise it may cause malfunction

"Use dry lint-free cloth, soft brush, to othbrush and other tools to remove the attachments on the surface of the air intake filter and stainless steel filter.



· After clearing, push the dust cover up slightly to fix it magnetically.



The name and content of harmful substances in the product

8	Part Name					
Part Name	Pb	Hg	Cd	V1)	PBBs	PBDEs
	(Pb)	(Hg)	(cd)	(Cr (V1)	(PBB)	(PBDE)
plastic	0	0	0	0	0	0
Hardware	0	0	0	0	0	0
Heating e lement	Х	0	0	0	0	0
Motor	Х	0	0	0	0	0
circuit control	х	0	0	0	0	0
power cable	0	0	0	0	0	0
annex	0	0	0	0	0	0

This form is prepared according to the provisions of SJ/T 11364.

- O : Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T26572. .
- X : Indicates that the content of the hazardous substance in at least one homogeneous material of the part exceeds the limit requirement specified in GB/T 26572

The numbers in this logo indicate that the environmental 10 tears

Common faults and troubleshooting

category	Common malfunctions	Possible cause of failure	troubleshooting	
boot does not work	Elu lightring flashing alam	Internal components oradienting	Restart after 1 minute interval or return to factory for maintenance	
	Yellow light. ring flashing alum	general composerts damaged	Return to factory for repair	
		Air inlet or outlat blocked	Clean the air inkt and outlet.	
	Red light ring fluiding alarm	start savar action	Do not switch on and off continuously a and capidly	
		Amountal input voltage	Chack grid to hap	
Boot can start normally	No lisht indication	not plugged in	Chack if the power oard plugis loose	
		light ring sinsuk board dam aga		
	There is no response to pressingthe hot air button	Damagadlaypad		
	le sting wire reduce	Dimagad control Return to fact board for repuir		
	The power cord or plug is too hot	The power cord is demaged or the plug is loose		
	Funt mall it round us	Damaged intantal components		

protection service life of the product under normal use is