


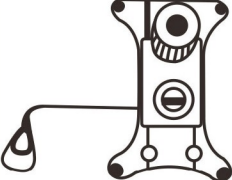
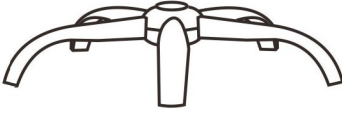
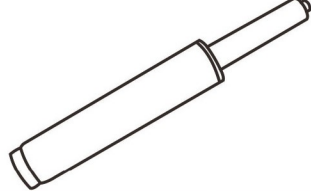
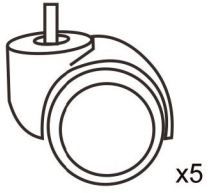
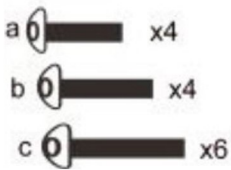
 

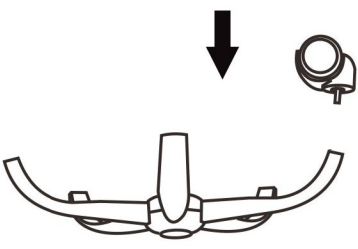
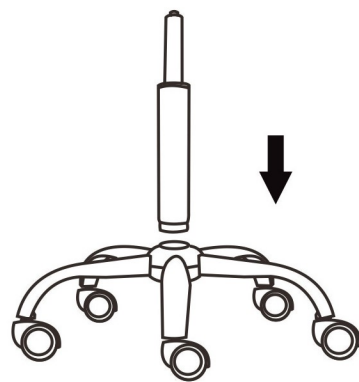
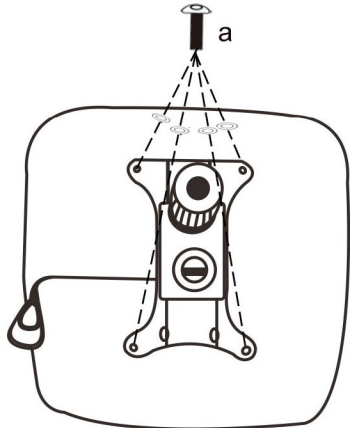
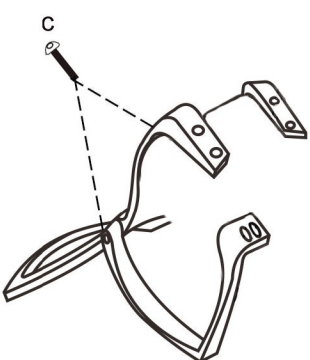
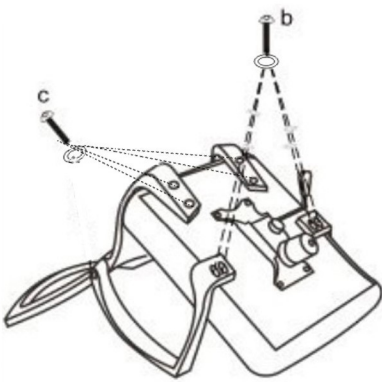



MANUAL INSTRUCTION

 <p>A</p>	 <p>B</p>	 <p>C</p>	
 <p>D</p>	 <p>E</p>	 <p>F</p>	
 <p>x5</p> <p>G</p>	 <p>a x4 b x4 c x6</p>		 <p>x12</p> <p>H</p>  <p>x1</p> <p>I</p>
 <p>Step 1: Attach the wheels (G) to the base (E) by turning the base upside down and pushing in the wheels as shown.</p>	 <p>Step 2: Insert the gas lift (F) into the center of the base.</p>	 <p>Step 3: Attach the tilt mechanism (D) to the seat bottom (B) using screws (a) and washers (H) as shown. Be sure to align the front of the mechanism to the front of the seat.</p>	
 <p>Step 4: Attach the arms (C) to the seat back (A) using screws (c).</p>	 <p>Step 5: Attach the seat back and arms to the seat bottom using screws (c, b) and washers (H) as shown.</p>	 <p>Step 6: Attach the completed seat to the base by lining up the holes and pushing down firmly to secure.</p>	