

Recharge the rechargeable battery.

BATTERY CAUTIONS:

1. Don't short-circuit terminals.
2. Don't recharge non-rechargeable batteries.
3. Rechargeable batteries may only be charged under the supervision of an adult.
4. Remove all batteries if vehicle will not be used for a long period of time.
5. Dispose of batteries safely. Don't dispose of batteries in fire as they may explode.
6. The battery charger used should be regularly examined for damage to the cord, plug, enclosure and other parts.
In the event of damage do not use it until it has been repaired.
7. Exhausted batteries are to be removed from the toy.
8. Keep these instructions for future reference: they contain important information.
9. Packaging has to be kept since it contains important information.
10. Rechargeable batteries are to be removed from the toy before being charged.

INCLUDED
Vehicle:
6.4V Battery pack
INCLUDED
controller:
2XAA batteries

Contents:
1x vehicle,
1x controller,
1x USB cable.

تحذير: خطر الإختناق - أجزاء صغيرة
ليست مناسبة للأطفال من سن 3 سنوات
UYARI: BOĞULMA TEHLİKESİ -
Küçük parçalar 3 yaş altındaki
çocuklara uygun değildir

