
ASSEMBLY OF GRAMOPHONE

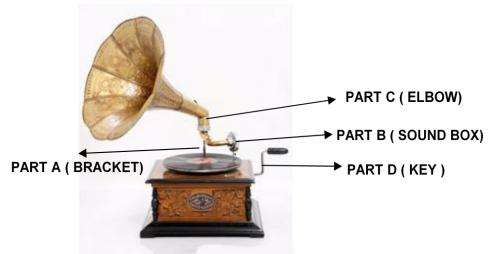

| STEP 1 | STEP 2 | STEP 3 |
|---|---|----------------------------|
| FIX PART A (BRACKET) AT THE | PLACE PART B (Sound box) IN THE PIPE OF | INSERT PART C (ELBOW) INTO |
| BACK OF THE GRAMOPHONE WITH | PART A | PART A |
| SCREWS PROVIDED | | |
| | | |
| STEP 4 | STEP 5 | FINAL ASSEMBLED PC |
| INSERT PART D (KEY) IN THE HOLE GIVEN IN THE SIDE, ALL THE WAY IN TILL THE THREADING HOLDS. SECURE IT BY FASTENING CLOCKWISE TILL TIGHT | MOUNT THE HORN INTO THE PART C | |
| | | |

NOTE : TO PLAY THE RECORD : ,

* WIND THE KEY GENTLY IN CLOCKWISE DIRECTION TILL THE PRESSURE STARTS TO BUILD. DO NOT OVERWIND. * ATTACH THE METAL PIN TO THE SOUND BOX, SHARP SIDE OUTSIDE AND SECURE WITH SCREW PROVIDED.

* PLACE A RECORD ON THE TURNTABLE. RELEASE THE LOCK.

* LET THE TURNTABLE SPIN AND THEN GENTLY LOWER THE SOUND BOX WITH THE NEEDLE TO TOUCH THE RECORD. *ADJUST THE SPEED OF SPIINNING BY THE LEVER PROVIDED TILL SOUND IS CLEAR AND AT THE RIGHT SPEED.

PS.

PLEASE REMEMBER THAT THIS IS A DECORATIONAL PRODUCT AND IS MADE USING OLD AND REPAIRED MECHANISMS AND ARE NOT STRONG

PLEASE USE THIS AS A HOBBY PRODUCTS FOR RECREATIONAL PURPOSE ONLY.