

# MAX PRO



**MANUAL**  
GLOSS STRAIGHTENER

## ABOUT | GLOSS STRAIGHTENER

Straight, curly, or wavy looks are achieved in an instant with the Max Pro Gloss Straightener. Its non-slip rubber is designed for ultimate comfort. At the same time, the 100% ceramic plates make it perfectly suitable for both thick as thin hair types. The active negative ion technology coats and conditions the hair, leaving it shiny, silky-soft, and frizz-free for that extra glossy effect. Because of the rounded plates, you can easily create any type of straight or curly hairstyle, making it one of the favourites of professionals all over.



# INSTRUCTIONS

- Always make sure that your hair is completely clean and dry before using the straightener.
- Make sure there is no water on the floor or on other surfaces near the outlet or the hair styling tool.
- Insert the plug of the straightener into the outlet. The straightener could have a polarized plug, which has one pin which is wider than the other. If this is the case, this plug will only fit into an outlet when it is placed correctly. When the plug does not fit into an outlet, make sure that you have the large pin stabbed into the correct hole. If you cannot plug in the plug without any problems, please contact an electrician; never try to force stabbing the plug into an electrical outlet.
- Insert the plug of the styling tool into a socket and slide the switch on the inside of the handgrip to the "ON" position.
- The hair styling tool will become very hot immediately, but it will take about 40 seconds before it has an optimal uniform heat distribution.
- The hair styling tool becomes very hot, so make sure it does not make contact with the skin.
- Allow your hair to cool down before touching or brushing it.
- After styling your hair, switch off the hair styling tool by putting the switch on the inside to the "OFF" position, unplug the power cord and allow the hair styling tool to cool down completely on a heat-resistant surface before storing it. Never leave the styling tool in the outlet or turned on if you are not around.

# SAFETY INSTRUCTIONS

- Always unplug the appliance immediately after using.
- Do not use while bathing.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not drop into water or other liquids.
- If the appliance falls into water, unplug immediately. Do not reach into the water.
- This appliance should never be left unattended when plugged in.
  
- Close supervision if necessary when this appliance is used by, on, or near children or individual with certain disabilities.
- Use this appliance only for its intended use as described in the manual. Do not use any attachment not provided by the manufacturer.
- Keep the cord away from the heated surface.
- Do not warp the cord around the appliance.
- Do not use outdoors or operate where aerosol products are being used or where oxygen is being administered.
- Do not use an extension cord with this appliance.
- Do not place the heated appliance directly on any surface while its hot or plugged in.

# BURNS

- Always use a heat resistant glove if you have one nearby.
- The styling tool is very hot and can cause burns. Do not touch the heated element while the styling tool is connected. Make sure that the styling tool has enough time to cool down.
- When you burn yourself, stop with styling your hair and take care of the burn immediately.
- Make sure you switch off the styling tool after each use. Never leave a styling tool unattended if it is connected or switched on.
- Keep the styling tool away from flammable surfaces, plastic or other materials that are sensitive to heat.
- If you have to put the styling tool down while it is turned on, only do it on a heat-resistant surface. It is best to use a heat-resistant mat or holder for your MaxPro straightener/curling iron to prevent damage to your furniture. This heat-resistant mat can be ordered via [www.maxprohair.com](http://www.maxprohair.com)

## DEFECTS

- Please check your styling tool before each use and do not use it if the styling tool is (partially) damaged.
- For all kinds of repairs within the warranty, contact an authorized Max Pro retailer or manufacturer.
- Max Pro is not responsible for any damage caused by incorrect or improper use. For the warranty you must have the original proof of purchase (receipt, order email) and the original box from your styling tool.

## WARRANTY

Thank you for purchasing a Max Pro hair styling tool. This warranty is valid for two years from the date of purchase. To show our appreciation for your purchase and the dedication to our products, we hereby offer you to extend your warranty for free to a lifetime unlimited warranty! To register for this exclusive warranty, you can visit us at [www.maxprohair.com](http://www.maxprohair.com) and fill in the registration form.

Please make sure you keep your proof of purchase (receipt, order email) and the original box from your styling tool as a proof of purchase. This warranty is only valid for styling tool purchased from an authorized Max Pro retailer. If your product is not working properly due to a manufacturer's shortcoming and the warranty conditions are met, your Max Pro styling tool will be repaired or replaced; this is determined by the manufacturer. This warranty does not apply to problems resulting from misuse, damage or normal wear and tear; the warranty expires if the product is used for commercial purposes. The warranty does not apply to styling tools that have been modified or repaired by an unauthorized Max Pro vendor or manufacturer.

For questions about the warranty, please contact our customer service or visit us at [www.maxprohair.com](http://www.maxprohair.com). If the device does not work properly, we need digital images of the styling tool, as well as a copy of your original purchase receipt. In case of replacement or repair, a payment is required to cover the shipping and administration costs (depending on your place of residence). Feel free to contact us if you have questions or comments. We are happy to help you!

## GOODBYE TO BAD HAIR DAYS

+31 (0)20 261 0907  
[info@maxprohair.com](mailto:info@maxprohair.com)