

Handy

Instructions for use

 
 
 




Nilfisk Handy

ⓔ	Operating Instructions	3
Ⓓ	Betriebsanleitung	10
Ⓕ	Instructions d'utilisation	17
Ⓔ	Instrucciones de manejo.....	25
Ⓟ	Instruções de operação	32
Ⓜ	Istruzioni sull'uso	39
Ⓝ	Gebruiksaanwijzing	46
Ⓝ	Instruktionsbok	53
Ⓓ	Instruksjonsbok.....	60
Ⓕ	Instruktionsbog	66
Ⓔ	Käyttöohje.....	73
Ⓝ	Οδηγίες χρήσης.....	79
Ⓒ	Kullanım Kılavuzu.....	87
Ⓔ	Návod k obsluze	95
Ⓝ	Navodila za uporabo.....	102
Ⓒ	Használati útmutató.....	108
Ⓔ	Instrucțiuni de utilizare.....	115
	Инструкции за употреба	122
	Instrukcja użycia	129
	WEEE	136-139

Survey

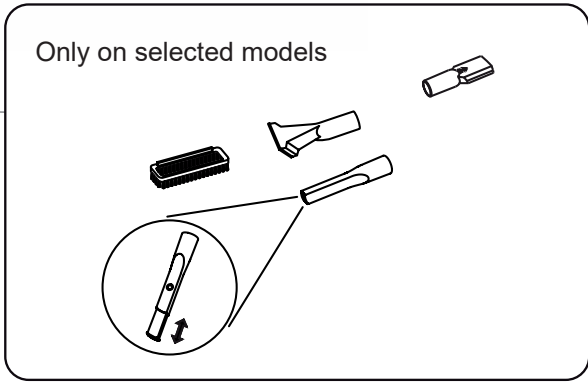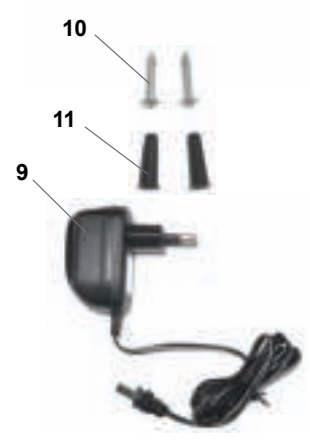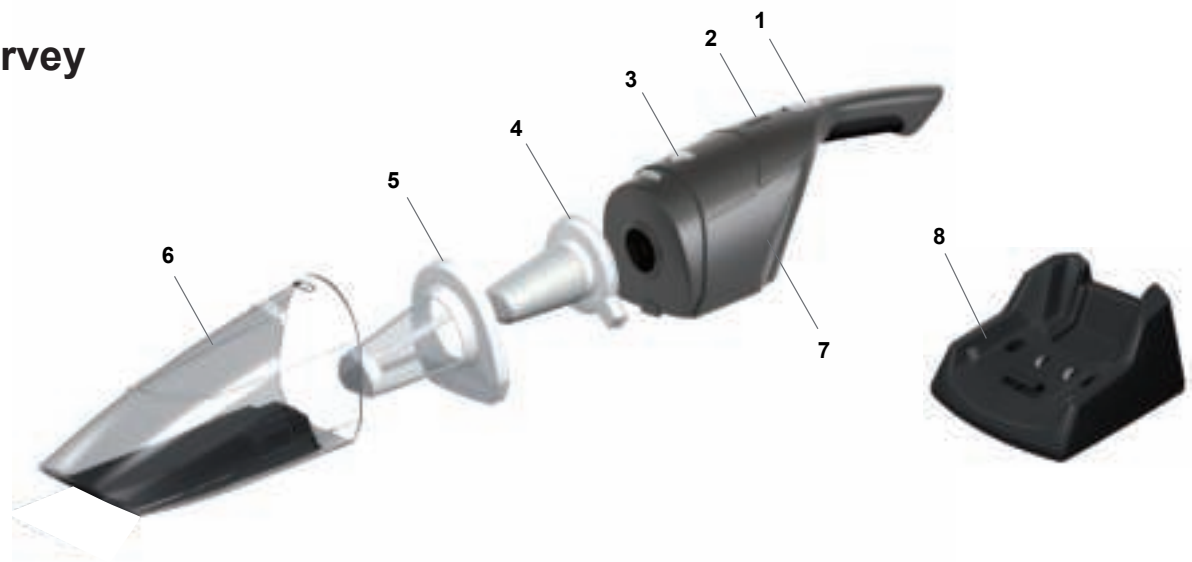

Prepare your vacuum cleaner



 
 
Charging the battery



Waste disposal



Product disposal

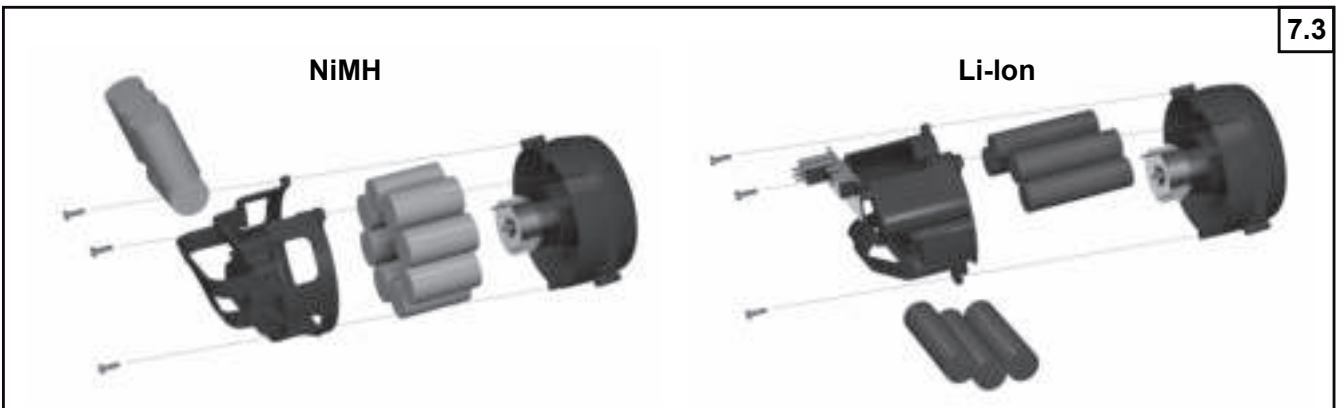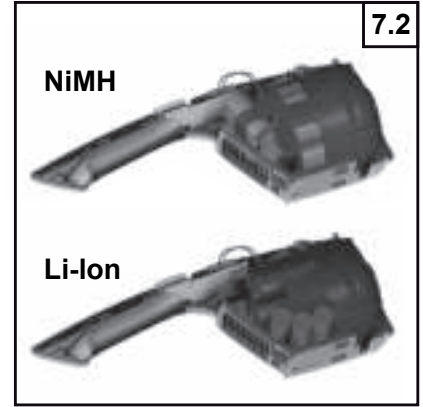

Index

1. Overview	3
2. Safety instructions.....	3
3. Instruction for use	5
4. Charging the battery	5
5. Waste disposal.....	6
6. Service and maintenance	6
7. Product disposal	6
8. Guarantee and service.....	7
9. Technical Specifications	8
10. Accessories kit	8
11. Declaration of Conformity	9
12. WEEE	136

1. Overview

- 1 On/Off switch (hand unit)
- 2 Charging indication light
- 3 Dust container release button
- 4 Secondary filter
- 5 Primary filter
- 6 Dust container
- 7 Vacuum unit
- 8 Charging stand
- 9 Adaptor
- 10 Wall-mount screws
- 11 Wall-mount anchors
12. Accessories kit (only on selected models)

2. Safety instructions



- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall be supervised to make sure that

they do not play with the appliance.

- Cleaning and user maintenance shall not be made by children without supervision.
- This product is designed for vacuuming small areas of dry material only; Do not use for vacuuming water or other liquids.
- Sparks inside the motor can ignite flammable vapours or dust. Do not vacuum or use this product near flammable or combustible liquids (e.g., gasoline or other fuels, lighter fluid, cleaners, oil-based paints), gases (e.g., natural gas, hydrogen), or explosive dust (e.g., coal dust, magnesium dust, grain dust, gunpowder). Do not vacuum anything that is smoking or burning (e.g., cigarettes, matches, hot ashes). Never vacuum toxic materials as the vapours or dust may cause a health hazard.
- This product is not a toy. Close attention is necessary when used by or near children or pets. Never use this product on pets.
- Only use original AC adaptor.
- The appliance must only be

EN

DE

FR

ES

PT

IT

NL

SV

NO

DA

FI

EL

TR

CS

SL

HU

RO

BG

PL

EN

supplied at SELV (Safety Extra Low Voltage).

DE

- Never use a damaged vacuum, AC adapter, or charging base.
- Do not mutilate or incinerate the Battery packs, as they will explode at high temperatures.
- Do not plug/unplug the AC adapter into/from the electrical outlet with a wet hand. Dry the product completely before placing it onto the charging base.
- Do not place or drop the product into water or other liquids. If the product falls into water or other liquid, do not touch or reach into the water.
- Do not charge the product if the power cord is cut, damaged, or if the wires are exposed.
- Keep the adapter cord and the product away from heated surfaces.
- To disconnect the AC adapter from an electric outlet, pull directly on the adapter base; do not pull on the cord.
- Do not put any stress on the adapter cord where it connects to the product, as the cord could fray and break.

FR

ES

PT

IT

NL

SV

NO

DA

FI

EL

TR

CS

SL

HU

RO

BG

PL

- If using an extension cord with this product, the marked electrical rating of the cord set or extension cord must be at least as great as the electrical rating of the product.
- Do not operate this product if it has a damaged adapter cord or plug, malfunctions, is dropped or damaged, is left outdoors, or is dropped in water. All repairs must be carried out by an authorized service center.
- Do not use this product outdoors. For optimal operation, keep the product in a location that does not exceed 40°C (104°F).
- Do not operate the product while it is charging.
- Keep the charging base where it will not be subjected to heat, flames, or liquids.
- Never insert objects into any of the openings in the product. Do not use the product if any of the openings are blocked.
- Do not use the product to vacuum metal objects such as coins, screws, nails, tacks, etc.
- Make sure to check that the nozzle is clean in order to avoid scratching of sensi-

tive floors.

- Empty the product after each use. Keep it free of dust, lint, hair, or anything that reduces airflow.
- Keep hair, loose clothing, and body parts away from openings or moving parts, especially the part of the product where there is suction.
- Never place the vacuum nozzle near your face, especially eyes and ears, during operation.
- Do not use the product without the filters and the dust container in place.
- Take care when using the product on stairs in order to prevent falls.
- The battery charging terminals on the vacuum cleaner and the charging base must be kept clean and free of debris.
- Only use the charging base and AC adapter provided with the product. Do not use any parts not provided or recommended by Nilfisk.

3. Instructions for Use

3.1 Start and Stop

3.1.1 Start

Switch ON the unit by switching the On/Off button downwards.

Please fully charge the battery before using the product for the first time.

- Please switch OFF the product when the battery is empty. The battery will be damaged if the product is stored in "ON" position.
- NiMH models: The battery is fully charged after 16 hours. Prolonged charging can reduce the life time of the battery and is not optimal for the environment.

3.1.2 Stop

Switch OFF the unit by switching the On/Off button upwards.

3.2 Prepare your Vacuum Cleaner

1. Make sure the switches are in "OFF" Position.
2. Place the Nilfisk Handy into the charging stand for first charging (refer to the charging section).

3.3 Indication light (Li-Ion models)

Battery full	Blue light on
Battery below 20%	Blue light flashing
Battery low	Red light flashing

4. Charging the Battery

Make sure to charge the battery in the following situations:

- When using the product for the first time after purchase;
- When the battery is low or the suction power reaches an insufficient level;
- When the product has been stored for a prolonged period (more than a month).

4.1 Wall Mounting for charging base

Your Handy is designed to hang vertically on the wall with handle end pointing downward. When wall mounting, care should be taken to ensure that there are no dangerous objects hidden beneath the wall surface (e.g. electrical wires, pipe, etc.) Use a 5 mm drill for drilling holes for the plastic anchors. Then, insert anchors and screw the charging base onto the wall.

We recommend that you position your Handy close to an electrical outlet. Then plug the charging plug into the socket at the side of the charging base.

4.2 Place the Nilfisk Handy in the charging stand

If the Nilfisk Handy is not placed properly in the charging stand, it will not be charged or it may topple over.

Be careful not to trip over the power cable when charging the battery.

EN

DE

FR

ES

PT

IT

NL

SV

NO

DA

FI

EL

TR

CS

SL

HU

RO

BG

PL

EN

4.3 Connect the power plug to the power outlet

When the power plug of the battery charger is connected to the AC power outlet, the indication light will light up.

DE

FR

Charging	Red light on
Charge complete	Blue light on

ES

The main body may become warm during charging. This is not an abnormal sign.

PT

4.4 Charging time

	Hours
NiMH model	16
Li-Ion models	4 / 6 (25.2V)

IT

NL

5. Waste disposal

- Try to dispose the vacuumed waste as frequently as possible. The dust attached to the filter can cause poor vacuuming performance and stress the motor.
- Always switch OFF the power when operating for disposal.

SV

NO

DA

1. Detach the dust container.
2. Pull out the filters.
3. Empty the dust container.
4. Re-install the filters in correct order and position.
5. Re-install the dust container to the vacuum unit.

FI

EL

Caution

Do not vacuum a lot of dust at anyone time and do not vacuum large objects. May cause the suction port to clog and loose the suction power.

TR

Do not vacuum kerosene, petrol or butts of smoked cigarettes. This may cause a fire.

CS

Dispose dust frequently in order not to damage the product.

SL

6. Service and Maintenance

HU

Always switch OFF the power and disconnect the power plug for the battery charger from the power outlet before starting maintenance

RO

BG

6.1 Vacuum Unit, Charging Base

Wipe off any dirt from the product using a dry and soft rag.

PL

In case of stubborn dirt, clean using a soft damp

rag soaked in a water solution diluted with a little neutral detergent and then wipe with a dry rag.

Do not use solvents like thinner, benzene, and spray type cleaners.

6.2 Dust Container

Remove any collected dust inside the dust container first and wash using lukewarm water.

Make sure that the dust container is completely dry before re-assembling.

6.3 Filter

Do not wash the filters in the washing machine.

Do not dry them using a hot air blower such as a dryer or a hair dryer.

In case of stubborn dirt or loss in suction power, wash as instructed below:

1. Remove the dust first.
2. Wash with water.
3. Make sure that the filters are completely dry before the parts are re-assembled.

7. Product Disposal

When the battery pack will no longer hold a charge, the product has reached the end of its useful life.

The battery pack is not replaceable. After removing the battery pack, the product must be discarded.

Before discarding the product, the rechargeable battery pack must be removed and recycled in accordance with federal and local laws, as outlined below.

- WARNING:** The vacuum cleaner must be disconnected from the charging station and batteries must be run flat before removing the battery pack.
1. Use a screwdriver to unscrew the housing.
 2. Cut the wires in order to free the battery compartment from the unit. Cover visible metal areas with tape.
 3. Take out the battery compartment with motor. Unscrew the battery bracket. Remove the battery from the unit. **WARNING:** Do not mutilate or incinerate the battery pack, as it will explode at high temperatures.

WARNING-- Risk of fire or serious injury:

Never touch both terminals of a battery pack with metal objects and/or body parts as a short circuit

may occur. Do not attempt to destroy or disassemble a battery pack or remove any of its components. Batteries must be recycled or disposed properly. Keep battery packs away from children.

8. Guarantee and Service

This Nilfisk Handy Rechargeable Vacuum Cleaner is covered by a two (2) year guarantee on the machine, which covers the motor, Adaptor, switch and casing. The batteries, filters, floor brush and other accessories are covered twelve months due to manufacturing fault only and exclude wear and tear.

The guarantee includes spare parts and labour costs, and covers manufacturing and material defects that may occur during normal domestic use.

Service under the guarantee will only be performed if it can be proven that the defect occurred within the product's guarantee period (a correctly completed guarantee certificate or printed/stamped cash register receipt with date and product type) and on the condition that the vacuum cleaner was bought as a new product and distributed by Nilfisk. In the event of the repair of defects, the customer must contact Nilfisk to be directed to a service agent at the customers own expense. Upon completion of any repairs necessary, the vacuum cleaner will be returned to the customer at the risk and expense of Nilfisk.

The guarantee does not cover:

- Normal wear and tear of accessories and filters.
- Defects or damage occurring as a direct or indirect result of incorrect use - such as the vacuuming of rubble, hot ashes or carpet deodorant powder.
- Abuse, loss or lack of maintenance as described in Instructions for use.
- If the machine has been used for home renovations.
- If the machine has been used for suction of water, plaster dust or sawdust.

Nor will it cover incorrect or poor configuration, i.e. setting up or connection, nor fire-damage, fire, lightning strike or unusual voltage fluctuations or any other electrical disturbances such as defective fuses or defective electrical installations on the supply grid, and defects or damage in general that Nilfisk consider to be the result of causes other than manufacturing and material defects.

The guarantee becomes void:

- If a defect is caused by the use of non-original Nilfisk parts.
- If the identity number is removed from the vacuum cleaner.
- If the vacuum cleaner has been repaired by a non-Nilfisk authorized dealer.
- If the machine is used in a commercial environment, i.e. building contractors, cleaning contractors, professional trades or any other non-domestic usage.

The guarantee is valid in:

Denmark, Sweden, Norway, Great Britain, Ireland, Belgium, Holland, France, Germany, Poland, Russia, Austria, Switzerland, Spain, Portugal, Australia and New Zealand, Estonia, Latvia, Lithuania, Hungary, Greece, Slovenia, Slovakia, The Czech Republic, Italy, Finland, Bulgaria, Romania and Turkey.

Addendum Australia:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Nilfisk vacuum cleaners for domestic use are warranted for 2 years from the date of purchase by:

Nilfisk Pty Ltd
Unit 1/13 Bessemer Street
Blacktown NSW 2148
Phone: 1300 556 710
E-mail: warranty@nilfisk.com.au

Find your local service agent here:
<http://www.nilfisk.com.au>

The benefits under this warranty are in addition to your national law of sale.

EN

DE

FR

ES

PT

IT

NL

SV

NO

DA

FI

EL

TR

CS

SL

HU

RO

BG

PL

EN

9. Technical Specifications

		Handy 14.4V			Handy 18V		Handy 25.2V
		EU	UK	AUS/NZ	EU	AUS/NZ	EU
Voltage	V	230	230-240		230	230-240	230
Main frequency	Hz	50					
Battery capacity	mAh	1800			2000		2000
Suction power, handheld	W	11			13		19
Battery voltage	V	14.4			18		25.2
Runtime high/low	Min.	18			20		20
Insulation class	-	IP20					
Type of protection	-	II					
Dust bag net filling	l	0.5					
Width	mm	12					
Depth	mm	10					
Height	mm	50					
Weight, cleaner only	kg	1.3			1		1

DE

FR

ES

PT

IT

 
NL

SV

NO

10. Accessories Kit

Only on selected models (see www.nilfisk.com).

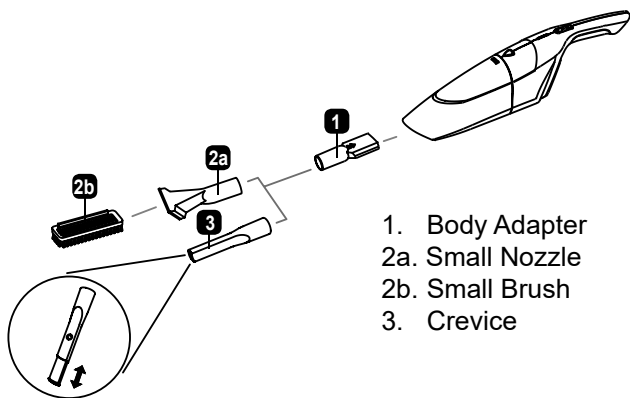

1. Body Adapter
- 2a. Small Nozzle
- 2b. Small Brush
3. Crevice

Crevice:

Insert the crevice (3) into the body adapter (1). To clean dust/hair in small areas which are difficult to reach. e.g. corners or shallow cavity.

Cleaning and Maintenance:

- Wipe off any dirt from the accessories using a dry and soft rag.
- In case of stubborn dirt, please use a soft and slightly damp rag soaked in a water solution diluted with a little neutral detergent and then wipe clean with a dry rag.
- Do not use soap powder, detergent and solvents, benzene and spray cleaners.
- Dry immediately.
- Ensure that there is no water remain on the accessories after cleaning.

- Insert the body adapter (1) into the inhale handheld nozzle. It acts as an adapter for the connection of accessories for different purposes. To remove the connector from the nozzle, just pull firmly outwards.
- Insert the appropriate accessory (small nozzle (2a) with or without small brush (2b) or crevice (3)) directly into the connector of the handheld unit. To disassemble the accessories, just pull firmly the part outwards.

Small Brush:

Insert and slide the small brush (2b) into the small nozzle (2a). Use the small brush to clean the table, hair, crumbs or fibers from textile sofas or carpets.

DA

FI

EL

TR

CS

SL

HU

RO

BG

PL

11. EU Declaration of Conformity

We,

Nilfisk A/S
Kornmarksvej 1
DK-2605 Broendby
DENMARK

Hereby declare that the

Product: Battery powered Vacuum Cleaner
Description: 220-240V, 50/60 Hz, IPX0
Type: Handy

Is in compliance with the following standards:

EN 60335-1:2012+A11:2014
EN 60335-2-2:2010+A11:2012+A1:2013
EN 61558-1:2005+A1:2009
EN 61558-2-16:2009+1:2013
EN 55014-1:2006+A1:2009+A2:2011
EN 55014-2:1997+A1:2001+A2:2008
EN 61000-3-2:2014
EN 61000-3-3:2013
EN 50581:2012

Following the provisions of:

2014/35/EU
2014/30/EU
2011/65/EU
2009/125/EC
278/2009/EC
1275/2008/EC

Hadsund, 18-09-2017


Esben Graff
VP Portfolio Management, Consumer

EN

DE

FR

ES

PT

IT

NL

SV

NO

DA

FI

EL

TR

CS

SL

HU

RO


BG

PL

12. WEEE


English

WEEE - Waste of Electric and Electronic

The symbol  on the product and the batteries indicates that they may not be treated as household waste. Instead they shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product and the batteries are disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling. For more detailed information about recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.


Deutsch

Entsorgung von Elektro- und Elektronikgeräten

Die Kennzeichnung  am Produkt sowie an den Akkus verweist darauf, dass eine Entsorgung über den Hausmüll untersagt ist. Die bezeichneten Komponenten/Geräte sind in dafür vorgesehenen Sammelstellen für elektrische/elektronische Altgeräte abzugeben. Durch die sachgerechte Entsorgung dieses Produkts und der Akkus tragen Sie dazu bei, potenzielle Umwelt- und Gesundheitsgefährdungen zu vermeiden, die bei einer unsachgerechten Abfallaufbereitung auftreten können. Ausführliche Auskünfte zur Altstoffrückgewinnung erhalten Sie von der Stadt-/Kommunalverwaltung, Ihrer Abfallentsorgungseinrichtung oder im Geschäft, in dem das Produkt erworben wurde.


Français

DEEE – Déchets d'équipements électriques et électroniques

Le symbole  sur le produit et les batteries indique qu'il ne faut pas les traiter comme des déchets ménagers. Au lieu de cela, il faut les remettre au point de collecte approprié pour le recyclage des équipements électriques et électroniques. En veillant à ce que ce produit et les batteries soient correctement mis au rebut, vous contribuerez à éviter les éventuelles conséquences négatives pour l'environnement et la santé des personnes qui pourraient résulter sans cela d'un traitement inapproprié des déchets. Pour obtenir des informations plus détaillées sur le recyclage, veuillez contacter les services municipaux dont vous dépendez, les services responsables de l'enlèvement des ordures ménagères dans votre localité, ou le magasin où vous avez acheté le produit.


Español

RAEE - Residuos de aparatos eléctricos y electrónicos

El símbolo  en el producto y en las baterías indica que no debe tratarse como basura. Debe llevarse al punto para recogida y reciclaje de equipos eléctricos y electrónicos. Al asegurarse de que se deshace correctamente de este producto y de las baterías, ayuda a prevenir consecuencias negativas para el medioambiente y para la salud, que pueden producirse cuando los residuos no se procesan adecuadamente. Para obtener información más detallada acerca del reciclaje, póngase en contacto con su ayuntamiento, su servicio de recogida de basura o la tienda en la adquirió el producto.


Português

REEE – Resíduos de Equipamentos Eléctricos e Electrónicos

O símbolo  no produto e nas baterias indica que estes componentes não podem ser tratados como resíduos domésticos. Pelo contrário, devem ser entregues num ponto de recolha aplicável para reciclagem de equipamentos eléctricos e electrónicos. Assegurando que este produto e as baterias são eliminados correctamente, ajudará a evitar possíveis consequências adversas para o ambiente e a saúde humana que, de outra forma, poderiam ser provocadas por um tratamento incorrecto dos resíduos. Para obter informações mais detalhadas acerca da reciclagem, contacte o gabinete adequado da sua cidade, os serviços de eliminação de resíduos domésticos da sua área ou a loja onde adquiriu o produto.

Italiano

WEEE – Corretto smaltimento del prodotto (rifiuti elettrici ed elettronici)

Il simbolo  riportato sul prodotto e sulle batterie indica che essi non possono essere smaltiti come normali rifiuti domestici. Per evitare eventuali danni all'ambiente o alla salute causati dall'inopportuno smaltimento dei rifiuti, si invita l'utente a riciclare prodotto e batterie presso l'apposita struttura preposta allo smaltimento di apparecchiature elettriche ed elettroniche. Per informazioni più dettagliate in merito alle pratiche di riciclaggio, contattare il competente ufficio locale, il servizio smaltimento rifiuti domestici o il rivenditore presso il quale è stato effettuato l'acquisto.



HEAD QUARTER

DENMARK

Nilfisk A/S
Kornmarksvej 1
DK-2605 Broendby
Tel.: (+45) 4323 8100
Website: www.nilfisk.com

SALES COMPANIES

ARGENTINA

Nilfisk srl.
Edificio Central Park
Herrera 1855, 6th floor/604
Ciudad de Buenos Aires
Tel.: (+54) 11 6091 1571
Website: www.consumer.nilfisk.com.ar

AUSTRALIA

Nilfisk Pty Ltd
Unit 1/13 Bessemer Street
Blacktown NSW 2148
Tel.: (+61) 2 98348100
Website: www.consumer.nilfisk.com.au

AUSTRIA

Nilfisk GmbH
Metzgerstrasse 68
5101 Bergheim bei Salzburg
Tel.: (+43) 662 456 400 90
Website: www.nilfisk.at

BELGIUM

Nilfisk n.v.s.a.
Riverside Business Park
Boulevard Internationalelaan 55
Bâtiment C3/C4 Gebouw
Bruxelles 1070
Tel.: (+32) 24 67 60 50
Website: www.consumer.nilfisk.be

Brazil

Nilfisk do Brasil
Av. Eng. Luis Carlos Berrini, 550
40 Andar, Sala 03
SP - 04571-000 Sao Paulo
Tel.: (+11) 3959-0300 / 3945-4744
Website: www.nilfisk.com.br

CANADA

Nilfisk Canada Company
240 Superior Boulevard
Mississauga, Ontario L5T 2L2
Tel.: (+1) 800-668-8400
Website: www.nilfisk.ca

CHILE

Nilfisk S.A. (Comercial KCS Ltda)
Salar de Lamara 822
8320000 Santiago
Tel.: (+56) 2684 5000
Website: www.nilfisk.cl

CHINA

Nilfisk
4189 Yindu Road
Xinzhuang Industrial Park
201108 Shanghai
Tel.: (+86) 21 3323 2000
Website: www.nilfisk.cn

CZECH REPUBLIC

Nilfisk s.r.o.
VGP Park Horní Počernice
Do Certous 1/2658
193 00 Praha 9
Tel.: (+420) 244 090 912
Website: www.consumer.nilfisk.cz

DENMARK

Nilfisk A/S
Kornmarksvej 1
2605 Broendby
Tel.: (+45) 4323 4050
Website: www.consumer.nilfisk.dk

FINLAND

Nilfisk Oy Ab
Koskelontie 23 E
02920 Espoo
Tel.: (+358) 207 890 600
Website: www.consumer.nilfisk.fi

FRANCE

Nilfisk SAS
26 Avenue de la Baltique
Villebon sur Yvette
91978 Courtaboeuf Cedex
Tel.: (+33) 169 59 87 24
Website: www.consumer.nilfisk.fr

GERMANY

Nilfisk GmbH
Guido-Oberdorfer-Straße 2-10
89287 Bellenberg
Tel.: (+49) (0)7306/72-444
Website: www.consumer.nilfisk.de

GREECE

Nilfisk A.E.
Αναπαύσεως 29
Κορωπία Τ.Κ. 194 00
Tel.: (30) 210 9119 600
Website: www.consumer.nilfisk.gr

HOLLAND

Nilfisk B.V.
Versterkerstraat 5
1322 AN Almere
Tel.: (+31) 036 5460760
Website: www.consumer.nilfisk.nl

HONG KONG

Nilfisk Ltd.
2001 HK Worsted Mills
Industrial Building
31-39, Wo Tong Tsui St.
Kwai Chung, N.T.
Tel.: (+852) 2427 5951
Website: www.nilfisk.com

HUNGARY

Nilfisk Kft.
II. Rákóczi Ferenc út 10
2310 Szigetszentmiklós-Lakihegy
Tel.: (+36) 24 475 550
Website: www.nilfisk.hu

INDIA

Nilfisk India Limited
Pramukh Plaza, 'B' Wing, 4th floor, Unit No. 403
Cardinal Gracious Road, Chakala
Andheri (East) Mumbai 400 099
Tel.: (+91) 22 6118 8188
Website: www.nilfisk.in

IRELAND

Nilfisk
1 Stokes Place
St. Stephen's Green
Dublin 2
Tel.: (+35) 3 12 94 38 38
Website: www.nilfisk.ie

ITALY

Nilfisk SpA
Strada Comunale della Braglia, 18
26862 Guardamiglio (LO)
Tel.: (+39) (0) 377 414021
Website: www.nilfisk.it

JAPAN

Nilfisk Inc.
1-6-6 Kita-shinyokohama, Kouhoku-ku
Yokohama, 223-0059
Tel.: (+81) 45548 2571
Website: www.nilfisk.com

MALAYSIA

Nilfisk Sdn Bhd
Sd 33, Jalan KIP 10
Taman Perindustrian KIP
Sri Damansara
52200 Kuala Lumpur
Tel.: +603 6275 3120
Website: www.nilfisk.com

MEXICO

Nilfisk de Mexico, S. de R.L. de C.V.
Pirineos #515 Int.
60-70 Microparque
Industrial WSantiago
76120 Queretaro
Tel.: (+52) (442) 427 77 00
Website: www.nilfisk.com

NEW ZEALAND

Nilfisk Limited
Suite F, Building E
42 Tawa Drive
0632 Albany Auckland
Tel.: (+64) 9 414 1996
Website: www.nilfisk.com

NORWAY

Nilfisk AS
Bjørnerudveien 24
1266 Oslo
Tel.: (+47) 22 75 17 80
Website: www.consumer.nilfisk.no

PERU

Nilfisk S.A.C.
Calle Boulevard 162, Of. 703, Lima 33- Perú
Lima
Tel.: (511) 435-6840
Website: www.nilfisk.com

POLAND

Nilfisk Sp. Z.O.O.
Millenium Logistic Park
ul. 3 Maja 8, Bud. B4
05-800 Pruszków
Tel.: (+48) 22 738 3750
Website: www.consumer.nilfisk.pl

PORTUGAL

Nilfisk Lda.
Sintra Business Park
Zona Industrial Da Abrunheira
Edificio 1, 1º A
P2710-089 Sintra
Tel.: (+351) 21 911 2670
Website: www.nilfisk.pt

RUSSIA

Nilfisk LLC
Vyatskaya str. 27, bld. 7/1st
127015 Moscow
Tel.: (+7) 495 783 9602
Website: www.consumer.nilfisk.ru

SINGAPORE

Den-Sin
22 Tuas Avenue 2
639453 Singapore
Tel.: (+65) 6268 1006
Website: www.densin.com

SLOVAKIA

Nilfisk s.r.o.
Bancňkovej 1/A
SK-821 03 Bratislava
Tel.: (+421) 910 222 928
Website: www.consumer.nilfisk.sk

SOUTH AFRICA

Nilfisk (Pty) Ltd
Kimbult Office Park, 9 Zeiss Road
Laser Park, Honeydew
Johannesburg
Tel.: (+27) 118014600
Website: www.nilfisk.co.za

SOUTH KOREA

Nilfisk Korea
3F Duksoo B/D, 317-15
Sungsoo-Dong 2Ga
Sungdong-Gu, Seoul
Tel.: (+82) 2497 8636
Website: www.nilfisk.co.kr

SPAIN

Nilfisk S.A.U
Paseu del Rengle, 5 Planta. 9-10
08302 Mataró
Tel.: (34) 93 741 2400
Website: www.consumer.nilfisk.es

SWEDEN

Nilfisk AB
Taljegårdsgatan 4
431 53 Mölndal
Tel.: (+46) 31 706 73 00
Website: www.consumer.nilfisk.se

SWITZERLAND

Nilfisk AG
Ringstrasse 19
Kircheberg/Industri Stelz
9500 Wil
Tel.: (+41) 71 92 38 444
Website: www.consumer.nilfisk.ch

TAIWAN

Nilfisk Ltd
Taiwan Branch (H.K.)
No. 5, Wan Fang Road
Taipei
Tel.: (+88) 6227 00 22 68
Website: www.nilfisk.tw

THAILAND

Nilfisk Co. Ltd.
89 Soi Chokechai-Ruammitr
Viphavadee-Rangsit Road
Ladysao, Jatuchak, Bangkok 10900
Tel.: (+66) 2275 5630
Website: www.nilfisk.co.th

TURKEY

Nilfisk A.S.
Serifali Mh. Bayraktar Bulv. Sehiti Sk. No:7
Ümraniye, 34775 Istanbul
Tel.: +90 216 466 94 94
Website: www.consumer.nilfisk.com.tr

UNITED ARAB EMIRATES

Nilfisk Middle East Branch
SAIF-Zone
P.O. Box 122298
Sharjah
Tel.: (+971) (0) 655-78813
Website: www.nilfisk.com

UNITED KINGDOM

Nilfisk Ltd.
Nilfisk House, Bowerbank Way
Gilwilly Industrial Estate, Penrith
Cumbria CA11 9BQ
Tel.: (+44) (0) 1768 868995
Website: www.consumer.nilfisk.co.uk

UNITED STATES

Nilfisk Inc.
14600 21st Avenue North
Plymouth, MN-55447
Tel.: (+1) 800-989-2235
Website: www.nilfisk.com

VIETNAM

Nilfisk Vietnam
No. 51 Doc Ngu Str.
P. Vinh Phúc, Q. Ba Dinh
Hanoi
Tel.: (+84) 761 5642
Website: www.nilfisk.com

