







WiFi Doorbell User Manual

- 
35/55
RINGTONES
- 
1000 Feet
200 Meters
- 
0-110 dB
5 Levels

FEATURES:

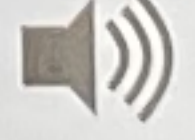- Modern & stylish design
- Easy installation
- Approx. 1000ft /200 mtrs operation range (open air)
- 5 Levels of volume
- IP55 Waterproof
- 35/55 Ringtones
- Low power consumption

PRODUCT DIAGRAM:

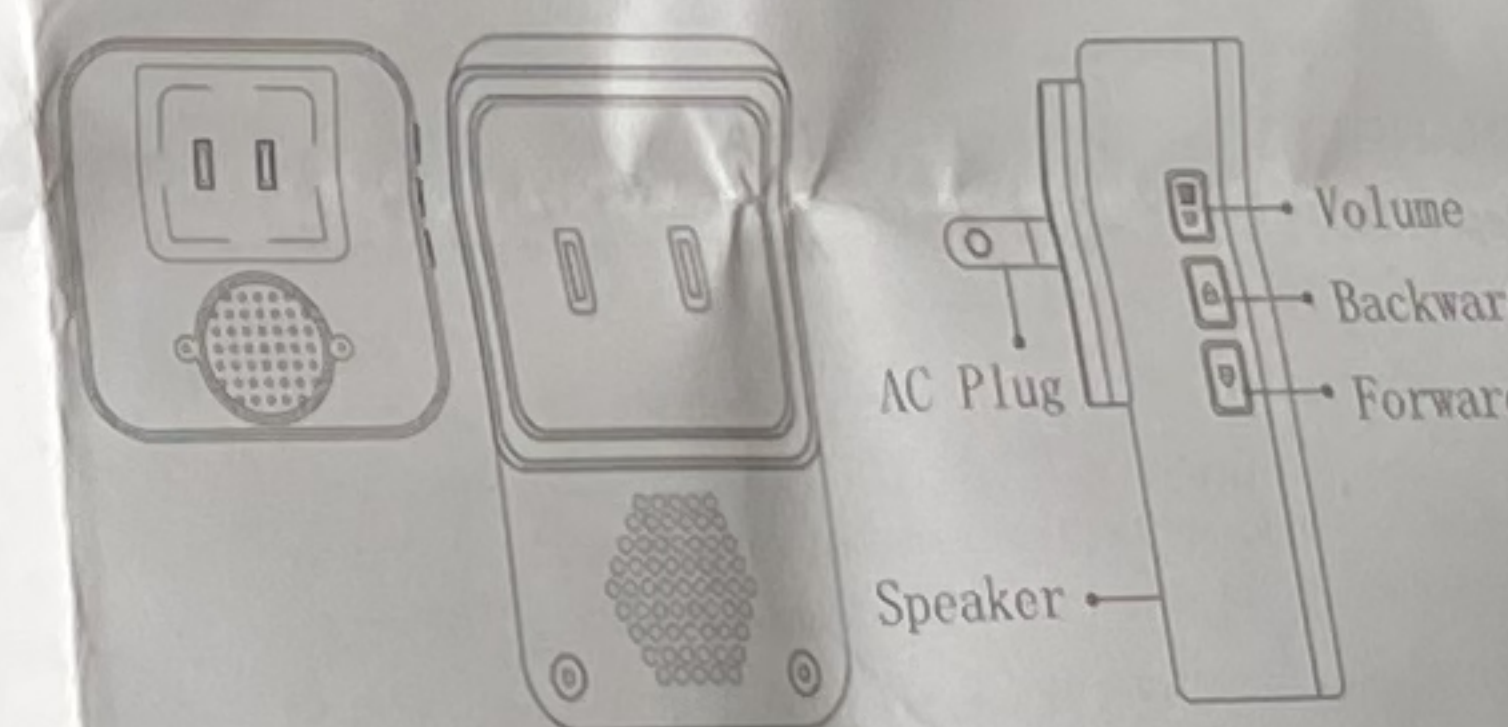

RECEIVER

THE FIRST USE GUIDE:

1. Plug the receiver into a mains socket and switch the socket on.
2. Press the transmitter push button and confirm that the transmitter indicator flashes, the doorbell receiver sounds "Ding-Ding" and the receiver indicator flashes. The doorbell is paired. The default ringtone is "Ding-Dong". Users can change the ringtone easily, just refer to the "CHANGING THE RINGTONE" steps.

CHANGING THE RINGTONE / PAIRING:

- Step 1:** Press the Backward or Forward button on the receiver to choose your favorite melody.
 - Step 2:** Press and hold down the Volume button on the receiver for 5 seconds, until it makes a "Ding" sound and the receiver indicator flashes (that means the doorbell entered into the Pairing Mode, the pairing mode will only last 8 seconds, then it will automatically exit).
 - Step 3:** Press the button on the transmitter quickly, it will makes a "Ding-Ding" sound and the receiver indicator flashes.
 - Step 4:** Press the button on the transmitter again to confirm whether the current ringtone is the one you have set, if yes, the pairing is completed.
- Remark:** This method is also suitable for adding/pairing additional transmitters.