




USER GUIDE for KD6

Disc Lock with Alarm

For more information, please visit
<http://www.kovix-security.com>


User Instruction

1. Insert the key in the key barrel and rotate clockwise, the key barrel will spring out
2. Slide the lock into your motorcycle's front or rear brake disc
3. Locate a hole in the brake disc that will allow the locking pin to pass through and push the key barrel down to lock up

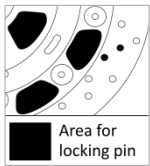

- a. brake disc thickness less than 6mm (1/4")
b. brake disc has a hole whose diameter larger than 6mm (1/4") and within 42mm (1 5/8") distance to the disc edge
Note: The locking pin can pass through ANY hole on the brake disc (see those dark areas on the diagram)

4. The lock will give a "D" sound to show that the alarm system has been activated
5. Deactivate the auto alarm function, double press the key barrel before push it down fully

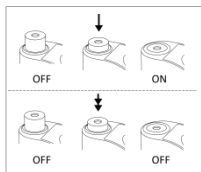

- a. For activating the alarm function, push down the key barrel fully
b. For deactivating the alarm function, press down the key barrel half way until a "D" sound made and release it. Then, push it down fully in the second press


6. After activated, the lock will give a warning tone in 5 seconds after the lock has set to the brake disc. The alarm mode is ON now
7. The lock sensor will start automatically to work in another 5 seconds in the alarm mode. The lock will burst out a 10 seconds continued siren if it is moved or shocked
8. Setting off the alarm mode, insert the key in the key barrel and rotate anticlockwise to unlock

CAUTION:

Please avoid in close proximity with ears to extremely loud alarm

Battery Installation

1. Use the Allen Key (g) to release the Screw (h) and remove the Cover (c)
2. Take out the KD6 Module (b) and replace a 3V CR2 Lithium Battery (e)
3. Reinstall the KD6 Module (b) and the Cover (c)
4. Disposal of used battery promptly

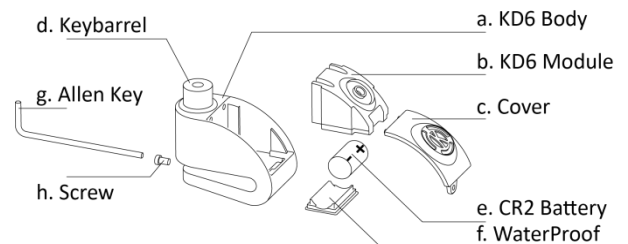

Keys

There are 2 keys and 1 flat coded key or plate with identification number (2 letters + 6 numbers, i.e. AL 112233) inside the packaging. Keys could be reordered by this number. It is important to keep it in a safe place

Troubleshooting

1. **Alarm not arming:** Check battery and ensure the lock is activated and set alarm mode to ON status
2. **Lock making constant click or being sound:** Replace a new battery
3. **When the lock is bursting out a 10 seconds continued siren, then break off and give a warning tone of "D" sound:** Replace a new battery
4. **Alarm too sensitive:** Place the lock on the brake disc at another angle