

CONTENTS LIST



X120




CONTENTS LIST

X120



CONTENTS LIST

X120

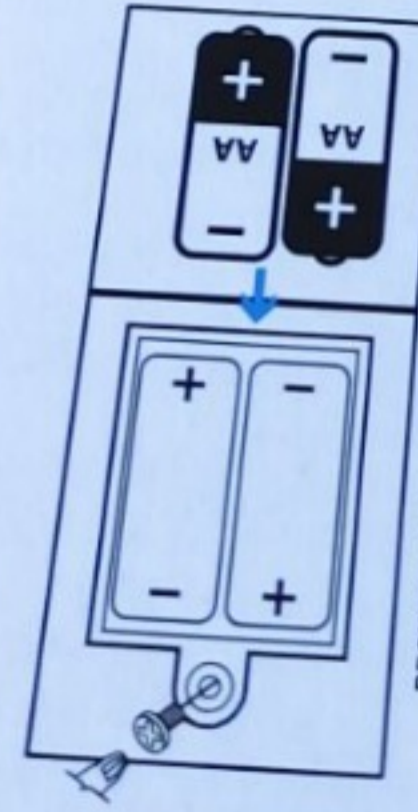


REQUIRES 2XAA 1.5V BATTERIES (NOT INCLUDED)

IMPORTANT! READ THESE INSTRUCTION CAREFULLY AND KEEP FOR FUTURE REFERENCE.

- Instruction for removing / inserting batteries
- Open the bottom of the train.
- Carefully remove battery compartment.
- Using a screwdriver, unfasten the screw securing the cover of the compartment.
- Remove cover.
- Insert 2 X AA batteries, ensuring these are at the correct polarities.
- Replace the cover.
- Fasten screw, ensuring cover is securely sealed.



NOT SUITABLE FOR CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS
 غير مناسب للأطفال تحت سن 3 سنوات بسبب الأجزاء الصغيرة
 COUNTRY OF ORIGIN: CHINA
 بلد المنشأ: الصين

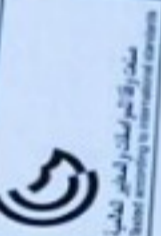

SPECIFICATIONS, COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS. PLEASE RETAIN PACKAGING FOR FUTURE REFERENCE.

WARNING:

CHOKING HAZARD - small parts. Not for children under 3 years.

NO. B7201
MADE IN CHINA



RANDOM COLORS MAY HAPPEN IN PARTS

RANDOM COLORS MAY HAPPEN IN PARTS