

User Guide

LIGHTING MODEL

FN+ "↑/↓" key, level 6 brightness adjustment;
 FN+ "←/→" key, 5 level fast slow adjust
 /Combination of instruction

Combination of instruction

	Model 1	Model 2	Model 3	Model 4
FN+INS	Normal Light	Sparkle	Breathing	Extinguish
FN+HOME	Sparkle	Explosive	Non-trace	Ripples
FN+PAGEUP	Blow	Marquee	Rotating Storm	Snake
FN+Delete	Water Floating	Water Drop	Overflow	Colorful
FN+Pagedown	Flashing	Flowing	Sideling Change	Light Waves

Fn+end = record key/storage key;
 Press fn+9 or fn+0 to enter the corresponding custom mode,
 Press fn+end to enter the custom pointillist recording state.



Game Model

- FN+1= game mode 1:FPS ASDW ↑↓←→ ESC
- FN+2= game mode 2:CF ASDW Ctrl Shift Alt Space RGQEB 1-5
Tab F1-F3 Home End PgUp PgDn PrtSc Scroll
- FN+3= game mode 1:COD QWERTASDFGCV 1-7 Ctrl Shift
- FN+4= game mode 1:RTS QWERTASDGXZFKLHMNUYTP
Space 1-0 Ctrl Shift Alt
- FN+5= game mode 1:LOL QWER DGFBV Ctrl Alt Tab Space - 1-6 Esc
- FN+6= game mode 1:Car Race ASDWR ↑↓←→ Ctrl Shift Alt
- FN+7= game mode 1:NBA AFSWRE Ctrl Shift Alt Space ↑↓←→ ZXCVC 1234
- FN+8= game mode 1:LOL QWERDFB 1-6
- FN+9= Custom mode1:self design
- FN+0= Custom mode2:self design

Specifications:

- 20 Running Lighting modes
- Dual Injection Keycap
- Metal Surface
- N-key rollover
- Customized lighting mode
- Support:Win7,Win8,Win10
- Product size:425*120*30mm

Multimedia Keys Function

- FN+F1= Computer
- FN+F2= Search
- FN+F3= Calculator
- FN+F4= CD
- FN+F5= Prev Track
- FN+F6= Next Track
- FN+F7= Play/Pause
- FN+F8= CD Stop
- FN+F9= Mute
- FN+F10= Volume
- FN+F11= Volume+
- FN+F12=lock/unlock
- FN+WIN=win lock and app