
instruction for installation

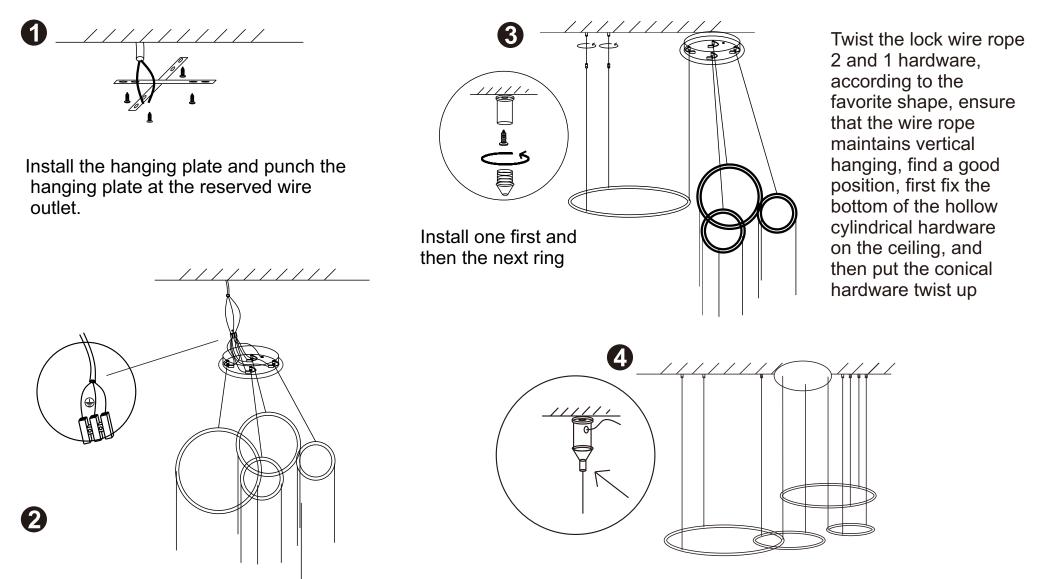

The left and right sides of the terminal are connected to wire, can be no zero wire. Central port grounding wire, no ground wire in the middle of the empty connection. After the overall installation, the small round pipe of pressing the lock lifting line can adjust the length of the lifting line at will.